

OMX Media Component

User's Manual ALAC Decoder Part

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (http://www.renesas.com).

Notice

- 1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
- 2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
- 3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
- 4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
- 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
- "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
- "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.

- 6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
- 7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you
- 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- 9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
- 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
- 11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
- 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

Trademarks

- · Linux® is the registered trademark of Linus Torvalds in the United States and other countries.
- ARM® is a registered trademark or trademark of ARM Ltd. in the United States and other countries.
- · Windows and Windows Media are registered trademarks of Microsoft Corporation in the United States and other countries.
- · Android is a trademark of Google Inc. Use of this trademark is subject to Google permissions.
- · All other company names and product names mentioned in this manual are registered trademarks or trademarks of their respective companies.
- · The registered trademark symbol (®) and trademark symbol (™) are omitted in this manual.



- Table of Contents -

1.	OVE	ERVIEW	კ
	1.1. 1.2. 1.3. 1.4. 1.5.	Overview of This Document Overview of ALAC Decoder Media Component and Scope of This Document Related Documents Terminology Role Name and Component Name	3 4 4
2.	FUN	NCTIONS	5
	2.1. 2.1.1 2.1.2 2.2.	Decode Function	5 6
3.	I/O I	DATA FORMAT	7
	3.1. 3.2. 3.3.	Buffer Payload Data Format of Input Buffer Data Format of Output Buffer	8
4.	API	REFERENCE	11
5.	IND	EXES	12
	5.1. 5.2. 5.3.	Standard Indexes of ALAC Decoder Media Component	13
6.	STR	RUCTURES	14
	6.1. 6.2. 6.3. 6.4. 6.5.		
7.	EVE	ENTS	22
ጸ	ME	MORY SIZE	93



- Figures -

3
7
7
7
8
9
10
4
4
4 5
6
12
13
13
14
21
21
22
22
23



OMX Media Component User's Manual ALAC Decoder Part

Rev. 1.00 Oct. 10, 2014

1. Overview

1.1. Overview of This Document

This document is the User's Manual for the OMX Media Component and specifications of the ALAC Decoder Media Component are described.

Please read this document with related document [1] and [2].

1.2. Overview of ALAC Decoder Media Component and Scope of This Document

Figure 1-1shows the software configuration of the ALAC Decoder Media Component and scope. The ALAC Decoder Media Component consists of the OMX Media Component Common Library which provides common functions of OpenMAX IL, the OMX Media Component Audio Common Library which provides common functions of audio processing, and the OMX Media Component ALAC Decoder Library which realizes functions of ALAC Decoder. The OMX Media Component ALAC Decoder Library controls ARM ALAC Decode Software and realizes codec processing.

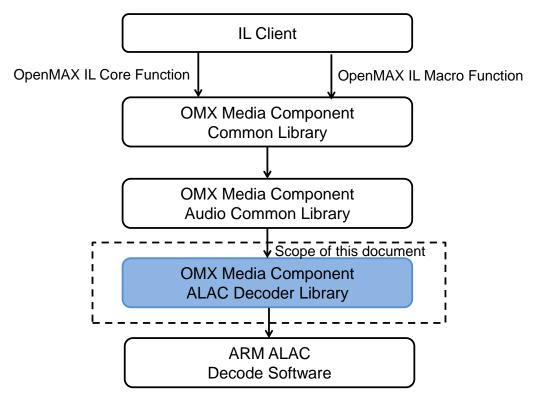


Figure 1-1 Software Configuration of ALAC Decoder Media Component and Scope

Rev. 1.00 Page 3 of 23 Oct. 10, 2014



1.3. Related Documents

Table 1-1 shows the reference documents and related documents.

Table 1-1 List of Related Documents

No	Document Name	Description
[1]	OMX Media Component User's Manual Common Part	
[2]	OMX Media Component User's Manual Audio Common Part	
[3]	OpenMAX Integration Layer Application Programming Interface Specification Version 1.1.2, September 1, 2008	http://www.khronos.org/registry/omxil/specs/OpenMAX_IL_1_1_2_Specification.pdf

1.4. Terminology

Table 1-2 shows the terminology used in this document.

Table 1-2 Terminology

Term	Abbreviation	Description	
Audio Port Base	APB	The base value of the port index of the Audio Media Component. The port index values of the input and output ports are obtained by adding offset values to the base value.	
media		Open API specified by the Khronos Group. It standardizes accesses to primitive media processing which is commonly used in graphics, audio, and image libraries.	
Component - Re		Refers to a component that is defined in OpenMAX IL Specification.	
Media Component	MC	A component that performs multimedia processing. It corresponds to the Component that is defined in OpenMAX IL.	
IL Client - Refers to software that uses function		Refers to software that uses functions of OpenMAX IL Core and Component.	

1.5. Role Name and Component Name

Table 1-3 shows the role name and component name of ALAC Decoder Media Component.

Table 1-3 Role Name and Component Name

Role Name		Component Name
		Component Name
	audio decoder.alac	OMX.RENESAS.AUDIO.DECODER.ALAC

2. Functions

The ALAC Decoder Media Component is the component that provided functions to decode data compressed by ALAC standard.

The ALAC Decoder Media Component performs decode processing when compressed data is stored in the input buffer and stores resulted linear PCM data to the output buffer.

2.1. Function Details

2.1.1. Decode Function

The supported standards and functions by the ALAC Decoder Media Component are shown as below.

Table 2-1 Supported Standards and Functions

Table 2 i Supported Standards and i anotions				
Apple Lossless Audio Codec - Rev.4				
ALAC frame data which coded the linear PCM data in an ALAC data file (RAW format)				
1 channel (Monaural) 2 channels (Stereo)				
8 / 11.025 / 12 / 16 / 22.05 / 24 / 32 / 44.1 / 48 / 64 / 88.2 / 96 / 128 / 176.4 / 192 kHz				
16/ 20/ 24/ 32 bits / sample				
16 or 32 bit linear PCM (channel interleaved format)				
Same as input channel				
Same as input sampling frequency				

The un-supported functions for the ALAC Decoder Media Component are shown below.

- CAF/MPEG-4 container is not analyzed.
- CCE(Coupling Channel Element) is not decoded.(Error)
- PCE(Program Configuration Element) is not decoded.(Error)
- DSE(Data Stream Element) is not decoded. (Skip)
- FIL(Filler data) is not decoded.(Skip)
- The frame length per packet of data is except the standard value.
 the standard value:4096 sample frame
- The tuning parameter value is except the standard value. the standard value:pb=40/mb=10/kb=14/maxRun=255

2.1.2. Notification Function of Port Information Change

The ALAC Decoder Media Component sends event when the information of "Output Sampling Frequency", "Output Channel Number", and "Output Channel Mapping" is changed. Please refer to section 7, for details.

2.2. Port

The ALAC Decoder Media Component has one input port and one output port.

The input port has input buffers to store compressed data, and the output port has output buffers to store PCM data.

Table 2-2 Ports of ALAC Decoder Media Component

Component	Port Index	Type
ALAC Decoder Media Component	APB+0	Input Port
'	APB+1	Output Port



3. I/O Data Format

3.1. Buffer Payload

Figure 3-1 shows the data storage format of input buffers for ALAC Decoder Media Component. "fn" in the figure denotes the sequence number (frame number) of compressed data. Compressed data is input to ALAC Decoder Media Component in frame units. An arbitrary number of frames can be stored in a single input buffer if data is input in frame units. However, one frame data cannot be split into two or more input buffers.

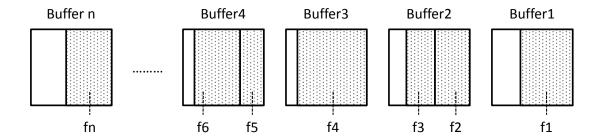


Figure 3-1 Data Storage Format of Input Buffers

Figure 3-2 and Figure 3-3 show the data storage format of output buffers for ALAC Decoder Media Component. PCM data decoded by ALAC Decoder Media Component can be stored in the output buffers in one frame unit or sequentially. However, equal-time linear PCM samples (for all channels) are stored to same buffer.

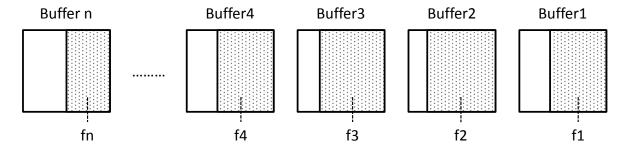


Figure 3-2 Data Storage Format of Output Buffer (1 Frame Unit)

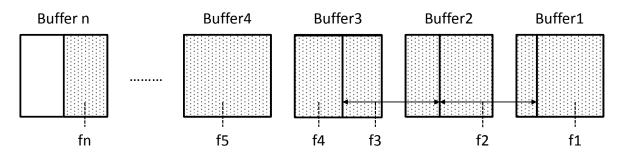


Figure 3-3 Data Storage Format of Output Buffer (Continuation)

3.2. Data Format of Input Buffer

Figure 3-4 shows input buffer format. A stream data is stored to the input buffer and the data size is set to nFilledLen in the OMX_BUFFERHEADERTYPE structure.

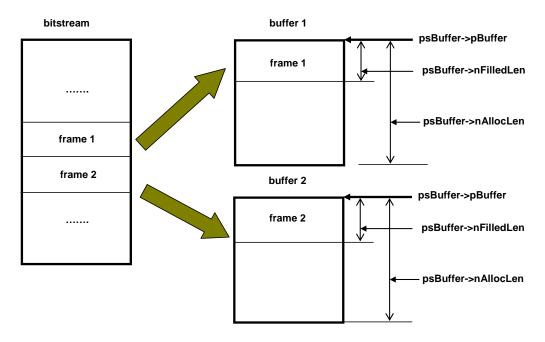


Figure 3-4 Data Format of Input Buffer

RENESAS

3.3. Data Format of Output Buffer

ALAC Decoder Media Component stores the volume of output data specified by nFilledLen in the OMX_BUFFERHEADERTYPE structure from the address specified by a member of that structure as shown in Figure 3-5.

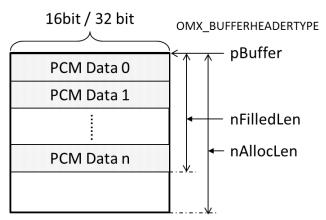


Figure 3-5 Data Format of Output Buffer

RENESAS

In ALAC Decoder Media Component, layout of PCM data is different for each output channel. Figure 3-6 shows formats of each output channel.

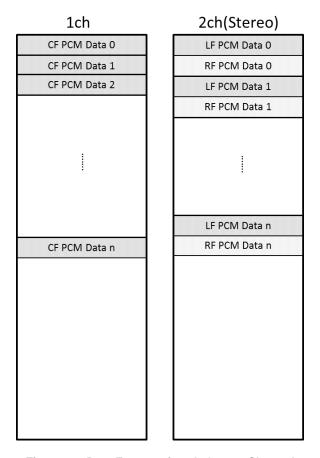


Figure 3-6 Data Format of each Output Channel

RENESAS

4. API Reference

Please refer to the related document [2].



5. Indexes

5.1. Standard Indexes of ALAC Decoder Media Component

Table 5-1 shows the list of standard indexes that are available for ALAC Decoder Media Component.

Table 5-1 List of Indexes available for ALAC Decoder Media Component

	Index	Corresponding Strucure Name
	Description	
OMX_IndexF	ParamAudioInit	OMX_PORT_PARAM_TYPE Structure
	Please refer to the related document [1].	
OMX_IndexI	ParamVideoInit	OMX_PORT_PARAM_TYPE Structure
	Please refer to the related document [1].	
OMX_IndexI	ParamImageInit	OMX_PORT_PARAM_TYPE Structure
	Please refer to the related document [1].	
OMX_IndexI	ParamOtherInit	OMX_PORT_PARAM_TYPE Structure
	Please refer to the related document [1].	
OMX_IndexI	ParamStandardComponentRole	OMX_PARAM_COMPONENTROLETYPE Structure
	Please refer to the related document [1].	
OMX_IndexF	ParamCompBufferSupplier	OMX_PARAM_BUFFERSUPPLIERTYPE Structure
	Please refer to the related document [1].	
OMX_Indexf	ParamPortDefinition	OMX_PORTDEFINITIONTYPE Structure
	Please refer to the related document [1] and [2].
OMX_IndexF	ParamAudioPortFormat	OMX_AUDIO_PARAM_PORTFORMATTYPE Structure
Please refer to the related document [2].		
OMX_IndexParamAudioPcm		OMX_AUDIO_PARAM_PCMMODETYPE Structure
	To set or get information regarding PCM.	

Rev. 1.00 Oct. 10, 2014 RENESAS

5.2. Expanded Indexes of ALAC Decoder Media Component

Table 5-2 shows the list of expanded indexes that are available for ALAC Decoder Media Component.

Table 5-2 List of Expanded Indexes available for ALAC Decoder Media Component

Index (Expanded Index Name)		Corresponding Strucure Name	
	Description		
	IndexParamAudioOutputUnit SAS.INDEX.PARAM.AUDIO.OUTPUTUNIT)	OMXR_MC_AUDIO_PARAM_OUTPUTUNITTYPE Structure	
	Please refer to the related document [2].		
OMXR_MC_IndexParamAudioPortSettingMask (OMX.RENESAS.INDEX.PARAM.AUDIO. PORTSETTINGSEVENTMASK)		OMXR_MC_AUDIO_PARAM_PORTSETTINGSEVENTMASK TYPE Structure	
Please refer to the related document [2].			
OMXR_MC_IndexParamAudioAlac (OMX.RENESAS.INDEX.PARAM.AUDIO.ALAC)		OMXR_MC_AUDIO_PARAM_ALACTYPE Structure	
	To set or get information regarding ALAC.		

5.3. Indexes Specified by OpenMAX IL Macro Functions

Table 5-3 shows indexes which can be specified by OpenMAX IL Macro functions and available port index for ALAC Decoder Media Component.

Table 5-3 Indexes Specified by OpenMAX IL Macro Functions

Index	Get/SetP	Get/SetParameter		Get/SetConfig		Port Index	
	Get	Set	Get	Set	APB+0	APB+1	
OMX_IndexParamAudioInit	Х	Х	-	-	-	-	
OMX_IndexParamVideoInit	Х	Х	-	-	-	-	
OMX_IndexParamImageInit	Х	Х	-	-	-	-	
OMX_IndexParamOtherInit	Х	Х	-	-	-	-	
OMX_IndexParamStandardComponentRole	Х	Х	-	-	-	-	
OMX_IndexParamCompBufferSupplier	Х	Х	-	-	Х	Х	
OMX_IndexParamPortDefinition	Х	Х	-	-	Х	х	
OMX_IndexParamAudioPortFormat	Х	Х	-	-	Х	Х	
OMXR_MC_IndexParamAudioAlac	Х	Х	-	-	Х	-	
OMX_IndexParamAudioPcm	Х	Х	-	-	-	Х	
OMXR_MC_IndexParamAudioOutputUnit	Х	Х	-	-	-	Х	
OMXR_MC_IndexParamAudioPortSettingMask	Х	Х	-	-	-	Х	

x: Effective -: Ineffective

Rev. 1.00 Page 13 of 23 Oct. 10, 2014

6. Structures

Table 6-1 shows the list of structures of ALAC Decoder Media Component.

Table 6-1 Structures of ALAC Decoder Media Component

rabio o i otractareo er /tz/to beceder media compenent				
Structure Name	Reference			
OMX_AUDIO_PORTDEFINITIONTYPE	Section 6.1			
OMX_PARAM_COMPONENTROLETYPE	Related Document [1]			
OMX_PARAM_BUFFERSUPPLIERTYPE	Related Document [1]			
OMX_AUDIO_PARAM_PORTFORMATTYPE	Section 6.2			
OMXR_MC_AUDIO_PARAM_ALACTYPE	Section 6.3			
OMX_AUDIO_PARAM_PCMMODETYPE	Section 6.4			
OMXR_MC_AUDIO_PARAM_OUTPUT_UNITTYPE	Related Document [2]			
OMXR_MC_AUDIO_PARAM_PORTSETTINGSEVENTMASKTYPE	Related Document [2]			

Given below is an explanation of how to interpret the member of the structures described in this section.

✓ Description of a member of a structure corresponded to index

[Member]

Member Name	Get	Set
Indicates the	Indicates the attribute of the	Indicates the attributes of the
member name	member specified in the	member specified in the
	OMX_GetParameter () or	OMX_SetParameter () or
	OMX_GetConfig () function.	OMX_SetConfig () function.
	If "R" is written, the value of this member can be obtained.	If "W" is written, please specify a value in this member.
	If "W" is written, please specify a value in this member.	If "-" is written, the value of this member is ignored. Any value specified in this member is not reflected.

Rev. 1.00 Oct. 10, 2014

6.1. OMX_AUDIO_PORTDEFINITIONTYPE

[Structure] Please refer to section 4.1.5 in the related document [3].

[Function] Please refer to section 4.1.5 in the related document [3].

[Members]

Member Name	Get	Set
cMIMEType	R	-
pNativeRender	R	-
bFlagErrorConcealment	R	-
eEncoding	R	-

[Details]

cMIMEType

_ civilivi⊏ rype	
Configurable	-
value	
Acquirable	NULL
value	
Initial value	NULL
Remarks	Not supported.

pNativeRender

Configurable value	-
Acquirable value	NULL
Initial value	NULL
Remarks	Not supported.

bFlagErrorConcealment

bi lagemoreone	
Configurable	-
value	
Acquirable	OMX_FLASE
value	
Initial value	OMX_FLASE
Remarks	Not supported.

eEncoding

Configurable	-		
value			
Acquirable	nPortIndex Value		
value	APB+0	OMXR_MC_AUDIO_CodingALAC	
	APB+1	OMX_AUDIO_CodingPCM	
Initial value	nPortIndex	Value	
	APB+0	OMXR_MC_AUDIO_CodingALAC	
	APB+1	OMX_AUDIO_CodingPCM	
Remarks	-		

Rev. 1.00 Oct. 10, 2014

6.2. OMX_AUDIO_PARAM_PORTFORMATTYPE

[Structure] Please refer to section 4.1.6 in the related document [3].

[Function] Please refer to section 4.1.6 in the related document [3].

[Members]

Member Name	Get	Set
nSize	W	W
nVersion	R	-
nPortIndex	W	W
nIndex	W	-
eEncoding	R	-

[Details]

nSize

Configurable Specify the size (in bytes) of the OMX_AUDIO_PARAM_PORTFORMATTYP	
value	
Acquirable	-
value	
Initial value	-
Remarks	-

nVersion

Configurable value	-
Acquirable value	Specification version of OpenMAX IL (1.1.2).
Initial value	Specification version of OpenMAX IL (1.1.2).
Remarks	-

nPortIndex

III Offindox		
Configurable	APB+0	
value	APB+1	
Acquirable	•	
value		
Initial value	-	
Remarks	-	

nIndex

Configurable	nPortIndex	Value
value	APB+0	0
	APB+1	0
Acquirable	-	
value		
Initial value	-	
Remarks	-	

eEncoding

Configurable	-				
value					
Acquirable	nPortIndex	nPortIndex value			
value	APB+0	0	OMXR_MC_AUDIO_CodingALAC		
	APB+1	0	OMX_AUDIO_CodingPCM		
Initial value	nPortIndex nIndex Value		Value		
	APB+0	0	OMXR_MC_AUDIO_CodingALAC		
	APB+1	0	OMX_AUDIO_CodingPCM		
Remarks	-				

6.3. OMXR_MC_AUDIO_PARAM_ALACTYPE

[Structure] typedef struct OMXR_MC_AUDIO_PARAM_ALACTYPE {

 OMX_U32
 nSize;

 OMX_VERSIONTYPE
 nVersion;

 OMX_U32
 nPortIndex;

 OMX_U32
 nSampleRate;

 OMX_U32
 nChannels;

 OMX_U32
 nBitsPerSample;

} OMXR_MC_AUDIO_PARAM_ALACYPE;

[Function] ALAC information structure.

[Members]

Member Name	Get	Set
nSize	W	W
nVersion	R	-
nPortIndex	W	W
nSampleRate	R	W
nChannels	R	W
nBitsPerSample	R	W

[Details]

nSize

Configurable value	Specify the size (in bytes) of the OMXR_MC_AUDIO_PARAM_ALACTYPE structure.
Acquirable value	-
Initial value	-
Remarks	-

nVersion

Configurable value	-
Acquirable value	Specification version of OpenMAX IL (1.1.2).
Initial value	Specification version of OpenMAX IL (1.1.2).
Remarks	-

nPortIndex

Configurable	APB+0
value	
Acquirable	-
value	
Initial value	-
Remarks	-

nSampleRate

Configurable	8000, 11025, 12000, 16000, 22050, 24000, 32000,
value	44100, 48000, 64000, 88200, 96000, 128000, 176400, 192000
Acquirable	Setting value
value	
Initial value	48000
Remarks	Analyze the ALAC stream and specify the sample rate.

nChannels

Configurable	1 - 2	
value		
Acquirable	Setting value	
value	-	
Initial value	2	
Remarks	Value	Description
	1	1 channel (monaural)
	2	2 channels (stereo)
	Analyze the Al	_AC stream and specify the number of channels.

Rev. 1.00 Oct. 10, 2014



nBitsPerSample

Configurable value	16, 20, 24, 32
Acquirable	Setting value
value	
Initial value	16
Remarks	Analyze the ALAC stream and specify the bits per sample.



6.4. OMX_AUDIO_PARAM_PCMMODETYPE

[Structure] Please refer to section 4.1.7 in the related document [3].

[Function] Please refer to section 4.1.7 in the related document [3].

[Members]

Member Name	Get	Set
nSize	W	W
nVersion	R	-
nPortIndex	W	W
nChannels	R	W
eNumData	R	-
eEndian	R	-
bInterleaved	R	-
nBitPerSample	R	-
nSamplingRate	R	W
ePCMMode	R	-
eChannelMapping	R	W

[Details]

nSize

110120	
Configurable	Specify the size (in bytes) of the OMX_AUDIO_PARAM_PCMMODETYPE structure.
value	
Acquirable	-
value	
Initial value	-
Remarks	-

nVersion

Configurable value	-
Acquirable value	Specification version of OpenMAX IL (1.1.2).
Initial value	Specification version of OpenMAX IL (1.1.2).
Remarks	-

nPortIndex

Configurable value	APB+1
Acquirable value	-
Initial value	-
Remarks	-

nChannels

Configurable	1, 2
value	
Acquirable	Setting value or decoded result.
value	
Initial value	2
Remarks	This value does not affect decoding process.

eNumData

Configurable value	-
Acquirable	OMX_NumericalDataSigned
value	
Initial value	OMX_NumericalDataSigned
Remarks	Not supported.

Configurable value	-
Acquirable value	OMX_EndianLittle
Initial value	OMX_EndianLittle
Remarks	Not supported.

bInterleaved

Configurable	-
value	
Acquirable	OMX_TRUE
value	
Initial value	OMX_TRUE
Remarks	Not supported.

nBitPerSample

Tibiti eroampie	
Configurable	16, 32
value	
Acquirable	Setting value.
value	
Initial value	16
Remarks	Specify the number of bits per sample.

nSamplingRate

Configurable value	8000, 11025, 12000, 16000, 22050, 24000, 32000, 44100, 48000, 64000, 88200, 96000, 128000, 176400, 192000			
Acquirable	Setting value or decoded result.			
value				
Initial value	48000			
Remarks	This value does not affect decoding process.			

ePCMMode

Configurable value	-
Acquirable value	OMX_AUDIO_PCMModeLinear
Initial value	OMX_AUDIO_PCMModeLinear
Remarks	Not supported.

eChannelMapping

Configurable	OMX_AUDIO_ChannelNone				
value	OMX_AUDIO_ChannelLF				
	OMX_AUDIO_ChannelRF				
	OMX_AUDIO_CI	nannelCF			
Acquirable	Setting value or [Decoded resul	t.		
value					
Initial value	eChannelMapping[0]= OMX_AUDIO_ChannelLF				
	eChannelMapping[1]= OMX_AUDIO_ChannelRF				
Remarks	This value does not affect decoding process.				
	The relation among channel of input data, nChannels and eChannelMapping is shown as				
	below.				
	Channel of	nChannles	eChannelMapping		
	input data				
	1(monaural)	1	eChannelMapping[0]= OMX_AUDIO_ChannelCF		
	2(stereo)	2	eChannelMapping[0]= OMX_AUDIO_ChannelLF		
	eChannelMapping[1]= OMX_AUDIO_ChannelRF				

6.5. Structure Members Used in a Unique Manner

Table 6-2 shows structure members used in a unique manner for ALAC Decoder Media Component.

Table 6-2 Structure Members Used in a Unique Manner

Structure Name	Member	Usage
OMX_BUFFERHEADERTYPE	nOffset	Not supported. Specify 0.
(refer to section 5.1.1 in the related document [1])	nTickCount	Any value can be specified to the OMX_BUFFERHEADERTYPE structure which is input by the OMX_EmptyThisbuffer() function. The value specified in this member is copied into a member of the OMX_BUFFERHEADERTYPE structure which is returned by the (*FillBufferDone)() callback function.
	nTimeStamp	Any value can be specified to the OMX_BUFFERHEADERTYPE structure which is input by the OMX_EmptyThisbuffer() function. The value specified in this member is used for calculating the output value of corresponding member of the OMX_BUFFERHEADERTYPE structure which is returned by the (*FillBufferDone)() callback function.
	nFlags	Please refer to section 6.5.1.

6.5.1. Buffer Flag (nFlags)

The buffer flag (nFlags in the OMX_BUFFERHEADERTYPE structure) for ALAC Decoder Media Component is shown as below.

Table 6-3 Buffer Flag for I/O Port

Flag Name (nFlags)	Description for support
OMX_BUFFERFLAG_EOS	This flag can be used as described in the related document [2].
OMX_BUFFERFLAG_STARTTIME	These flags do not affect the processing of Media Component but the flag set
OMX_BUFFERFLAG_DECODEONLY	to input buffer is transferred to related output buffer.
OMX_BUFFERFLAG_DATACORRUPT	This flag is set to output buffer if input stream has an error. If this flag is set,
	silent data may be stored to output buffer.
OMX_BUFFERFLAG_ENDOFFRAME	These flags do not affect the processing of Media Component but the flag set
OMX_BUFFERFLAG_SYNCFRAME	to input buffer is transferred to related output buffer.
OMX_BUFFERFLAG_EXTRADATA	
OMX_BUFFERFLAG_CODECCONFIG	

7. Events

Table 7-1 shows events having a unique condition for ALAC Decoder Media Component.

Table 7-1 Events Generation Conditions

Event Type Port		Condition
OMX_EventPortSettingsChanged	APB+0	Event is not generated.
	APB+1	Event is generated when the member nChannels, nSamplingRate, eChannelMapping in the OMX_AUDIO_PARAM_PCMMODETYPE structure are changed internally by decoding.

If OMXR_MC_AUDIO_UnitFull is set in the OMXR_MC_IndexParamAudioOutputUnit index and nChannels, nSamplingRate, eChannelMapping in the OMX_AUDIO_PARAM_PCMMODETYPE structure is changed in ALAC Decoder Media Component, a buffer whose size is less than the size of the buffer may be returned.

For the OMX_EventPortSettingChenged event, it is possible to suppress event generation by masking event. Table 7-2 shows maskable information for ALAC Decoder Media Component.

Table 7-2List of Maskable Information

Information	Masking Value
nSamplingRate	OMXR_MC_AUDIO_EVENTMASK_SAMPLINGRATE
nChannels	OMXR_MC_AUDIO_EVENTMASK_CHANNELS
eChannelMapping	OMXR_MC_AUDIO_EVENTMASK_CHANNELMAPPING



8. Memory Size

Table 8-1 shows size and purpose of main memory areas used in ALAC Decoder Media Component and the value of nBufferSize, nBufferCountAcutal, nBufferCountMin in the OMX_PARAM_PORTDEFINITONTYPE structure. (*1)

Table 8-1 Main Memory Areas used in ALAC Decoder Media Component

Memory Area Name	ľ	Memory Size (byte)	Description	
Input Buffer	OMX_PARAM_PC	RTDEFINITIONTYPE Value		Buffer to store input stream data.
(APB + 0)	nBufferSize	Minimum Size ^(*2)	8192	This is the size of memory area
		Default Size	32776	allocated by the
		Maximum Size	32776	OMX_AllocateBuffer() function.
	nBufferCountActual	Minimum Count	1	
		(= nBufferCountMin)		
		Default Count	4	
		Maximum Count	4	
Output Buffer	OMX_PARAM_PC	RTDEFINITIONTYPE	Value	Buffer to store output PCM data.
(APB + 1)	nBufferSize	Minimum Size	32768	This is the size of memory area
		Default Size	32768	allocated by the
		Maximum Size	32768	OMX_AllocateBuffer() function.
	nBufferCountActual	Minimum Count	1	
		(= nBufferCountMin)		
		Default Count	8	
		Maximum Count	8	

 $^{^{(*1)}}$ Additionally, areas for such as context task communication and internal work are need. $^{(*2)}$ Analyze the header and specify the value more than the maximum size of the stream.

Revision	OMX Media Component User's Manual	
History	ALAC Decoder Part	

Rev.	Date	Description		
		Page	Summary	
0.01	Jun. 20, 2014	1	Newly created.	
0.02	Jul. 8, 2014	P3	The name of ALAC Decode Middleware is changed to ALAC Decode Software.	
0.10	Jul. 18, 2014	1	Correction of errors.	
1.00	Oct. 10, 2014	1	Official Release	

OMX Media Component User's Manual ALAC Decoder Part

Publication Date : Oct. 10, 2014 Rev. 1.00
Published by: Renesas Electronics Corporation

© 2014 Renesas Electronics Corporation. All rights reserved.



SALES OFFICES

Renesas Electronics Corporation

http://www.renesas.com

Refer to "http://www.renesas.com/" for the latest and detailed information.

Renesas Electronics America Inc. 2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A. Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited 1101 Nicholson Road, Newmarket, Ontario L3Y 9C3, Canada Tel: +1-905-898-5441, Fax: +1-905-898-3220

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd. Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited
Unit 1601-1613, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong Tel: +852-2265-6688, Fax: +852 2886-9022/9044

Renesas Electronics Taiwan Co., Ltd. 13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd. 80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949 Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd. Unit 906, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics Korea Co., Ltd. 12F., 234 Teheran-ro, Gangnam-Ku, Seoul, 135-920, Korea Tel: +82-2-558-3737, Fax: +82-2-558-5141

© 2014 Renesas Electronics Corporation. All rights reserved.

OMX Media Component User's Manual

