

Flow Activated Bow Spring Centralizers

Technical Specifications

Maximum O.D.	Minimum I.D.	Tensile Strength (Std Service)	Overall Length	Internal Ball Clearance	Expansion Range	Pressure Range to Activate
1.687"	0.510"	40,000lbs	40"	7/16"	1 1/16" - 6 1/2"	300psi to 1200psi
2.125"	0.750"	42,000lbs	40"	1 1/16"	2 3/8" - 7"	500psi to 1000psi
2.250"	0.750"	55,000lbs	42.85"	1 1/16"	2 3/4" - 7"	300psi to 700psi
2.700"	0.937"	55,000lbs	47.25"	7/8"	2 3/4" - 8 1/2"	500psi to 650psi
3.125"	0.937"	40,000lbs	44"	7/8"	3 1/8" - 8"	500psi to 1000psi

FLOW ACTIVATED BOW SPRING CENTRALIZER

The Flow Activated Bow Spring Centralizer is designed to allow tool strings or parts of tool strings to be centralized in the tubing/casing for various operations.

The Flow Activated Bow Spring Centralizer is designed so that its bow springs are normally retracted. The bow springs only expand when a pressure differential is achieved across the tool. This enables the centralizer to pass, for example, through the restricted bores of the tail pipe and expand into the casing liner below without any unnecessary wear on the bow springs.


As a safety precaution, the bow springs are mounted above a coil spring. This is to allow the bow springs the necessary movement they require in order to pass through a restricted bore while still expanded.

Features/Benefits

- Full flow through bore
- Safety feature which allows bow springs movement when meeting restrictions in expanded condition, therefore preventing bow spring damage

When ordering Flow Activated Bow Spring Centralizers please specify:

- Size
- Thread connection

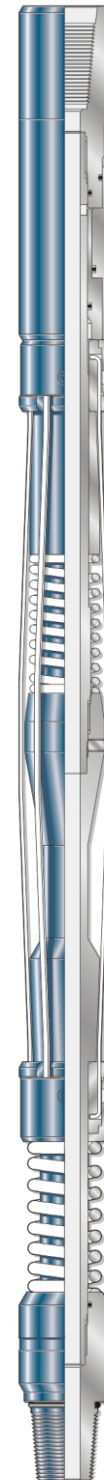

Flow Activated Bow Spring Centralizers

www.nov.com / dht.customerservice@nov.com

Downhole Tools Corporate Headquarters
7909 Parkwood Circle Drive
Houston, TX 77036
Phone: 713 346 7500
Fax: 713 346 7959

NATIONAL OILWELL VARCO

© 2007 National Oilwell Varco
D391000936-MKT-001 REV.01