

u Cura	2014/4/13 15:10	又作失	
\mu python	2014/4/13 14:47	文件夹	
cura.bat	2014/4/12 15:53	Windows 批处理	1 KB
CuraEngine.exe	2013/7/30 14:20	应用程序	1,527 KB
Migbot.exe	2014/4/12 16:44	应用程序	76 KB
migbot.vbs	2014/4/12 16:26	VBScript Script	1 KB
output.txt	2014/4/14 0:42	文本文档	1 KB
iii 说明.txt	2013/10/8 11:22	文本文档	1 KB

**OPEN** exe

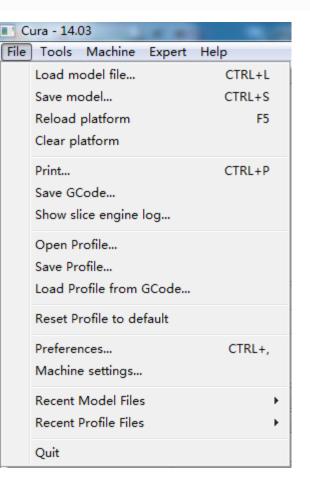


Turn on the machine settings

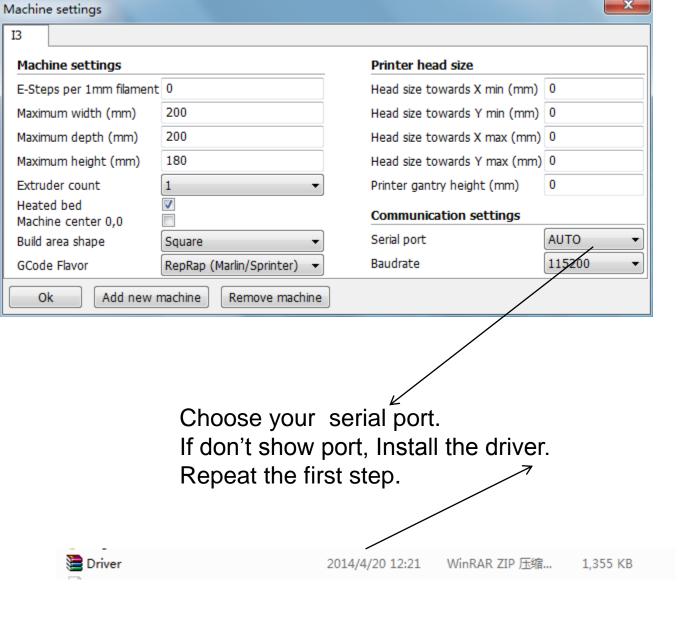


## Loading an STL file



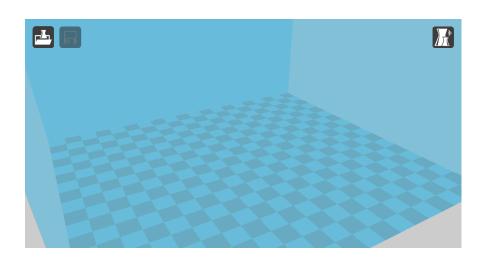


## Select the model you want to load

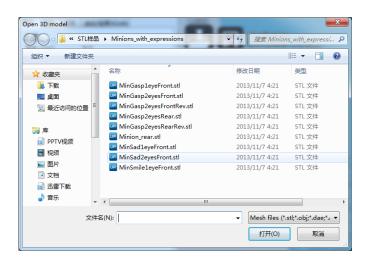



## Wait sliced completed



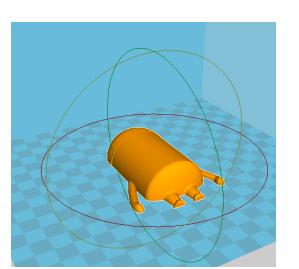

## After adjusting the graphic display

Load model file	CTRL+L	
Save model	CTRL+S	
Reload platform	F5	
Clear platform		
Print	CTRL+P	

When the temperature rises to the set value, Start printing.

