1. Overview

The following document provides a detailed overview of the Outbound LTL Packing process at the Kenosha facility.

2. Equipment, Supplies and Consumables

The following equipment, consumables, and supplies are necessary to perform the function of pallet packing:

RF scanner, tabletop label printer, 4”x6.5” labels, boxes, tray inserts and separators, Dangerous Goods (DG) labels, 3” tape, tape gun 3”, cover-up labels, Electrostatic Discharge (ESD) pink polybags, ESD silver bags, dunnage paper, dunnage machine, handheld mechanical counters, calculators, mobile packing carts, tablets, Bluetooth-enabled scanner, yellow & green cones.

3. Packing Process

1. The pickers drop off the pallets at the LTL Packing Fixed Staging Lanes.
2. The packing operator can execute the work as soon as the first pallet is dropped off for the order.
3. Use the Pick Drop Audit Label as a reference for product verification. If you need to print the PCR (Packing Consolidation Report), request a PCR report in Oracle.

   Reference WI - General - Oracle Reports

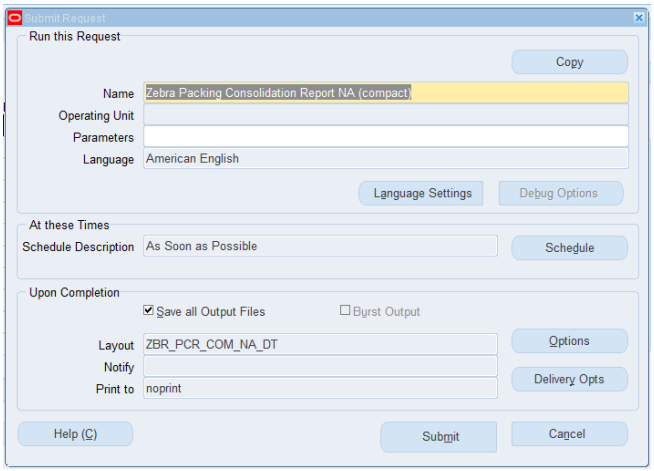

4. If the pick drop audit label is missing the country of origin (COO), inform the lead or supervisor so they can update the system.

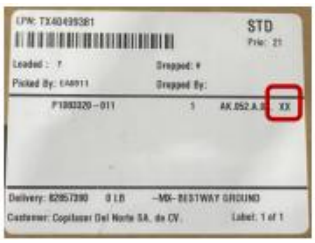

5. Proceed to the zDss station to reprint the part label missing the COO.

   ✓ If the zDss station is not functional, inform the lead or the Supervisor.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

6. Check if you have an acceptable pallet for the shipment based on the criteria set in the Packaging Guidelines.

A) Swap out damaged pallets if (missing more than 25% of the top or bottom deck boards are missing blocks for block pallets or cracks in the stringer).

B) No honeycomb/paper, pressed wood, metal, or foam pallets.

C) When working with Ingram Micro orders, transfer all boxes to a non-block pallet.

D) When working with international shipments, use Heat-treated (HT) pallets or plastic pallets for Brazil and China.

7. Verify SKUs, Qty, and SNs on the pallet.

A) Count each distinct SKU and compare it to system records.

- ✓ Make sure to read the entire SKU number.
- ✓ Count one SKU at a time.
- ✓ Use calculators and handheld counters to assist you with counting.
- ✓ Don't validate counts on small items (screws, pins, etc.).
- ✓ Make sure each SKU is labeled (no hand-written labels allowed).

B) If there are serialized items present on the LPN, perform an LPN inquiry According to WI – General – LPN Inquiry, go to the "SN" field under a particular SKU.

- ✓ Validate vendor sealed cases by verifying 1-2 serial numbers from the carton.
- ✓ Validate loose serialized items by picking a random sample of 2-5 items and comparing them with system records.

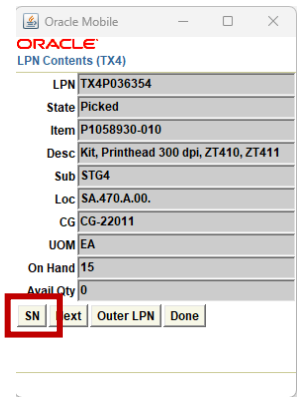

8. For full pallets, verify the SKU, spot-check 2 to 4 product Serial Numbers, compare them to the content labels, and verify cartons for DG requirements.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

9. If a discrepancy is discovered, print the Pick Drop Audit Label reference WI – Outbound – Label Printing and report the issue to the supervisor or area lead.

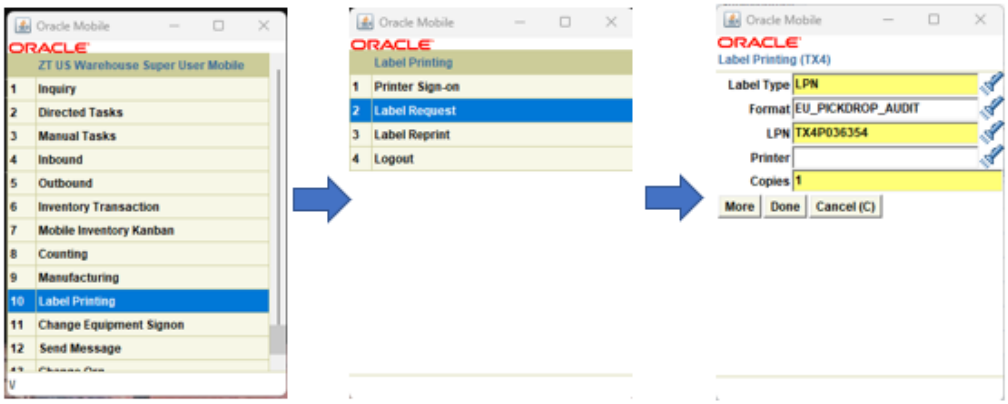

✓ Start working on another pallet while the issue is being resolved.

10. If a damaged product or box is discovered, immediately notify the supervisor or area lead.

Reference Visual Packaging Damage Criteria Rev01.pdf work instruction.

✓ Depending on the condition of the material, you might be asked to re-box the material, conceal the damages with cover-up labels, or proceed to work on another pallet.

11. If there are loose items, grab corrugate from the closest. shelving and build the boxes.

✓ Save travel time by grabbing multiple boxes if you have multiple loose pick LPNs (totes).

Example of Loose Pick LPNs:

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

12. Overpack each tote's contents into an individual carton (must be on a separate LPN).

- ✓ The general rule is to overpack anything smaller than a 107 box.

Don't Overpack

Overpack

- ✓ Full pallet picks consisting of small box items should not be overpacked.
- ✓ Use corner boards to secure full pallet picks properly.
- ✓ **Walmart** only: Do Not Overpack

Don't Overpack

- ✓ When overpacking DG items, ensure that items with different UN codes (e.g., 3480 and 3481, 3090 and 3091) are not packaged together.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

13. When the items are overpacked, fill the box with dunnage by travelling to the closest dunnage machine.

- ✓ Whenever possible, use the mobile cart to carry multiple boxes to and from the dunnage machine for time efficiency.
- ✓ Must use dividers for motherboards and any other Item that comes with dividers.
- ✓ Do not remove dividers to consolidate materials.

14. Seal the box using the standard single-line taping method (I-Method).

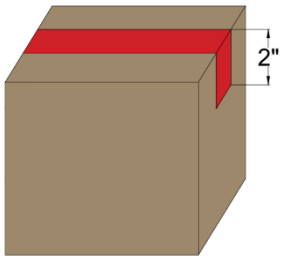

- ✓ Allow at least 2 inches of tape extension on the sides.

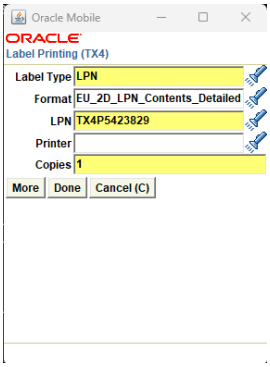

- ✓ Once every carton is sealed, print out and apply LPN Contents Detailed label to every reference WI-Outbound-Label Printing.
- ✓ Make sure that the labels are aligned with the edges of the box, don't overlap or fold over the edge.
- ✓ Create and apply LPN Contents Detailed labels to partial cartons as well.
- ✓ Make sure that the carton labels are facing outward.

15. Check the PCR to identify the presence of DG items and label the product by instructions in the "Comments" section of PCR.

- ✓ If a paper copy of PCR is not available, generate the PCR in Oracle according to step 3.
- ✓ Place DG labels to go over the pallet wrap on top of the pallet.

Item	Order Qty	LPN	Picked Qty	Order UOM	Comments
BTRY-MPM-22MA1-01	50	TX4P044050	50	EA	DG:LABEL CARTON AS CARGO AIRCRAFT ONLY. UN 3480 LITHIUM
CHG-MPP-BEPSAC1-2	20	TX4P044050	20	EA	
G32432-1M	10	TX4P044050	10	EA	
MNT-MPP-CRTMNT1-01	4	TX4P044050	4	EA	
P1004238	4	TX4P044050	4	EA	
P1004239	4	TX4P044050	4	EA	
P1029257-001	16	TX4P044281	16	EA	
P1031365-053	6	TX4P044050	6	EA	
P1031365-192	500	TX4P044281	500	EA	
P1037750-006	8	TX4P044050	8	EA	
P1037974-001	12	TX4P044050	12	EA	
P1037974-069	6	TX4P044050	6	EA	
P1050667-017	40	TX4P044050	40	EA	
P1050667-032	10	TX4P044281	10	EA	
P1050667-034	16	TX4P044281	16	EA	
P1050667-140	42	TX4P044281	42	EA	
P1053360-018	10	TX4P044050	10	EA	
P1058930-022	8	TX4P044050	8	EA	

16. If multiple LPNs are present on a pallet, consolidate them in Oracle MWA reference WI-Outbound-LPN Consolidate.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

- ✓ Make an LPN Inquiry to see how many pick tasks are left on that delivery for consolidation purposes
- ✓ Make sure to remove old LPN tags, leaving only the valid ones.
- ✓ Ensure all loose pick LPNs are overpacked and labeled before consolidating.

17. BLUESTAR ONLY:

- A pallet containing more than two layers of the same item and mixed items must be separated by pallet and wrapped into one unit before loading. The same item layers must be even!
- If additional cases of the same item are unevenly layered, the additional mixed cases of different SKUs must be on a separate pallet.
- If the whole pallet is mixed, we leave it as mixed.
  - ✓ Ensure height limitations are followed. The pallet cannot exceed 65 inches and has no more than 1 inch of overhang.

18. Apply brown cover-up labels to the cartons to cover box damage, old shipping labels, handwriting, inappropriate DG labels, and other imperfections.

19. If the pallet is partial, consolidate it with another pallet.

- ✓ Before consolidating, verify the physical SKU for each LPN and proceed to consolidate once everything is verified.
- ✓ Make appropriate LPN consolidation transactions per step 14.
- ✓ Ensure that layers are level to allow double-stacking capabilities.
- ✓ When consolidating pallets, ensure we are adhering to the customers' height limitations:
  - Domestic skids (except for ScanSource) cannot exceed 65"
  - International and ScanSource pallets cannot exceed 60"
  - Walmart cannot exceed 58"
  - USPS cannot exceed 48" and No Overhang is allowed.

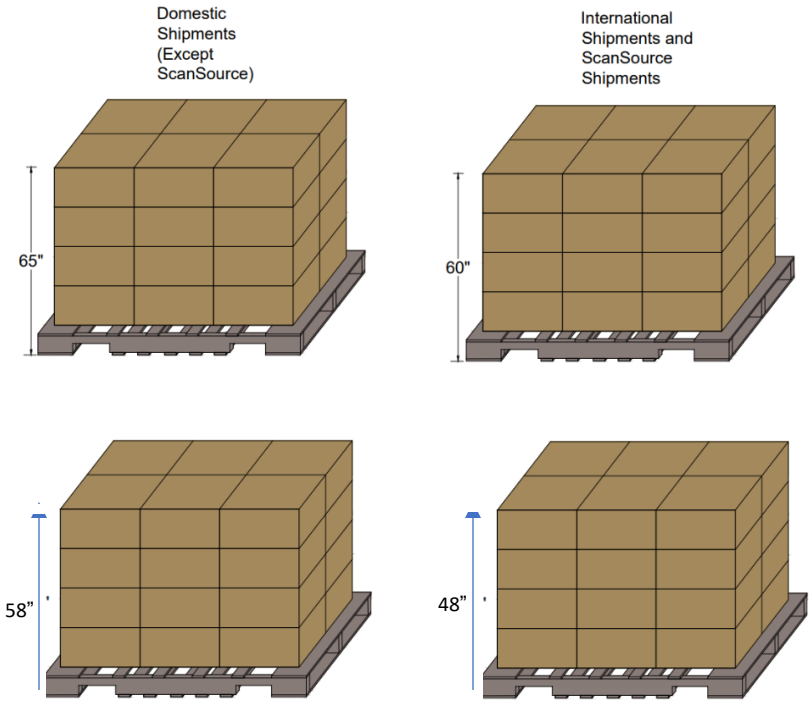

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

20. Generate Shipping Contents label using Oracle MWA, reference WI-Outbound-Label Printing.

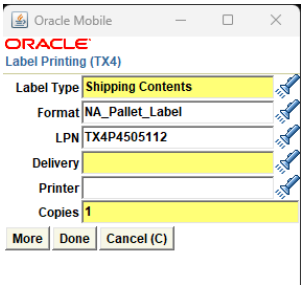

21. After generating the Shipping Contents label, physically count the number of cartons on the pallet and enter them into the system. Reference WI - Outbound - Case Count v1.0.pdf

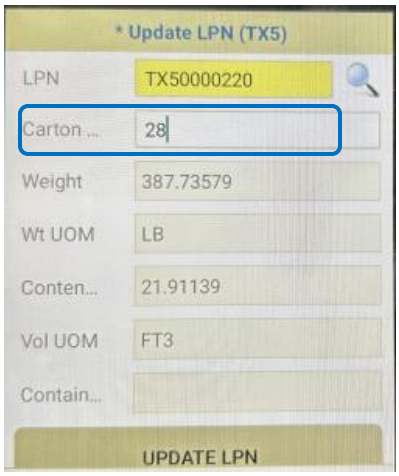

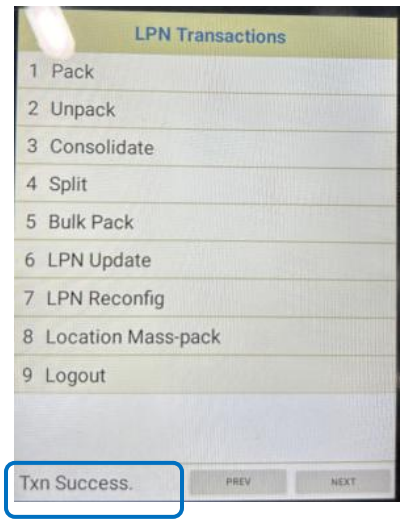

- ✓ If unable to enter the case count using the RF gun, write the case count on the back of the Shipping Contents Label.

22. Once the pallet is verified and finalized, place a yellow cone (and a PCR report, if available) on top of the pallet.

- ✓ The yellow cone is the queue for the Pre-Auditor to perform an Audit.

- ✓ If the audit passes, the Pre-Auditor will remove the yellow cone and apply the green cone.
- ✓ The green cone indicates that the pallet is ready to be wrapped.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

✓ If the audit fails, the Pre-Auditor will inform the Lead or Supervisor immediately. The issue must be corrected before the pallet is audited again.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

4. References

Document #	Document Title
	WI - General - Oracle Reports v1.0.pdf
	Create and Print TX5 Bulk Parts Label Rev01.pdf
	Packaging Guidelines Rev01.pdf
	WI - General - LPN Inquiry v1.0.pdf
	WI - Outbound - Label Printing v1.0.pdf
	WI - Outbound - LPN Consolidate v1.0.pdf
	Visual Packaging Damage Criteria Rev01.pdf
	WI - Outbound - Case Count v1.0.pdf

5. Revision History

The following table lists all revisions (including the original document) to this procedure, the date, and the reason for the revision.

Rev.	Rev. Date	Description of Change	Revised By
01	07/25/23	Original issue	P. Eroshenko
02	11/06/23	Step 19 was updated to include entering the delivery case count in the system.	A.Cabrera
03	4/29/24	The entire SWI was revised. Step 15 was added for Bluestar's new packing process.	A. Ramirez-N.Singleton
04	05/02/25	Steps 4 & 5 were added for missing Country of Origin (COO).	A.Cabrera

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.