1. OVERVIEW

This work instruction provides directions on correctly processing excess material from a work order back to stock.

2. UNPACK STATION

1. Before starting a new WIP job, reference the WIP Traveler to determine if any parts marked with Backflush "BF" and negative "-" quantity will be removed units.

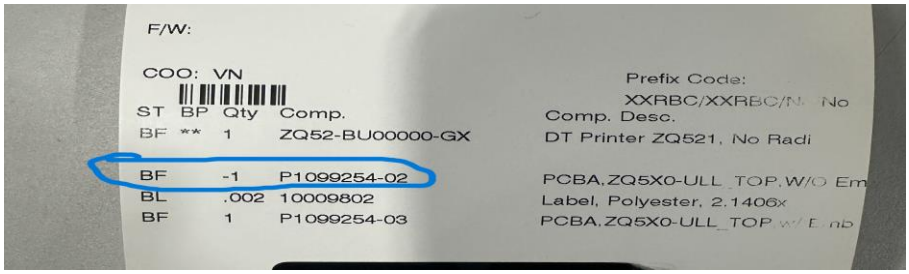

2. After the last piece of the current WIP job has been completed in MWA, reference the WIP traveler for the part with "BF" and a negative "-" quantity.
3. If there is a negative quantity, proceed to the steps below.
4. If there is no "BF" negative quantity on the WIP Traveler, inform the supervisor for further directions.

3. RECONFIGURATION MATERIAL WORKBENCH

1. Open Oracle ERP.
2. Login with your Zebra username and password.
3. Select ZTC Reconfiguration, then Inquiry, then Material Workbench

4. Check the box and click Run for the application run.

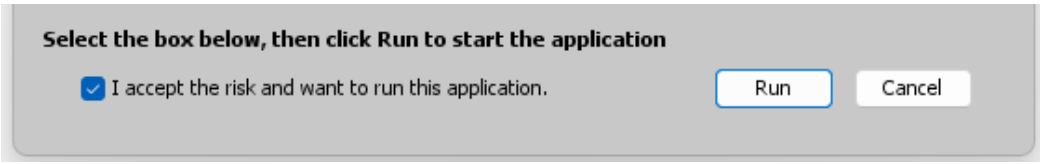

5. Enter TX4 or Locate TX4 organization from the drop-down menu.

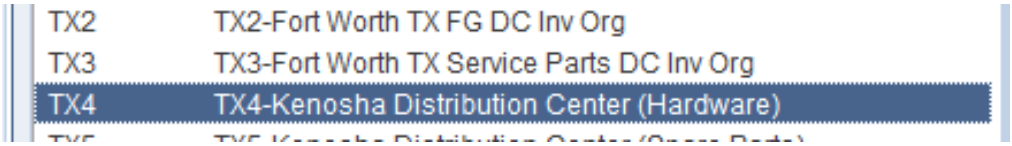

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

6. In Subinventory, enter RMF1.

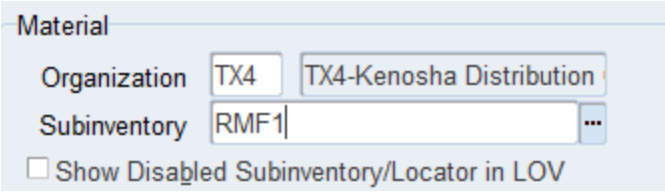

7. In Item/Revision, enter the part number in the WIP Traveler with a negative quantity and hit enter.

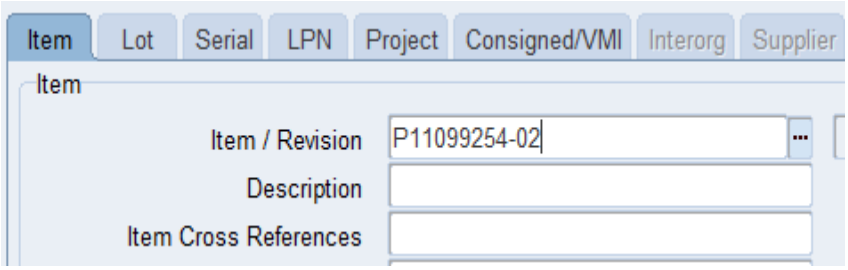

8. The Material Workbench screen will display the on-hand quantity to keep.

- ✓ Expand the screen to view the quantity.
- ✓ Make a note of the Locator; you will need the location for Repack and Pack stations.

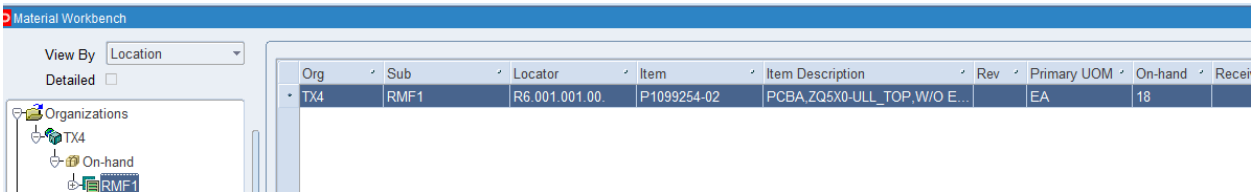

- ✓ Request a supervisor material quantity verification to ensure material quantity is not for another open order.

9. Proceed to Line 10 to print a part label with the quantity from the WIP Traveler using Zebra Designer.

- ✓ Ensure ESD items are maintained in ESD packaging.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

✓ 1 part per bag and label each bag accordingly.

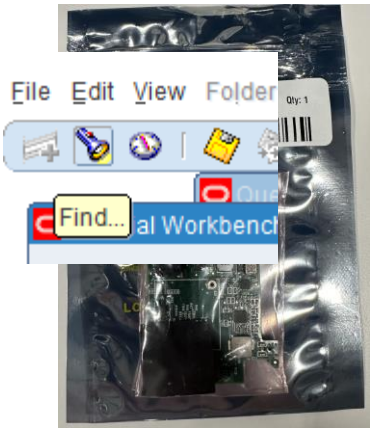

10. If there are more negative quantities for the part on the traveler, click on the flashlight and repeat steps 1-10.

4. REPACK STATION

1. Log into MWA with your credentials.

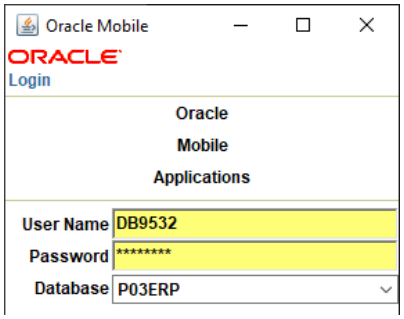

2. From the Responsibilities Menu, select ZTC Reconfiguration Mobile Apps TX4

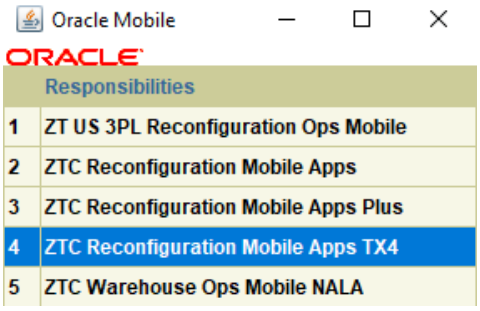

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

3. In the ZTC Reconfiguration Mobile Apps TX4, select Other Transactions.

4. In Other Transactions, select Sub Transfer.

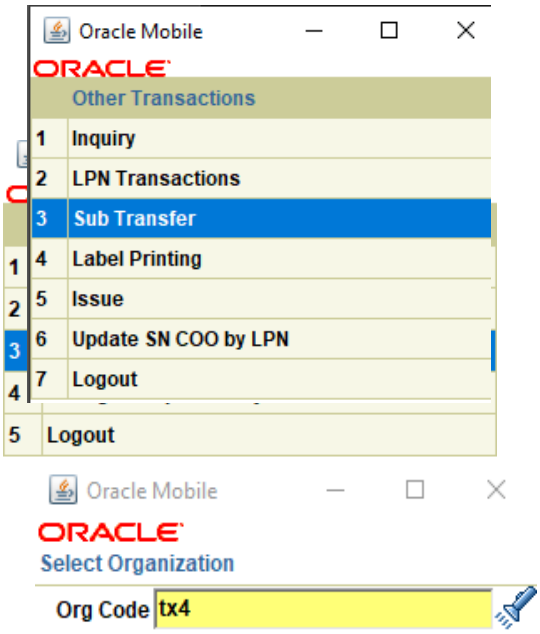

5. In Org Code, enter TX4 and press enter.

6. In the Item field, enter the part number and press enter.

7. In the From Sub field, enter RMF1 and press enter.

8. In the Loc field, enter the locator from the Material Workbench screen (i.e., R6.001.001.00) and press enter twice.

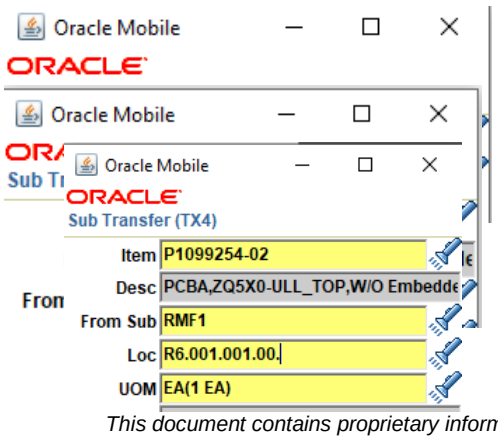

9. Enter the negative quantity on the current WIP traveler and press enter.

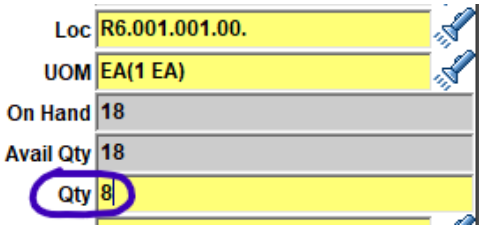

10. In the To Sub field, enter RMF2 and press enter.

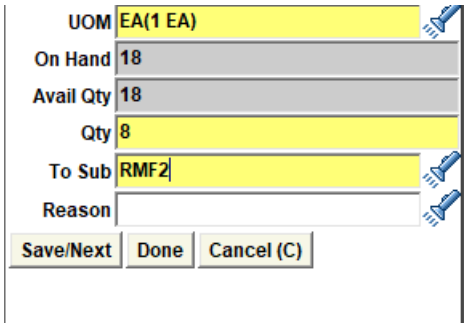

11. In the To Loc field, enter the locator number (i.e., R6.001.001.00) from the Material Workbench screen and press enter.

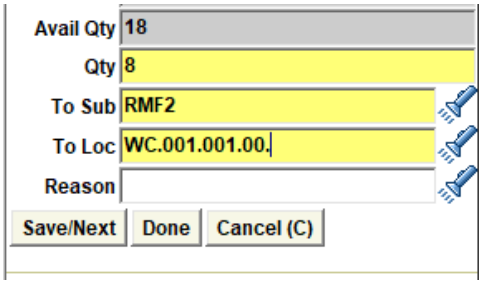

12. Click Done.

13. Repeat steps 1-12 for the remaining parts tote. Once all parts are sub-transferred, start the Pack process.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

5. PACK PARTS ONTO LPN

1. Log into MWA with your credentials.

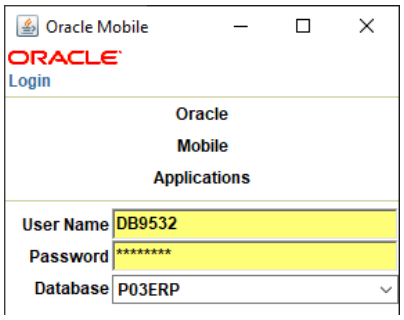

2. From the Responsibilities Menu, select ZTC Reconfiguration Mobile Apps TX4

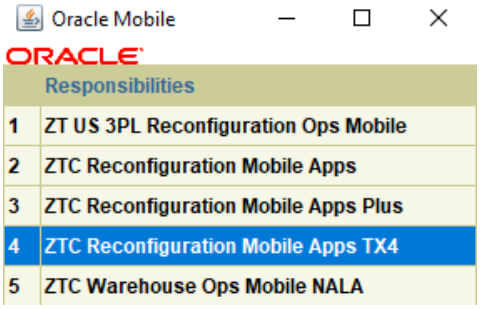

3. In the ZTC Reconfiguration Mobile Apps

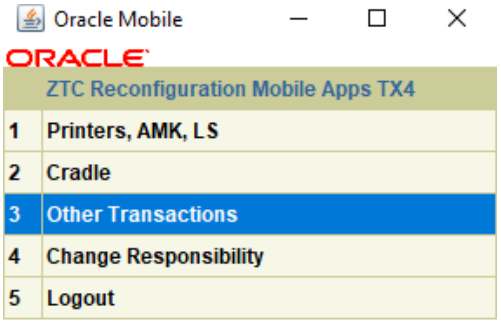

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

4. In the Other Transactions screen, select LPN Transactions.

5. In the LPN Transactions screen, select Pack.

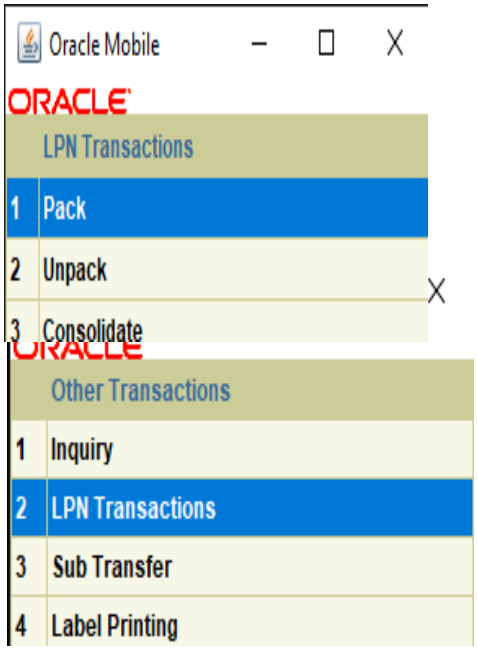

6. In the Org Code field, enter TX4 and press enter.

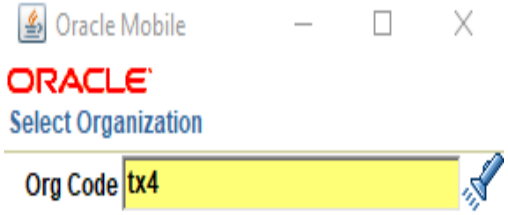

7. In the To LPN field, scan a new LPN.

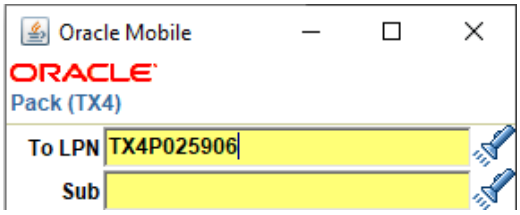

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

8. In the Sub field, enter RMF2 and press enter.
9. In the Loc field, enter the locator and press enter.

10. In the Item field, enter the part number and press enter twice.

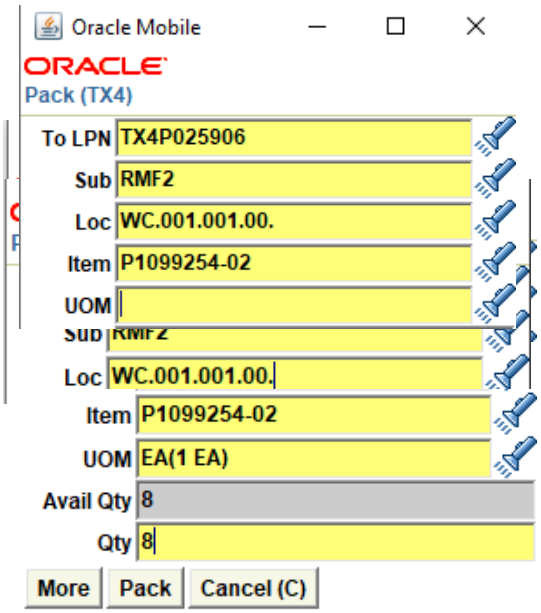

11. In the quantity field, enter the BF quantity and press enter.
12. Click on Pack to complete the transaction.
13. Place the new LPN on the packed part.
    - ✓ Each part must be packed on its own LPN.
14. Repeat steps 1-14 for any remaining parts.
15. When the process is complete for all the parts, place part or tote with parts in Outtake Lane for pick up.

6. REFERENCES

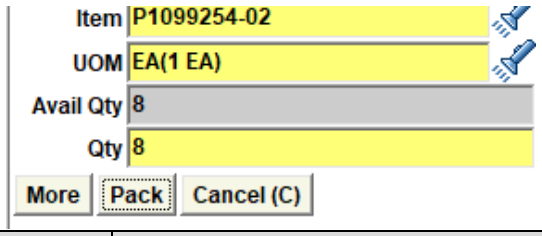

Document #	Document Title
N/A	N/A

7. REVISION HISTORY

The following table lists all revisions (including the original document) to this procedure, the date, and the reason for the revision.

Rev.	Rev. Date	Description of Change	Revised By
01	12/13/23	Original issue	D. Blosser / A.Cabrera

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.