WORK INSTRUCTIONS LOOSE PANEL REWORK			Zebra Technologies
Work Instruction No.			
Revision No. 01	Site Code WI03	Page 1 OF 3	

1. OVERVIEW

This document outlines the procedure for reworking the side panel of the F100 Robot base.

2. PANEL REWORK

1. Identify the panel that needs rework.

2. Loosen the screw to the extent where we can easily move the front and side panels for the rework.

3. Overlap the side panel to the front panel by pushing the panels together.

✓ The bottom tab of the side panel should be properly aligned with the front panel.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

4. Hold the panels in place by hand or with tape (Tesa appliance tape).

The are 2 ways to tighten the screw:

a. Torque screw manually by hand until tight

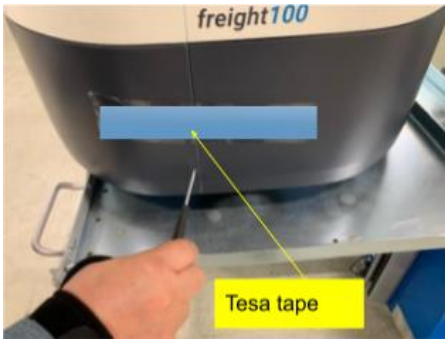

b. Use an electric driver on level 2 and a high setting.

✓ Be mindful of the force being used, too much could potentially cause a threated screw.

5. Ensure the rework is complete by gently pulling the bottom of the panel.

✓ It should not be loose.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

6. Rework completed.

3. References

Document #	Document Title
	IMG_0051.MOV

4. Revision History

The following table lists all revisions (including the original document) to this procedure, the date, and the reason for the revision.

Rev.	Rev. Date	Description of Change	Revised By
01	07/21/2023	Original issue	A.Cabrera

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.