1. OVERVIEW

The following document provides a detailed overview of the Outbound LTL Pallet Wrapping process at the Kenosha facility.

2. EQUIPMENT, SUPPLIES AND CONSUMABLES

1. The following equipment, consumables, and supplies are necessary to perform the function of pallet wrapping:

   PIT vehicle, pallet wrapping machine, plastic shrink wrap, plastic top covers, DG labels, PC, scanner, keyboard, mouse, weight scales, plastic, corrugated corner boards.

3. PALLET WRAPPING PROCESS

1. Take the green-coned pallet from the LTL Packing area and move it to one of the pallet-wrapping machines.

   ✓ Make sure to monitor the LTL Packing area to reduce the waiting time in pallet processing.

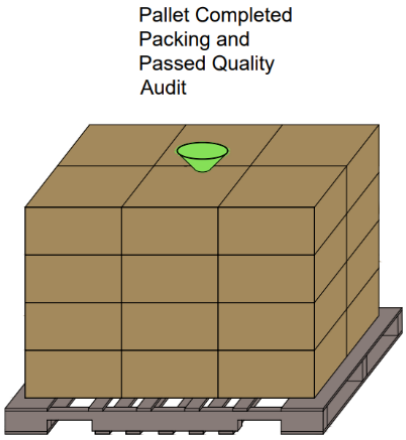

   *Quality Tip
   ✓ Ensure the pallet is free of damage.
   ✓ Verify international orders are on a Heat-Treated (HT) pallet.
   ✓ Verify Brazil and China orders are on a plastic pallet.
   ✓ Ingram Micro orders do not allow for block pallets.
   ✓ Ensure the pallet does not exceed height requirements of 60” for international and ScanSource orders and 65” for domestic (except ScanSource) ones.

2. Once the pallet is brought to the pallet wrapping machine, place it on the turntable.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

3. Remove any labels, documents, and cones from the top of the pallet and set them on the table near the pallet-wrapping machines.

   ✓ Make sure to place cones in the designated area to be reused.

4. Apply corner boards if needed.

   ✓ If the pallet consists of small cartons that can be compromised in transition, use the corrugated corner boards to strengthen the pallet edges.

5. Apply a pallet cover.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

6. Begin wrapping the pallet; reference Pallet Wrapping Rev01.pdf

7. Once the pallet wrapping is completed, apply the labels you removed before wrapping the pallet.
8. Move the pallet to the Dimensioner, reference Pallet Dimensioner Rev01.pdf
9. Scan the LPN; the Dimensioner will automatically display the weight and the dimensions.

✓ The dimensions and the weight will automatically be updated in Oracle.

10. Once the pallet is wrapped, labeled, and dims captured, use the RF scanner to perform a Staging Move transaction in Oracle MWA according to WI-Outbound-Stage Move and move the pallet to the dock.

A) In Oracle MWA, go to Staging Move, scan the LPN from the pallet, and hit Drop.

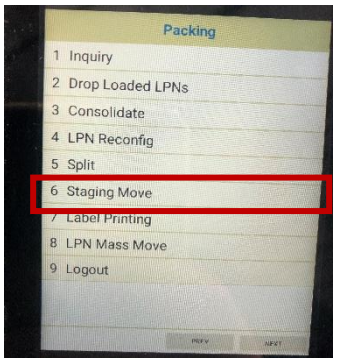

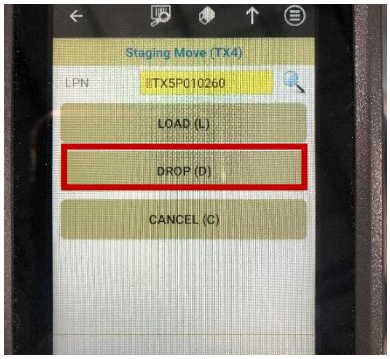

B) Pick up the pallet from the Dimensioner using a Power Industrial Vehicle (PIV) or pallet jack and bring it to the dock staging area.

C) Scan the staging lane that you selected and hit Move, then place the pallet into the selected staging lane.

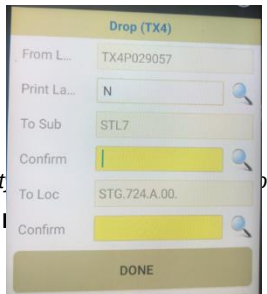

✓ If that is the first time the delivery is being stage moved, the system will default to some staging location that does not correspond to any of the dock staging lanes. In this case, the operator needs to select an empty staging lane.

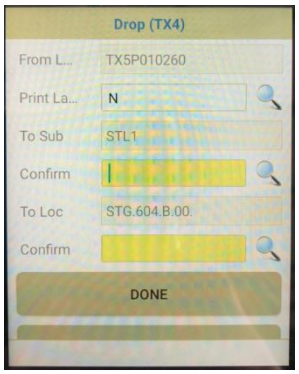

✓ If the delivery has multiple pallets, the system will direct you to the first pallet staging location.

4. MANUALLY UPDATING WEIGHT AND DIMENSIONS

✓ Manual weight and dimensions capture are needed only if the Dimensioner is not working, or the information entered needs to be reviewed or updated.

1. Open Shipping Transactions form in Oracle ERP and scan the LPN of the pallet.

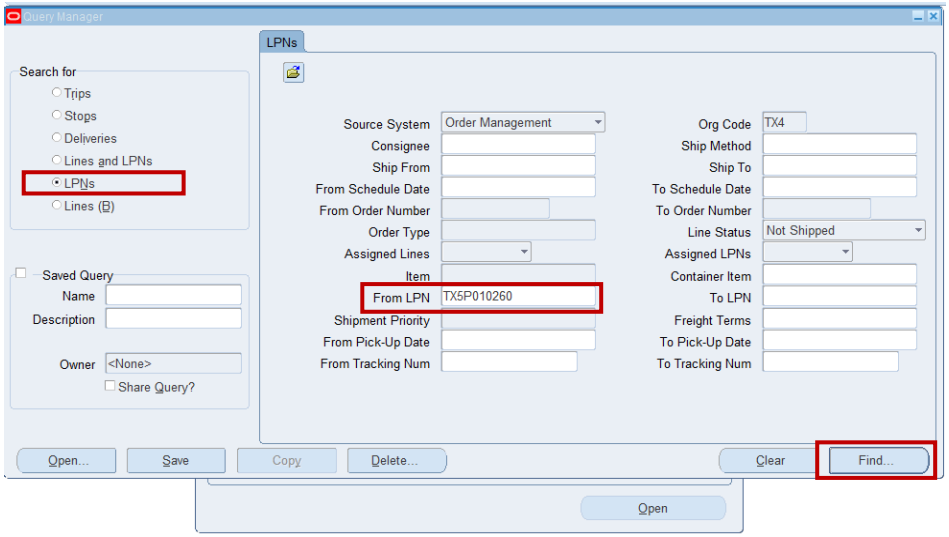

2. Enter the weight and dimensions for the pallet. Reference [Adding Weights and Dims](#).

✓ Enter the weight of the skid from the scale output.

✓ Use standard 48” x 40” for pallet’s length and width and measure the pallet height from the measuring scale attached to the pallet wrapping machine.

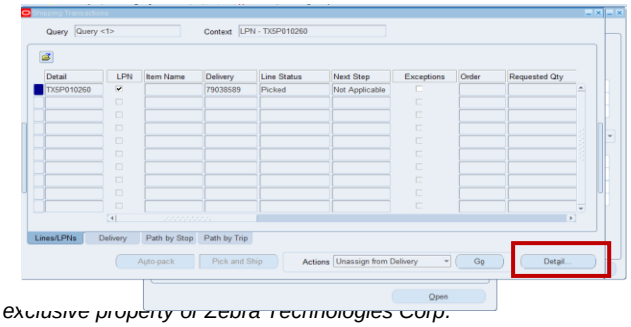

- ✓ Specified UOM will always be inches.
- ✓ Enter the carton count from the back side of the Shipping Contents label.

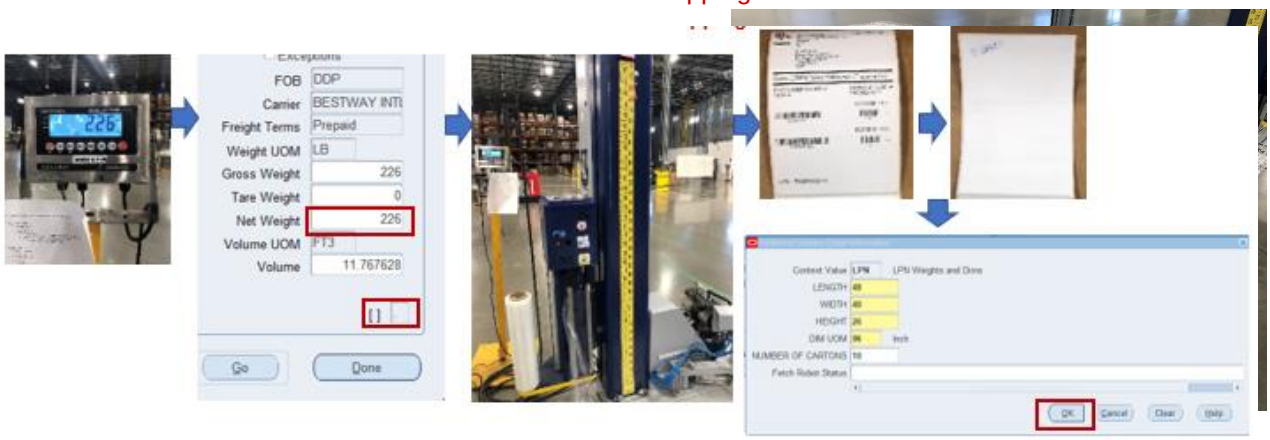

2. Once the pallet is wrapped, apply Shipping Contents label to the shrink wrap, on the right side of the pallet.

3. If DG items are present, apply DG labels to the shrink wrap according to the pallet contents.

   - ✓ DG labels for shrink wrap should be found on top of the pallet.
   - ✓ If DG labels for overpack were not placed on top of the pallet, use the stock of labels on the table to label the skid according to its contents.

4. Once the pallet is wrapped and labelled, use the RF gun to perform a Stage Move transaction in Oracle MWA according to WI-Outbound-Stage Move and move the pallet to the dock.

   B) In Oracle MWA, go to Staging Move, scan the LPN from the pallet, and hit Drop.

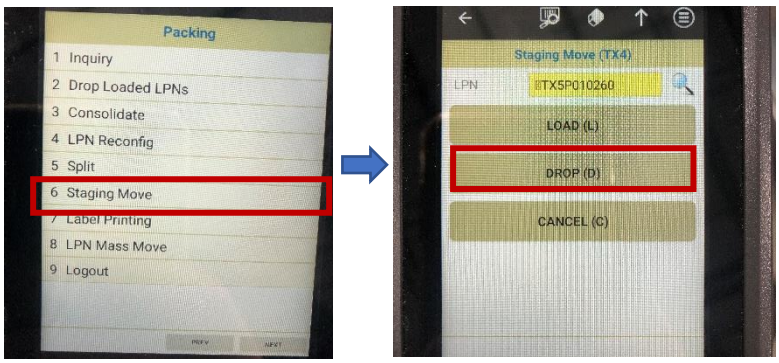

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

C) Pick up the pallet using the PIT vehicle and bring it over to the dock staging area.

D) Scan the staging lane that you selected and hit Move, then place the pallet into the selected staging lane.

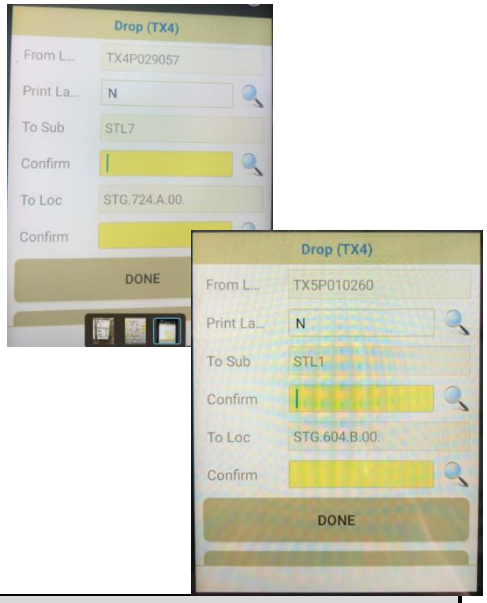

- ✓ If that is the first time the delivery is being stage moved, the system will default to some staging location that does not correspond to any of the dock staging lanes. In this case, the operator needs to select an empty staging lane.

- ✓ If the delivery has multiple pallets, the system will direct you to the first pallet staging location.

5. REFERENCES

Document #	Document Title
	Pallet Wrapping Rev01.pdf
	Pallet Dimensioner Rev01.pdf
	WI - Outbound - Adding Weights and Dims 1.0.pdf
	WI-Outbound-Stage Move

6. REVISION HISTORY

The following table lists all revisions (including the original document) to this procedure, the date, and the reason for the revision.

Rev.	Rev. Date	Description of Change	Revised By
01	07/26/23	Original issue.	P. Eroshenko
02	08/10/23	Added critical to quality pallet requirements to step 1 of section 3. Updated picture to step 7 of section 3 to showcase the shrink wrap tied to the pallet.	R. Kretzschmar, P. Eroshenko
03	11/06/23	Updated Section 3 to include the Dimensioner process.	A.Cabrera

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.