


How to set Siemens HMI TP1500 Comfort(0AX0)



01 Check HMI version, this one is(0AX0)



02 Look and check carefully for the power supply pin

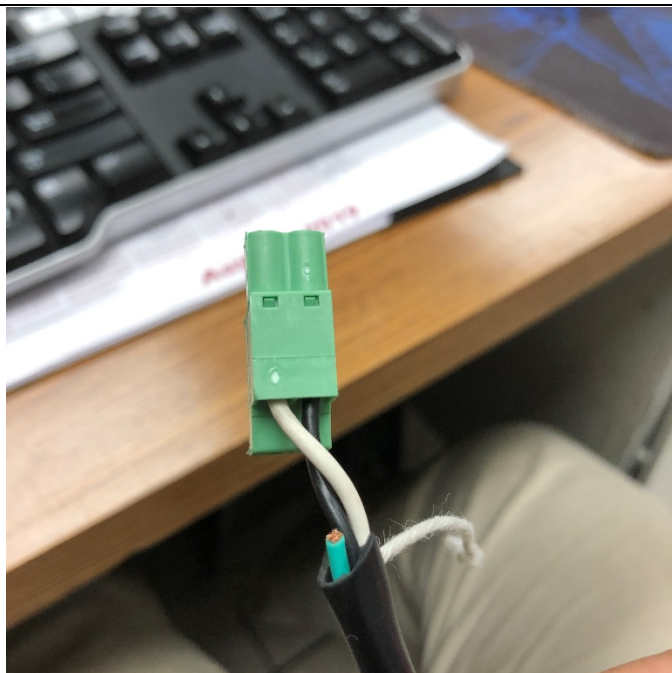


03 Lock the wire firmly



04 Insert ether net cable into HMI




05 Open TIAPortal V13



06 open document




04 press the Project view




05 Press Devices&networks and click the show address labels




06 x1 find ip and mask




07 x3 find ip and mask

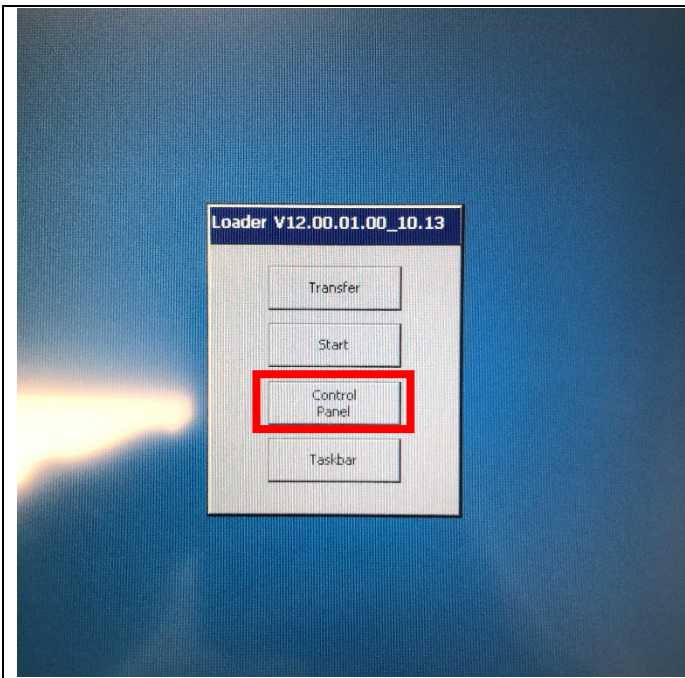


08 Press HMI choose Control Panel

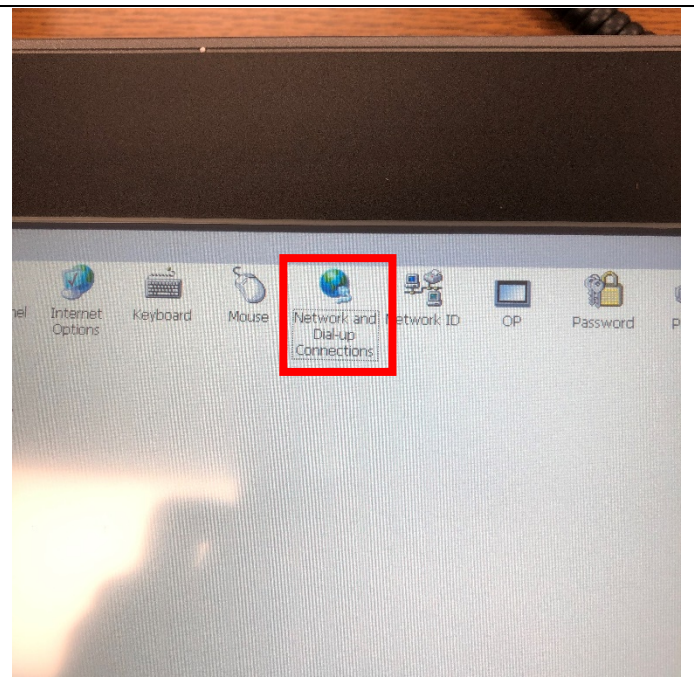


09 Press Network and Dial.....

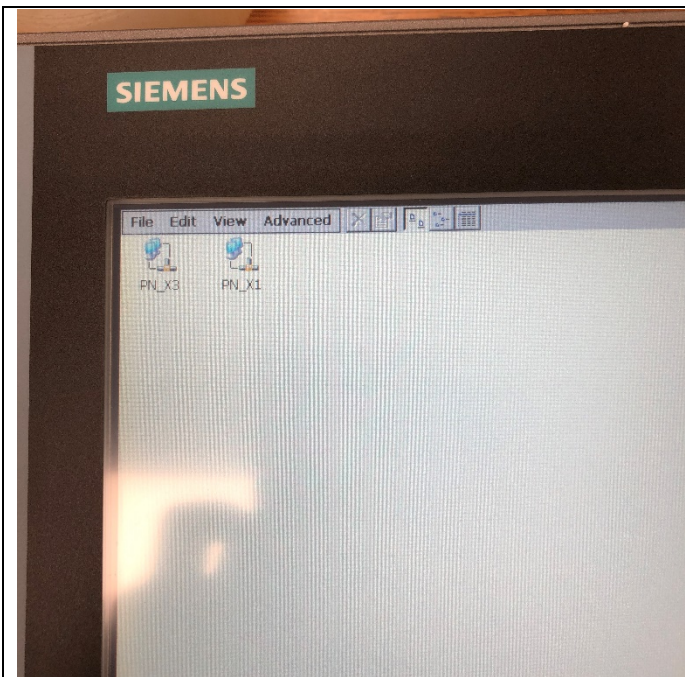


10 Set up IP AD

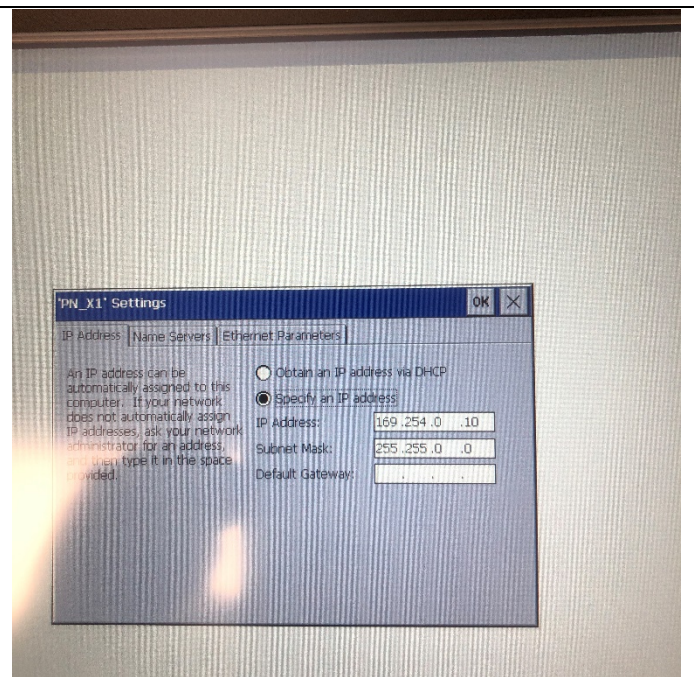


11 Set up X1 IP AD

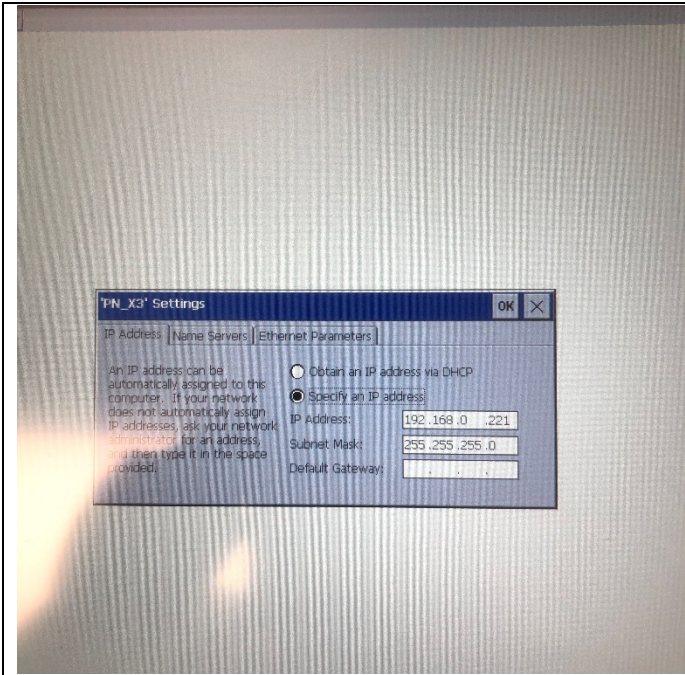


12 Set up X3 IP AD

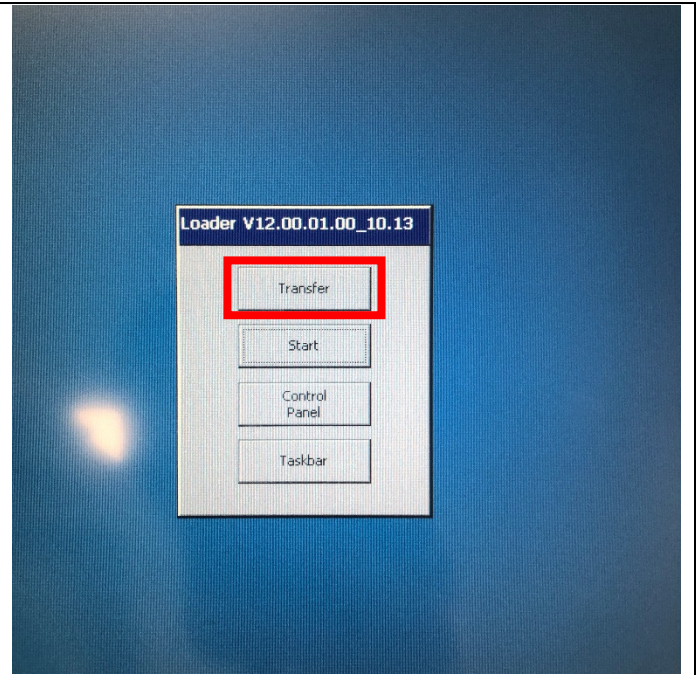


13 Finish setting press Transfer

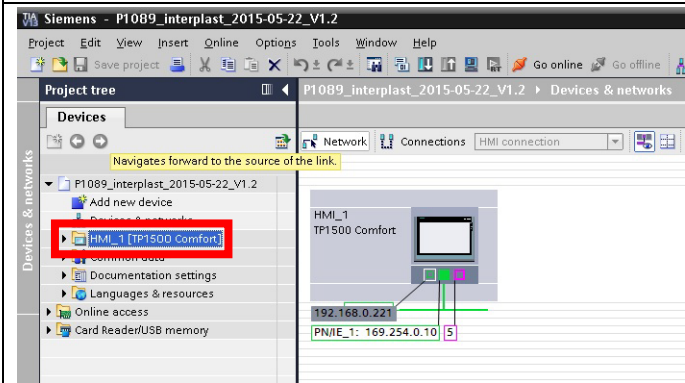


14 After hardware click the HMI_1[TP1500 Comfort]

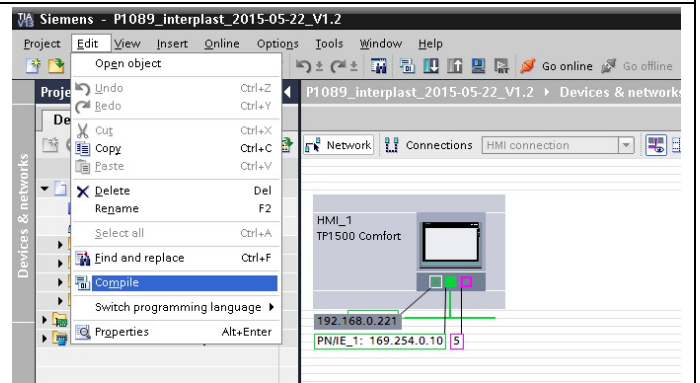

15 Choose Edit_ Compile

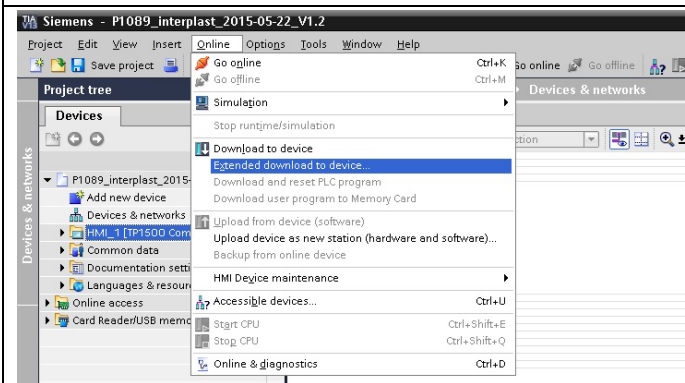


16 click the HMI_1[TP1500 Comfort]_ Online_ Extended download to device

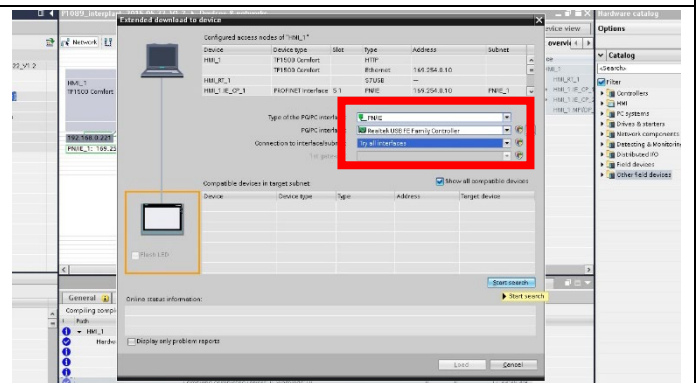


17 choose what you use_ click such

The 17step is very important, figure out what the hard drive you connect and careful the cable into x1 or x3(OAX0 is x3) (OAX1 is x1)

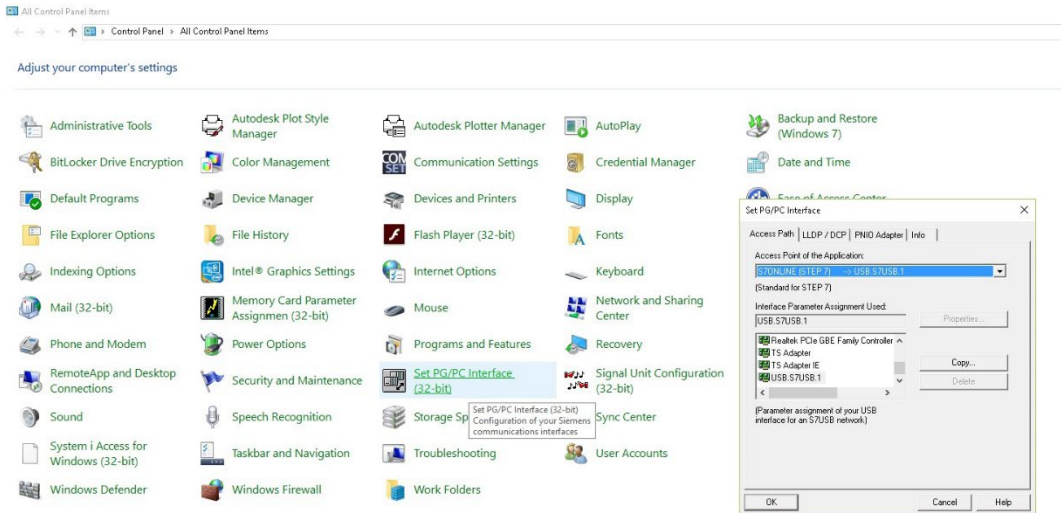

When you set OAX1 maybe you can't see the port from PG/PC, that you should go to control panel to check Set PG/PC interface and add the hard drive model which you connect

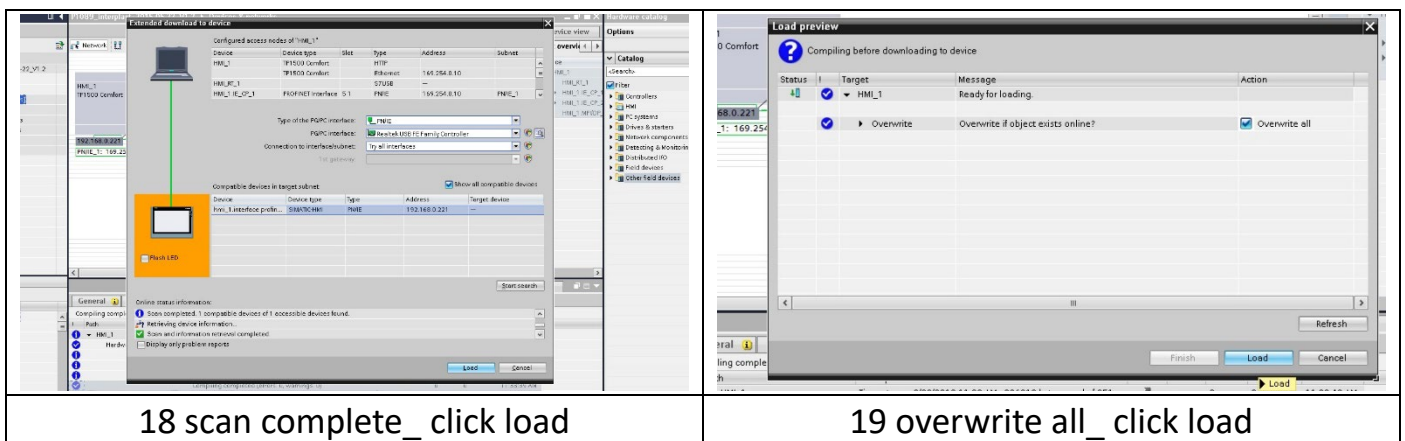

18 scan complete_click load

19 overwrite all_click load



20 finish load, HMI will auto enter program	21 Finish
---	-----------