BS swift-like: ONE HALF of the sheet with its fan tail, 1:1, US Letter portrait (page 1 of 1)

Foamboard 5 mm (ASSUMED: measure yours). Span 400 mm. Cut along the solid outline; trace, flip on the centreline, trace the other half.

One sheet, one bend: bend the tail up along the hinge line to the angle on the notes page. Print at 100 % (actual size).

Green ticks mark the AVL trim CG at CL 0.3 for the proposed bends (reference points, not a CG window).

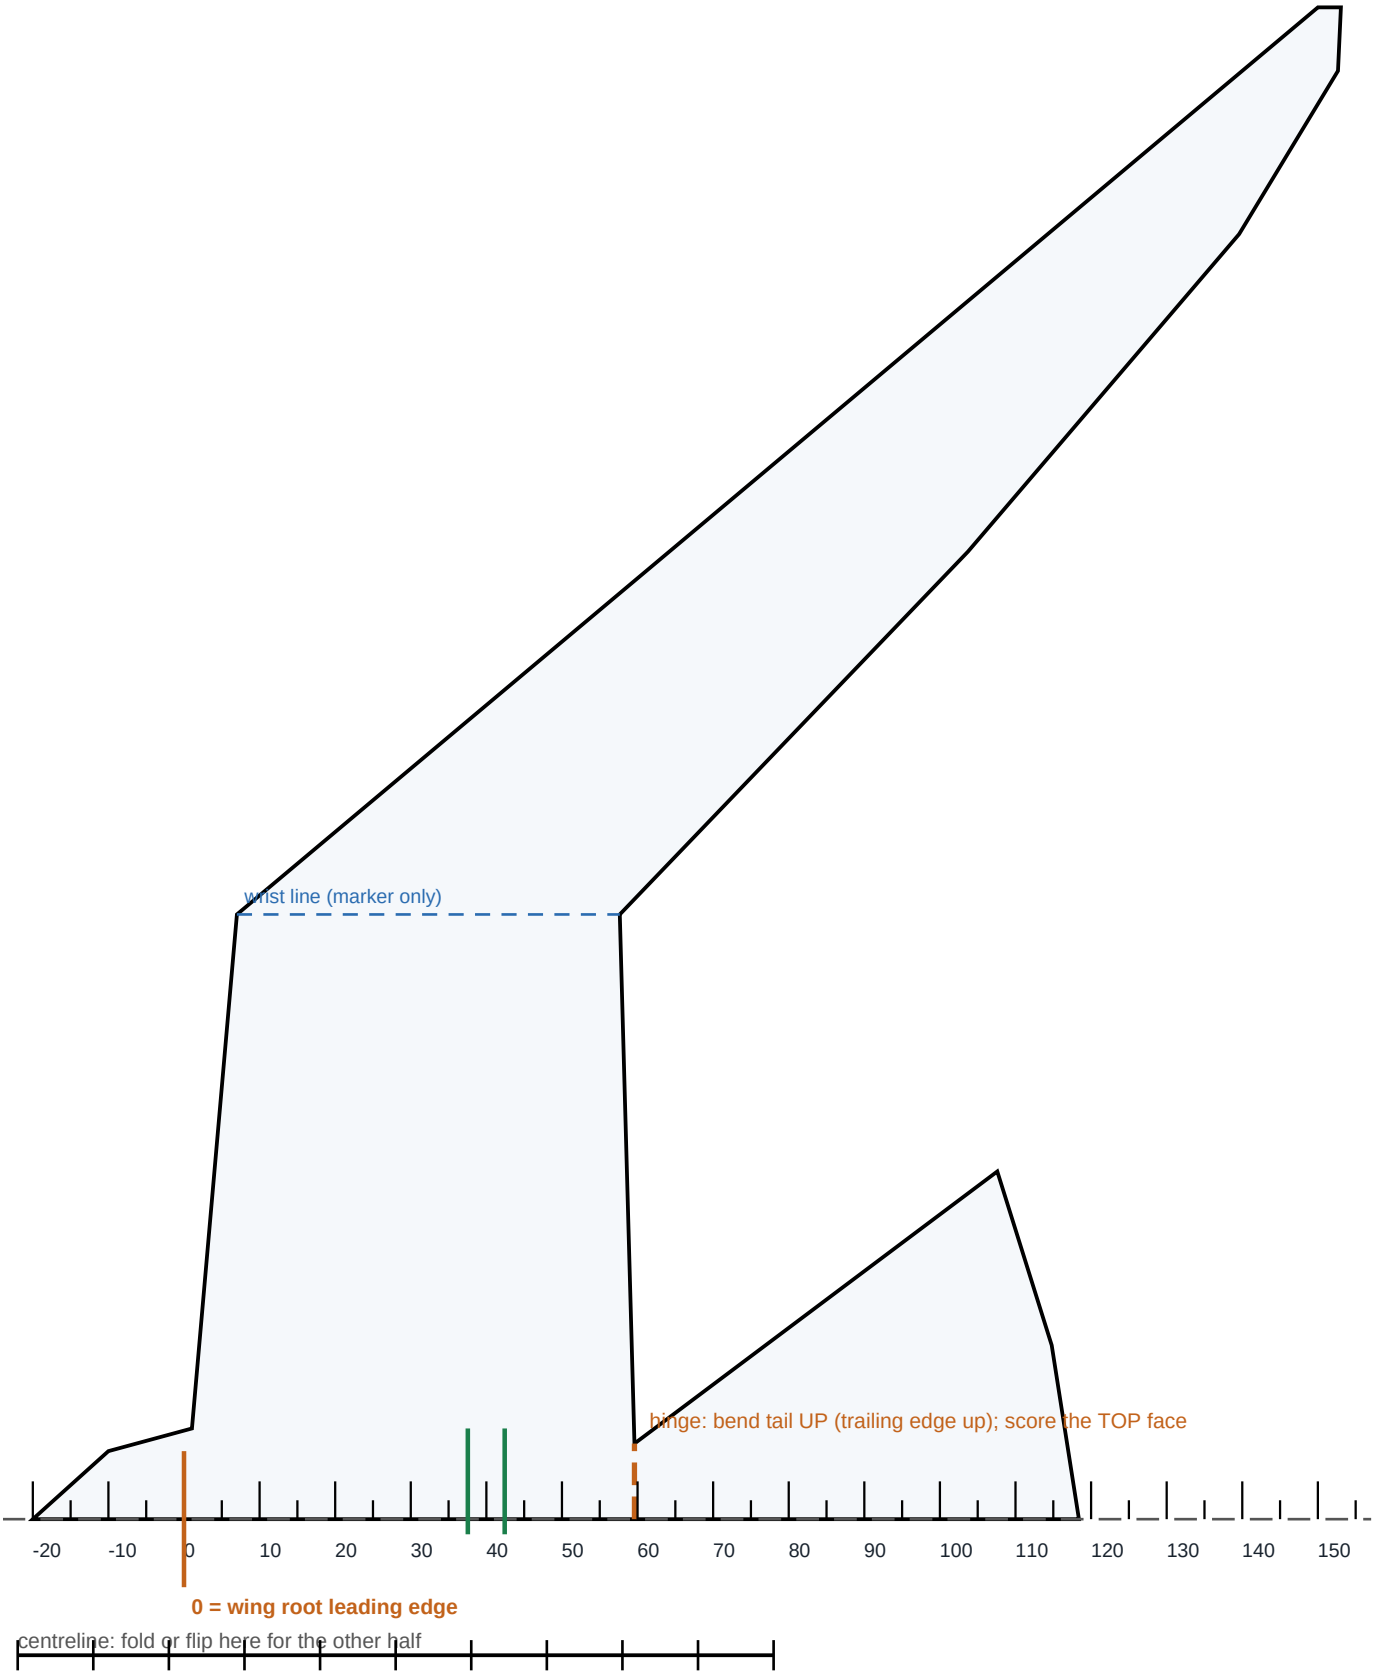

Scale bar: this line must measure exactly 100 mm on your print.

If it does not, print at 100 % (actual size), not fit-to-page.

BS swift-like: build notes and tail-bend angle gauge, 1:1

Tail bend is a rotation of the fan tail about the hinge line, trailing edge UP. Score the top face with a V cut (leave the bottom paper), bend the tail up to the gauge line, glue the crease. One sheet, one bend. A flat symmetric sheet has no nose-up moment at zero lift; this bend is what supplies it. These are build instructions, not a prediction that the glider pulls out.

gauge for a 5 deg bend: lay the wing along the long edge; the tail's top face follows the slanted edge

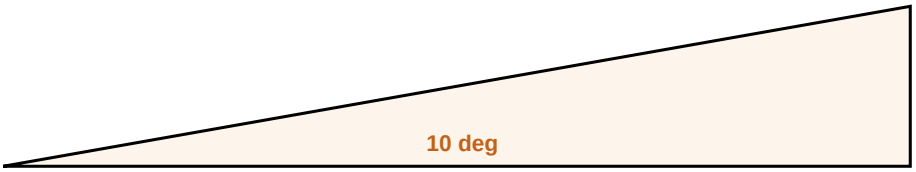

gauge for a 10 deg bend: lay the wing along the long edge; the tail's top face follows the slanted edge

Wrist joint line: a drawn marker for later folding; the sheet is not cut or creased there.

CG: measure with a knife edge; the 0 mark of the printed CG rail goes at the wing root leading edge at the centreline.



Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.

BC crow/pigeon-like: ONE HALF of the sheet with its fan tail, 1:1, US Letter portrait (page 1 of 2)

Foamboard 5 mm (ASSUMED: measure yours). Span 400 mm. Cut along the solid outline; trace, flip on the centreline, trace the other half.

One sheet, one bend: bend the tail up along the hinge line to the angle on the notes page. Print at 100 % (actual size).

Green ticks mark the AVL trim CG at CL 0.3 for the proposed bends (reference points, not a CG window).

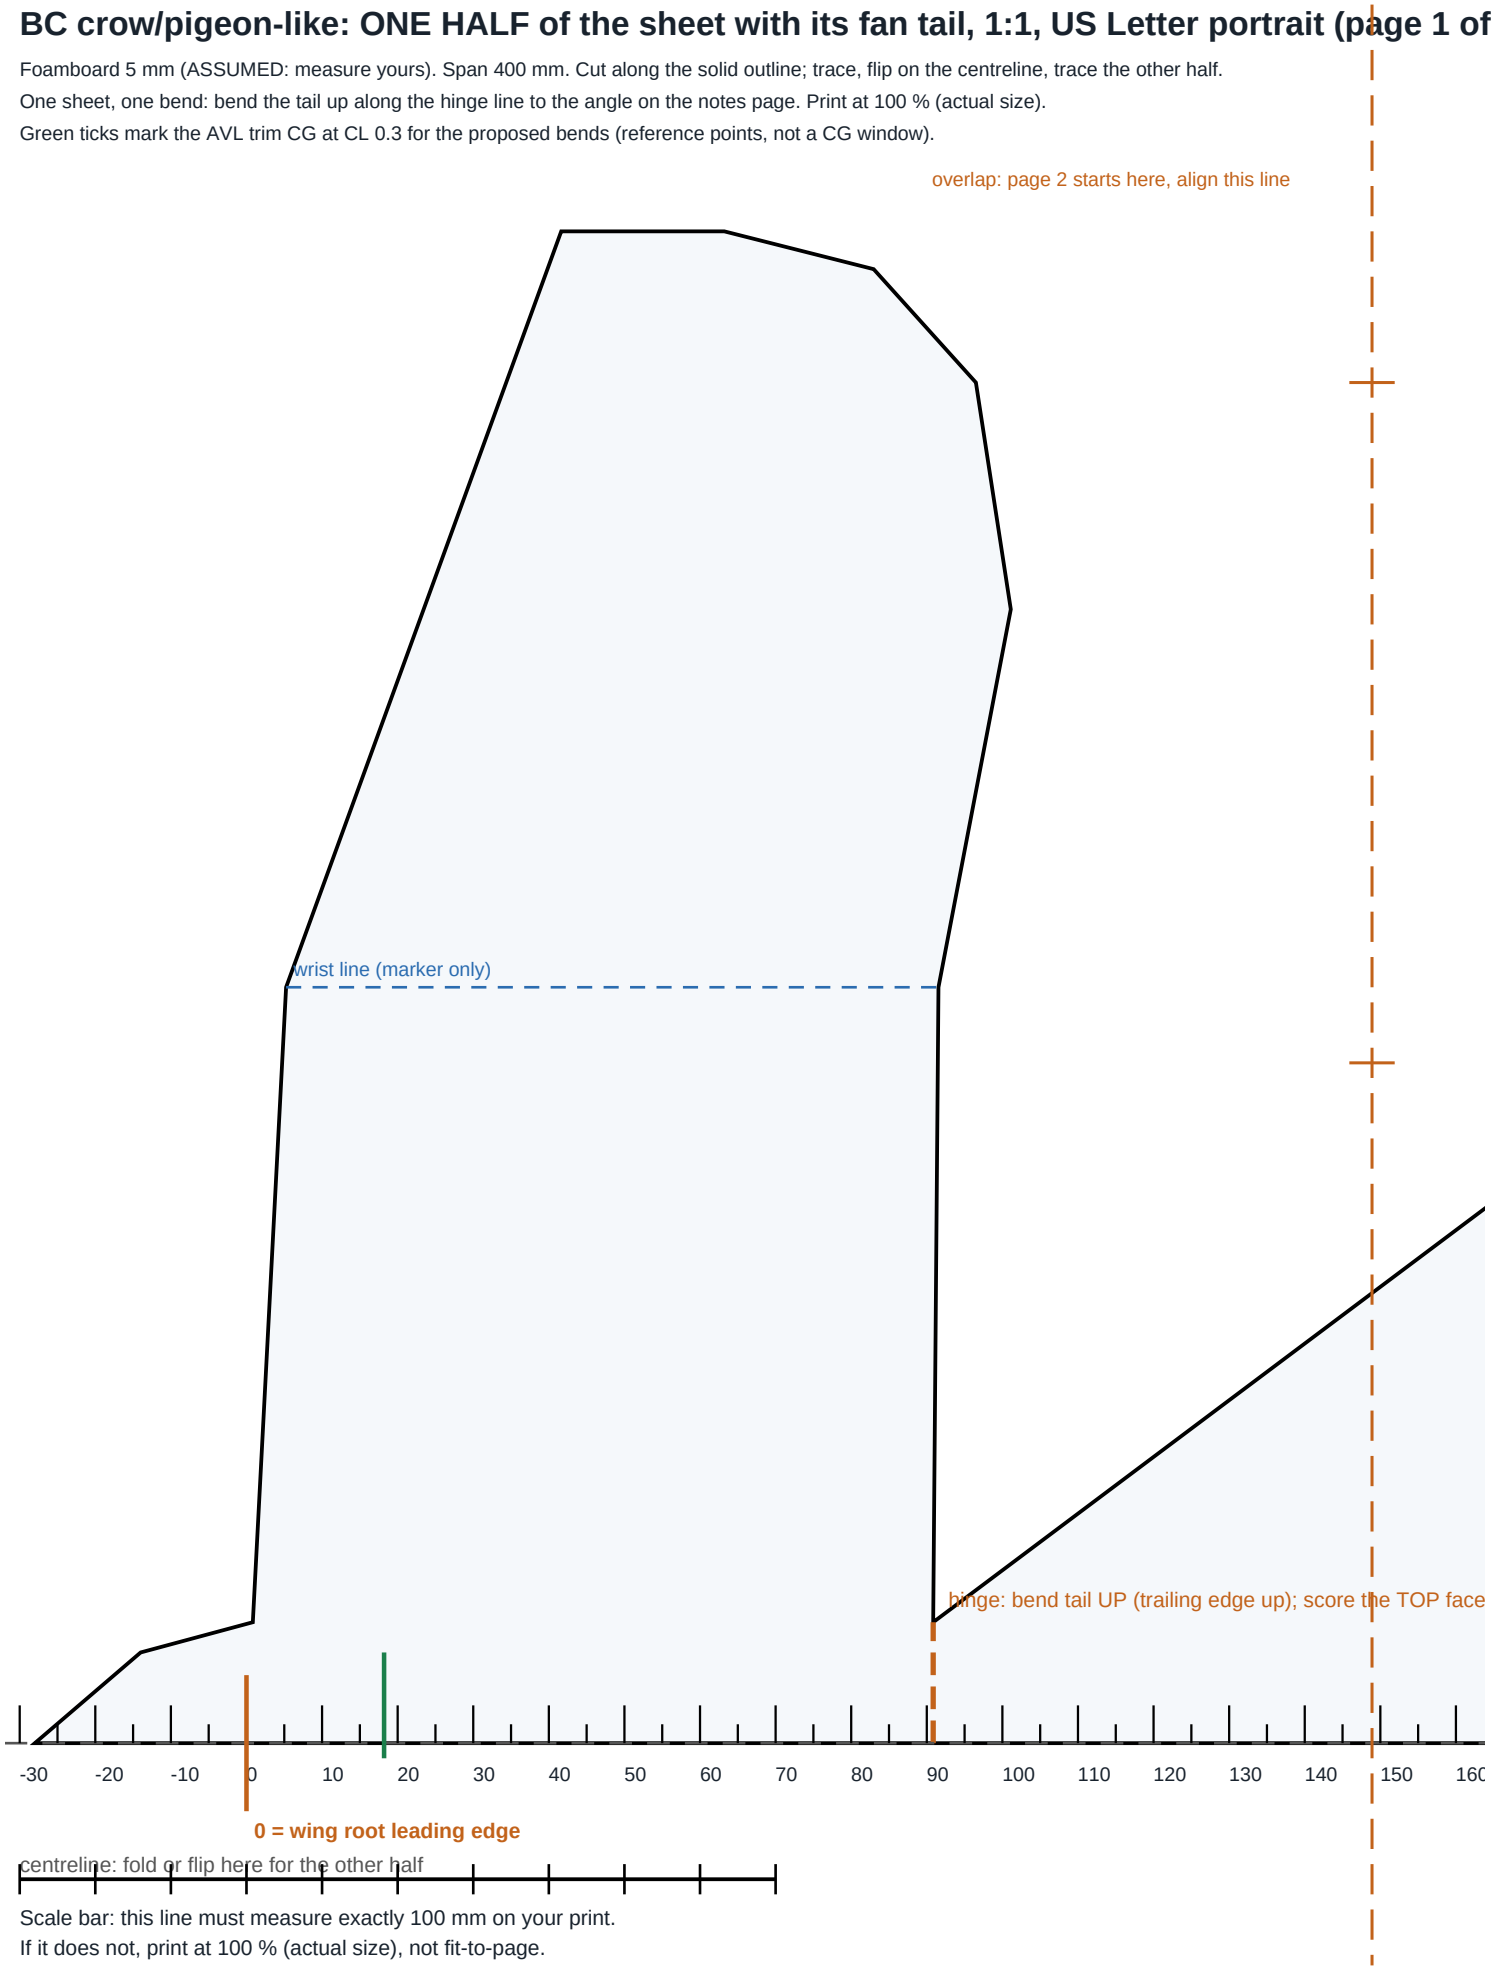

Scale bar: this line must measure exactly 100 mm on your print.

If it does not, print at 100 % (actual size), not fit-to-page.

BC crow/pigeon-like: ONE HALF of the sheet with its fan tail, 1:1, US Letter portrait (page 2 of 2)

Foamboard 5 mm (ASSUMED: measure yours). Span 400 mm. Cut along the solid outline; trace, flip on the centreline, trace the other half.

One sheet, one bend: bend the tail up along the hinge line to the angle on the notes page. Print at 100 % (actual size).

Green ticks mark the AVL trim CG at CL 0.3 for the proposed bends (reference points, not a CG window).

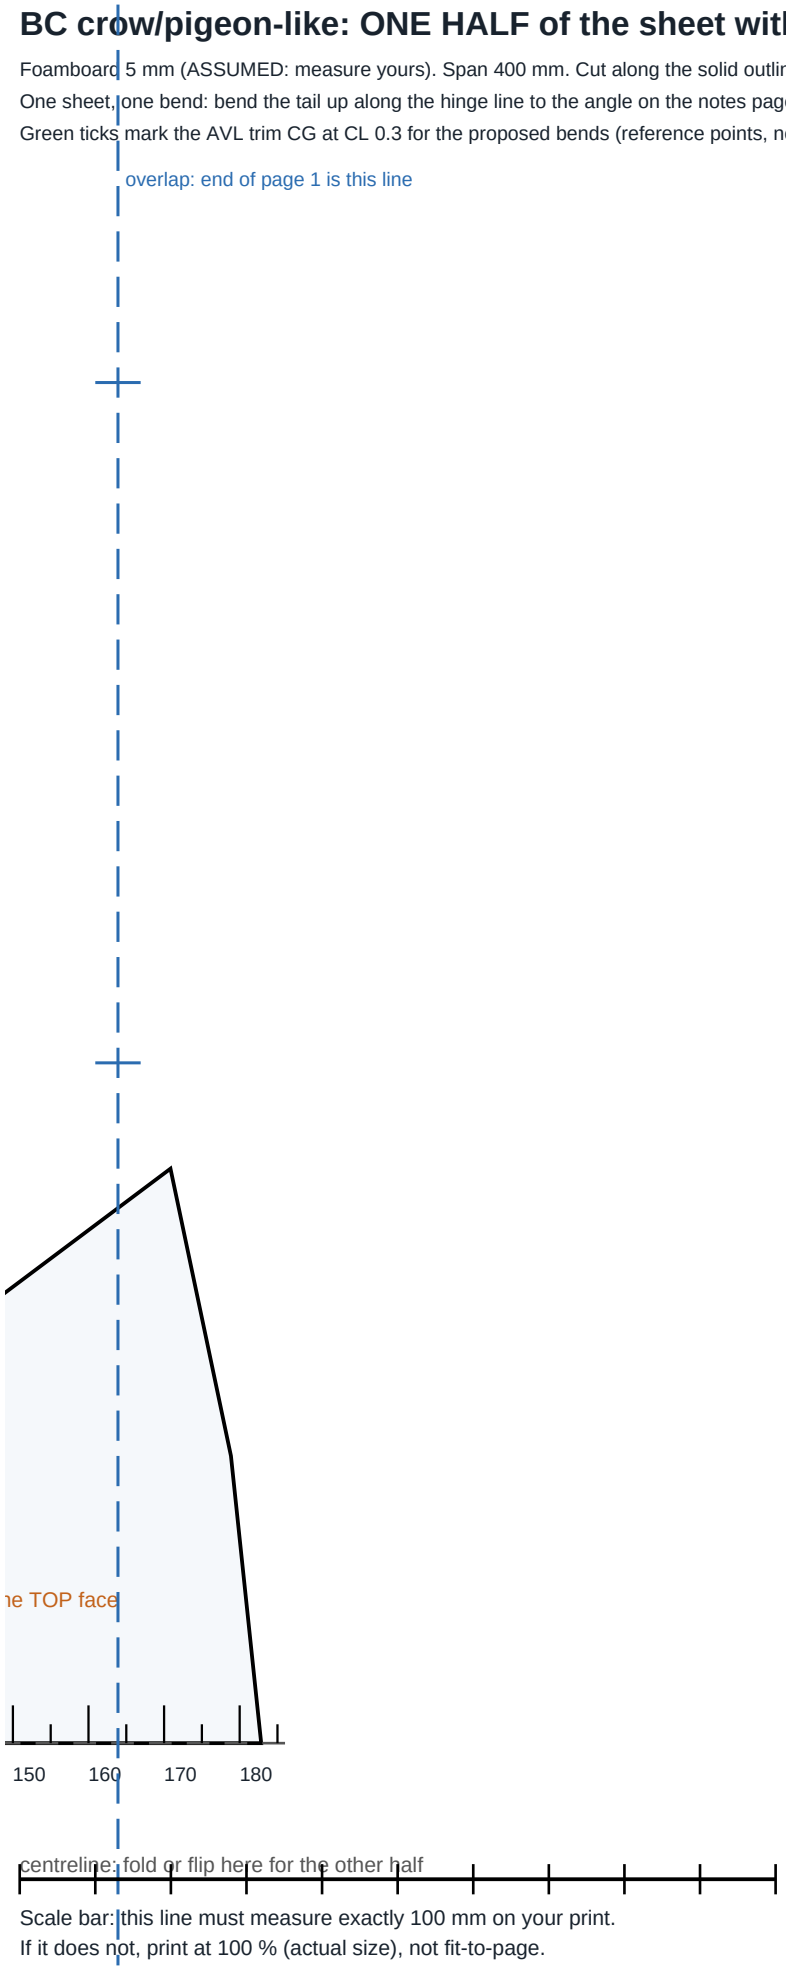

Scale bar: this line must measure exactly 100 mm on your print.

If it does not, print at 100 % (actual size), not fit-to-page.

BC crow/pigeon-like: build notes and tail-bend angle gauge, 1:1

Tail bend is a rotation of the fan tail about the hinge line, trailing edge UP. Score the top face with a V cut (leave the bottom paper), bend the tail up to the gauge line, glue the crease. One sheet, one bend. A flat symmetric sheet has no nose-up moment at zero lift; this bend is what supplies it. These are build instructions, not a prediction that the glider pulls out.

gauge for a 5 deg bend: lay the wing along the long edge; the tail's top face follows the slanted edge

Wrist joint line: a drawn marker for later folding; the sheet is not cut or creased there.

CG: measure with a knife edge; the 0 mark of the printed CG rail goes at the wing root leading edge at the centreline.



Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.