A swift v4 250 mm: page 1 of 1

ONE HALF of the sheet with its fan tail, 1:1, Letter portrait.
Cut the solid outline; flip on the centreline for the other half.
Print at 100 % (actual size). Check the 100 mm bar with a ruler.
PLA plate 0.6 mm; span 250 mm (thickness ASSUMED: measure yours).
Hinge (orange): bend tail UP by 6 deg; see notes page.



Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.

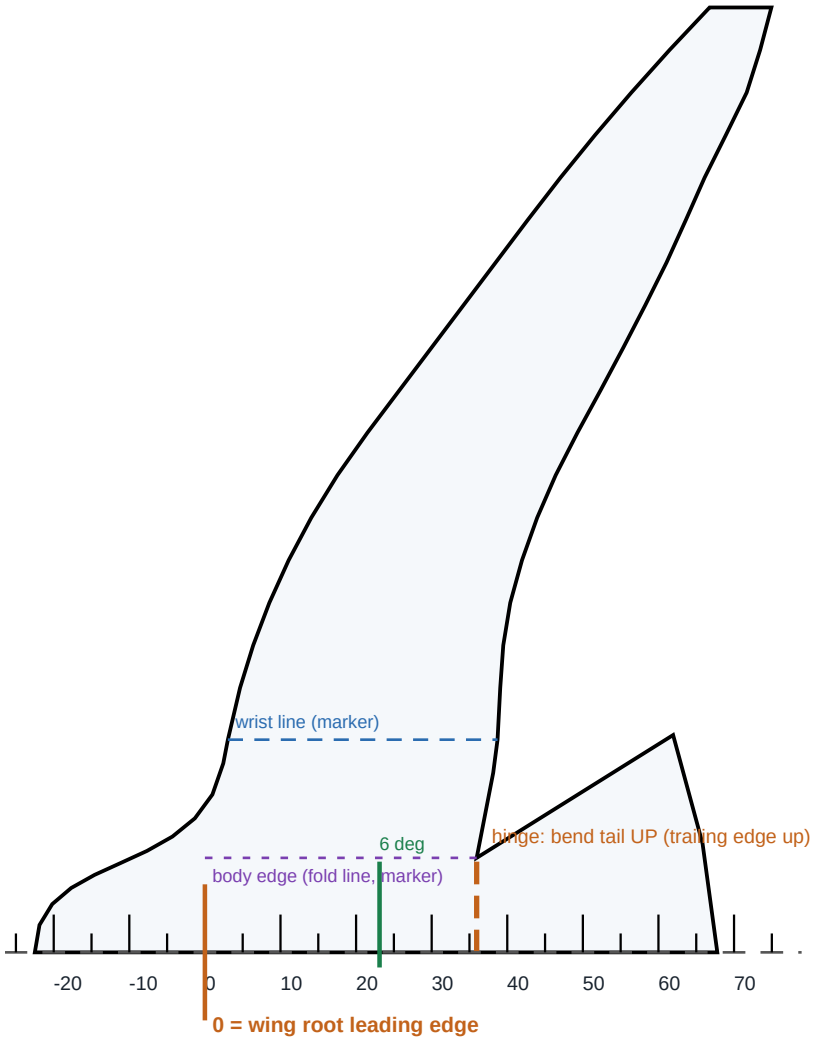

centreline: fold or flip here for the other half
green ticks: AVL trim CG at CL 0.3 for the bend written above each (reference points)

A swift v4 250 mm: build notes

Tail bend: rotate the fan tail about the hinge, trailing edge UP.
Score the top face, bend up to the gauge, glue the crease.
One sheet, one bend. These are build instructions,
not a prediction that the glider pulls out.



Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.

gauge for a 6 deg bend: lay the wing along the long edge; the tail follows the slanted edge

Wrist line: a marker only; the sheet is not cut or creased there.

CG: knife edge. The 0 mark of the printed rail goes at the wing root LE.

A swift v4 400 mm: page 1 of 1

ONE HALF of the sheet with its fan tail, 1:1, Letter portrait.
Cut the solid outline; flip on the centreline for the other half.
Print at 100 % (actual size). Check the 100 mm bar with a ruler.
foamboard 5 mm; span 400 mm (thickness ASSUMED: measure yours).
Hinge (orange): bend tail UP by 6 deg; see notes page.

Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.

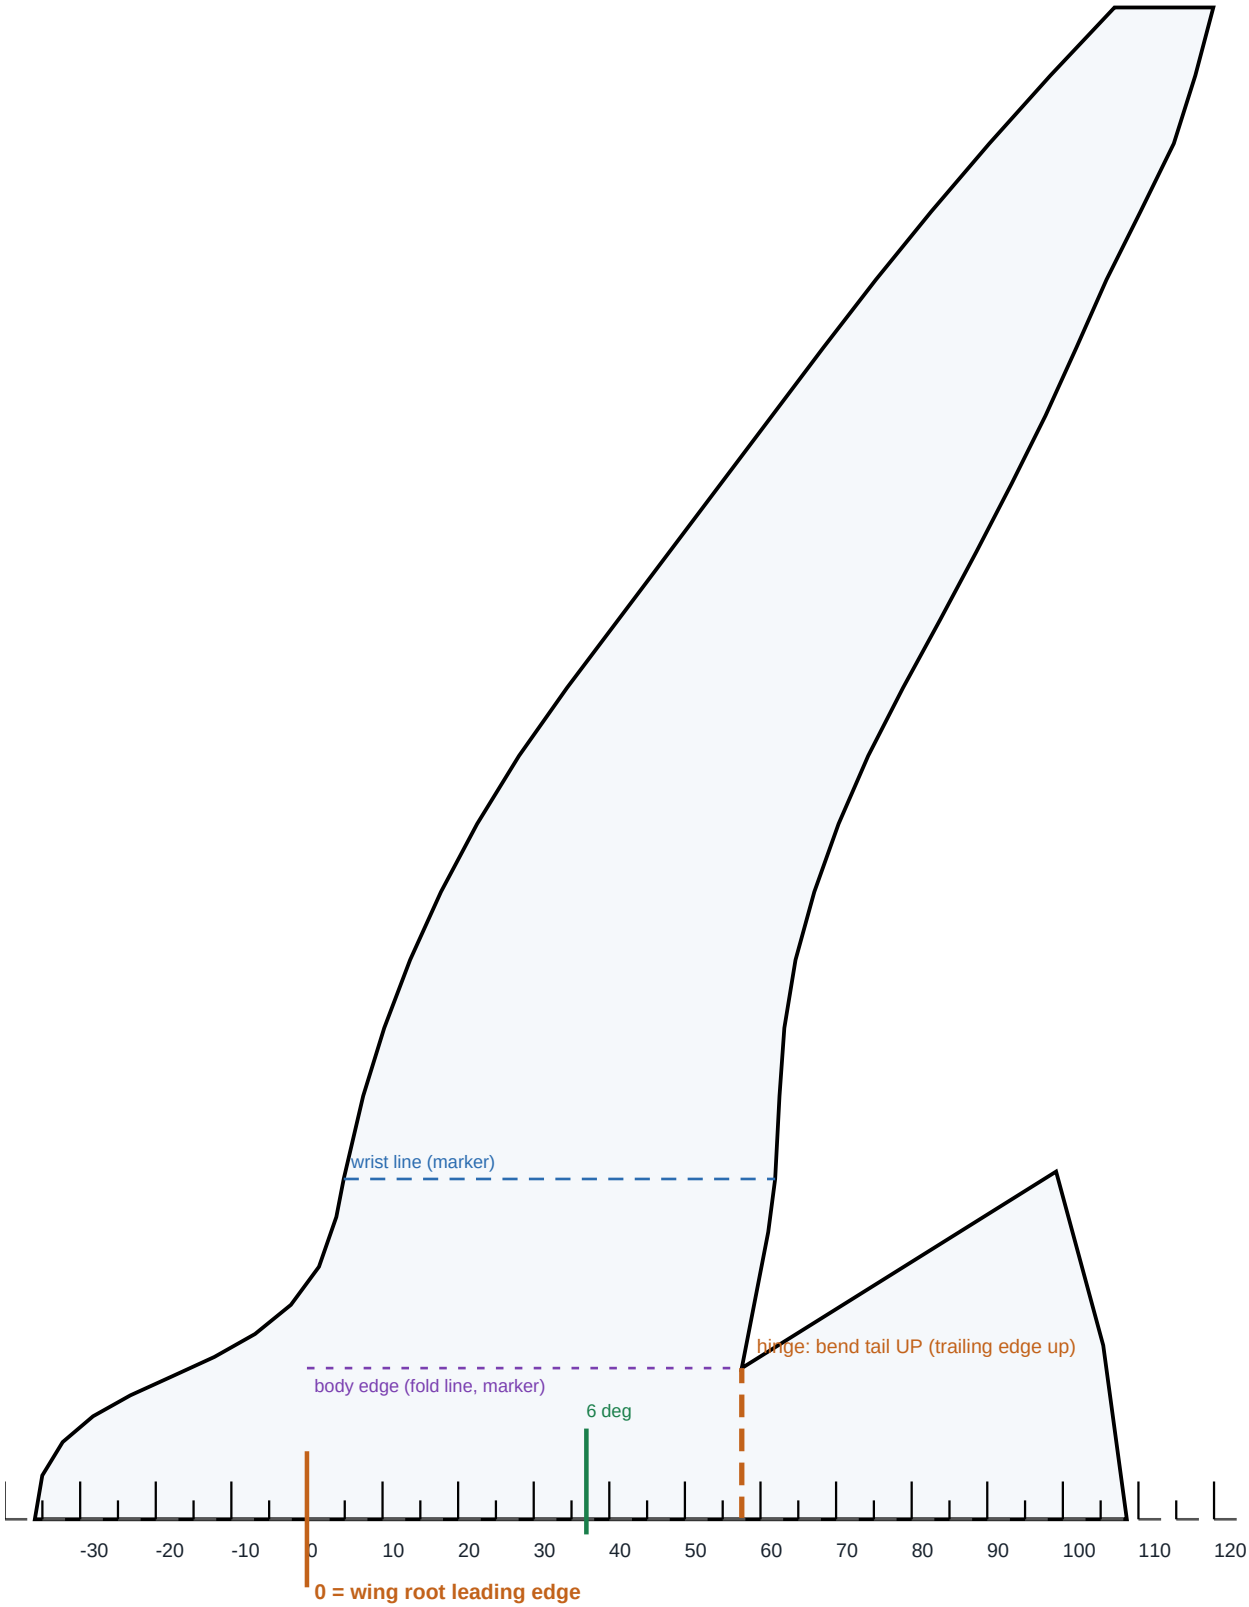

centreline: fold or flip here for the other half
green ticks: AVL trim CG at CL 0.3 for the bend written above each (reference points)

A swift v4 400 mm: build notes

Tail bend: rotate the fan tail about the hinge, trailing edge UP.
Score the top face, bend up to the gauge, glue the crease.
One sheet, one bend. These are build instructions,
not a prediction that the glider pulls out.



Scale bar: this line must measure exactly 100 mm on your print.
If it does not, print at 100 % (actual size), not fit-to-page.

gauge for a 6 deg bend: lay the wing along the long edge; the tail follows the slanted edge

Wrist line: a marker only; the sheet is not cut or creased there.

CG: knife edge. The 0 mark of the printed rail goes at the wing root LE.