Same jobs, same order (J3 → J2 → J1): buffered flow shop vs no-wait flow shop

Processing times [M1, M2, M3, M4]: J1 = [9, 8, 8, 8]   J2 = [1, 8, 9, 3]   J3 = [2, 1, 8, 9]

1 Standard flow shop: buffers allowed

Utilisation M1 33% · M2 47% · M3 69% · M4 56% · overall 51%

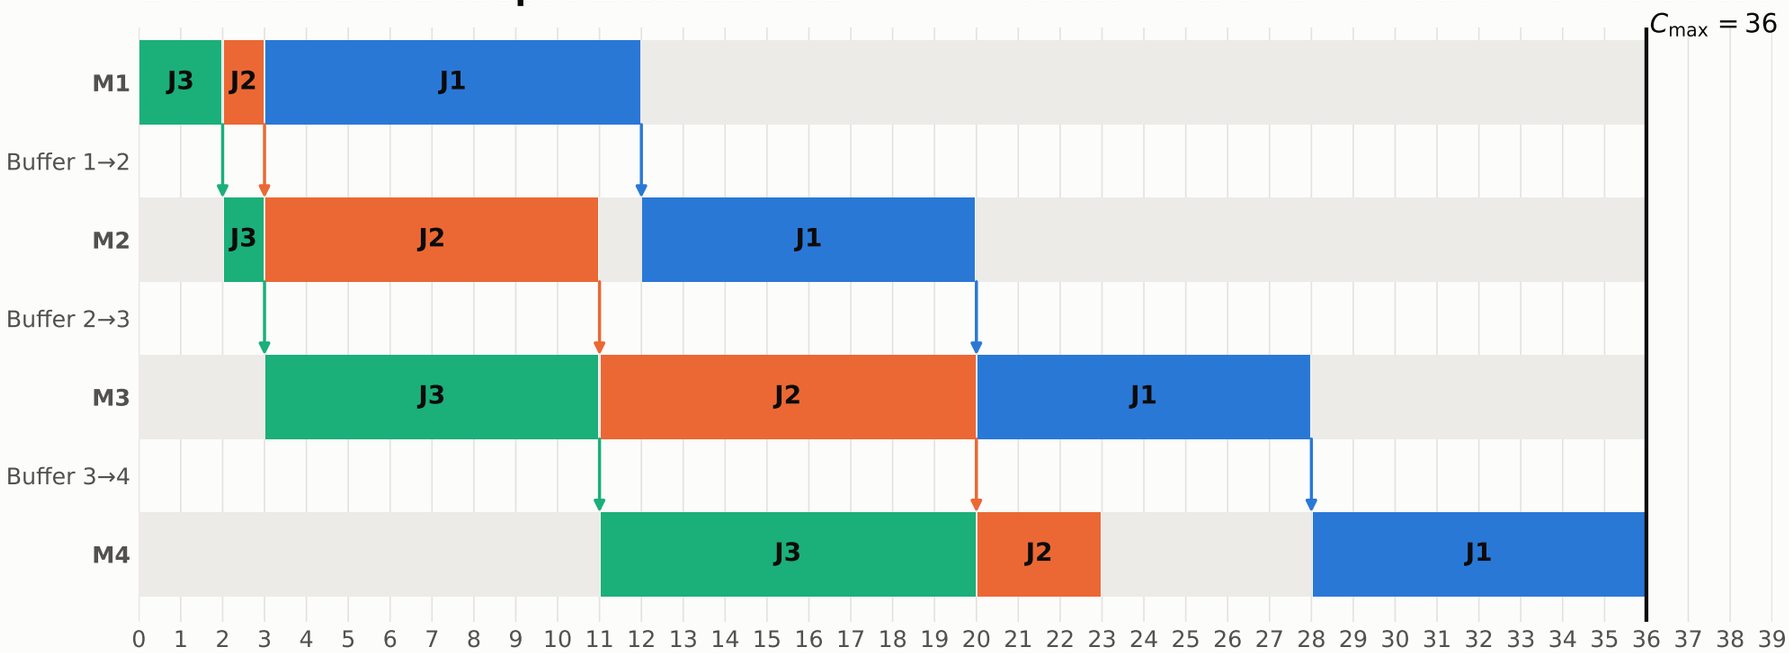

2 No-wait flow shop: a started job never stops

Utilisation M1 33% · M2 47% · M3 69% · M4 56% · overall 51%

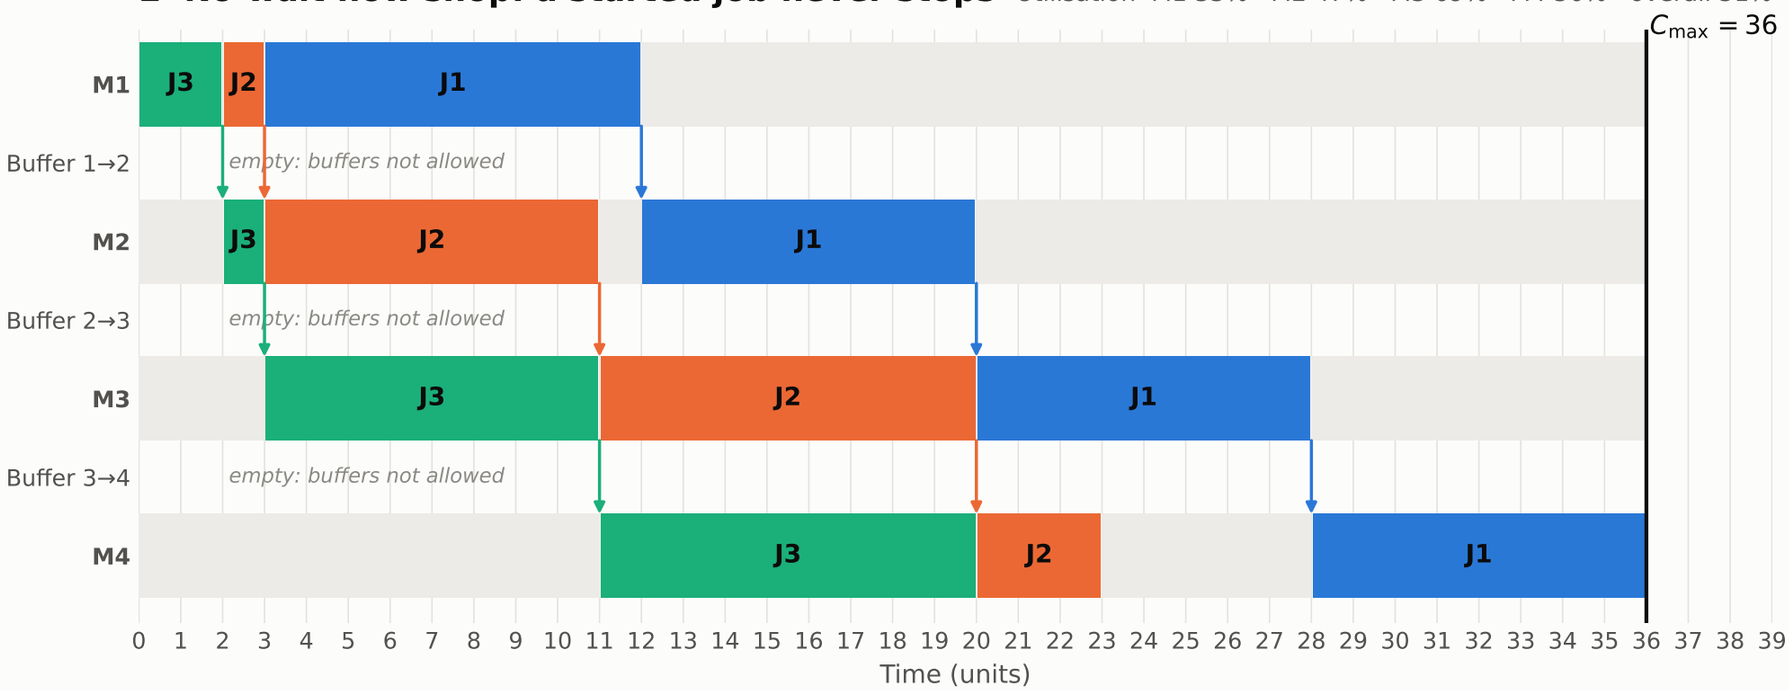

J1 J2 J3 Waiting in buffer Held before M1 Machine idle Job moves to next machine