
RTFM / AVE

AV
LOOK BOOK

QUICK GUIDE · DESKTOP & BROWSER

▸ THE SHOW CANVAS — VIDEO PRESETS, LIVE FROM THE SOFTWARE

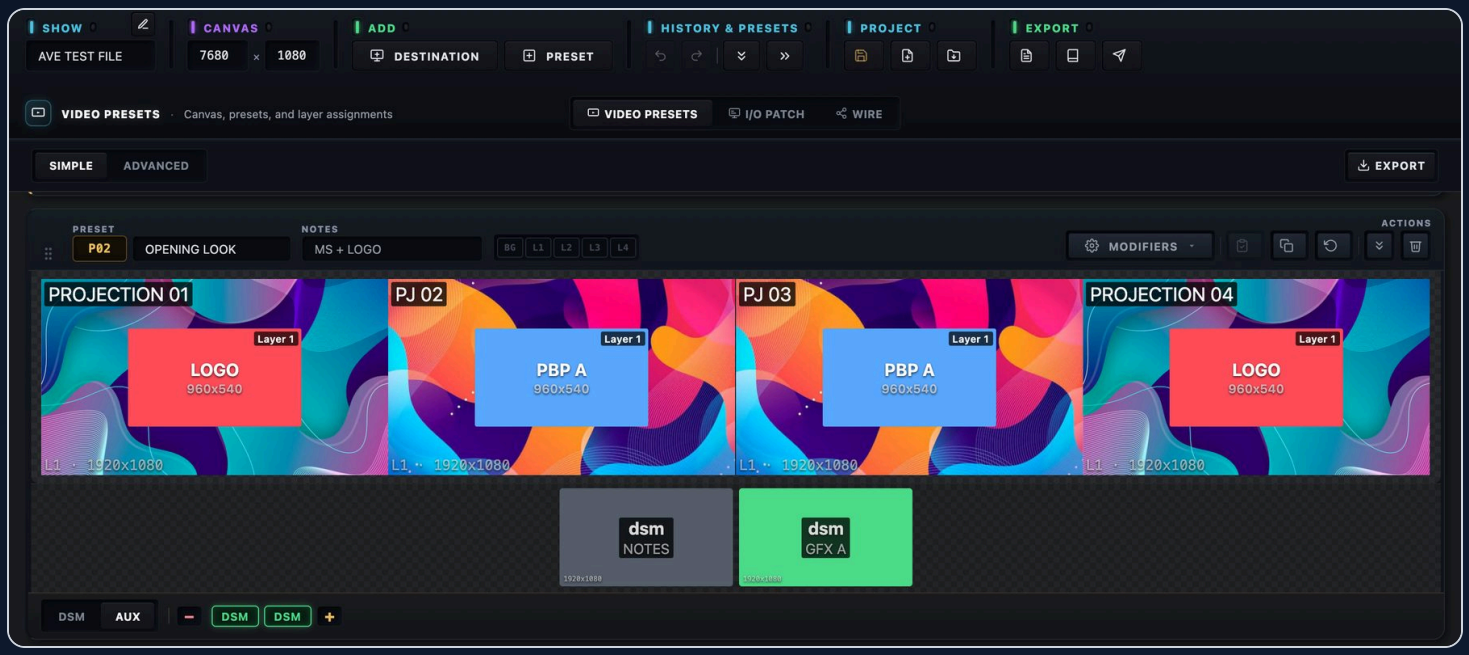

Every figure in this guide is a direct capture of AV Look Book 0.8.5, most of them running one test show, the AVE test file: four projection destinations, ten sources, two AUX outputs, a multiviewer and three presets.

CHAPTER 00

Intro

Start here. AV Look Book plans the video side of a live show before anyone touches the hardware. Three tools share one show file, and each tool has a Simple and an Advanced view. This chapter covers the tools, the two modes, the desktop app and the one window that builds a show. Most pictures in this guide show the same test show, the AVE test file:

4	10	2	1	3	7680 × 1080
DESTINATIONS	SOURCES	AUX	MULTIVIEWER	PRESETS	CANVAS

ORIENTATION

The Three Tools

Video Presets, I/O Patch and Wire: the question each one answers, the top bar, the typical flow and the words the app uses.

PAGE 3

MODES

Simple vs Advanced

What each mode is for in every tool, and how the two stay in step, the I/O Patch most of all.

PAGE 4

DESKTOP

The Desktop App

The Welcome window, where your show file lives, autosave, updates and the browser edition.

PAGE 5


START

Quick Show Setup

One window stands up the whole show: destinations, AUX outputs, presets and the canvas.

PAGE 6

ONE SHOW, THREE TOOLS: VIDEO PRESETS, I/O PATCH AND WIRE

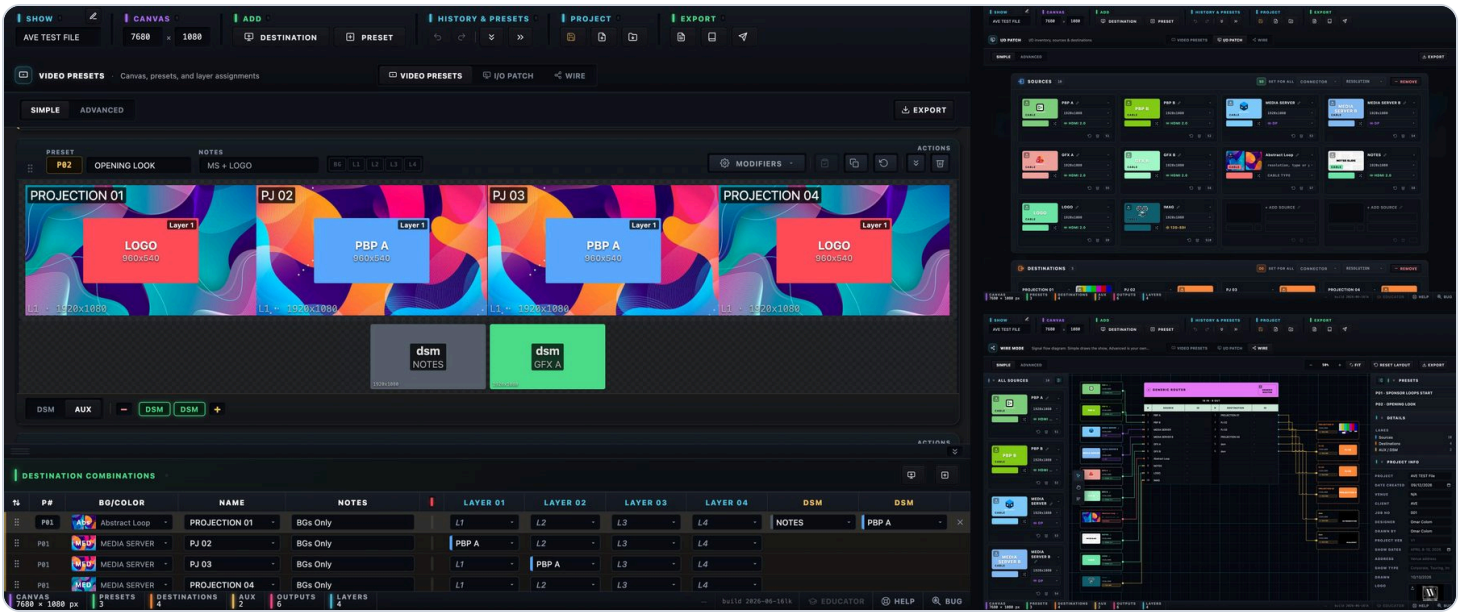


CHAPTER 00 · INTRO

The Three Tools

You describe the show once; three tools show it three ways, so a change in one is a change in all three (rename a source anywhere and it is renamed everywhere). The top bar is the same on every page.

THE TOP BAR, ON EVERY PAGE

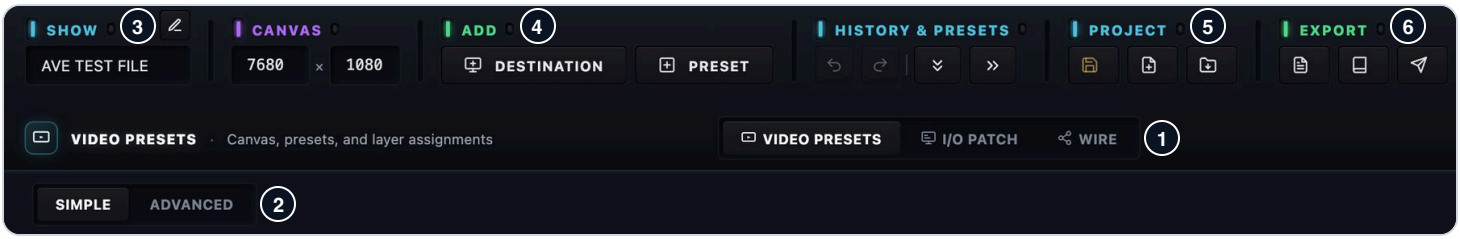

1. **The tool switch** — Video Presets · I/O Patch · Wire, left to right in the order the work happens. The tool you are on reads white under the lit pill.
2. **Simple / Advanced** — at the left of every tool's page bar (page 4).
3. **Show** — the show name names the window, the file and every export. The pencil opens Edit Show Info.
4. **Add** — + Destination and + Preset, from any page.
5. **Project** — Save, New and Load. Undo / Redo and Collapse / Expand all sit just before it.
6. **Export** — Excel (the cue sheet), Look Book (the PDF) and Send.

Video Presets

What is on every screen in every look? Destinations as they sit in the room, a BG and layers on each, what every AUX carries: one preset per look.

CHAPTERS 01–02 · PAGE 7

I/O Patch

Which cable and resolution for every input and output? It fills itself from the presets; you add the engineering detail.

CHAPTER 03 · PAGE 14

Wire

What is plugged into what? Simple draws the show through one router; Advanced draws the real system.

CHAPTER 04 · PAGE 19

THE TYPICAL FLOW

1. **Welcome** — New or a recent show
2. **Quick Setup** — Stand up the show
3. **Video Presets** — Build the looks
4. **I/O Patch** — Patch in and out
5. **Wire** — Draw the flow
6. **Hand-off** — Book · Excel · Send

KEY TERMS

Canvas — the total output size: the destinations side by side (plus any blend or free position), worked out for you.

Preset — one look. P01 is the master: a new preset starts as a copy of it.

Source — whatever feeds a layer, a BG or an AUX: camera, playback, slides, graphics (S1, S2 …).

Modifiers — AOI Overlays, Blend Zones, Dead Space and Free Position, in the MODIFIERS menu on every preset.

Destination — a screen the show feeds: LED wall, projection screen, monitor. A backdrop is scenery, with no video.

BG and layers — a destination's background, and the sources stacked on it: L1, L2 …

AUX / DSM — an extra output (confidence, record, stream) with its own content per preset; the DSM I AUX switch picks the word.

Show file — the **.avlb**: one file holds the whole show, all three tools.

CHAPTER 00 · INTRO

Simple vs Advanced

Every tool has a **SIMPLE / ADVANCED** switch at the left of its page bar. Simple is drawn for you from the show and keeps following it; Advanced is where you go further. Switching changes nothing in the show: the first switch to Advanced in the I/O Patch and in Wire only builds that tool's page 1 from Simple.

TOOL	SIMPLE IS FOR…	ADVANCED IS FOR…	HOW THEY STAY IN STEP
Video Presets	Every preset as a tile, down the page, with the Destination Combinations table under them: build and compare the looks.	One preset at a time, large: the source cards, every property of a layer, video that plays, a timeline, and Display for a client monitor.	**The same show, not a copy.** A change in either view is in the other at once. A video plays only in Advanced; Simple shows its cover.
I/O Patch	One card per source and output, filled from the presets: the name, the resolution and the cable type.	Patch-book pages with Type, Refresh and Notes and the Primary / Backup window. Page 1 is the show; pages 2 and up are your own sheets.	**Page 1 follows Simple**, and a few things set on it go back to the show (below).
Wire	The signal-flow drawing, drawn for you: every source into one router, every destination and AUX out. Yours to dress and edit.	A free-form drawing of the real system: routers, switchers, converters and network switches, up to 25 pages.	**Page 1 starts as a copy of the Simple drawing.** What you draw in Advanced stays there; a tile's rename pencil and the cards reach the whole show.

THE I/O PATCH: HOW PAGE 1 AND SIMPLE FOLLOW EACH OTHER

- **Page 1 is built from Simple.** The first switch to Advanced copies every source, destination, AUX and multiviewer, with its connector, type, resolution and notes, onto page 1 under the show's name.
- **Names follow.** Rename an item in Video Presets, in Simple or in Wire and its page-1 row is renamed with it.
- **Type, Refresh and Notes are the item's own.** Set on page 1 for an item of the show, they are that item's: the Look Book, both Excel tabs and the phone show them, and a change made elsewhere shows on page 1.
- **Connector and resolution stay where you set them.** For an item of the show they are Simple's; set on page 1 they stay on page 1, and page 1's own Excel tab prints them.
- **New rows go one way.** A source you name on page 1 appears in Simple and in Wire; a destination or multiviewer appears in Simple. Rows added or removed on an Advanced page never change the Video Presets.
- **Pages 2 and up are your own:** a breakout room, a rehearsal rig, a rental list. Nothing reaches them and they change nothing; each page with rows prints as its own Excel tab.

THE REBUILD OFFER



When sources, destinations, AUX or multiviewers changed on the Simple side since page 1 was built, the next switch to Advanced asks once. **Rebuild from Simple** replaces every row on page 1, and Undo brings it back; **Keep my page** leaves it as it is.

Wire asks the same about its page 1 when the Simple drawing's sources, destinations, AUX or cables change. Moving a tile on Simple does not ask.


> **Which one?** Show callers and producers can stay in Simple: it is always up to date with the presets. Engineers use Advanced for the patch book and the real wiring, and come back to Simple whenever the show changes.

CHAPTER 00 · INTRO

The Desktop App

AV Look Book is an app for Mac and Windows. It opens on the Welcome window, keeps every show as a file you can see, gives each show its own window and updates itself.

THE WELCOME WINDOW

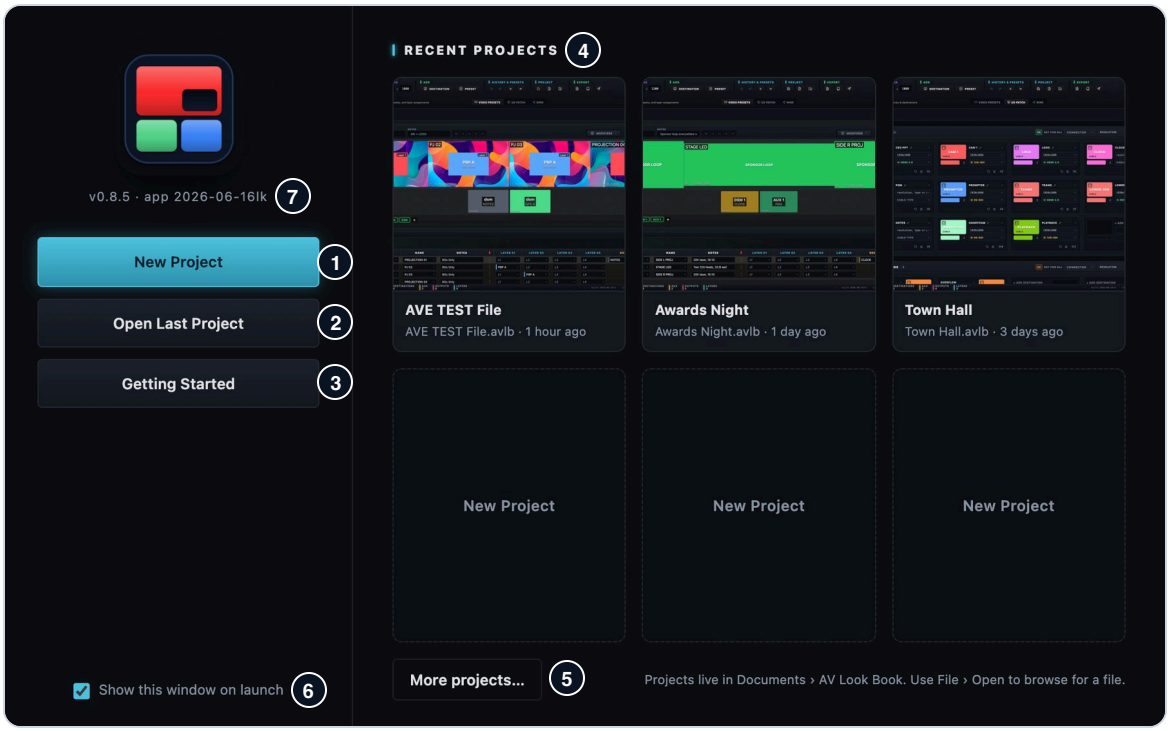

1. **New Project** — a new window, on Quick Show Setup.
2. **Open Last Project** — back into the show you had open last.
3. **Getting Started** — this guide, in its own window.
4. **Recent Projects** — your last six shows; click one to open it. A tile's ✕ (on hover) takes it off the list or moves the file to the Trash.
5. **More projects…** — every show the app remembers, and Browse for a file….
6. **Show this window on launch** — off: the app opens on your last show.
7. **Version** — the app and its build, also at the right of the status bar: quote it in a bug report.

WHERE YOUR SHOW LIVES

One file per show. Build My Show creates **Documents › AV Look Book › <show>.avlb**. Close the last show window and the Welcome window comes back (or File › Welcome Window).

Open a file. Double-click any .avlb, or File › Open… (Cmd / Ctrl O) or Open Recent. A show that is already open comes to the front.

Autosave. The app writes the file about 30 seconds after a change, and when you close the window. Save (Cmd / Ctrl S) writes it now; Shift-click Save is Save As.

Updates. Online, the app checks at launch and every 4 hours, downloads a new build and offers Restart now or Later. Check for Updates… is in the AV Look Book menu (Mac) or Help (Windows).

> **Browser edition.** The same app runs in a browser tab, with nothing to install. Save writes the .avlb through the browser and Load opens it. The browser keeps a draft (Restore draft or Start fresh next time), a safety net, not a save, and Send downloads its three files instead of attaching them.


CHAPTER 00 · INTRO

Quick Show Setup

One window stands up the whole show. It opens by itself on a new show: fill in a few fields and **Build My Show** creates the destinations, presets, AUX outputs and canvas, all editable later.

› QUICK SHOW SETUP — THE WHOLE WINDOW: THE TOP HALF, THEN THE BOTTOM HALF



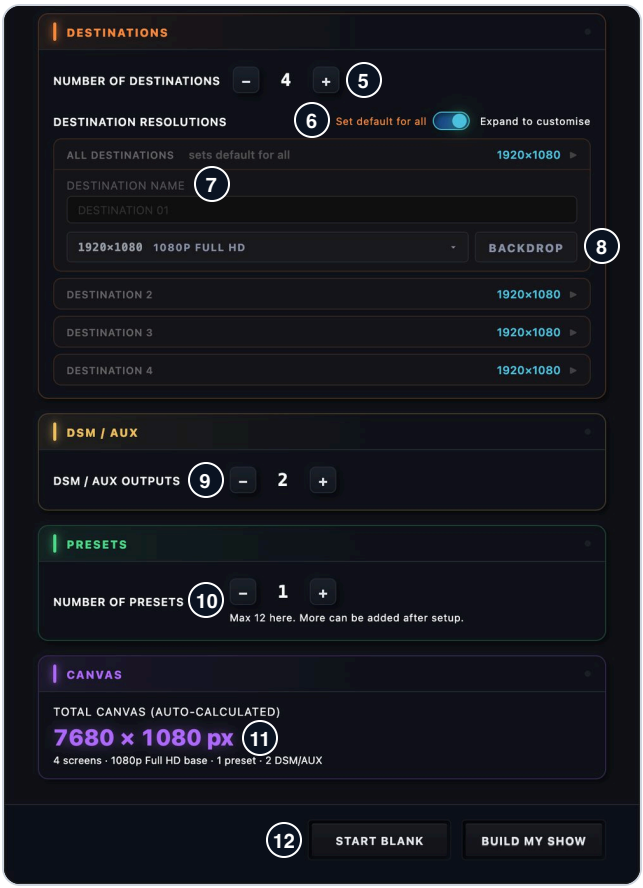

1. **Start from an example** — General Session, Awards Night or Town Hall: a finished show to explore.
2. **Show name** — required. It names the window, the file and every export.
3. **Date Created and Venue** — Date Created starts as today: type it or pick it on the calendar.
4. **Drawing info and Excel cover** — optional; also editable later in Wire › Project Info.
5. **Number of destinations** — 1 to 24, one row each.
6. **Set default for all** — on: the first row's resolution for every destination; off (Expand to customise): each its own.
7. **A destination row** — click it for its name and resolution (+ Custom resolution… tops the list).
8. **Backdrop** — a scenic piece instead of a screen: sized in feet, no video, only in Video Presets.
9. **DSM / AUX outputs** — 0 to 8, on in every preset.
10. **Number of presets** — 1 to 12 here, more later; the others start as copies of P01.
11. **Canvas** — the total size, worked out from the destinations.
12. **Build My Show** (or Enter) builds it all; **Start blank** (or Escape) closes the window on an empty show.

> **Change it later.** The pencil beside SHOW in the top bar reopens this window as **Edit Show Info** (Update Show), and + Destination and + Preset add more at any time.

CHAPTER 01

Video Presets

The show canvas. Lay the destinations out the way they sit in the room, stack layers on them, set what every AUX output carries, and save one preset per look. Every preset is a picture the whole crew can read.

AVE TEST FILE	4	3	2	7680 × 1080
THE SHOW IN THE PICTURES	DESTINATIONS	PRESETS	AUX	CANVAS

SIMPLE

Build a Look

Every preset as a tile, the whole preset in view, over the Destination Combinations table: BGs, layers and AUX for every look.

PAGE 8

ADVANCED

Cards, Properties & Playback

One preset large: the show's cards, every property of the picked layer, and clips that play, with In / Out and level.

PAGE 9

BACKGROUNDS

IMAGE · VIDEO · SOURCE

The Preset Background window: a picture, a clip, or a source at its own resolution, sized and moved like a layer.

PAGE 10

▸ P02 OPENING LOOK · ONE PRESET, THE WAY THE CREW READS IT



Next: blends, areas of interest, dead space and free position are the Modifiers, Chapter 02 (page 11).


CHAPTER 01 · VIDEO PRESETS

SIMPLE ADVANCED

Build a Look

Each preset is one look, drawn as a tile sized so the whole preset is in view: the destinations to scale, their layers and the AUX outputs. The Destination Combinations table under the tiles is the same show as a spreadsheet; type in either place.

▸ VIDEO PRESETS · SIMPLE · PJ 02 PICKED ON P01

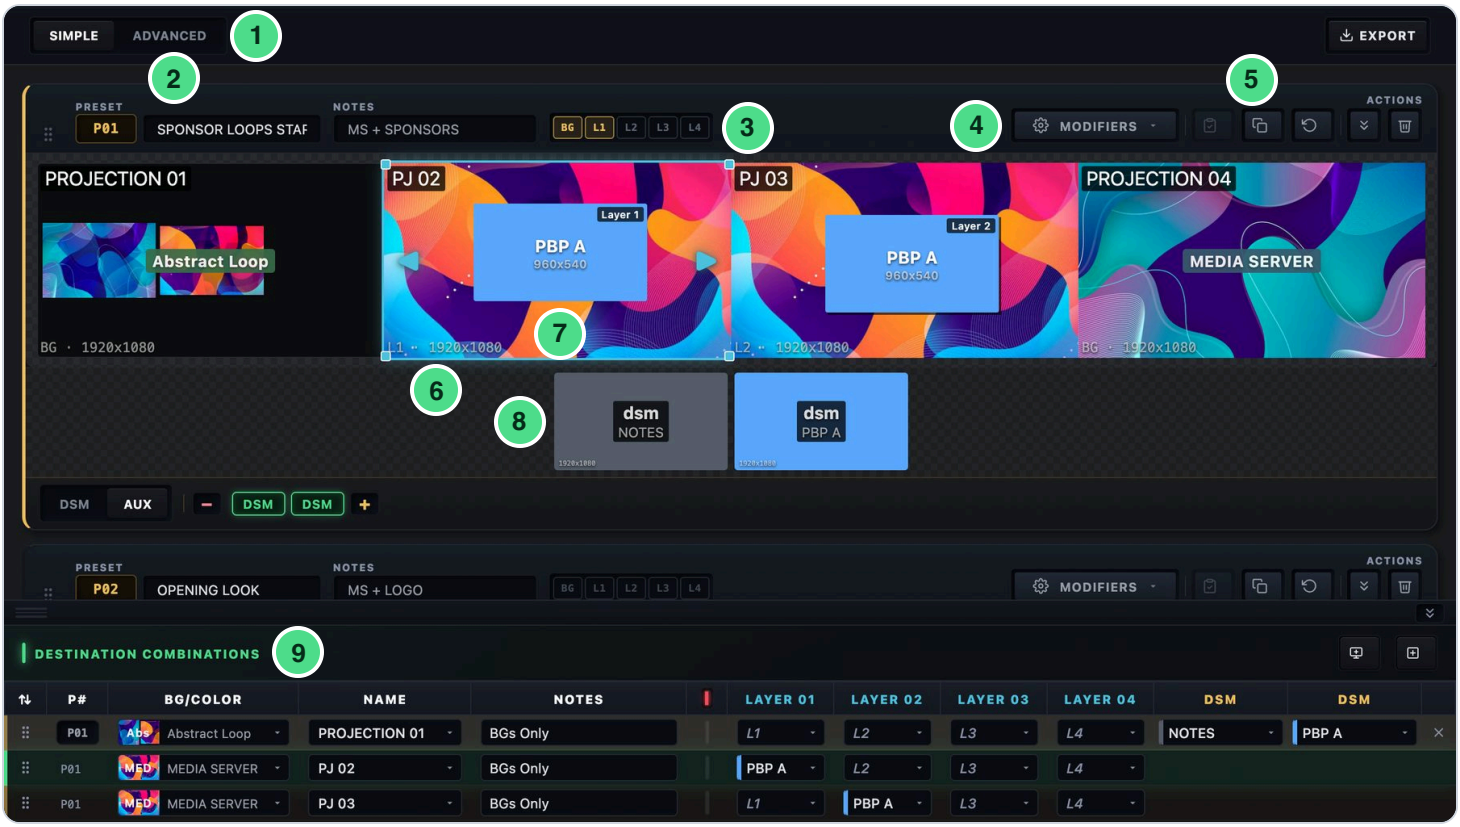

1. **Simple / Advanced** — every preset as a tile here; Advanced opens one preset large, with clips (page 9).
2. **Preset** — code (up to 4 characters), name and notes, typed in place. Drag the six dots to re-order the presets.
3. **Layer strip** — BG, L1, L2 … of the picked destination; amber = filled. A click picks that layer, even under a full-screen one.
4. **MODIFIERS** ▾ — Blend Zones, AOI Overlays, Dead Space, Free Position and Fit Canvas (Chapter 02, page 11).
5. **Actions** — Paste (after a Copy), Copy, Reset (asks how far back: destinations, layers, AUX), minimise, remove. Undo brings a removed preset back.
6. **Destination** — click to pick: corner handles resize it (its real output size, for the whole show), ◀ ▶ swap it with its neighbour. Double-click for Destination Properties.
7. **Layer** — click to pick, again for the Layer panel, double-click for its Advanced mode. Drag it; arrow keys nudge 10 px.
8. **DSM / AUX band** — the outputs under the screens. The DSM · AUX switch sets the word, + and – add or remove one, a chip turns it on or off in this preset only.
9. **Destination Combinations** — one row per destination: BG/Color, name, notes, LAYER 01–04 and the AUX columns. Type a source name, press Enter.

P01 is the master preset. + Preset copies P01 as it is at that moment, blends included; after that each preset is its own. **Export** (top right) writes the Excel cue sheet, the same file as Excel in the top bar.


CHAPTER 01 · VIDEO PRESETS

SIMPLE ADVANCED

Cards, Properties & Playback

Advanced shows one preset at a time, large: the show's cards on the left, every property of the picked layer on the right and a clip timeline underneath. Use it to place a layer to the pixel, trim and level a clip, and check a look with the real video playing. It is the same show Simple shows, not a copy.

VIDEO PRESETS · ADVANCED · P02 WITH A CLIP ON LAYER 1 OF PJ 02

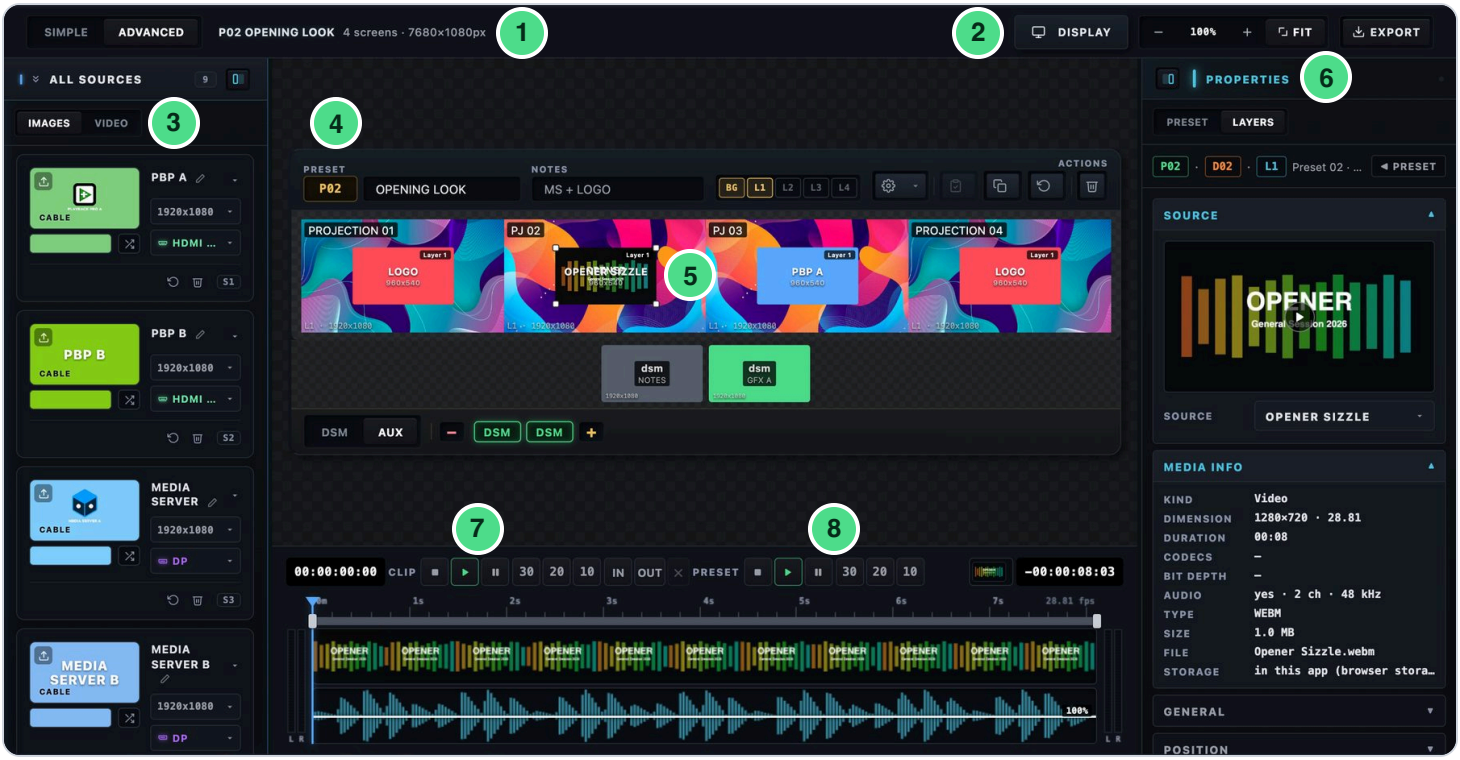

1 **The open preset** — name, screens and canvas. Open another from Properties › PRESET or with the keys 1 to 9.

2 **DISPLAY** sends this preset, clean, to a second window for a client monitor. Then zoom –, 100 %, + and FIT (the wheel zooms, drag the background to pan) and EXPORT, the Excel cue sheet.

3 **Cards** — ALL SOURCES: IMAGES = the show's sources, VIDEO = video and picture files (+ Add video). All Destinations and AUX / DSM fold below. The same card as the I/O Patch and Wire.

4 **The preset tile** — the Simple tile, at the size of the window. Drag a card onto a layer, onto a destination (it becomes its BG) or onto an AUX box.

5 **The picked layer** — here OPENER SIZZLE, a clip dragged from the VIDEO tab onto Layer 1. Whatever you drop on is picked.

6 **Properties** — PRESET: every preset as a thumbnail. LAYERS: the picked layer or BG, section by section (Source, Media Info, Position, Size, Mask … Source crop), each with copy / paste / reset.

7 **CLIP** — play the picked clip, jump to its last 30 / 20 / 10 seconds, mark IN and OUT (keys I and O). The lanes show its frames and sound; drag the white line for the level.

8 **PRESET** — every clip in the preset together: play, pause, last 30 / 20 / 10. The small picture sets the cover Simple shows.


Clips play only here. Simple, the preset cards and the Look Book show a clip's cover. Escape lets go of the pick; a second Escape goes back to Simple.

CHAPTER 01 · VIDEO PRESETS


Backgrounds: IMAGE · VIDEO · SOURCE

Every destination has a BG under its layers. Click the BG/Color swatch of its row in the Destination Combinations table (or BG/Color in Destination Properties) and the Preset Background window opens: a name, a colour, and three ways to fill it.

PRESET BACKGROUND

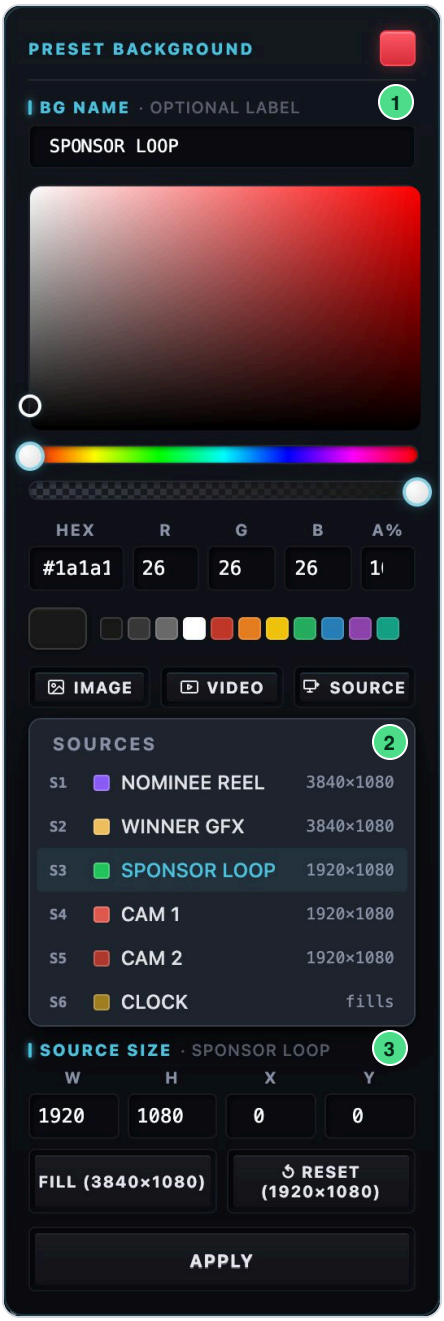

AWARDS NIGHT: A 1920 × 1080 SOURCE ON A 3840 × 1080 LED

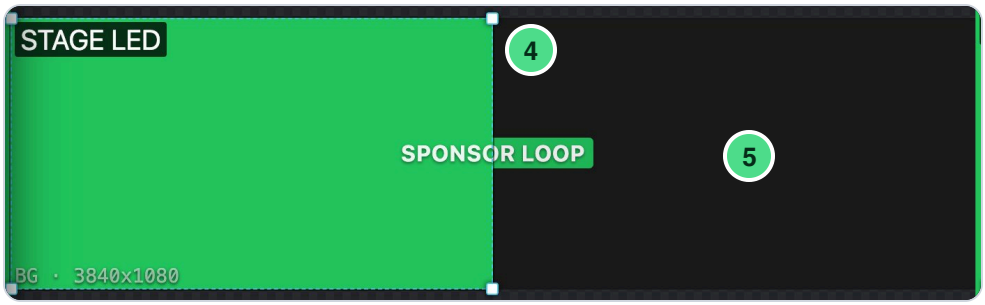

1. **BG NAME** — an optional label; the table, the Look Book and the Excel print it. Under it: the colour (HEX, R G B A, eleven quick colours), then IMAGE · VIDEO · SOURCE and APPLY.
2. **SOURCE** lists the show's sources with their number, colour and resolution; *fills* = no resolution set, so it fills the destination. Cards made by hand in Wire › Advanced follow under Made in Wire.
3. **SOURCE SIZE** — W, H, X, Y in destination pixels. FILL stretches it over the whole destination; ↺ RESET puts it back in the top-left corner.
4. **The outline** — while the window is open, drag a handle to size the source (Shift keeps its shape), or press inside and drag to move it. It snaps to the edges and the middle.
5. **The rest** of the destination shows its own colour.

BUTTON	WHAT IT DOES
IMAGE	A picture that fills the whole destination: a still BG.
VIDEO	A clip as the BG; it joins the VIDEO tab like any imported clip. Simple, the preset cards and the Look Book show its cover; it plays in Video Presets › Advanced.
SOURCE	A source at its own resolution, its top-left corner on the destination's top-left (on one combined screen, on that screen's top-left). The window stays open.

W × H is the source's resolution. Drag SPONSOR LOOP to fill the LED and the I/O Patch and Wire read 3840 × 1080; change it there and this BG follows. **P01 is the master:** a BG set on P01 is the destination's own and shows on every later preset without a BG of its own (a VIDEO's cover too). On any other preset the BG is that preset's own.

CHAPTER 02

Modifiers

The projection and placement tools. Open MODIFIERS ▾ on any preset tile to switch on Blend Zones, AOI Overlays, Dead Space and Free Position, or to Fit Canvas. Left off, the canvas stays clean.

4	1	All presets	This computer
SWITCHES	ACTION · FIT CANVAS	EACH SWITCH SHOWS ON	REMEMBERS THEM

BLEND ZONES

Projector Blends

Drag one destination over its neighbour: the overlap in pixels and percent, and the group's real size.

PAGE 12

ONE COMBINED SCREEN

One Picture Across

The first destination's BG and layers cover the whole blend; layers go anywhere, across the zone too.

PAGE 12

AOI · FREE · DEAD SPACE

Placement Tools

Areas of interest, destinations dragged anywhere, the gaps in pixels and feet, and the menu itself.

PAGE 13

▸ P01 WITH BLEND ZONES, DEAD SPACE AND AOI OVERLAYS ON



Not saved in the show. The four switches change what you see and what can be dragged, on every preset at once. They stay as you left them on this computer, not in the .avlb file.

CHAPTER 02 · MODIFIERS


Blend Zones & One Combined Screen

Two projectors, one screen: switch on MODIFIERS ▾ › Blend Zones, drag one destination over its neighbour and type the overlap. The blend is one combined screen, covered by the first destination's BG and layers.

P01 · PJ 03 BLENDED 600 PX OVER PJ 02



THE BLEND WINDOW

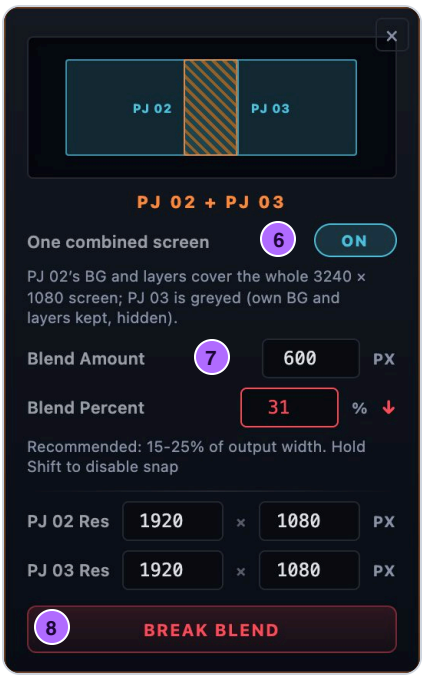

1. **Blend zone** — the hatch where PJ 03 overlaps PJ 02.
2. **PX box** — the overlap in pixels: click it and type the exact amount. It moves up above the % when a layer or the BG name sits in the middle of the zone.
3. **The %** — green tick at 15–25 %, amber arrow below, red arrow above (this 31 % reads "narrow the blend"). Double-click it, or the zone, for the blend window.
4. **BLEND GROUP** — the members and the real size you plan for: 3240 × 1080 for two 1920 × 1080 with a 600 px blend.
5. **Layers go anywhere** on the combined screen: PJ 02's PBP A sits across the zone, over both projectors. A new layer starts in the middle of the whole screen.
6. **One combined screen** — ON: the master's BG is one picture across the blend and its layers sit on top; PJ 03's own BG and layers are kept, hidden. OFF: separate screens again.
7. **Blend Amount / Blend Percent** — type either. Recommended: 15–25 % of output width; hold Shift to disable snap.
8. **BREAK BLEND** pulls the pair apart, edge to edge. Above it, both resolutions.
9. **The slave's row** (below) stays, greyed: BLENDED WITH PJ 02 · ONE COMBINED SCREEN. Its name and notes still work, and PJ 03 is still its own output in the I/O Patch and Wire.

DESTINATION COMBINATIONS · P01

P#	BG/COLOR	NAME	NOTES	LAYER 01	LAYER 02	LAYER 03	LAYER 04
P01	Abstract Loop	PROJECTION 01	BGs Only	L1	L2	L3	L4
P01	MEDIA SERVER	PJ 02	BGs Only	PBP A	L2	L3	L4
P01	BLENDED	PJ 03	BGs Only	BLENDED WITH PJ 02 · ONE COMBINED SCREEN 9			


Older shows open as saved, every destination with its own BG and layers, until you switch One combined screen on (one Undo step). Combined destinations cannot be rotated. The Look Book prints this blend as **600 pixel overlap (31%)**.

CHAPTER 02 · MODIFIERS

AOI, Free Position & Dead Space

The rest of the MODIFIERS ▾ menu. Each switch is for the whole page, not one preset, and it stays the way you left it on this computer.

▸ MODIFIERS ▾

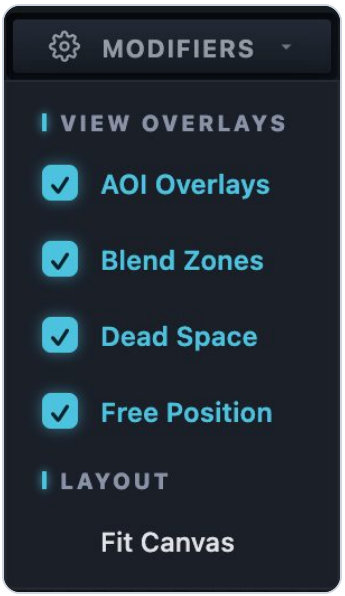


VIEW OVERLAYS AOI Overlays, Blend Zones, Dead Space, Free Position. A tick shows what is on, on every preset at once. Closing the app, New and opening a show keep each switch as you left it. They are **not saved in the show** and are never an Undo step; in the desktop app every open show window follows a switch you flip.

LAYOUT **Fit Canvas** slides this preset so its top-left destination sits at 0,0 and trims the canvas; with nothing to trim it says Canvas already fits. It is the one item that changes the show (one Undo step).


OFF With Blend Zones and Free Position both off, a change that would put one destination on another is refused: **Destinations can't overlap**. With either on the app asks **Create Blend Zone?**: ADD TO BLEND keeps it, CANCEL puts it back.

▸ DEAD SPACE AND AN AOI ON PROJECTION 04

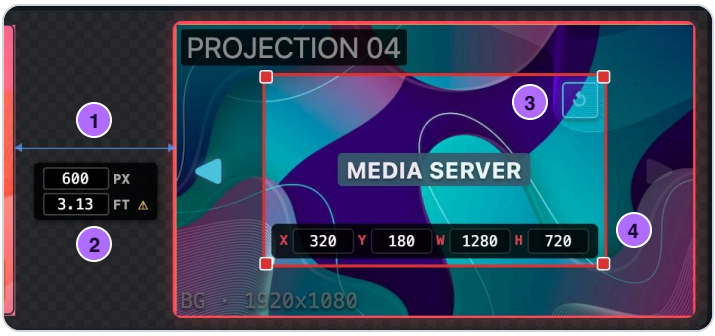

1. **Dead Space** — the blue arrow marks a gap between two destinations, here the 600 px a blend drag left before PROJECTION 04.
3. **AOI** — pick a destination and press A at its top right: the red box is the area of interest. Drag it or its corners; ↺ sets it back to the full destination (hover for OFF, P paste, C copy).
5. **Free Position** — drag a destination anywhere, both ways. After the drop the layout slides back to 0,0 by itself.

▸ FREE POSITION · DRAGGING PROJECTION 01

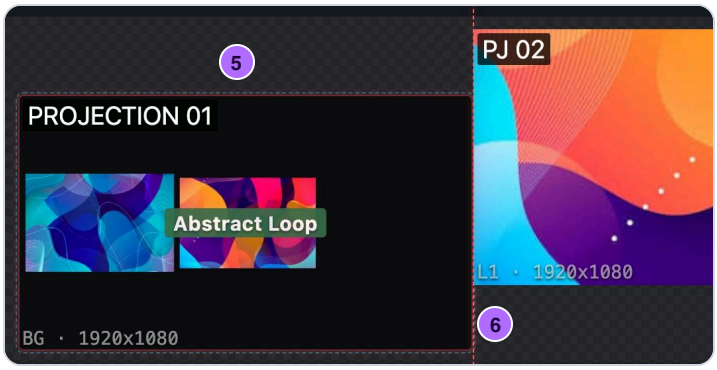

2. **PX / FT** — type the gap in either and the right-hand destination moves. Feet follow Help › Quick Reference (16 PPI, 192 px a foot). ⚠ = over 500 px.
4. **X · Y · W · H** — the AOI to the pixel, typed under it. While an AOI is on, the destination's own corner handles are hidden.
6. **Snap guide** — the red dashed line: it lines up with a neighbour's edge or middle. Hold Shift for no snap.

Where the switches live. On this computer, not in the .avlb: a show you send opens with the receiver's own switches. The blends, AOIs and positions you made are in the show and stay put.

CHAPTER 03

I/O Patch

The engineer’s patch sheet: every source and output with its cable type and resolution, and a red flag when a cable cannot carry the signal. **Simple** fills itself from the Video Presets. **Advanced** is a patch book: page 1 is the show, the pages after it are your own.

10	5	2	1	3
SOURCES	DESTINATIONS	AUX / DSM	MULTIVIEWER	PATCH PAGES

SIMPLE

Sources

One card per source: name, resolution and cable type, Set for all, + Add source.

PAGE 15

SIMPLE

Destinations, AUX & MV

Destinations, AUX / DSM outputs and multiviewers, picture on the right.

PAGE 16

ADVANCED

Patch Pages & Backups

Rows with Type, Refresh and Notes, and the Primary / Backup window.


PAGE 17

ADVANCED

Page 1 and Simple

What travels between them, what stays put, and the Rebuild question.

PAGE 18

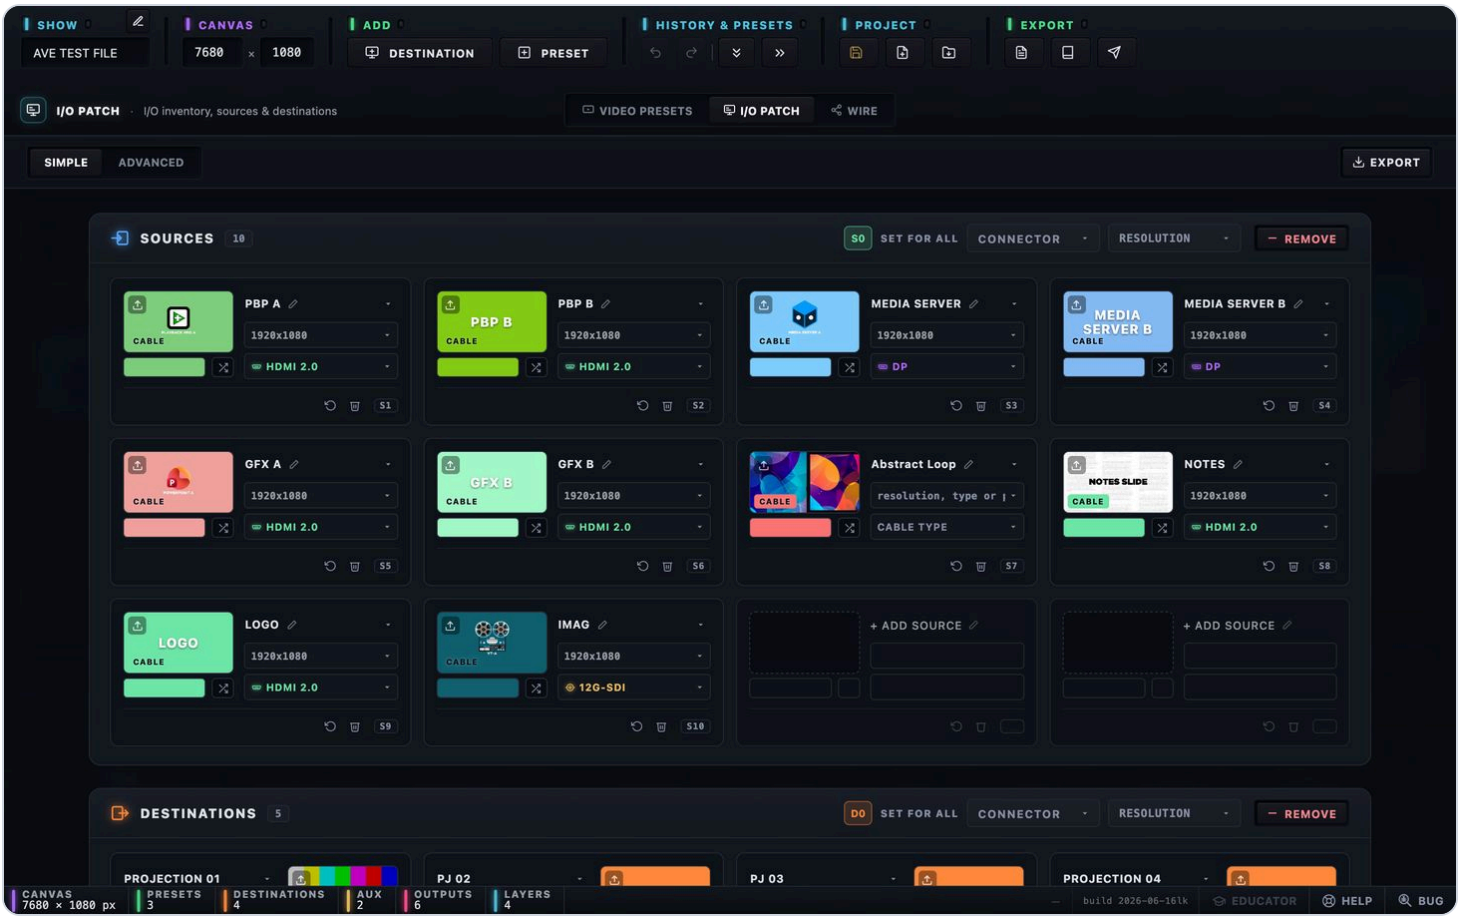


CHAPTER 03 · I/O PATCH

SIMPLE ADVANCED

Sources


Simple follows the show: every source a preset uses (a layer, a background, AUX content, a video file) is already a card. You add the cable type and the resolution. It is the card Wire shows too, so a change here is the same change there.

I/O PATCH · SIMPLE · SOURCES — AVE TEST FILE

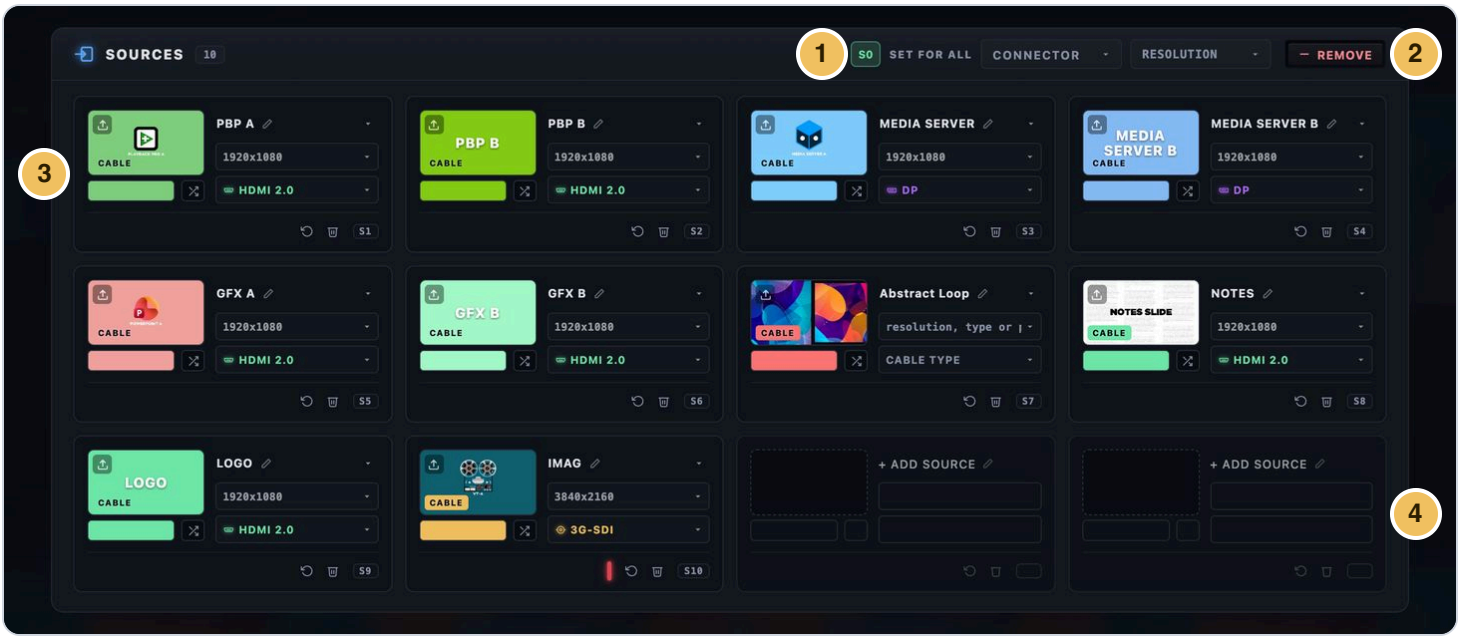

1. **S0 · Set for all** — one Connector or Resolution for every source card (one Undo puts them all back); then change any card on its own.
2. **– Remove** — lists the I/O-only sources (backups and spares no preset uses) and takes one out of the patch.
3. **Source cards** — S1, S2 … in the show's order. Name a source PBP A or GFX A and its B appears under it.
4. **+ Add source** — one I/O-only source (SOURCE 11 …) for a backup machine or a record deck; Wire lists it too.

ONE CARD, CLOSE UP · IMAG

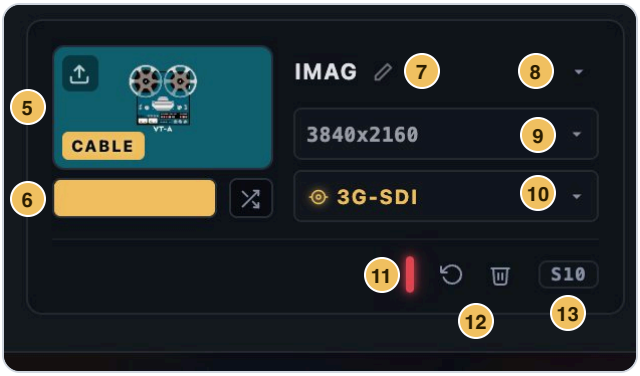

5. **Picture** — click it to upload your own (✕ removes it).
6. **Cable colour** — pick it in the bar or shuffle; a cable type picked sets it too.
7. **Name** — click it or the pencil: renamed everywhere. A name in use is refused.
8. **▼** — the name library: your own, the show's and common names.
9. **Resolution** — type a size and Enter, or pick one (Custom resolution… is the bandwidth calculator).
10. **Cable Type** — Custom…, — Clear —, HDMI 1.4 / 2.0 / 2.1, HDBaseT, DisplayPort, DVI, USB-C, 3G / 6G / 12G-SDI, NDI, ST-2110, SRT, RTMP, RTSP, Fiber, SFP, Dante, MV, Ethernet, Genlock, LTC. NDI, ST-2110, Dante and Ethernet also put the next free IP address in the note.
11. **Red pill** — the cable cannot carry the resolution (4K on 3G-SDI); hover it for the reason.
12. **Reset · Trash** — both ask: Reset clears the cable type and resolution, Trash removes the source from every preset.
13. **Number** — the same S10 in Wire, the I/O Excel and the Look Book.


CHAPTER 03 · I/O PATCH

SIMPLE ADVANCED

Destinations, AUX & MV

The output side of the same patch: the destinations of the canvas, the AUX / DSM outputs of the presets and the multiviewers. Output cards are mirrored, picture on the right. An output's resolution is its size: change it here and the canvas follows.

I/O PATCH · SIMPLE · DESTINATIONS, AUX / DSM AND MULTIVIEWERS

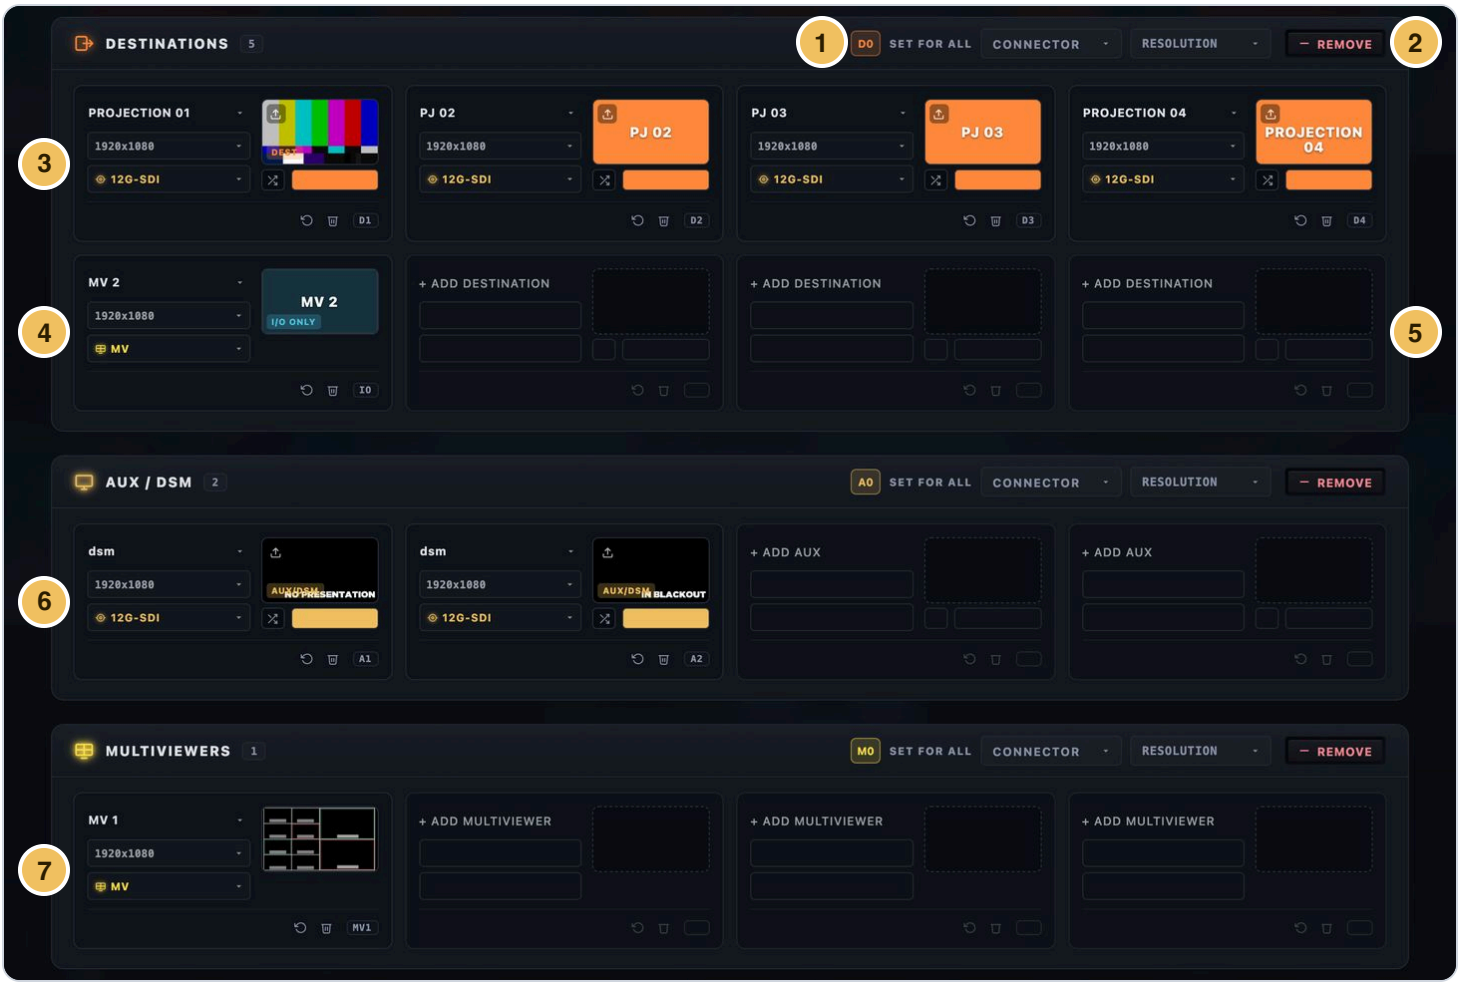

1. **D0 · Set for all** — one Connector or Resolution for every destination card. A0 does the AUX / DSM cards, M0 the multiviewers.
2. **– Remove** — in every title: pick one from the list and it goes the way its card's trash takes it. Undo brings it back.
3. **Destination card** — name, resolution and cable type on the left, picture on the right. D1, D2 … follow the canvas; a backdrop has no card.
4. **I/O ONLY** — an output named on Advanced page 1 (here MV 2). It takes no picture or colour and follows its page-1 row (18).
5. **+ Add destination** — a real 1920 × 1080 destination at the end of the canvas (DESTINATION 05). + Add AUX makes AUX3, + Add multiviewer the next MV.
6. **AUX / DSM card** — an AUX output of the presets, A1, A2 … Picking its cable type sets its colour, as on a destination.
7. **Multiviewer** — the operator monitor (MV1), never on the canvas. Click its picture for the next of four.

Outputs keep a size. An output's resolution is its size, so — Clear — is greyed in its Resolution menu; only a source's can be cleared. Multiviewers also travel to the I/O Excel and Wire's Multiviewers list.


CHAPTER 03 · I/O PATCH

SIMPLE ADVANCED

Patch Pages & Backups

Advanced is a patch book: pages of rows with the columns Simple leaves out (Type, Refresh, Notes). Page 1 is the show; pages 2 and up are your own lists, for a breakout room, a rehearsal rig or a rental sub-list.

I/O PATCH · ADVANCED · PAGE 1 — AVE TEST FILE

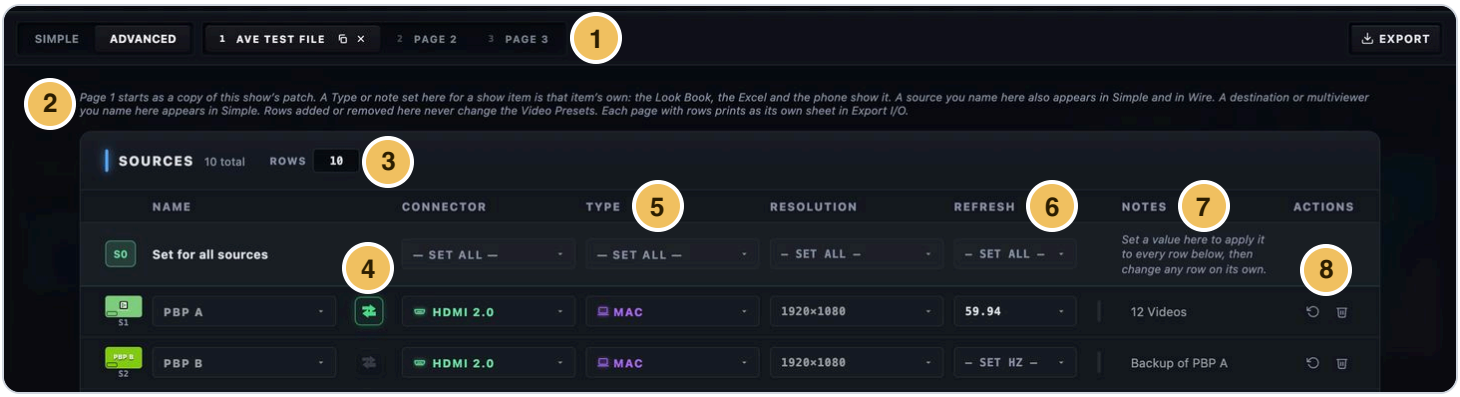

1 **Page tabs** — page 1 carries the show's name. Click a tab to open it, double-click to rename; on the open tab ⧉ copies the page and × closes it (a page with rows asks). The last tab is always an empty spare, up to 25 pages.

2 **What this page does** — page 1 says what it shares with the show (18); pages 2 and up say they stand alone.

3 **Rows** — type how many rows the table needs (up to 999) and press Enter; a lower number only trims blank rows.

4 **Backup mark** — lit: a primary with a backup; dim: the backup itself; grey: click it to open the Backup window.


5 **Type** — sources: PC, Workstation, Mac, Camera, PTZ, Media Server, Switcher, Teleprompter; outputs: LED, Projection, Monitor, Stream. Custom… types your own.

6 **Refresh** — Custom…, — Clear —, 23.98 to 120 Hz. The red pill counts it: 3840 × 2160 at 60 on 6G-SDI is red, at 30 it is not.

7 **Notes** — a click opens a box with the whole note; Enter saves, Escape puts it back.

8 **Reset · Trash** — at once: Reset clears the connector, resolution, refresh rate and note; Trash deletes the row.

THE BACKUP WINDOW

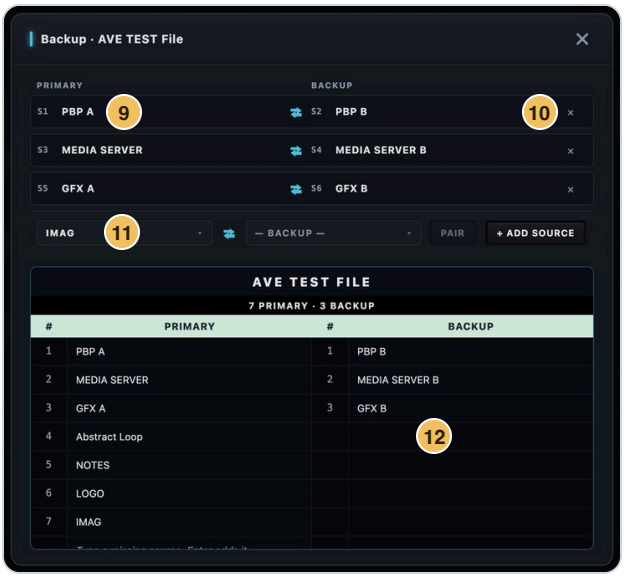

9 **Pairs** on this page: the primary on the left, its backup on the right.

10 **×** splits a pair.

11 **Primary and Backup** — pick one of each, then Pair: the backup moves right under its primary on the page. + Add source adds a row.

12 **The printed table** — what the page's sheet in the I/O Excel carries, marked P and B. Its last line (scroll down) takes a missing source: type it, Enter.

Names that end in A and B with the same start (PPT A, PPT B) pair by themselves. One backup per primary.

Export. Every Advanced page with rows prints as its own sheet in the I/O Patch's Export (page 24).

CHAPTER 03 · I/O PATCH

SIMPLE ADVANCED

How Page 1 and Simple Follow Each Other

Simple is the show itself; Advanced page 1 is a copy of it that you can add to, built the first time you open Advanced. Some facts travel between the two by themselves, some wait for the Rebuild question, and pages 2 and up never take part. See also page 4.

SIMPLE → PAGE 1

Follows at once

- **A rename** in Simple, Video Presets or Wire renames the page-1 row.
- **Deleted in Video Presets:** the row stays, dimmed, NOT IN THE SHOW. It keeps its data, leaves the I/O Excel and is a normal row again when the item is back; Rebuild or its trash removes it.
- **Deleted with its trash** in the I/O Patch: the page-1 row goes too.

DELETED IN VIDEO PRESETS




PAGE 1 → THE SHOW

Written at once

- **Type, note and refresh rate** of a show item are the item's own: the Look Book, both I/O Excel tabs and the phone show them.
- **A source you name** on page 1 is a new card in Simple, and in Wire.
- **A destination or multiviewer you name** is an I/O ONLY card in Simple that follows its page-1 row both ways.

RECORD DECK, NAMED ON PAGE 1

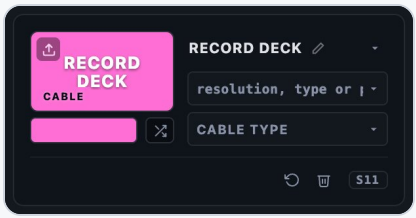

STAYS ON PAGE 1

Until you rebuild

- **Cable type and resolution** set on a page-1 row of a show item stay on page 1 and its Excel sheet. The Simple card keeps its own.
- **Rows added or removed** on any Advanced page never change the Video Presets.
- **Pages 2 and up** stand alone: nothing there reads from or changes the Video Presets, Simple or Wire.

THE REBUILD QUESTION

Change a cable type, a resolution or a size, or add, remove or rename an item on the Simple side, and page 1 keeps its rows. The next time you switch to `ADVANCED` the app asks once: **Simple changed since AVE TEST File was built**. `KEEP MY PAGE` leaves page 1 as it is. `REBUILD FROM SIMPLE` replaces every row on page 1 with the show as Simple has it; Undo brings the old page back. A note, or a Type page 1 already shows, never asks.

WHERE EACH FACT LIVES

	SIMPLE CARD	PAGE 1 · A SHOW ITEM'S ROW	PAGES 2 AND UP
Name	Set here, renamed everywhere	Follows Simple	Their own values, never shared with the show
Cable type, resolution	The show's (an output's resolution is its size)	Page 1's own copy, until you rebuild	
Type, notes, refresh rate	Not on the card (the red pill counts the rate)	The item's own, both ways	

Rename in Simple, not on page 1. A new name typed over a copied row on page 1 makes it a row of your own and a new I/O-only card in Simple; the show's item keeps its name.

CHAPTER 04

Wire

The signal flow. Wire draws the show as a one-line diagram: sources on the left, a router in the middle, destinations and AUX on the right. **Simple** is drawn for you from the show. **Advanced** is where you draw the real system. Both print as drawing sheets.

AVE TEST FILE	10	6	25	Letter → A0
THE SHOW IN THE PICTURES	SOURCES	OUTPUTS	ADVANCED PAGES, AT MOST	SHEET SIZES

SIMPLE

Signal Flow, Drawn for You

The whole show cabled through one Generic Router. Make it yours by drag and drop: cards on, tiles off, cables moved.

PAGE 20

ADVANCED

Draw the Real System

Pages of your own: routers, switchers, converters, network switches, backup runs and hand-made cards.

PAGE 21

HAND-OFF

Drawing Sheets & Thumbnails

PDF, SVG or PNG sheets with the title block and the cable colour code, plus a ZIP of every thumbnail.

PAGE 25

› WIRE · ADVANCED · PAGE 1 OF THE AVE TEST FILE: A ROUTER, A SWITCHER AND CONVERTERS



One card, every page. Each source, destination and AUX is the same card in Wire, in the I/O Patch and on Video Presets › Advanced. Change its name, picture, resolution or cable type in any of them and the drawing follows.


CHAPTER 04 · WIRE

SIMPLE ADVANCED

Signal Flow, Drawn for You

Simple is your show as a one-line drawing, drawn for you: every source into one Generic Router, every destination and AUX out of it. Then it is yours, built by drag and drop with the same cables as Advanced. Anything added to the show later arrives already cabled.

WIRE · SIMPLE — AVE TEST FILE, AFTER FIT

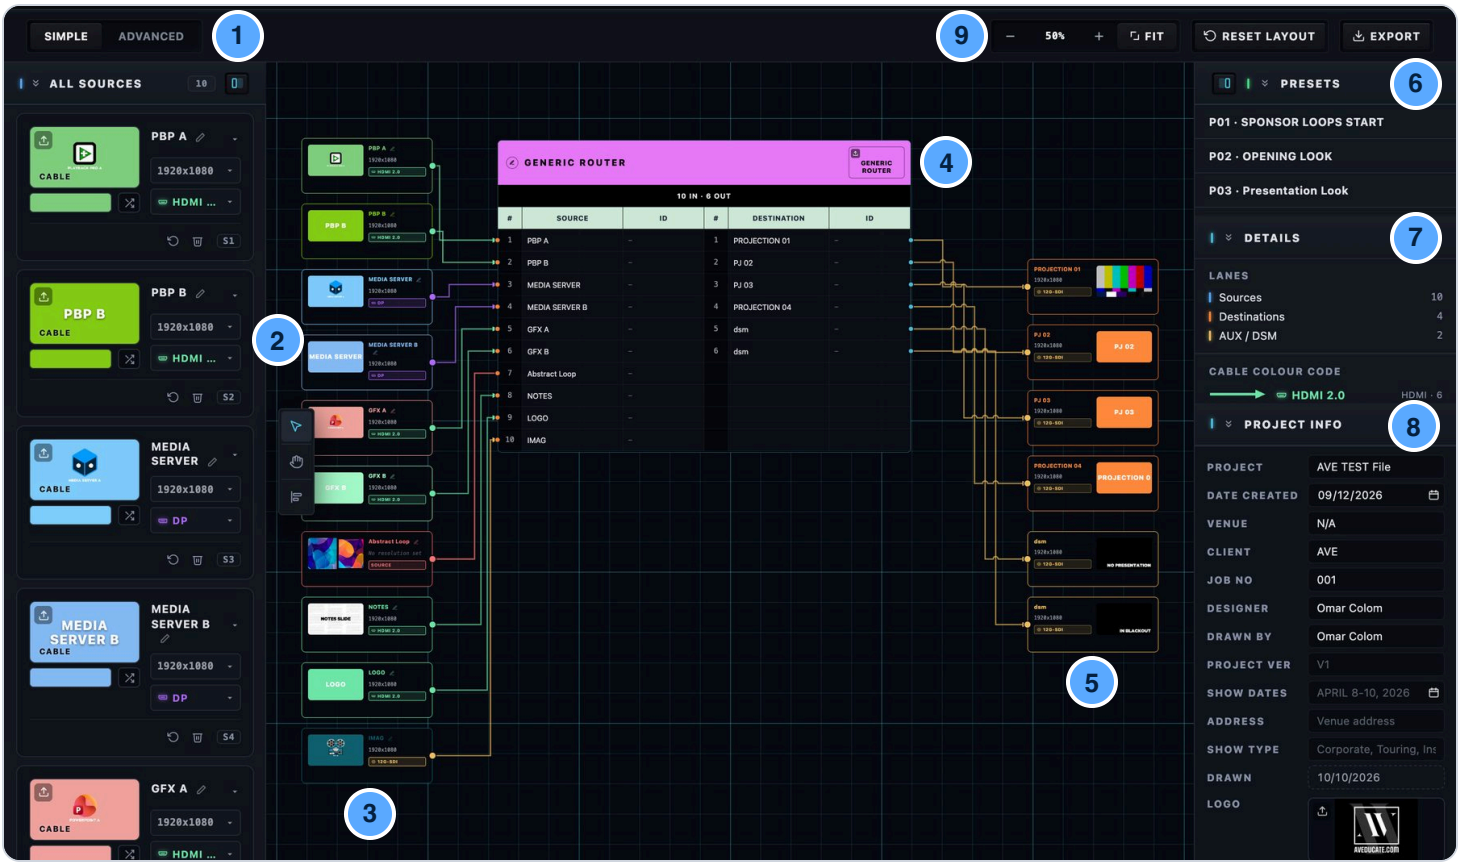

1. **Simple / Advanced** — Simple is this drawing. Advanced (page 21) is the free-form builder; its page 1 starts as a copy of this one.
2. **Cards** — the I/O Patch's own cards: picture, colour, resolution, Cable Type. A change on a card shows everywhere. Drag a card onto the drawing to place or move its tile.
3. **Source tiles** — one output dot each. Point at a tile and press its ×, or select it and press Delete, to take it off. It stays in the show: drag its card back.
4. **Generic Router** — type the real name in its title. Click the picture on the right for a logo: the bar takes its colour. Type a slot or port in a row's ID cell.
5. **Destinations & AUX** — picture on the right, input dot on the left. One cable per tile and per router row.
6. **Presets** — click one to light only what that look uses; click it again to show everything.
7. **Details** — the lanes and the Cable Colour Code. Click a tile to see the presets that use it and its router row.
8. **Project Info** — the title block of every sheet: project, date, venue, client, job no, designer, drawn by, logo.
9. **Zoom · Fit · Reset Layout · Export** — Fit shows it all; Reset Layout puts moved tiles back and keeps the cables; Export makes the sheets (page 25).

Cables run from an output to an input. Drag from a tile's dot to a router row, or from a free row to a tile; drag a plugged end to move it (onto another cable, the two swap). Click a cable for a handle on each straight run; Delete or a double-click removes it. On a point of the same kind nothing attaches, and a warning names both: "PBP A OUT can not connect to OUT 3".


CHAPTER 04 · WIRE

SIMPLE ADVANCED

Draw the Real System

Advanced is the engineer's free-form builder: add the hardware the Video Presets cannot know about and cable it the way it is really built. Page 1 opens as a copy of the Simple drawing under the show name; every page after it is a blank sheet of your own (25 pages at most).

WIRE · ADVANCED — A WORKED EXAMPLE ON PAGE 2: PBP A SELECTED, I/O TOOLS OPEN

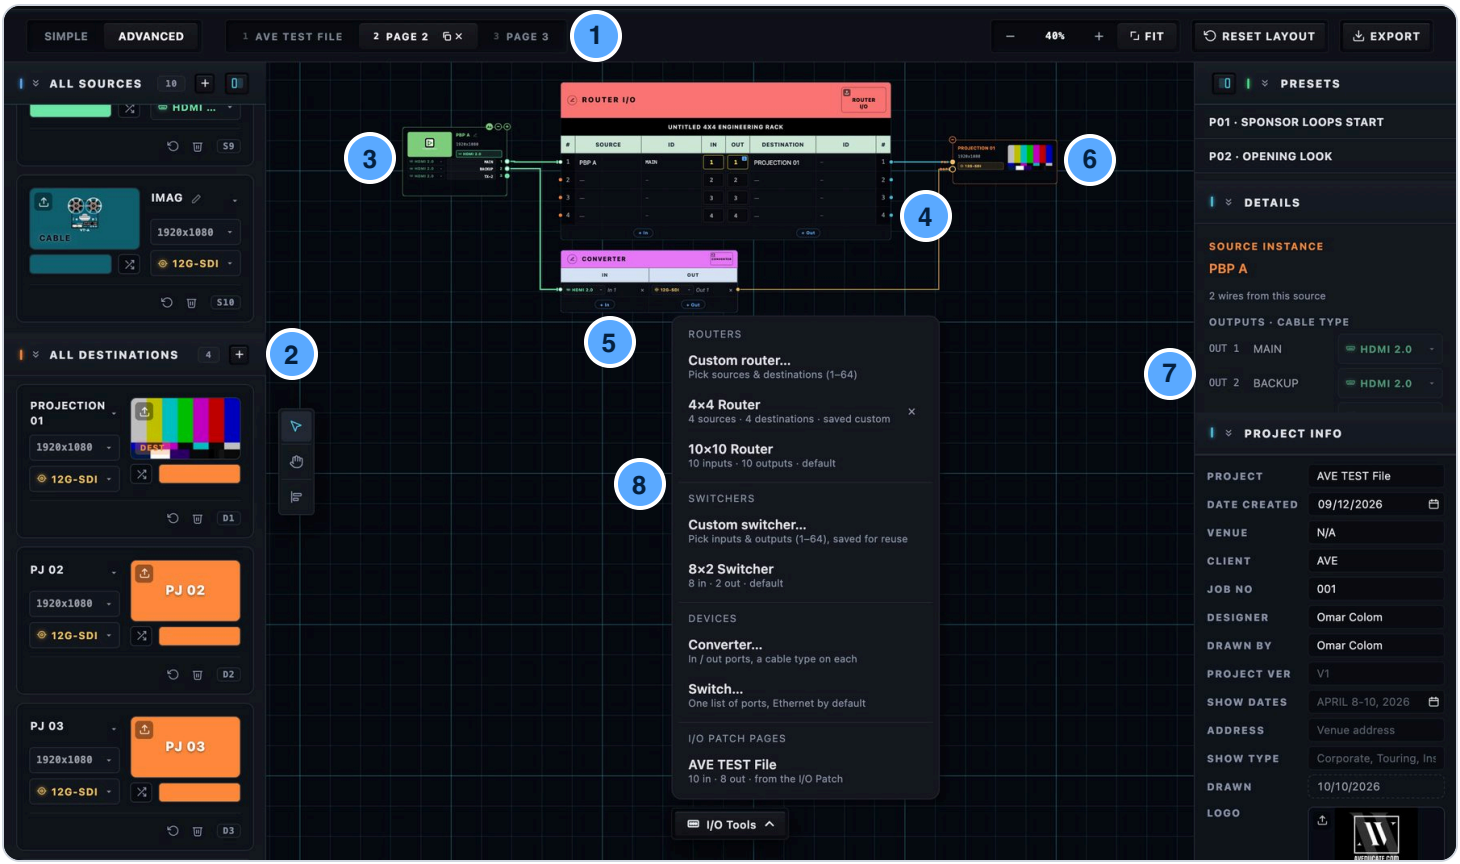

1. **Pages** — click a tab to open it, double-click to rename. On the open tab the copy icon duplicates the page and × closes it. The last page is always a spare.
2. **+ on a list heading** — a hand-made source, destination or AUX that exists only in Wire (a record deck, an encoder), numbered C1, C2 …
3. **Source tile** — ⊕ adds an output point (up to six), ⊖ removes the last, Aa names them: MAIN, BACKUP, TX-2.
4. **Router** — press an Out key, then an In key: the route is made and the Out key shows its input. + In / + Out add rows.
5. **Converter** — a cable type on every port, so the cable changes colour at the box: HDMI 2.0 in, 12G-SDI out.
6. **Backup input** — + on a destination or AUX tile adds a second input: PRI and BKP.
7. **Details** — select a source tile to give each of its outputs its own cable type.
8. **I/O Tools** — routers (10×10 or your own size), switchers (8×2 or your own), converters, network switches, and any I/O Patch page with rows. A size you made is kept here.

Page 1 and Simple. When Simple's sources, destinations, AUX or cables change, Advanced asks once: Keep my page, or Rebuild from Simple (it replaces page 1; Undo brings it back). A hand-made source is offered under MADE IN WIRE in the Preset Background's SOURCE list (page 10): picked there, it becomes a source of the show.

CHAPTER 05

Hand-off

What you build leaves the building as files the crew already knows: a printed Look Book of every look, Excel workbooks for the cue sheet and the patch, drawing sheets of the signal flow, a ZIP of thumbnails and the show file. Each tool hands out its own. Send puts the three main files in one email.

6 HAND-OUTS

2 THEMES · LIGHT / DARK

Letter → A0 WIRE SHEET SIZES

3 FILES IN ONE SEND

VIDEO PRESETS

Look Book & Cue Sheet

The printed book, one page per preset, and the Excel cue sheet: one row per preset, a column per destination and AUX.

PAGE 23

I/O PATCH

The Patch Book

Its own Excel: every source, destination, AUX and multiviewer with connector and resolution, plus a tab per Advanced page with rows.

PAGE 24

WIRE

Sheets & Thumbnails

Drawing sheets as PDF, SVG or PNG with the title block and cable colour code, and a ZIP of every thumbnail.

PAGE 25


SEND · SAVE · HELP

The Whole Packet

Send, the show file, Help and Bug, and a checklist for fitting AV Look Book into your show flow.

PAGE 26

› ONE SHOW, THREE HAND-OUTS: A LOOK BOOK PAGE · THE WIRE SHEET · THE I/O PATCH BOOK

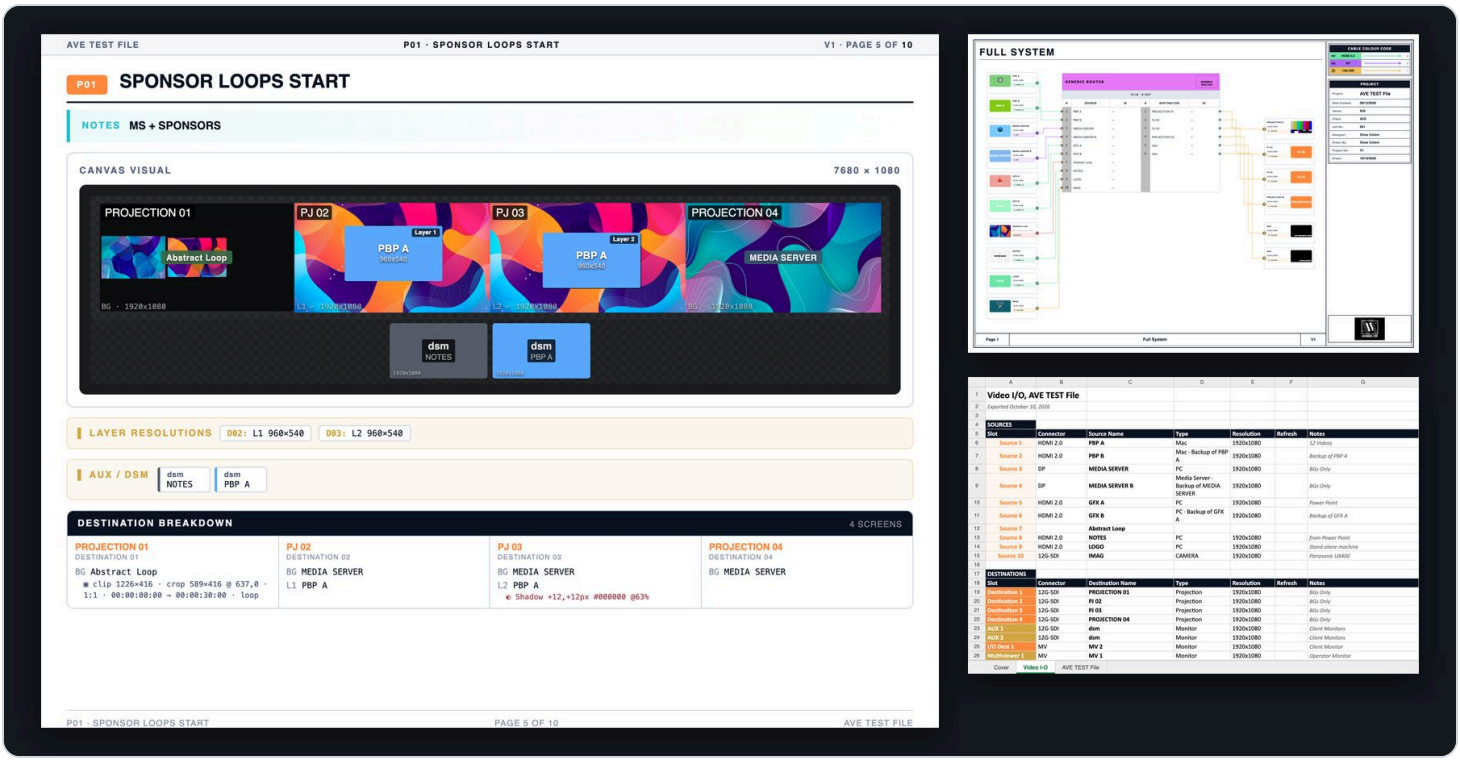


CHAPTER 05 · HAND-OFF

Video Presets: Look Book & Cue Sheet

Two files come from Video Presets: the Look Book, the printed show with a page per preset, and the cue sheet, the same show as an Excel workbook for your own paperwork.

A PRESET PAGE · LIGHT · FOR PRINT

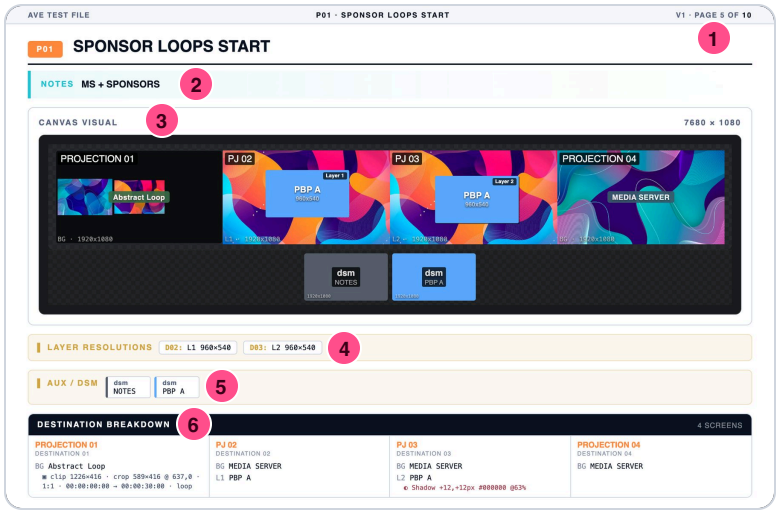

Look Book PDF

Top bar › **LOOK BOOK** (its check only warns: **Export Anyway**). Tick the pages and details, type a Version, pick **Light · For Print** or **Dark · For Screen**, then **Export PDF**: the book opens with the print dialog. Save as PDF, Letter landscape.

1. **Version and page** — your Version and “Page 5 of 10” on the preset pages: an old printout is obvious.
2. **Notes** — the preset’s notes, as typed.
3. **Canvas visual** — the look exactly as the canvas shows it.
4. **Layer resolutions** — each layer’s size.
5. **AUX / DSM** — what every AUX carries.
6. **Destination breakdown** — BG, then L1, L2 …, with clip, crop and FX details.

Who uses it — caller and producer: Light, printed. Switcher operator: Dark, on a second screen. Client: sign-off.

Cue Sheet XLSX

Top bar › **EXCEL**, or **EXPORT** top right of Video Presets: the same `<show>_look_book.xlsx`. A **Cover** tab from the show info (name, CUE SHEET, venue, dates, designer, VERSION), then a tab named after the show. Only a blank show name, no destinations or no presets stop it.
Who uses it — the caller’s cue sheet, the operator’s preset list, the media server’s BG and clip list.

THE EXPORTED CUE SHEET, THE SHOW’S TAB (AVE TEST FILE)

	A	B	C	D	E	F	G	H	I	J
1	**AVE TEST File**									
2	*Exported October 10, 2026*									
3										
4	P#	Preset Name	Notes	Resolution	PROJECTION 01	PJ 02	PJ 03	PROJECTION 04	dsm	dsm
5				Canvas: 7680x1080	1920x1080	1920x1080	1920x1080	1920x1080	1920x1080	1920x1080
6										
7	P01	SPONSOR LOOPS START	*MS + SPONSORS*		BG: Abstract Loop (clip 1226×416 · crop	BG: MEDIA SERVER L1: PBP A (960×540)	BG: MEDIA SERVER L2: PBP A (960×540) ·	BG: MEDIA SERVER	NOTES	PBP A
8	P02	OPENING LOOK	*MS + LOGO*		BG: MEDIA SERVER L1: LOGO (960×540)	BG: MEDIA SERVER L1: PBP A (960×540)	BG: MEDIA SERVER L1: PBP A (960×540)	BG: MEDIA SERVER L1: LOGO (960×540)	NOTES	GFX A
9	P03	Presentation Look	*Option 01*		BG: MEDIA SERVER L1: IMAG (960×540)	BG: MEDIA SERVER L1: PBP A (1920×1080)	BG: MEDIA SERVER L1: PBP A (1920×1080)	BG: MEDIA SERVER L1: IMAG (960×540)	NOTES	PBP A

Cover | AVE TEST File

1. **P#** — a row per preset, with its name and notes.
2. **Sizes** — the canvas, then each output’s resolution.
3. **A destination** — BG, then L1, L2 … (visible size, effects), then AOI.
4. **AUX** — a column per AUX in use: what feeds it in each look.
5. **Tabs** — Cover first, then the show.

Fold it into your paperwork. P# is the look the caller calls: paste the rows beside your own cue numbers, or add Cue, Page and Time columns next to it. Copy a destination column into a screens or LED rundown; give the AUX columns to whoever runs the confidence monitors. Preset rows are a fixed height: make a row taller to read a long cell. Re-export after every change: row 2 carries the export date, the cover the VERSION from Project Ver in the show info.

CHAPTER 05 · HAND-OFF

I/O Patch: the Patch Book

The I/O Patch has its own Export: an Excel patch book for the engineer, the crew and the rental desk. The same items also print in the Look Book, on its I/O reference pages.

Patch Book XLSX

I/O Patch › **EXPORT**, top right of the page bar, in Simple or Advanced: `<show>_video-io.xlsx`. It opens on a Cover tab titled I/O PATCH, then **Video I-O**, the Simple patch row for row, then a tab for each Advanced page that has rows.

THE VIDEO I-O TAB (AVE TEST FILE)

	A	B	C	D	E	F	G
1	**Video I/O, AVE TEST File**						
2	*Exported October 10, 2026*						
3							
4	**SOURCES**	②		③	④		⑤
5	**Slot**	**Connector**	**Source Name**	**Type**	**Resolution**	**Refresh**	**Notes**
6	Source 1	HDMI 2.0	**PBP A**	Mac	1920x1080		*12 Videos*
7	Source 2	HDMI 2.0	**PBP B**	Mac · Backup of PBP A	1920x1080		*Backup of PBP A*
8	Source 3	DP	**MEDIA SERVER**	PC	1920x1080		*BGs Only*
9	Source 4	DP	**MEDIA SERVER B**	Media Server · Backup of MEDIA SERVER	1920x1080		*BGs Only*
①	Source 5	HDMI 2.0	**GFX A**	PC	1920x1080		*Power Point*
11	Source 6	HDMI 2.0	**GFX B**	PC · Backup of GFX A	1920x1080		*Backup of GFX A*
12	Source 7		**Abstract Loop**				
13	Source 8	HDMI 2.0	**NOTES**	PC	1920x1080		*from Power Point*
14	Source 9	HDMI 2.0	**LOGO**	PC	1920x1080		*Stand alone machine*
15	Source 10	12G-SDI	**IMAG**	CAMERA	1920x1080		*Panasonic UX400*
16							
17	**DESTINATIONS**	⑥					
18	**Slot**	**Connector**	**Destination Name**	**Type**	**Resolution**	**Refresh**	**Notes**
19	Destination 1	12G-SDI	**PROJECTION 01**	Projection	1920x1080		*BGs Only*
20	Destination 2	12G-SDI	**PJ 02**	Projection	1920x1080		*BGs Only*
21	Destination 3	12G-SDI	**PJ 03**	Projection	1920x1080		*BGs Only*
22	Destination 4	12G-SDI	**PROJECTION 04**	Projection	1920x1080		*BGs Only*
23	AUX 1	12G-SDI	**dsm**	Monitor	1920x1080		*Client Monitors*
24	AUX 2	12G-SDI	**dsm**	Monitor	1920x1080		*Client Monitors*
25	I/O Dest 1	MV	**MV 2**	Monitor	1920x1080		*Client Monitor*
26	Multiviewer 1	MV	**MV 1**	Monitor	1920x1080		*Operator Monitor*

Cover | Video I-O | AVE TEST File ⑦

1. **Slot** — Source 1, Destination 1, AUX 1, Multiviewer 1: each item's number.
2. **Connector** — the cable each item needs.
3. **Type** — the machine or device; a backup reads "Backup of …".
4. **Resolution and Refresh** — the size, and the rate when one is set.
5. **Notes** — each item's own note.
6. **Destinations** — the screens, then AUX, I/O-only destinations and multiviewers.
7. **Tabs** — Cover, Video I-O, then a tab per Advanced page with rows.

Who uses it — the EIC and video engineers, the crew running cable, the rental desk pulling connectors and converters.

AN ADVANCED PAGE'S TAB

	A	B	C	D	E
1	**AVE TEST File, AVE TEST File**				
2	*Exported October 10, 2026*				
3			①		
4	**SOURCES**				
5	**Slot**	**Connector**	**P/B**	**Source Name**	**Type**
6	Source 1	HDMI 2.0	P	**PBP A**	Mac
7	Source 2	HDMI 2.0	B	**PBP B**	Mac
8	Source 3	DP	P	**MEDIA SERVER**	PC
9	Source 4	DP	B	**MEDIA SERVER B**	Media Server
10	Source 5	HDMI 2.0	P	**GFX A**	PC
11	Source 6	HDMI 2.0	B	**GFX B**	PC
12	Source 7			**Abstract Loop**	

1 · P/B marks primaries and backups. The tab takes the page's name; an empty page gets none (Page 2 and Page 3 here).

THE PRINTED PATCH PAGE · LOOK BOOK



AVE TEST FILE — I/O REFERENCE · SOURCES — PAGE 3 OF 10

I/O REFERENCE **Sources** — *7 inputs discovered*

Sources are inputs — the feeds coming into the system (playback machines, cameras, graphics, etc.).

SLOT	CONNECTOR	SOURCE NAME	TYPE	RESOLUTION	NOTES
Source 1	HDMI 2.0	PBP A	Mac	1920x1080	*12 Videos*
Source 3	DP	MEDIA SERVER	PC	1920x1080	*BGs Only*
Source 5	HDMI 2.0	GFX A	PC	1920x1080	*Power Point*
Source 7		Abstract Loop			
Source 8	HDMI 2.0	NOTES	PC	1920x1080	*from Power Point*
Source 9	HDMI 2.0	LOGO	PC	1920x1080	*Stand alone machine*
Source 10	12G-SDI	IMAG	CAMERA	1920x1080	*Panasonic UX400*

The Look Book's **Sources** and **Destinations I/O reference** pages put the patch on paper. They list what the show uses; an I/O-only source no preset uses (the backup PBP B) is in the Excel only.

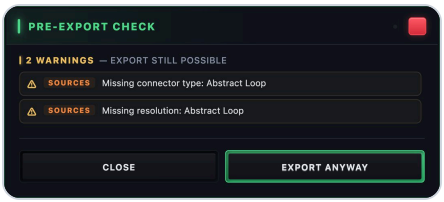

Its own check. The I/O Export looks at the patch only: a missing connector, a missing resolution, a connector that can't carry its resolution. It only warns, and never reads the show name; **Export Anyway** writes the file. Clear the warnings before the book goes to the shop.

Fold it into your lists. Video I-O is the whole patch in screen order: paste Slot, Connector and Name into your router or switcher input list, or the venue's patch sheet. Sort a copy by Connector for the cable and adapter pull. Build an Advanced page per room, rig or rental sub-list: each prints as its own tab. A Type or note set on page 1 is the item's own, so the Look Book and both tabs agree.

CHAPTER 05 · HAND-OFF


Wire: Drawing Sheets & Thumbnail Pack

Wire prints the signal flow as real drawing sheets, with the title block and the cable colour code, and packs every thumbnail as a slate for the operators.

Drawing Sheets PDF SVG PNG


Wire › **EXPORT**, top right of the page bar. PDF opens the print dialog with the sheet size already set; SVG and PNG download at once (`<show>_wire.svg`, `.png`). Simple prints its one drawing as Page 1 · Full System; Advanced prints a sheet for each page that has something on it, under the page's name, and skips the empty ones.

THE SIMPLE SHEET · LIGHT · LETTER

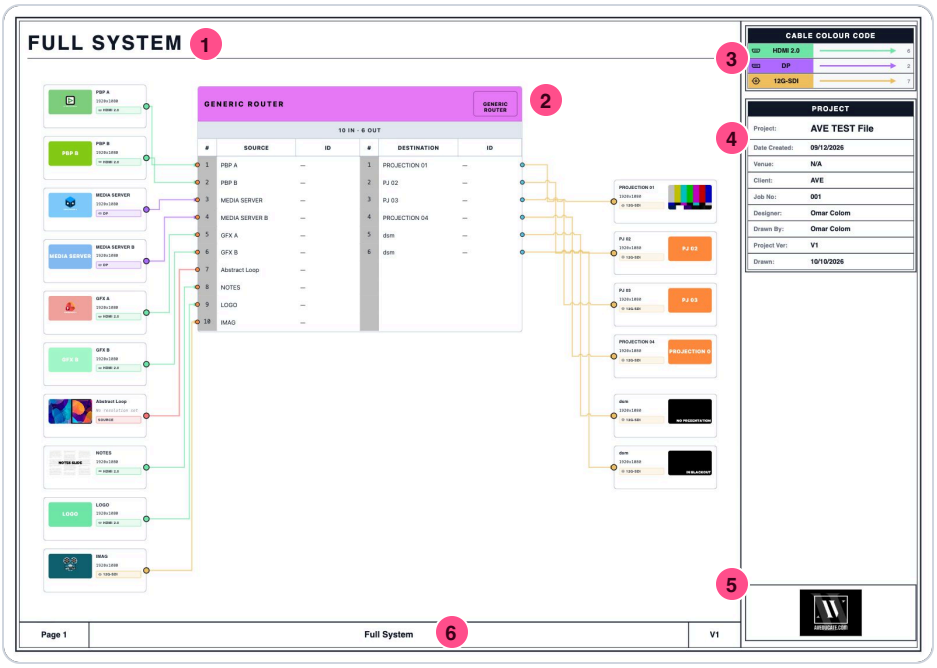

1. **Page name**, large, upper left.
2. **The drawing** as you drew it: tiles, router rows and IDs, cables in their colours.
3. **Cable Colour Code** — a row per cable type, with its count.
4. **Project** — the title block from Project Info or Quick Setup.
5. **Logo** — yours, or the AV LOOK BOOK wordmark.
6. **Footer** — page, title, version.

WIRE › EXPORT

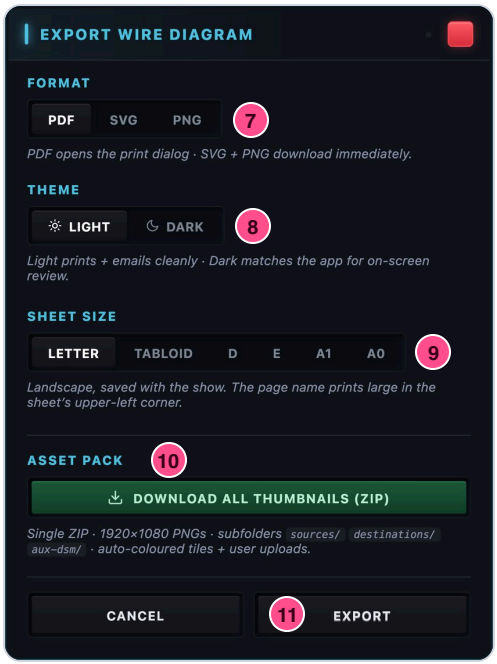

7. **Format** — PDF, SVG or PNG.
8. **Theme** — Light to print, Dark to match the app.
9. **Sheet size** — Letter to A0, landscape, saved with the show.
10. **Asset Pack** — the thumbnail ZIP.
11. **Export** — one size for the whole export.

Thumbnail Pack ZIP

FOUR OF THE 16 PNGS IN THE ZIP



Download All Thumbnails (ZIP) gives `<show>_thumbnails.zip`: a 1920 × 1080 PNG per source, destination and AUX, in sources/, destinations/ and aux-dsm/. An uploaded picture is used as it is (PBP A); any other tile is the name in white on its card's colour (PBP B). **Who uses it** — graphics, playback and media server operators: test slates, so every input shows its own name at line check.


Fold it into your flow. Print Letter for the binder, Tabloid or D for the rack or the FOH wall: the drawing grows, the title block and the key keep their size. SVG stays sharp in a drawing program; PNG drops into an email or a chat. Fill in Project Info once and every sheet carries it. Wire has no Excel: the patch book comes from the I/O Patch.

CHAPTER 05 · HAND-OFF

Send, Save & Get Help

Send packs the main hand-off into one email, Save keeps the show file, and Help and Bug sit at the bottom right of every page.

TOP BAR · PROJECT AND EXPORT



Send PDF XLSX AVLB

SEND builds the Look Book, the Excel cue sheet and the show file in one go. **Desktop app:** it asks first, writes the three to Documents › AV Look Book › Outbox › the show and the time, and opens a new email with all three attached (Apple Mail on the Mac; elsewhere the text goes on the clipboard and the folder opens). **Browser:** the share sheet where it takes files; otherwise the three download (the Look Book as an .html that prints to PDF) and a draft email names them.

Not in Send — the patch book, the Wire sheets and the thumbnails: export them on their own pages.

The Show File AVLB

SAVE writes **<show>.avlb**: destinations, presets, layers, AUX, canvas, show info, the I/O Patch with its Advanced pages, the Wire pages and thumbnails. Shift-click is Save As; Cmd / Ctrl + S saves from anywhere. The desktop app also saves about every 30 seconds once the show has a file.

Pass it on — the Video tab's video and picture files are not inside: relink them on the other machine (Video Presets › Advanced, Video tab). The app is free at aveducate.com/av-look-book, so the whole crew can open the show.

Help

HELP, bottom right: Quick Reference, Keyboard, Glossary, Vocabulary (how Look Book words map to Aquilon, Spyder, Pixelhue and Barco) and Accessibility, with links to Feedback and to Support The AVE Mission.

Bug

BUG, beside Help: an email to AV Educate with a short template (name, date, where the bug is, the app build) and your show file, attached in the desktop app, downloaded for you to attach in a browser. Remove it if you'd rather not share the show.

Fitting AV Look Book Into Your Show Flow

WHO	HAND THEM	FILES
Show caller · producer	The Look Book, Light, printed; the cue sheet beside the script	PDF XLSX
Switcher · screens operator	The Look Book, Dark, on a second screen; the cue sheet as the preset list	PDF XLSX
EIC · video engineers	The patch book; the Wire sheets, Tabloid or bigger for the rack	XLSX PDF
Rental desk · crew	The patch book's Connector column as the pull list; a Wire sheet	XLSX PDF
Graphics · playback · media server	The thumbnail pack as test slates; the cue sheet for BGs and clips	ZIP XLSX
Another AV Look Book user	The show file: the whole show, ready to edit	AVLB

1. **Fill in the show info once** — venue, dates, client, job no, designer, Project Ver, logo: every Excel cover and Wire title block uses it.
2. **Clear the checks** — the show check (Look Book, cue sheet) and the I/O check (patch book).
3. **Stamp the round** — a Version in the Look Book window (V1 advance, V2 rehearsal) and Project Ver for covers and sheets.
4. **Save, then Send** to the caller, the operator and the producer.
5. **Export the rest** — the patch book and Wire sheets for engineering, the ZIP for graphics and playback.
6. **Changed something?** Re-export and re-send: the preset pages, the covers and the sheets show the version.

AV Look Book is free. AV Educate Inc is a 501(c)(3) nonprofit. Vote on what we build next at **aveducate.com/feedback**; support the mission at **aveducate.com/support**.