LAMINEX®

CARNIVAL

flutted acrylic

MARKETED BY : NAMAH DECOR LLP.
CONT. : +91 98925 64934
MUMBAI

LAMINEX®

THE PERFECT BLEND OF
STRENGTH AND BEAUTY.

CARNIVAL

flutted acrylic

COLLECTION

Available in Sheet: **3660mm x 1220mm (8 Feet x 4 Feet)**

Thickness: **1.0mm & 1.2mm**

+-10% **Variation**

APPLICATIONS

- Kitchen • Work tops • Tables • Doors • Shelves • Cabinets • Trolleys
- Bathroom • Basin Tops • Shelves • Cabinets • Furniture • Washroom
- Wall Lining and Horizontal Surfaces • Lockers • Cabinets • Trolleys
- Commercial • Hospitality & Restaurant Tables • Counter Tops • Doors
- Cubicles • Lockers • Cabinets • Wall Cladding & Partition

GENERAL USE & CARE GUIDE

CARNIVALlaminate are manufactured with aesthetics and durability in mind. Maintenance, recommended and with appropriate care, our laminates will last through the years. **CARNIVAL**panels are easy to handle.

LAMINATES

- Cleaning Should be done with water and a clean, non-abrasive cloth.
- To remove more stubborn stains, use mild household cleaners like cloth or jelly wipe down with a non-abrasive cloth.
- Avoid the use of abrasive liquid cleansers, bleaching compounds or solvents as these may damage the surface of the laminate.
- Do not place hot cookware directly on the laminate. Prolonged pressure to temperatures above 30° degree Celsius may cause damage to the laminate surface.
- Do not use the laminate for purposes that it is not intended for (e.g. do not iron, chop, hammer or deface the laminate in your home.)
- Outdoor application of the laminate with exposure to direct sunlight and weather conditions are recommended.
- UV rays may damage the laminate.
- Gloss surfaces are recommended only for vertical application.
- Do not use thinner and thinner for the surface of the **CARNIVAL**panels, this may cause discoloration of the surface.
- Store the laminates at temperature below 30° degree celsius.
- Typically conform to internationally recognize technical standards.
- Have a thickness tolerance of +/- 10%.
- Peel off the protection film after processing.

IMPORTANT INFORMATION

WHY AIR BUBBLE APPEARS IN BETWEEN ACRYLIC LAMINATE AND SUBSTRATE (PLYWOOD, MDF, PARTICLE BOARD) AFTER THE INSTALLATION?

There are many reasons which lead to air bubble problems and follow as:

- Standard Acrylic laminate under high humidity atmosphere
- Using a water based polyurethane adhesive or other than PVDA (Polyvinylidene Vinyl Acetate Co-polymer) adhesive may also lead to air bubble after the installation Acrylic laminate.
- Many of American or European weather conditions Substrate (Plywood, MDF, Particle Board) absorbed moisture, after few days of installation Acrylic laminate on substrate, substrate gradually loses moisture. Final moisture is the result of air bubble between Acrylic laminate and substrate after installation.
- Using dirt or oil stain surface Substrate (Plywood, MDF, Particle board) Lead to become a particular area of Acrylic laminate develop air bubble appear of that area after the installation.
- When more than 1/3 of Acrylic laminate is used for pasting also lead to air bubble after installation.
- Lack of pressing and short period of pressing at the time of installing period of Acrylic laminate also lead to air bubble after the installation of Acrylic laminate.
- **CARNIVAL**panels should be kept evenly straight. Either stand upright or lay flat. Should kept straight for minimum 48 hours and then you can press the laminate on the surface for better results.
- **NO GUARANTEE NO WARRANTY**
- **BATCH TO BATCH COLOUR VARIATION**

THE WAYS YOU CAN ENJOY THE ROYAL HEIGHT OF CARNIVAL LAMINATE TO MAKE YOUR DREAMS ALIVE IN SMART WAY

To avoid the problems of appearing air bubbles and any yellow colour stains or yellow patches, problem in the laminate sheet after installation of **CARNIVAL**panels, Laminate should follow the some tips before buying **CARNIVAL**panels.

As **CARNIVAL**panels is an Acrylic laminate which have the scratch resistance characteristic and also the back painting plays an major laminates.

Please follow some tips to avoid installation of **CARNIVAL**panels.

- Please check the laminate of the brand delivery, please if panel has not damage in transportation & handling and then use for installation.
- Before installing **CARNIVAL**panels make sure that substrate (Plywood, MDF, Particle board) is good and no damage surface of substrate. Moisture and even surface.
- Where is usage of any interior quality or not as per standard quality (special plywood and special tipping with latest acid-alkaline colour layer by using water base). Then use **CARNIVAL**panels to avoid yellow colour patches.
- Clean the surface of substrate (Plywood, MDF, Particle Board) to make free from dust or grease by cloth, soft brush, sponge or sandpaper.
- Always use water based PVDA (Polyvinylidene Vinyl Acetate Co-Polymer) Adhesive like LAMINATE NOTE for **CARNIVAL**panels.
- Stir the adhesive before using it, and do not mix water in adhesive.
- Spread the adhesive uniformly by brush, roller or adhesive sprayer on both **CARNIVAL**panels and substrate (Plywood, MDF, Particle Board).
- Please do not use the **CARNIVAL**panels more than 8 Feet x 2 Feet. Also leave allowed 2mm of gaps between two pieces of **CARNIVAL**panels, so that of the time of pressing it will no crap for removing air from between of **CARNIVAL**panels and substrate (Plywood, MDF, Particle Board).
- Use soft pinch roller or mechanical pressing techniques at the time of pressing **CARNIVAL**panels on the substrate (Plywood, MDF, Particle Board). Avoid air pressing should be done from the middle to the panel and move towards side line and corners of panel. So that air between the **CARNIVAL**panels and substrate (Plywood, MDF, Particle Board) will remove.
- Please make sure, to give sufficient amount of pressure **CARNIVAL**panels for about 1 Day to 1 Week to achieve full bonding strength.
- Please do not use synthetic rubber adhesive (SR, NR Fit, Bostic, Neoprene).
- Use the installation of **CARNIVAL**panels please avoid direct sunlight only.
- Please don't place hot cookware directly on the **CARNIVAL**panels. Prolonged exposure to temperature above 30°C may cause patches to **CARNIVAL**panels.

WHY YELLOW PATCHES AND COLOUR FADE PROBLEM APPEARS AFTER THE INSTALLATION OF ACRYLIC LAMINATE?

The reasons behind these problems are as follows:

- When Acrylic laminates experience of heavy the direct heat of sunlight or it which leads to discoloring, fading and hardness in laminate.
- Using of interior quality or not as per standard quality (special plywood & special tipping) performance this colour due to chemical reaction between adhesive at the time of bonding period and yellow patches appear after the installation.
- Using of synthetic rubber adhesive (SR / NR Fit, Bostic, Neoprene) lead to brown or orange colour patches on Acrylic laminates.
- Prolonged exposure temperature above 30° can placing hot cookware directly on the Acrylic laminates cause patches on Acrylic laminates surface.

CA 5501 **PR

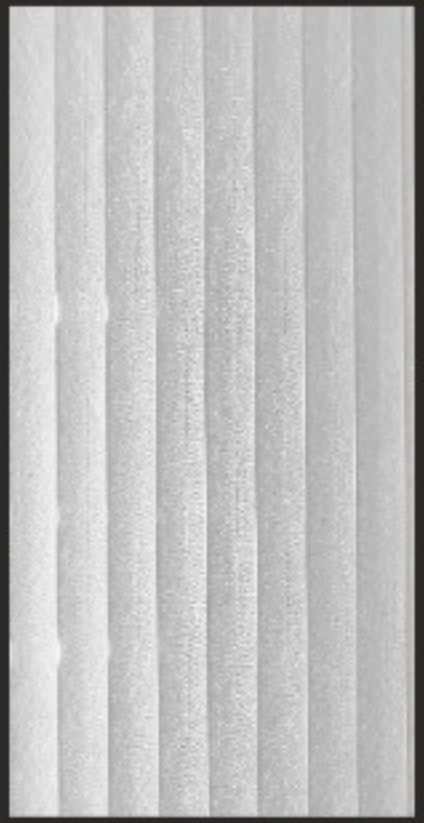

CA 5502 **PR

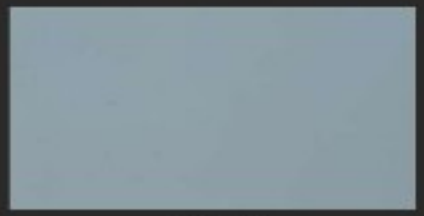

MG 1123

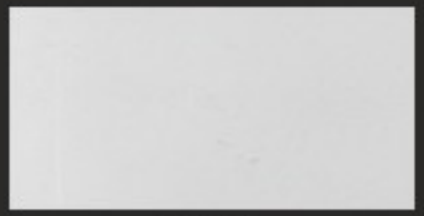

MG 1205

NOTE : **PR (PREMIUM)

CA 5503 **PR

CA 5504 **PR

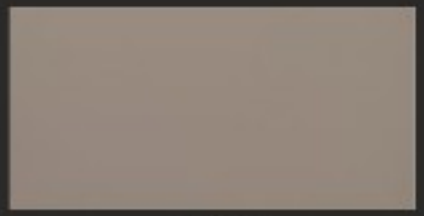

MG 1120

MD 1033

NOTE : **PR (PREMIUM)

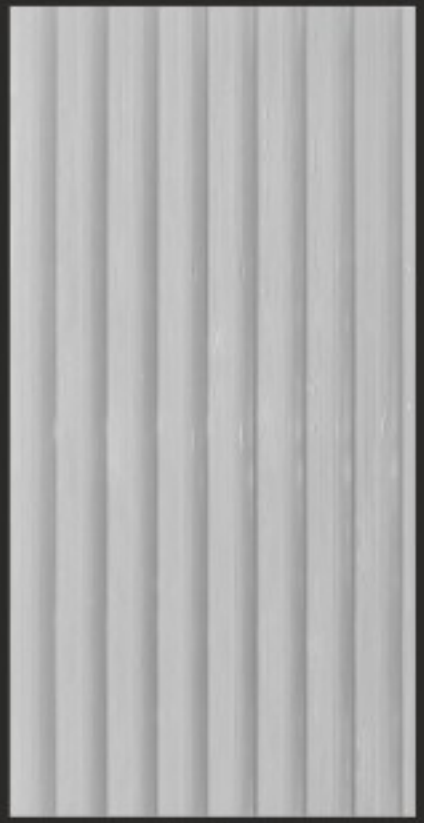

CA 5005

CA 5006

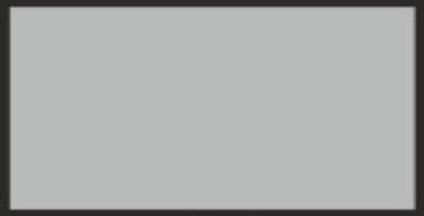

MG 1142

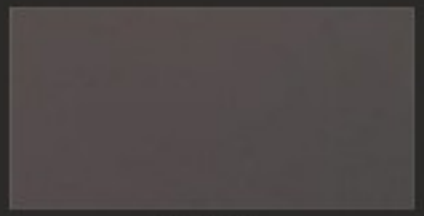

MG 1119

CA 5007

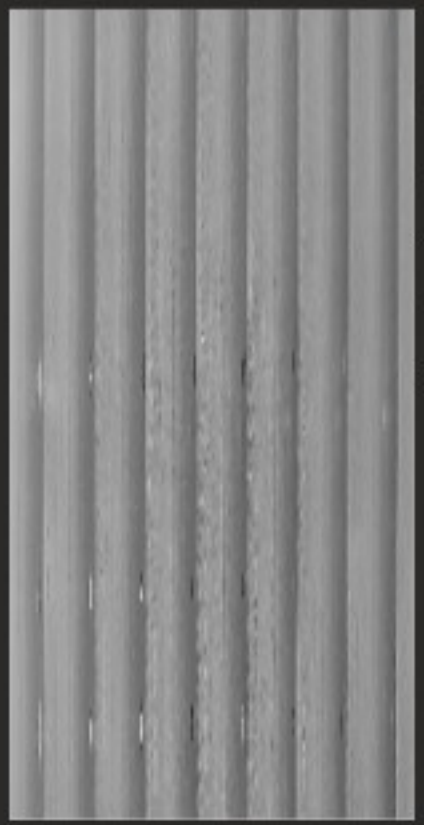

CA 5008

MD 1025

MD 1028

CA 5009

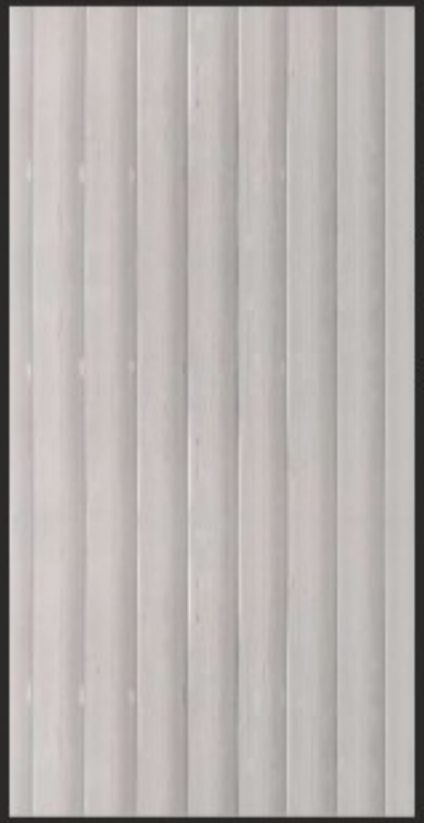

CA 5010

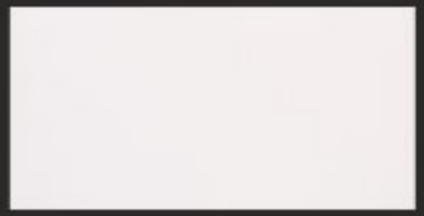

MG 1111

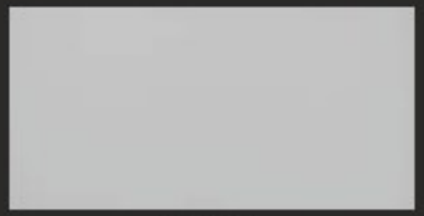

MG 1112

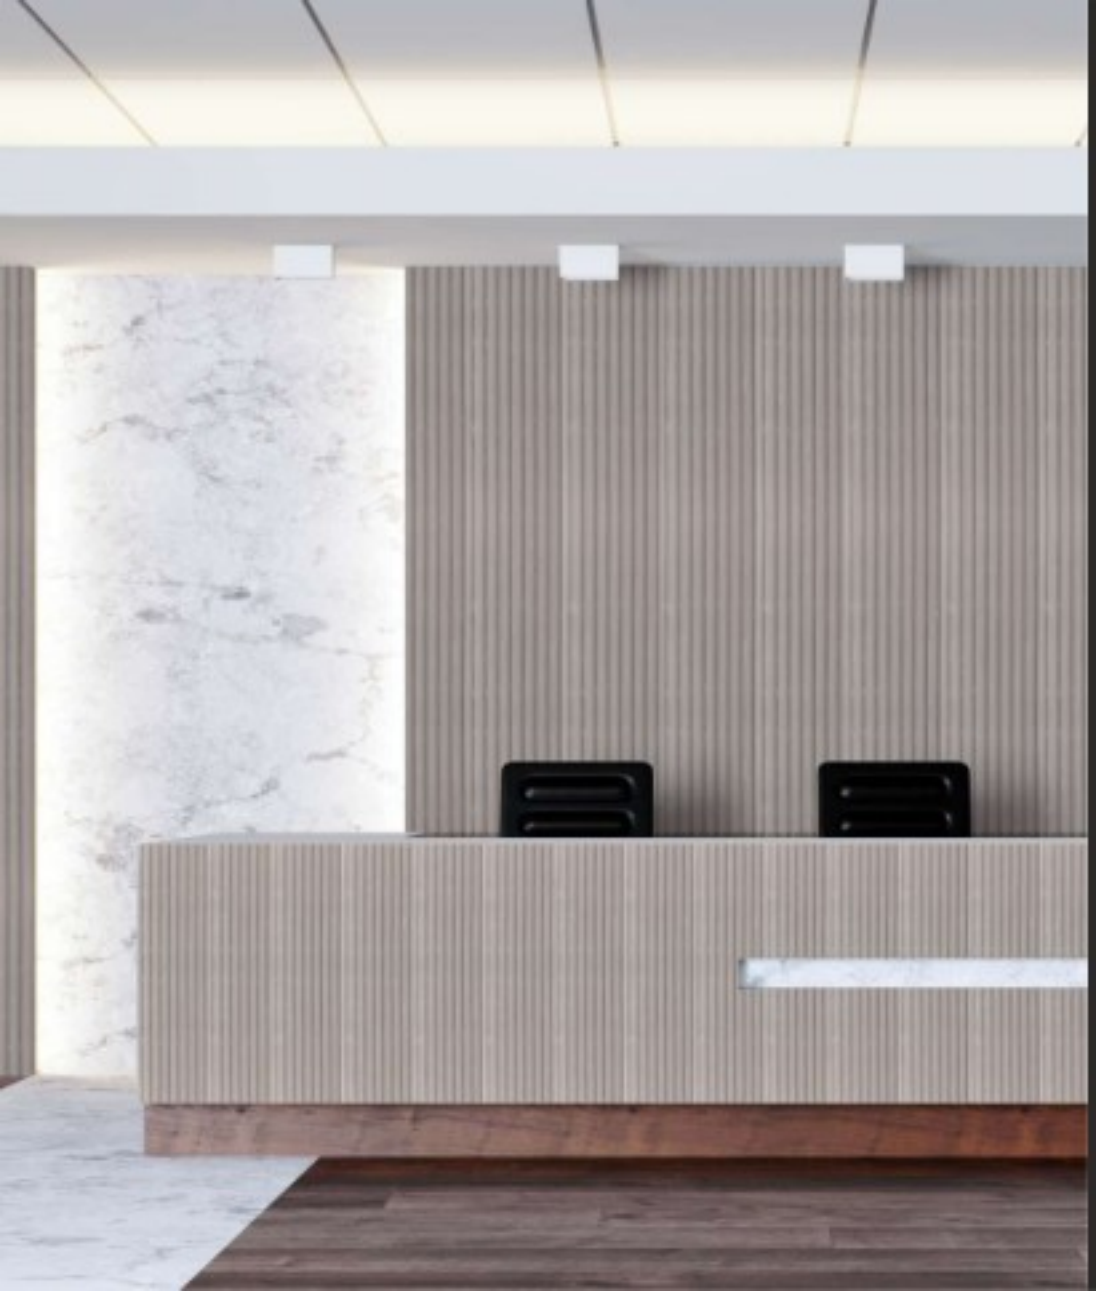

CA 5011

CA 5012

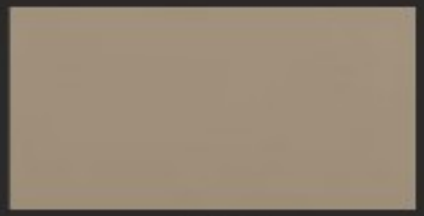

MG 1115

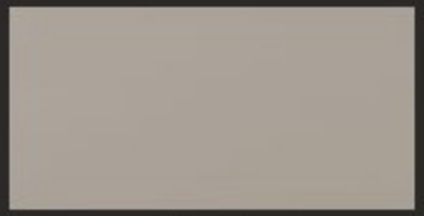

MG 1114

CA 5013

CA 5014

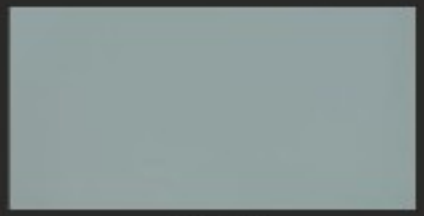

MG 1123

MG 1121

MARBEL SERIES

CA 5015 **PR

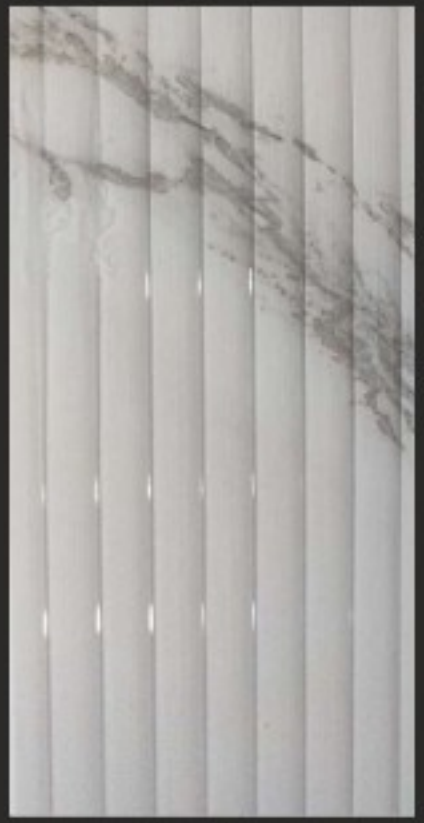

CA 5016 **PR

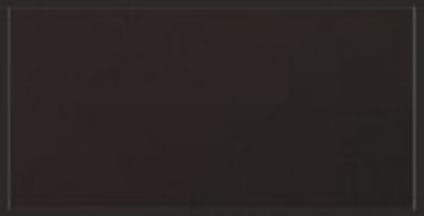

MG 1119

MG 1118

NOTE : **PR (PREMIUM)

FLUTED MIRROR

CA 6003 **PR

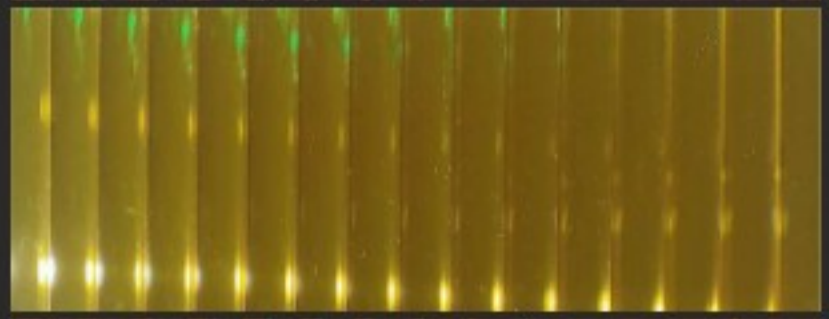

CA 6005 **PR

CA 6008 **PR

4H

ANTI SCRATCH

NOTE : **PR (PRE MILIM)

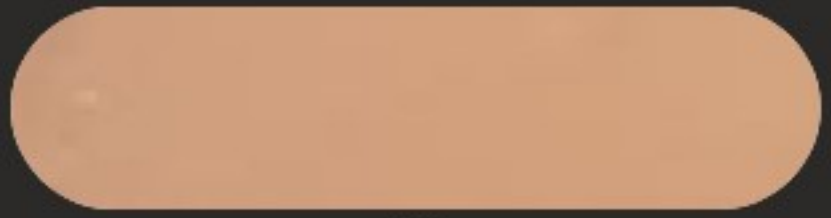

9008

9001

9003

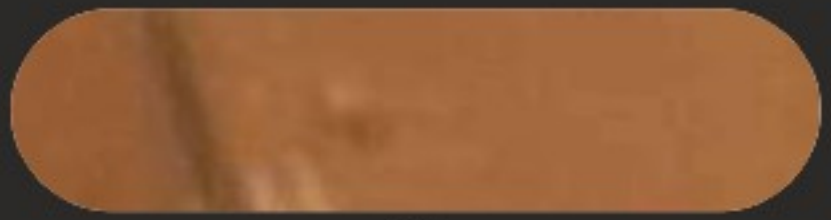

9005

4H

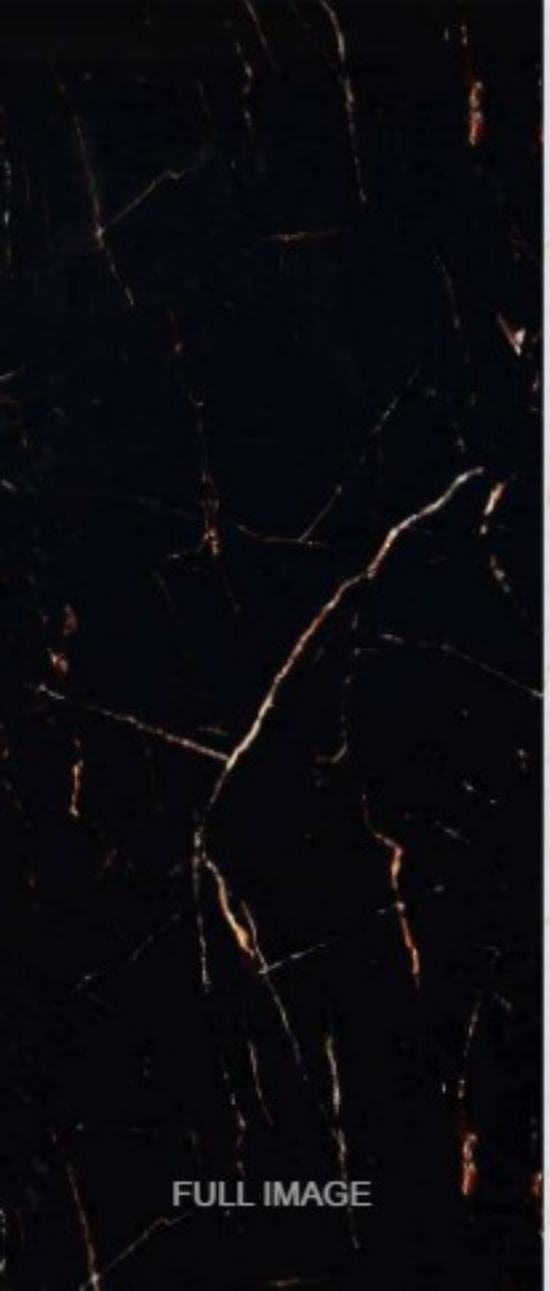

MG 4141 **PR

MG 4142 **PR

NOTE : **PR (PREMIUM)

FULL IMAGE

MG 4140 **PR

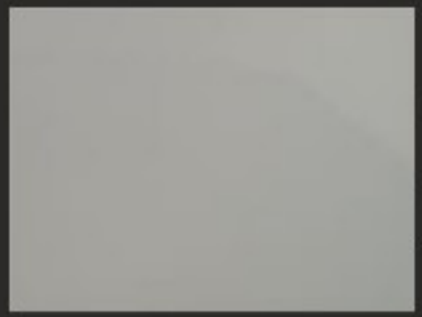

MG 1127

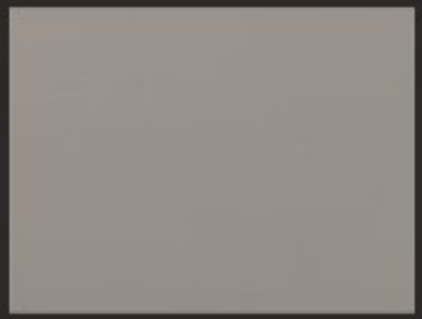

MG 1142

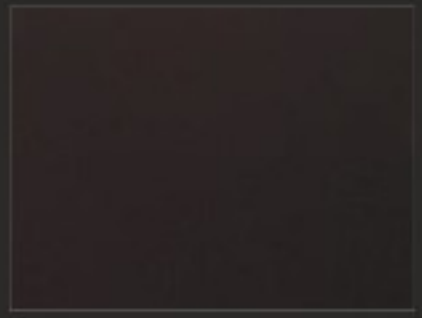

MG 1119

NOTE : **PR (PREMIUM)

MG 1115

MG 1119

MG 1115

MG 1120

MG 1116

MG 1118

MG 1117

MG 1143

MG 1142

MG 1123

MG 1119

MG 1138

MG 1111

MG 1127

MG 1112

MG 1133

MG 1141

MG 1121

MG 1144

MG 1139

MG 1129

MG 1128

MG 1131

MG 1130

MG 1126

MG 1125

MG 1157

MG 1124

MG 1151

MG 1122

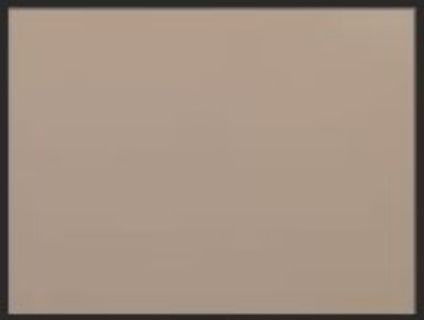

MG 1213

MG 1208

MG 1210

MG 1206

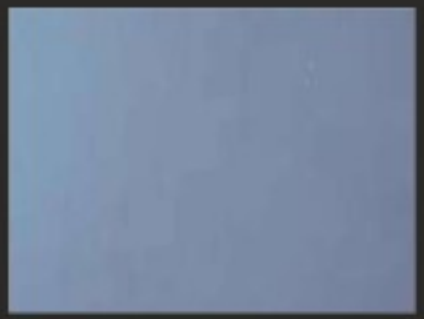

MG 1214

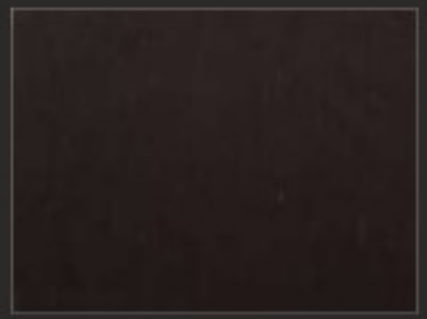

MG 1207

MG 1209

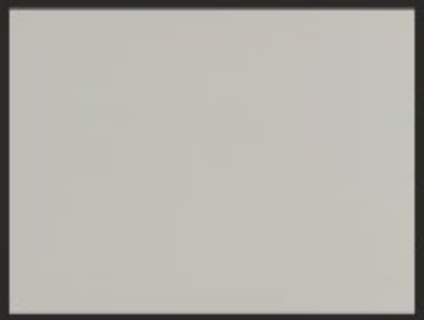

MG 1202

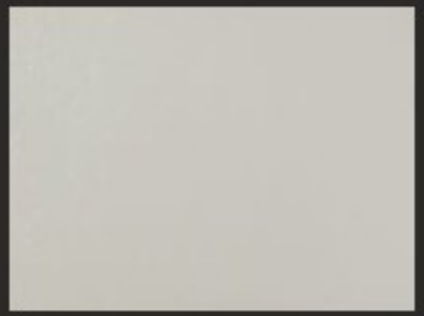

MG 1205

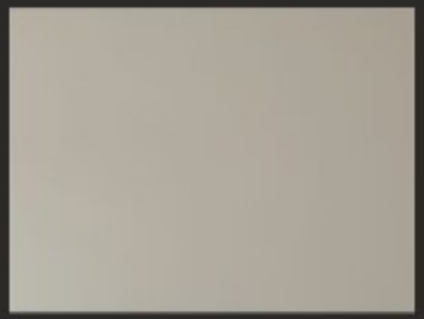

MG 1212