# Computer Organization and Architecture

THIRD EDITION

Linda Null Julia Lobur

# Chapter 6 Memory

#### **Chapter 6 Objectives**

- Master the concepts of hierarchical memory organization.
- Understand how each level of memory contributes to system performance, and how the performance is measured.
- Master the concepts behind cache memory, virtual memory, memory segmentation, paging and address translation.

#### 6.1 Introduction

- Memory lies at the heart of the stored-program computer.
- In previous chapters, we studied the components from which memory is built and the ways in which memory is accessed by various ISAs.
- In this chapter, we focus on memory organization. A clear understanding of these ideas is essential for the analysis of system performance.

#### **6.2 Types of Memory**


- There are two kinds of main memory: random access memory, RAM, and read-only-memory, ROM.
- There are two types of RAM, dynamic RAM (DRAM) and static RAM (SRAM).
- DRAM consists of capacitors that slowly leak their charge over time. Thus, they must be refreshed every few milliseconds to prevent data loss.
- DRAM is "cheap" memory owing to its simple design.

#### **6.2 Types of Memory**

- SRAM consists of circuits similar to the D flip-flop that we studied in Chapter 3.
- SRAM is very fast memory and it doesn't need to be refreshed like DRAM does. It is used to build cache memory, which we will discuss in detail later.
- ROM also does not need to be refreshed, either. In fact, it needs very little charge to retain its memory.
- ROM is used to store permanent, or semipermanent data that persists even while the system is turned off.

- Generally speaking, faster memory is more expensive than slower memory.
- To provide the best performance at the lowest cost, memory is organized in a hierarchical fashion.
- Small, fast storage elements are kept in the CPU, larger, slower main memory is accessed through the data bus.
- Larger, (almost) permanent storage in the form of disk and tape drives is still further from the CPU.

This storage organization can be thought of as a pyramid:

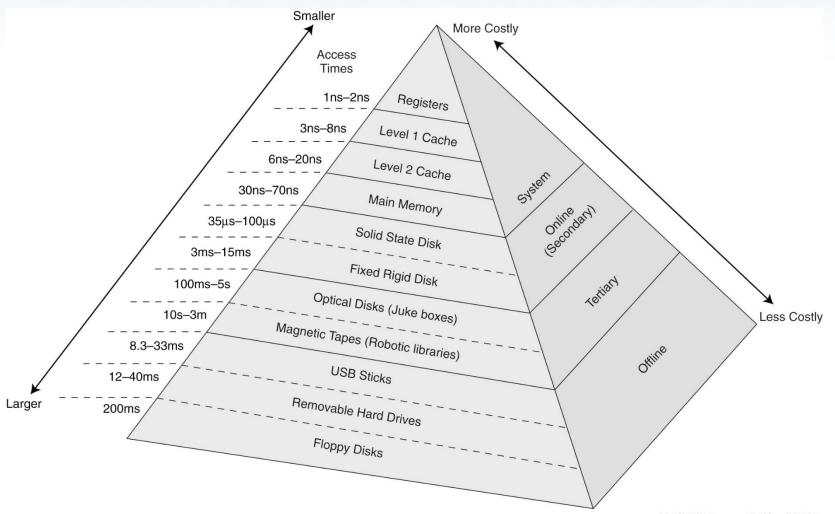

- We are most interested in the memory hierarchy that involves registers, cache, main memory, and virtual memory.
- Registers are storage locations available on the processor itself.
- Virtual memory is typically implemented using a hard drive; it extends the address space from RAM to the hard drive.
- Virtual memory provides more space: Cache memory provides speed.


- To access a particular piece of data, the CPU first sends a request to its nearest memory, usually cache.
- If the data is not in cache, then main memory is queried. If the data is not in main memory, then the request goes to disk.
- Once the data is located, then the data, and a number of its nearby data elements are fetched into cache memory.

- This leads us to some definitions.
  - A hit is when data is found at a given memory level.
  - A miss is when it is not found.
  - The hit rate is the percentage of time data is found at a given memory level.
  - The *miss rate* is the percentage of time it is not.
  - Miss rate = 1 hit rate.
  - The *hit time* is the time required to access data at a given memory level.
  - The miss penalty is the time required to process a miss, including the time that it takes to replace a block of memory plus the time it takes to deliver the data to the processor.

- An entire blocks of data is copied after a hit because the *principle of locality* tells us that once a byte is accessed, it is likely that a nearby data element will be needed soon.
- There are three forms of locality:
  - Temporal locality- Recently-accessed data elements tend to be accessed again.
  - Spatial locality Accesses tend to cluster.
  - Sequential locality Instructions tend to be accessed sequentially.

- The purpose of cache memory is to speed up accesses by storing recently used data closer to the CPU, instead of storing it in main memory.
- Although cache is much smaller than main memory, its access time is a fraction of that of main memory.
- Unlike main memory, which is accessed by address, cache is typically accessed by content; hence, it is often called content addressable memory.
- Because of this, a single large cache memory isn't always desirable-- it takes longer to search.


- The "content" that is addressed in content addressable cache memory is a subset of the bits of a main memory address called a *field*.
  - Many blocks of main memory map to a single block of cache. A tag field in the cache block distinguishes one cached memory block from another.
  - A *valid bit* indicates whether the cache block is being used.
  - An offset field points to the desired data in the block.

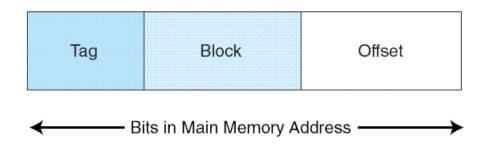

- The simplest cache mapping scheme is direct mapped cache.
- In a direct mapped cache consisting of N blocks of cache, block X of main memory maps to cache block Y = X mod N.
- Thus, if we have 10 blocks of cache, block 7
   of cache may hold blocks 7, 17, 27, 37, . . .
   of main memory.


The next slide illustrates this mapping.

With direct mapped cache consisting of N blocks of cache, block X of main memory maps to cache block Y = X mod N.

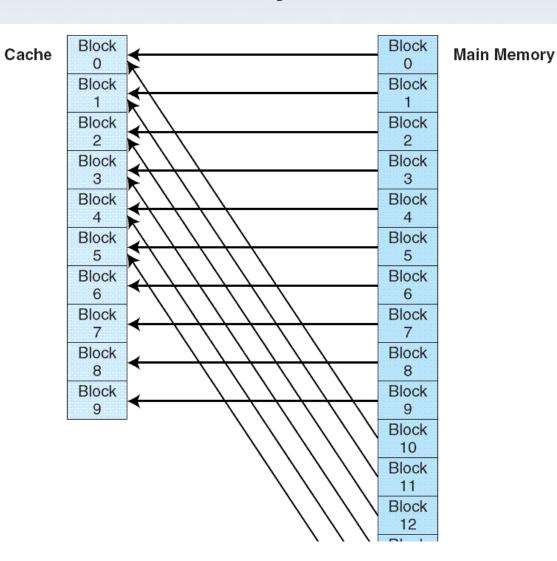

- EXAMPLE 6.1 Consider a word-addressable main memory consisting of four blocks, and a cache with two blocks, where each block is 4 words.
- This means Block 0 and 2 of main memory map to Block 0 of cache, and Blocks 1 and 3 of main memory map to Block 1 of cache.
- Using the tag, block, and offset fields, we can see how main memory maps to cache as follows.


- EXAMPLE 6.1 Consider a word-addressable main memory consisting of four blocks, and a cache with two blocks, where each block is 4 words.
  - First, we need to determine the address format for mapping.
     Each block is 4 words, so the offset field must contain 2 bits;
     there are 2 blocks in cache, so the block field must contain 1 bit;
     this leaves 1 bit for the tag (as a main memory address has 4 bits because there are a total of 2<sup>4</sup>=16 words).

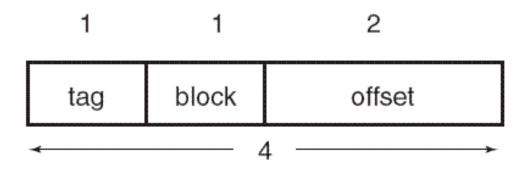


#### EXAMPLE 6.1 Cont'd


- Suppose we need to access main memory address 3<sub>16</sub> (0011 in binary). If we partition 0011 using the address format from Figure a, we get Figure b.
- Thus, the main memory address
  0011 maps to cache block 0.
- Figure c shows this mapping,
   along with the tag that is also
   stored with the data.

The next slide illustrates another mapping.

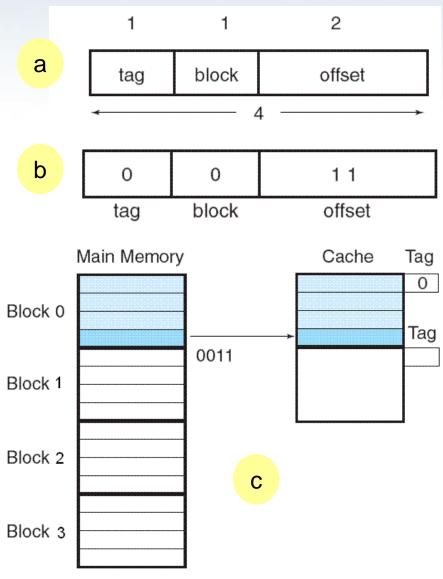

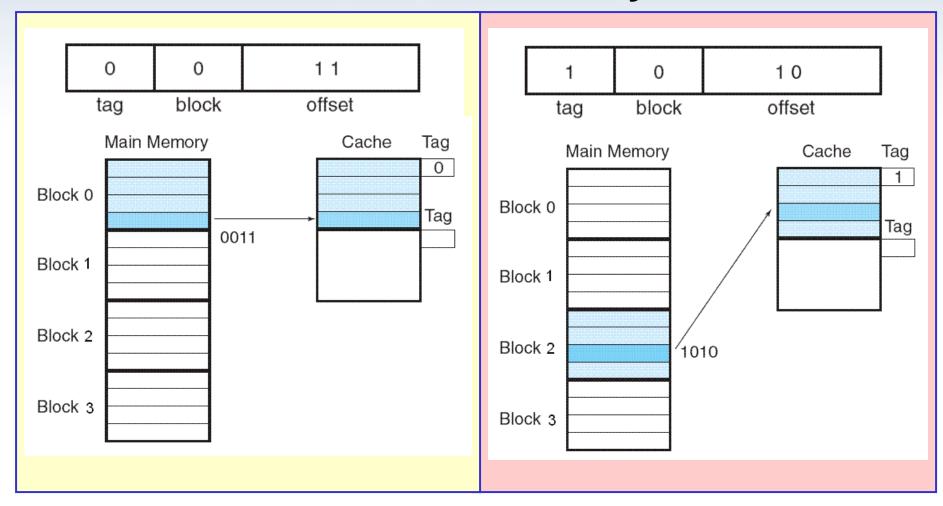


- EXAMPLE 6.2 Assume a byte-addressable memory consists of 2<sup>14</sup> bytes, cache has 16 blocks, and each block has 8 bytes.
  - The number of memory blocks are:  $\overline{2^3} = 2^{-3}$
  - Each main memory address requires 14 bits. Of this 14-bit address field, the rightmost 3 bits reflect the offset field
  - We need 4 bits to select a specific block in cache, so the block field consists of the middle 4 bits.
  - The remaining 7 bits make up the tag field.

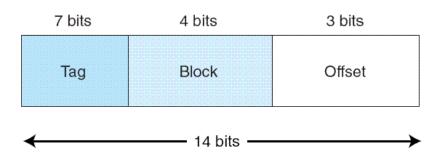

- In summary, direct mapped cache maps main memory blocks in a modular fashion to cache blocks. The mapping depends on:
- The number of bits in the main memory address (how many addresses exist in main memory)
- The number of blocks are in cache (which determines the size of the block field)
- How many addresses (either bytes or words) are in a block (which determines the size of the offset field)

- Suppose instead of placing memory blocks in specific cache locations based on memory address, we could allow a block to go anywhere in cache.
- In this way, cache would have to fill up before any blocks are evicted.
- This is how fully associative cache works.
- A memory address is partitioned into only two fields: the tag and the word.

Suppose, as before, we have 14-bit memory addresses and a cache with 16 blocks, each block of size 8. The field format of a memory reference is:

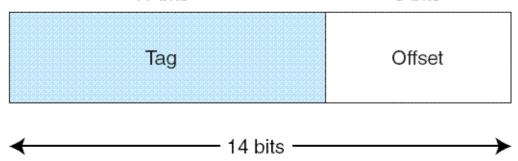



- When the cache is searched, all tags are searched in parallel to retrieve the data quickly.
- This requires special, costly hardware.

- You will recall that direct mapped cache evicts a block whenever another memory reference needs that block.
- With fully associative cache, we have no such mapping, thus we must devise an algorithm to determine which block to evict from the cache.
- The block that is evicted is the victim block.
- There are a number of ways to pick a victim, we will discuss them shortly.

- Set associative cache combines the ideas of direct mapped cache and fully associative cache.
- An N-way set associative cache mapping is like direct mapped cache in that a memory reference maps to a particular location in cache.
- Unlike direct mapped cache, a memory reference maps to a set of several cache blocks, similar to the way in which fully associative cache works.
- Instead of mapping anywhere in the entire cache, a memory reference can map only to the subset of cache slots.


- The number of cache blocks per set in set associative cache varies according to overall system design.
  - For example, a 2-way set associative cache can be conceptualized as shown in the schematic below.
  - Each set contains two different memory blocks.

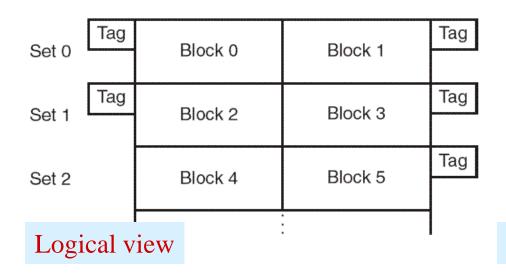

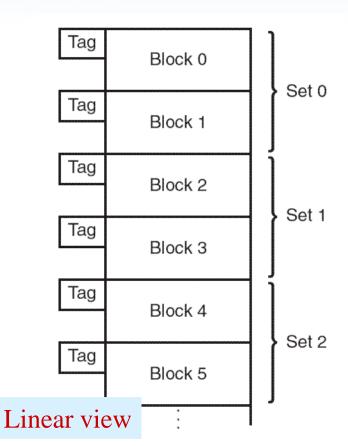

- In set associative cache mapping, a memory reference is divided into three fields: tag, set, and offset.
- As with direct-mapped cache, the offset field chooses the word within the cache block, and the tag field uniquely identifies the memory address.
- The set field determines the set to which the memory block maps.

- EXAMPLE 6.5 Suppose we are using 2-way set associative mapping with a word-addressable main memory of 2<sup>14</sup> words and a cache with 16 blocks, where each block contains 8 words.
  - Cache has a total of 16 blocks, and each set has 2 blocks,
     then there are 8 sets in cache.
  - Thus, the set field is 3 bits, the offset field is 3 bits, and the tag field is 8 bits.

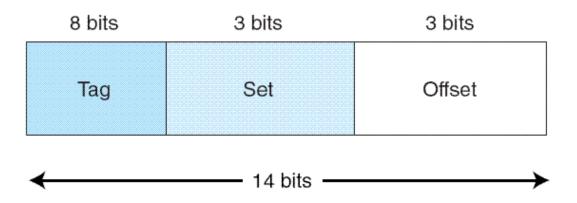

- With fully associative and set associative cache, a replacement policy is invoked when it becomes necessary to evict a block from cache.
- An optimal replacement policy would be able to look into the future to see which blocks won't be needed for the longest period of time.
- Although it is impossible to implement an optimal replacement algorithm, it is instructive to use it as a benchmark for assessing the efficiency of any other scheme we come up with.

- The replacement policy that we choose depends upon the locality that we are trying to optimize-usually, we are interested in temporal locality.
- A least recently used (LRU) algorithm keeps track of the last time that a block was assessed and evicts the block that has been unused for the longest period of time.
- The disadvantage of this approach is its complexity:
   LRU has to maintain an access history for each block, which ultimately slows down the cache.

- First-in, first-out (FIFO) is a popular cache replacement policy.
- In FIFO, the block that has been in the cache the longest, regardless of when it was last used.
- A random replacement policy does what its name implies: It picks a block at random and replaces it with a new block.
- Random replacement can certainly evict a block that will be needed often or needed soon, but it never thrashes.

- The performance of hierarchical memory is measured by its effective access time (EAT).
- EAT is a weighted average that takes into account the hit ratio and relative access times of successive levels of memory.
- The EAT for a two-level memory is given by:

$$EAT = H \times Access_C + (1-H) \times Access_{MM}.$$

where H is the cache hit rate and  $Access_C$  and  $Access_{MM}$  are the access times for cache and main memory, respectively.

- For example, consider a system with a main memory access time of 200ns supported by a cache having a 10ns access time and a hit rate of 99%.
- Suppose access to cache and main memory occurs concurrently. (The accesses overlap.)
- The EAT is:

$$0.99(10ns) + 0.01(200ns) = 9.9ns + 2ns = 11ns.$$

- For example, consider a system with a main memory access time of 200ns supported by a cache having a 10ns access time and a hit rate of 99%.
- If the accesses do not overlap, the EAT is:

$$0.99(10ns) + 0.01(10ns + 200ns)$$
  
=  $9.9ns + 2.01ns = 12ns$ .

 This equation for determining the effective access time can be extended to any number of memory levels, as we will see in later sections.

- Caching is depends upon programs exhibiting good locality.
  - Some object-oriented programs have poor locality owing to their complex, dynamic structures.
  - Arrays stored in column-major rather than row-major order can be problematic for certain cache organizations.
- With poor locality, caching can actually cause performance degradation rather than performance improvement.

- Cache replacement policies must take into account dirty blocks, those blocks that have been updated while they were in the cache.
- Dirty blocks must be written back to memory. A
  write policy determines how this will be done.
- There are two types of write policies, write through and write back.
- Write through updates cache and main memory simultaneously on every write.

- Write back (also called copyback) updates memory only when the block is selected for replacement.
- The disadvantage of write through is that memory must be updated with each cache write, which slows down the access time on updates. This slowdown is usually negligible, because the majority of accesses tend to be reads, not writes.
- The advantage of write back is that memory traffic is minimized, but its disadvantage is that memory does not always agree with the value in cache, causing problems in systems with many concurrent users.

- The cache we have been discussing is called a unified or integrated cache where both instructions and data are cached.
- Many modern systems employ separate caches for data and instructions.
  - This is called a Harvard cache.
- The separation of data from instructions provides better locality, at the cost of greater complexity.
  - Simply making the cache larger provides about the same performance improvement without the complexity.

- Cache performance can also be improved by adding a small associative cache to hold blocks that have been evicted recently.
  - This is called a *victim cache*.
- A trace cache is a variant of an instruction cache that holds decoded instructions for program branches, giving the illusion that noncontiguous instructions are really contiguous.

- Most of today's small systems employ multilevel cache hierarchies.
- The levels of cache form their own small memory hierarchy.
- Level1 cache (8KB to 64KB) is situated on the processor itself.
  - Access time is typically about 4ns.
- Level 2 cache (64KB to 2MB) may be on the motherboard, or on an expansion card.
  - Access time is usually around 15 20ns.

- In systems that employ three levels of cache, the Level 2 cache is placed on the same die as the CPU (reducing access time to about 10ns)
- Accordingly, the Level 3 cache (2MB to 256MB) refers to cache that is situated between the processor and main memory.
- Once the number of cache levels is determined, the next thing to consider is whether data (or instructions) can exist in more than one cache level.


- If the cache system used an inclusive cache, the same data may be present at multiple levels of cache.
- Strictly inclusive caches guarantee that all data in a smaller cache also exists at the next higher level.
- Exclusive caches permit only one copy of the data.
- The tradeoffs in choosing one over the other involve weighing the variables of access time, memory size, and circuit complexity.

- Cache memory enhances performance by providing faster memory access speed.
- Virtual memory enhances performance by providing greater memory capacity, without the expense of adding main memory.
- Instead, a portion of a disk drive serves as an extension of main memory.
- If a system uses paging, virtual memory partitions main memory into individually managed page frames, that are written (or paged) to disk when they are not immediately needed.

- A physical address is the actual memory address of physical memory.
- Programs create virtual addresses that are mapped to physical addresses by the memory manager.
- Page faults occur when a logical address requires that a page be brought in from disk.
- Memory fragmentation occurs when the paging process results in the creation of small, unusable clusters of memory addresses.

- Main memory and virtual memory are divided into equal sized pages.
- The entire address space required by a process need not be in memory at once. Some parts can be on disk, while others are in main memory.
- Further, the pages allocated to a process do not need to be stored contiguously-- either on disk or in memory.
- In this way, only the needed pages are in memory at any time, the unnecessary pages are in slower disk storage.


- Information concerning the location of each page, whether on disk or in memory, is maintained in a data structure called a page table (shown below).
- There is one page table for each active process.

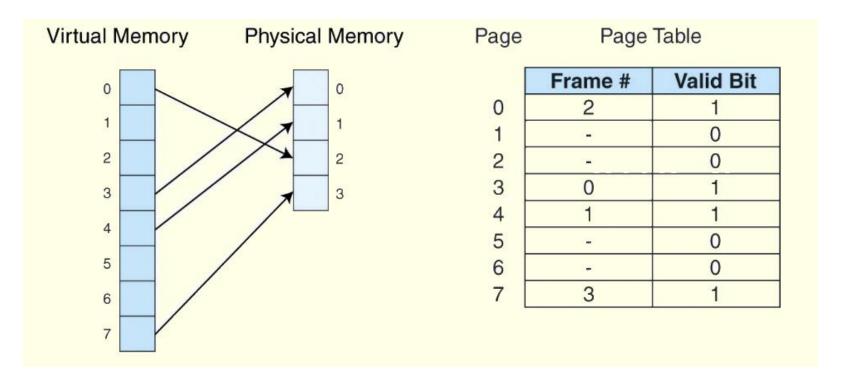

- When a process generates a virtual address, the operating system translates it into a physical memory address.
- To accomplish this, the virtual address is divided into two fields: A page field, and an offset field.
- The page field determines the page location of the address, and the offset indicates the location of the address within the page.
- The logical page number is translated into a physical page frame through a lookup in the page table.

- If the valid bit is zero in the page table entry for the logical address, this means that the page is not in memory and must be fetched from disk.
  - This is a page fault.
  - If necessary, a page is evicted from memory and is replaced by the page retrieved from disk, and the valid bit is set to 1.
- If the valid bit is 1, the virtual page number is replaced by the physical frame number.
- The data is then accessed by adding the offset to the physical frame number.

- As an example, suppose a system has a virtual address space of 8K and a physical address space of 4K, and the system uses byte addressing, Assume also that page's size is 1k bytes each.
  - We have  $2^{13}/2^{10} = 2^3$  virtual pages.
- A virtual address has 13 bits ( $8K = 2^{13}$ ) with 3 bits for the page field and 10 for the offset, because the page size is 1024.
- A physical memory address requires 12 bits, the first two bits for the page frame and the trailing 10 bits the offset.

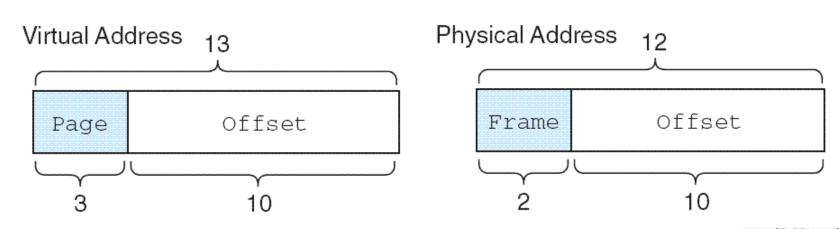

- Suppose we have the page table shown below.
- What happens when CPU generates address  $5459_{10}$  =  $101010101011_2$  =  $1553_{16}$ ?


Page	lahi	$\circ$
Iayo	Iau	

Page	Frame	Valid Bit
0		0
1	3	1
2	0	1
3	-	0
4	-	0
5	1	1
6	2	1
7	_	0

#### Addresses

Pag	je	Ва	se	10	1	Зая	se 16
0	:	0		1023	0		3FF
1	:	1024		2047	400		7ff
2	:	2048		3071	800		BFF
3	:	3072		4095	C00		FFF
4	:	4096		5119	1000		13FF
5	:	5120		6143	1400		17ff
6	:	6144		7167	1800		1BFF
7	:	7168		8191	1000		1FFF

• What happens when CPU generates address  $5459_{10}$  =  $101010101011_2$  =  $1553_{16}$ ?

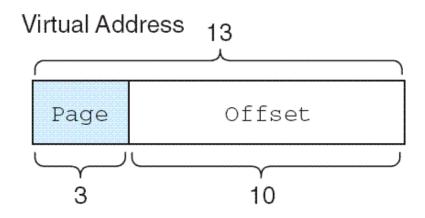

The high-order 3 bits of the virtual address, 101  $(5_{10})$ , provide the page number in the page table.

The address 10101010101011<sub>2</sub> is converted to physical address 010101010011<sub>2</sub> = 1363<sub>16</sub> because the page field 101 is replaced by frame number 01 through a lookup in the page table.

	Page Table			
		Valid		
Page	Frame	Bit		
0	_	0		
1	3	1		
2	0	1		
3	_	0		
4	_	0		
5	1	1		
6	2	1		
7	-	0		

				Add	dresses		
Pag	је	Ва	se	10	1	3as	se 16
0	:	0		1023	0		3FF
1	:	1024		2047	400		7ff
2	:	2048		3071	800	-	BFF
3	:	3072		4095	C00		FFF
4	:	4096		5119	1000		13FF
5	:	5120		6143	1400		17ff
6	:	6144		7167	1800		1BFF
7	:	7168		8191	1000		1FFF

• What happens when the CPU generates address 100000000100<sub>2</sub>?

	Page Table				
Page	Frame	Valid Bit			
0	_	0			
1	3	1			
2	0	1			
3	-	0			
4	-	0			
5	1	1			
6	2	1			
7	_	0			

		Addresses					
Pag	е	Ва	se	10	I	Bas	se 16
0	:	0		1023	0	-	3FF
1	:	1024		2047	400	-	7ff
2	:	2048		3071	800		BFF
3	:	3072		4095	C00		FFF
4	:	4096		5119	1000		13FF
5	:	5120		6143	1400	-	17FF
6	:	6144		7167	1800	-	1BFF
7	:	7168		8191	1C00	-	1FFF

. . .

- We said earlier that effective access time (EAT) takes all levels of memory into consideration.
- Thus, virtual memory is also a factor in the calculation, and we also have to consider page table access time.
- Suppose a main memory access takes 200ns, the page fault rate is 1%, and it takes 10ms to load a page from disk. We have:

EAT = 0.99(200ns + 200ns) 0.01(10ms) = 100, 396ns.

Even if 100% of the pages were in main memory, the effective access time would be:

- Even if we had no page faults, the EAT would be 400ns because memory is always read twice: First to access the page table, and second to load the page from memory.
- Because page tables are read constantly, it makes sense to keep them in a special cache called a translation look-aside buffer (TLB).
- TLBs are a special associative cache that stores the mapping of virtual pages to physical pages.

The next slide shows address lookup steps when a TLB is involved.

#### TLB lookup process


- 1. Extract the page number from the virtual address.
- 2. Extract the offset from the virtual address.

CPU


- 3. Search for the virtual page number in the TLB.
- 4. If the (virtual page #, page frame #) pair is found in the TLB, add the offset to the physical frame number and access the memory location.
- 5. If there is a TLB miss, go to the page table to get the necessary frame number

If the page is in memory, use the corresponding frame number and add the offset to yield the physical address.

6. If the page is not in main memory, generate a page fault and restart the access when the page fault is complete.

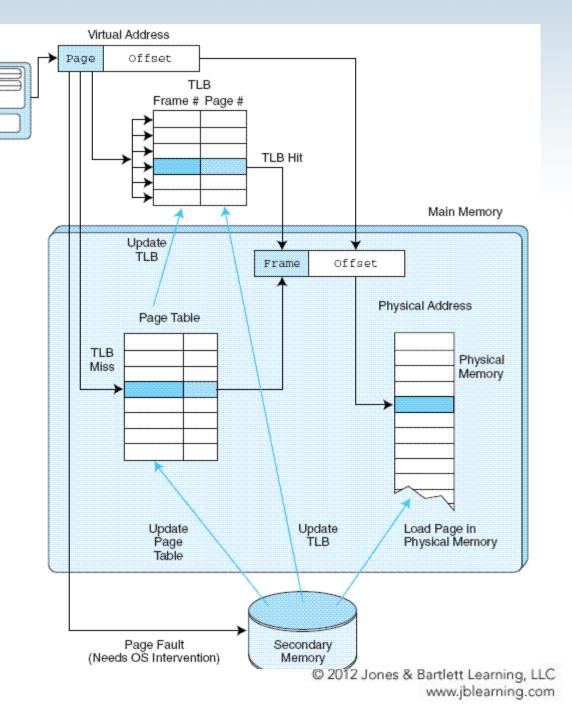

Putting it all together: The TLB, Page Table, and Main Memory

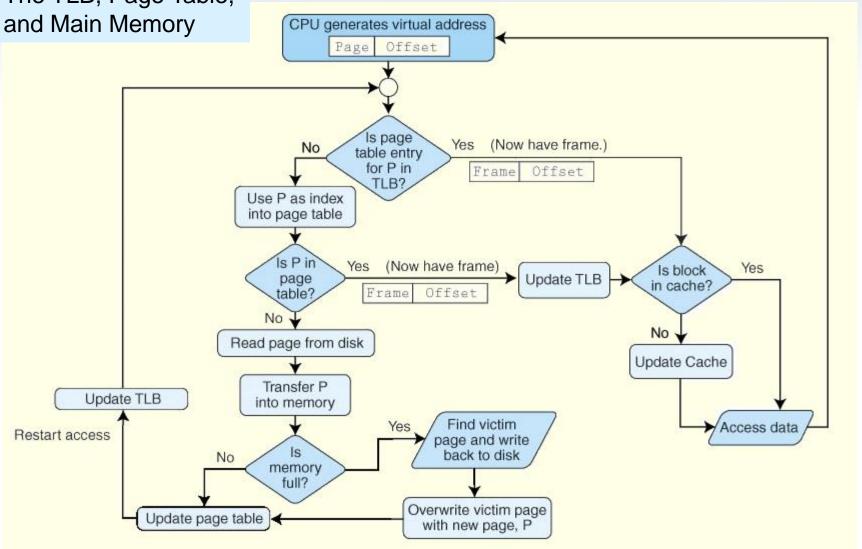


- Another approach to virtual memory is the use of segmentation.
- Instead of dividing memory into equal-sized pages, virtual address space is divided into variable-length segments, often under the control of the programmer.
- A segment is located through its entry in a segment table, which contains the segment's memory location and a bounds limit that indicates its size.
- After a page fault, the operating system searches for a location in memory large enough to hold the segment that is retrieved from disk.

- Both paging and segmentation can cause fragmentation.
- Paging is subject to internal fragmentation because a process may not need the entire range of addresses contained within the page. Thus, there may be many pages containing unused fragments of memory.
- Segmentation is subject to external fragmentation, which occurs when contiguous chunks of memory become broken up as segments are allocated and deallocated over time.

The next slides illustrate internal and external fragmentation.

- Consider a small computer having 32K of memory.
- The 32K memory is divided into 8 page frames of 4K each.
- A schematic of this configuration is shown at the right.
- The numbers at the right are memory frame addresses.

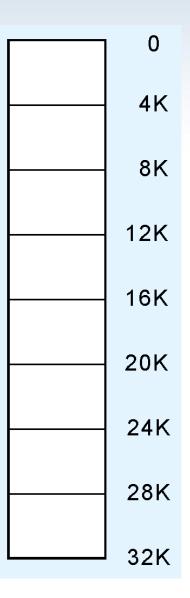

- Suppose there are four processes waiting to be loaded into the system with memory requirements as shown in the table.
- We observe that these processes require 31K of memory.

Process Name	Memory Needed
P1	8K
P2	10K
Р3	9K
P4	4 K

- When the first three processes are loaded, memory looks like this:
- All of the frames are occupied by three of the processes.

P1	8K
P2	10K
Р3	9K
P4	4 K

	ı 0
P1	
P1	4K
	8K
P2	401/
	12K
P2	16K
D2	
<del>P2</del>	20K
P3	2010
	24K
Р3	
	28K
Р3	
	32K

 Despite the fact that there are enough free bytes in memory to load the fourth process, P4 has to wait for one of the other three to terminate, because there are no unallocated frames.

This is an example of internal

fragmentation.

P1	8K
P2	10K
Р3	9K
P4	4 K

	0
P1	
P1	4K
P2	8K
PZ	12K
P2	16K
P2	1010
	20K
Р3	
Р3	24K
	28K
Р3	
	32K

- Suppose that instead of frames, our 32K system uses segmentation.
- The memory segments of two processes is shown in the table at the right.
- The segments can be allocated anywhere in memory.

Process Name	Segment	Memory Needed
P1	S1	8K
	S2	10K
	S3	9K
P2	S1	4 K
	S2	11K

- All of the segments of P1 and one of the segments of P2 are loaded as shown at the right.
- Segment S2 of process P2 requires 11K of memory, and there is only 1K free, so it waits.


P1	S1	8K
	S2	10K
	<b>S</b> 3	9K
P2	S1	4 K
	S2	11K

	0
P1 S1	4K
	8K
P1 S2	12K
	16K
P1 S3	20K
	24K
P2 S1	28K
	32K


 Eventually, Segment 2 of Process 1 is no longer needed, so it is unloaded giving 11K of free memory.

 But Segment 2 of Process 2 cannot be loaded because the free memory is not contiguous.

P1	S1	8K
	S2	10K
	<b>S</b> 3	9K
P2	S1	4 K
	<b>S</b> 2	11K

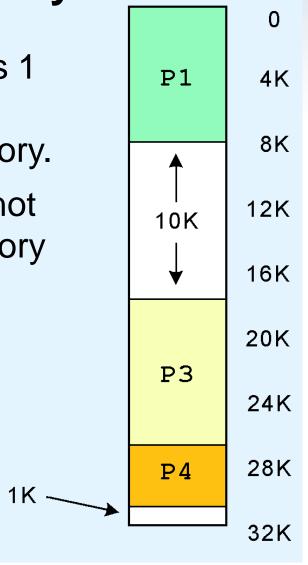

- Over time, the problem gets worse, resulting in small unusable blocks scattered throughout physical memory.
- This is an example of external fragmentation.
- Eventually, this memory is recovered through compaction, and the process starts over.

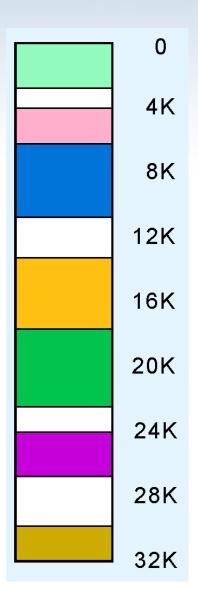


- Large page tables are cumbersome and slow, but with its uniform memory mapping, page operations are fast. Segmentation allows fast access to the segment table, but segment loading is labor-intensive.
- Paging and segmentation can be combined to take advantage of the best features of both by assigning fixed-size pages within variable-sized segments.
- Each segment has a page table. This means that a memory address will have three fields, one for the segment, another for the page, and a third for the offset.

## 6.6 A Real-World Example

- The Pentium architecture supports both paging and segmentation, and they can be used in various combinations including unpaged unsegmented, segmented unpaged, and unsegmented paged.
- The processor supports two levels of cache (L1 and L2), both having a block size of 32 bytes.
- The L1 cache is next to the processor, and the L2 cache sits between the processor and memory.
- The L1 cache is in two parts: and instruction cache (I-cache) and a data cache (D-cache).

The next slide shows this organization schematically.

#### 6.6 A Real-World Example

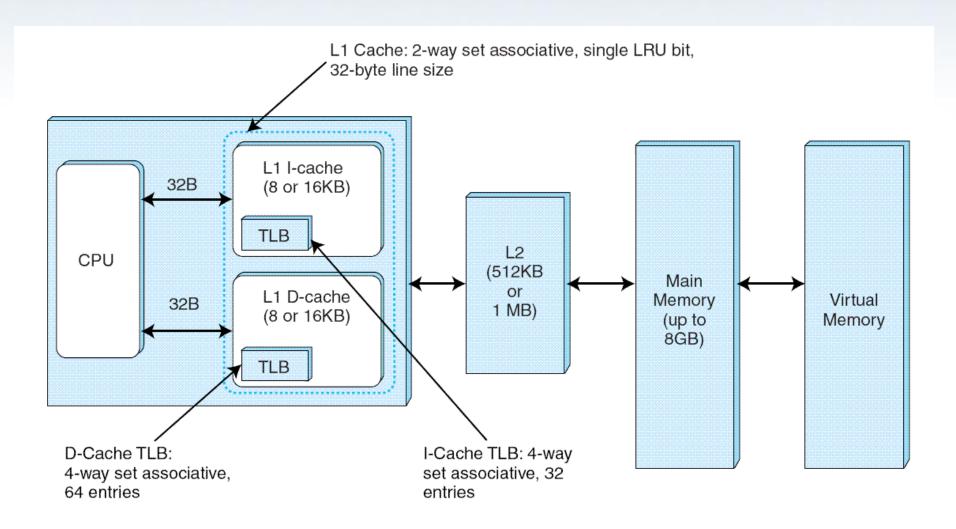

#### **Chapter 6 Conclusion**

- Computer memory is organized in a hierarchy, with the smallest, fastest memory at the top and the largest, slowest memory at the bottom.
- Cache memory gives faster access to main memory, while virtual memory uses disk storage to give the illusion of having a large main memory.
- Cache maps blocks of main memory to blocks of cache memory. Virtual memory maps page frames to virtual pages.
- There are three general types of cache: Direct mapped, fully associative and set associative.

#### **Chapter 6 Conclusion**

- With fully associative and set associative cache, as well as with virtual memory, replacement policies must be established.
- Replacement policies include LRU, FIFO, or LFU.
   These policies must also take into account what to do with dirty blocks.
- All virtual memory must deal with fragmentation, internal for paged memory, external for segmented memory.

End of Chapter 6