


Communication and Organization Processor


Master COP

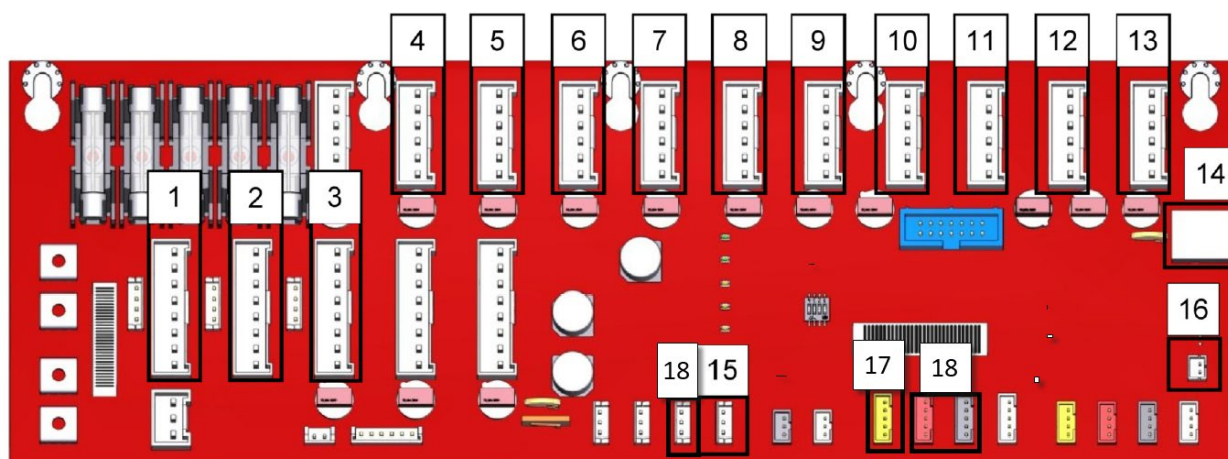

Master COP

Position	Connection Type	Module
1 J21	8-Pin	Cooling Mod 1
2 J23	8-Pin	Cooling Mod 2
3 J26	8-Pin	Pipettor
4 J27	6-Pin	TCR Mixer
5 J29	6-Pin	Sample Bay
6 J31	6-Pin	Reagent Bay
7 J32	6-Pin	MagWash 1
8 J33	6-Pin	MagWash 2
9 J34	6-Pin	Front Cover
10 J35	6-Pin	Media
11 J36	6-Pin	CAN Bus Term or WOTF, or Fusion w/out WOTF
12 J37	6-Pin	Empty or CAN Bus term (if WOTF), or Fusion w/WOTF
13 J38	6-Pin	Slave COP
14 J3	USB	USB -> PC
15 J13	3-Pin	Left Side Fan
16 J4	2-Pin	COP Power
17	5-Pin	Fusion Comm
18	3-Pin, 5-Pin x2	Waste to Drain Signal


Slave COP

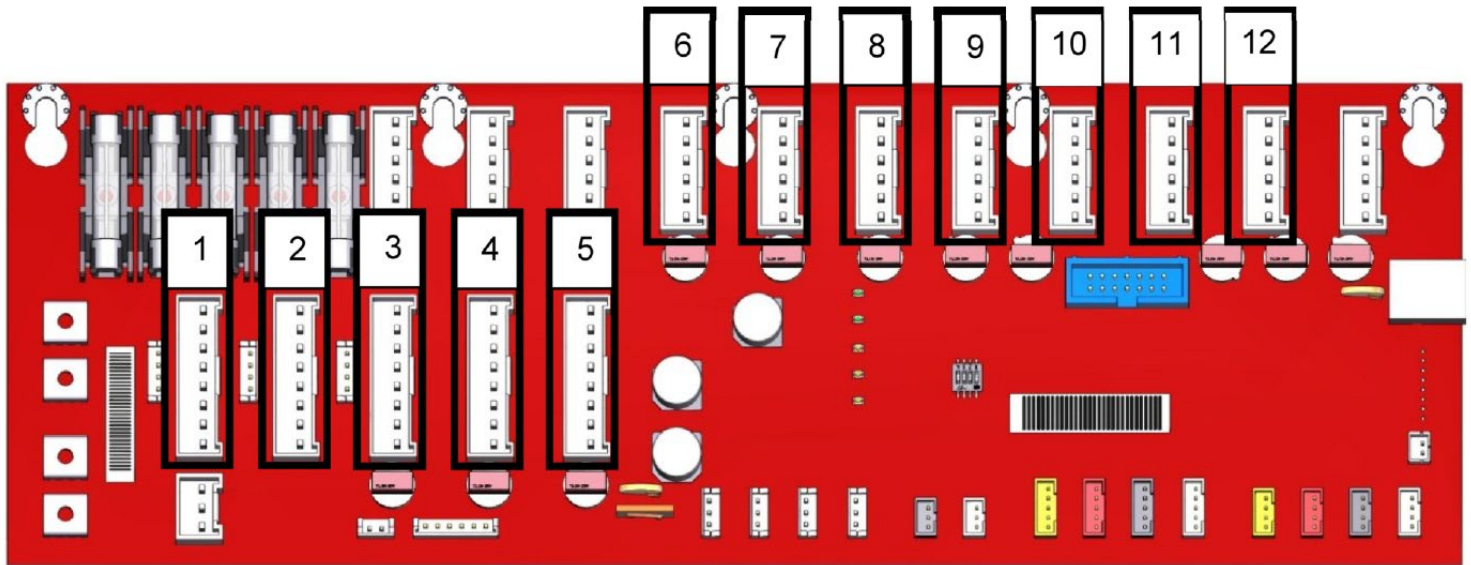

Slave-COP

Position	Connection Type	Module
1 J21	8-Pin	Linear Distributor
2 J23	8-Pin	TR-Incubator
3 J26	8-Pin	HT-Incubator
4 J28	8-Pin	AMP-Incubator
5 J30	8-Pin	Pump Monitor
6 J31	6-Pin	Y Cable for Load Stations
7 J32	6-Pin	Chiller
8 J33	6-Pin	Sample Mix Station
9 J34	6-Pin	Output Queue
10 J35	6-Pin	Luminometer
11 J36	6-Pin	Input Queue
12 J37	6-Pin	Master COP

Fusion CAN

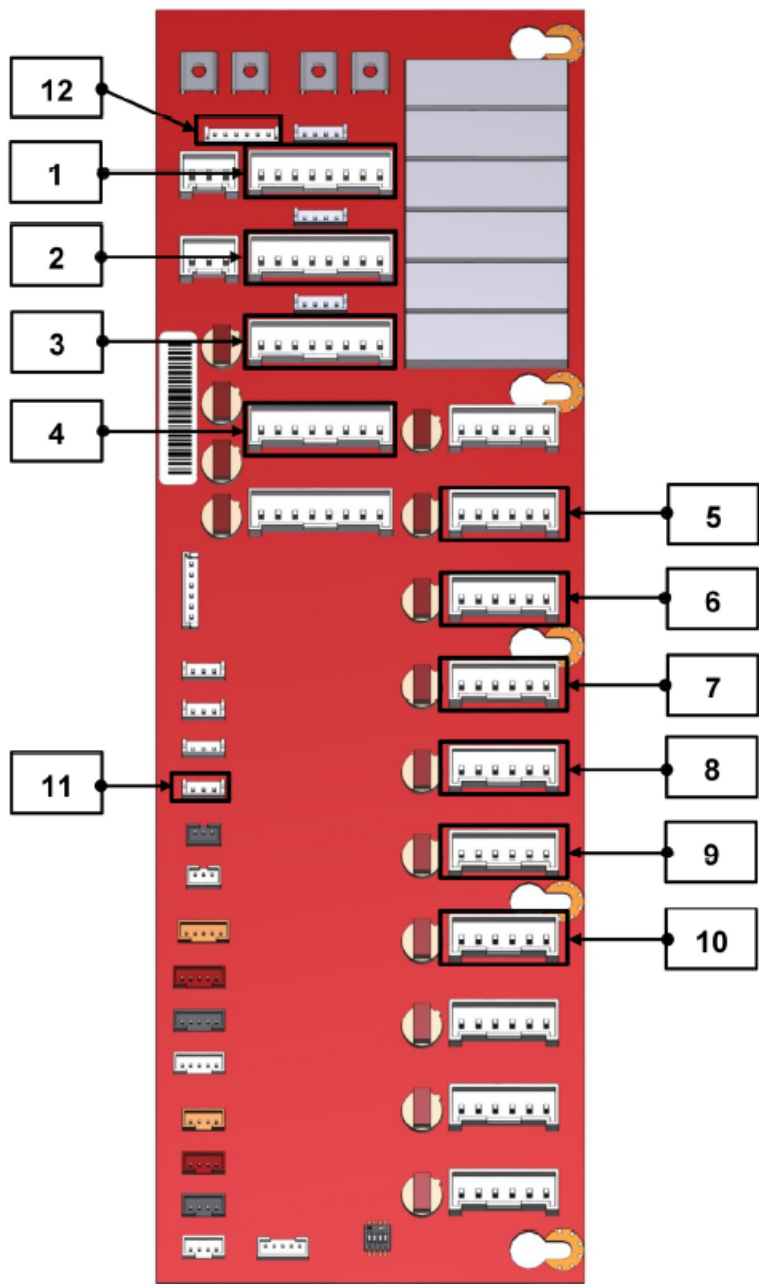

Fusion (Radium) CAN

Fusion PWR/CAN

Position	Connection Type	Module
1 J21	8-Pin	Storage
2 J23	8-Pin	CAN Bridge
3 J26	8-Pin	Pipettor
4 J28	8-Pin	Centrifuge
5 J29	6-Pin	Front Cover
6 J31	6-Pin	Vial Drawer
7 J32	6-Pin	Fluid Drawer
8 J33	6-Pin	Rotary Distributor
9 J34	6-Pin	Thermocycler
10 J35	6-Pin	CAN Termination
11 J13	3-Pin	Chassis Fan
12 J2	6-Pin	Germeric COP