


J1: exact section through the axis (plane y = 0), world mm

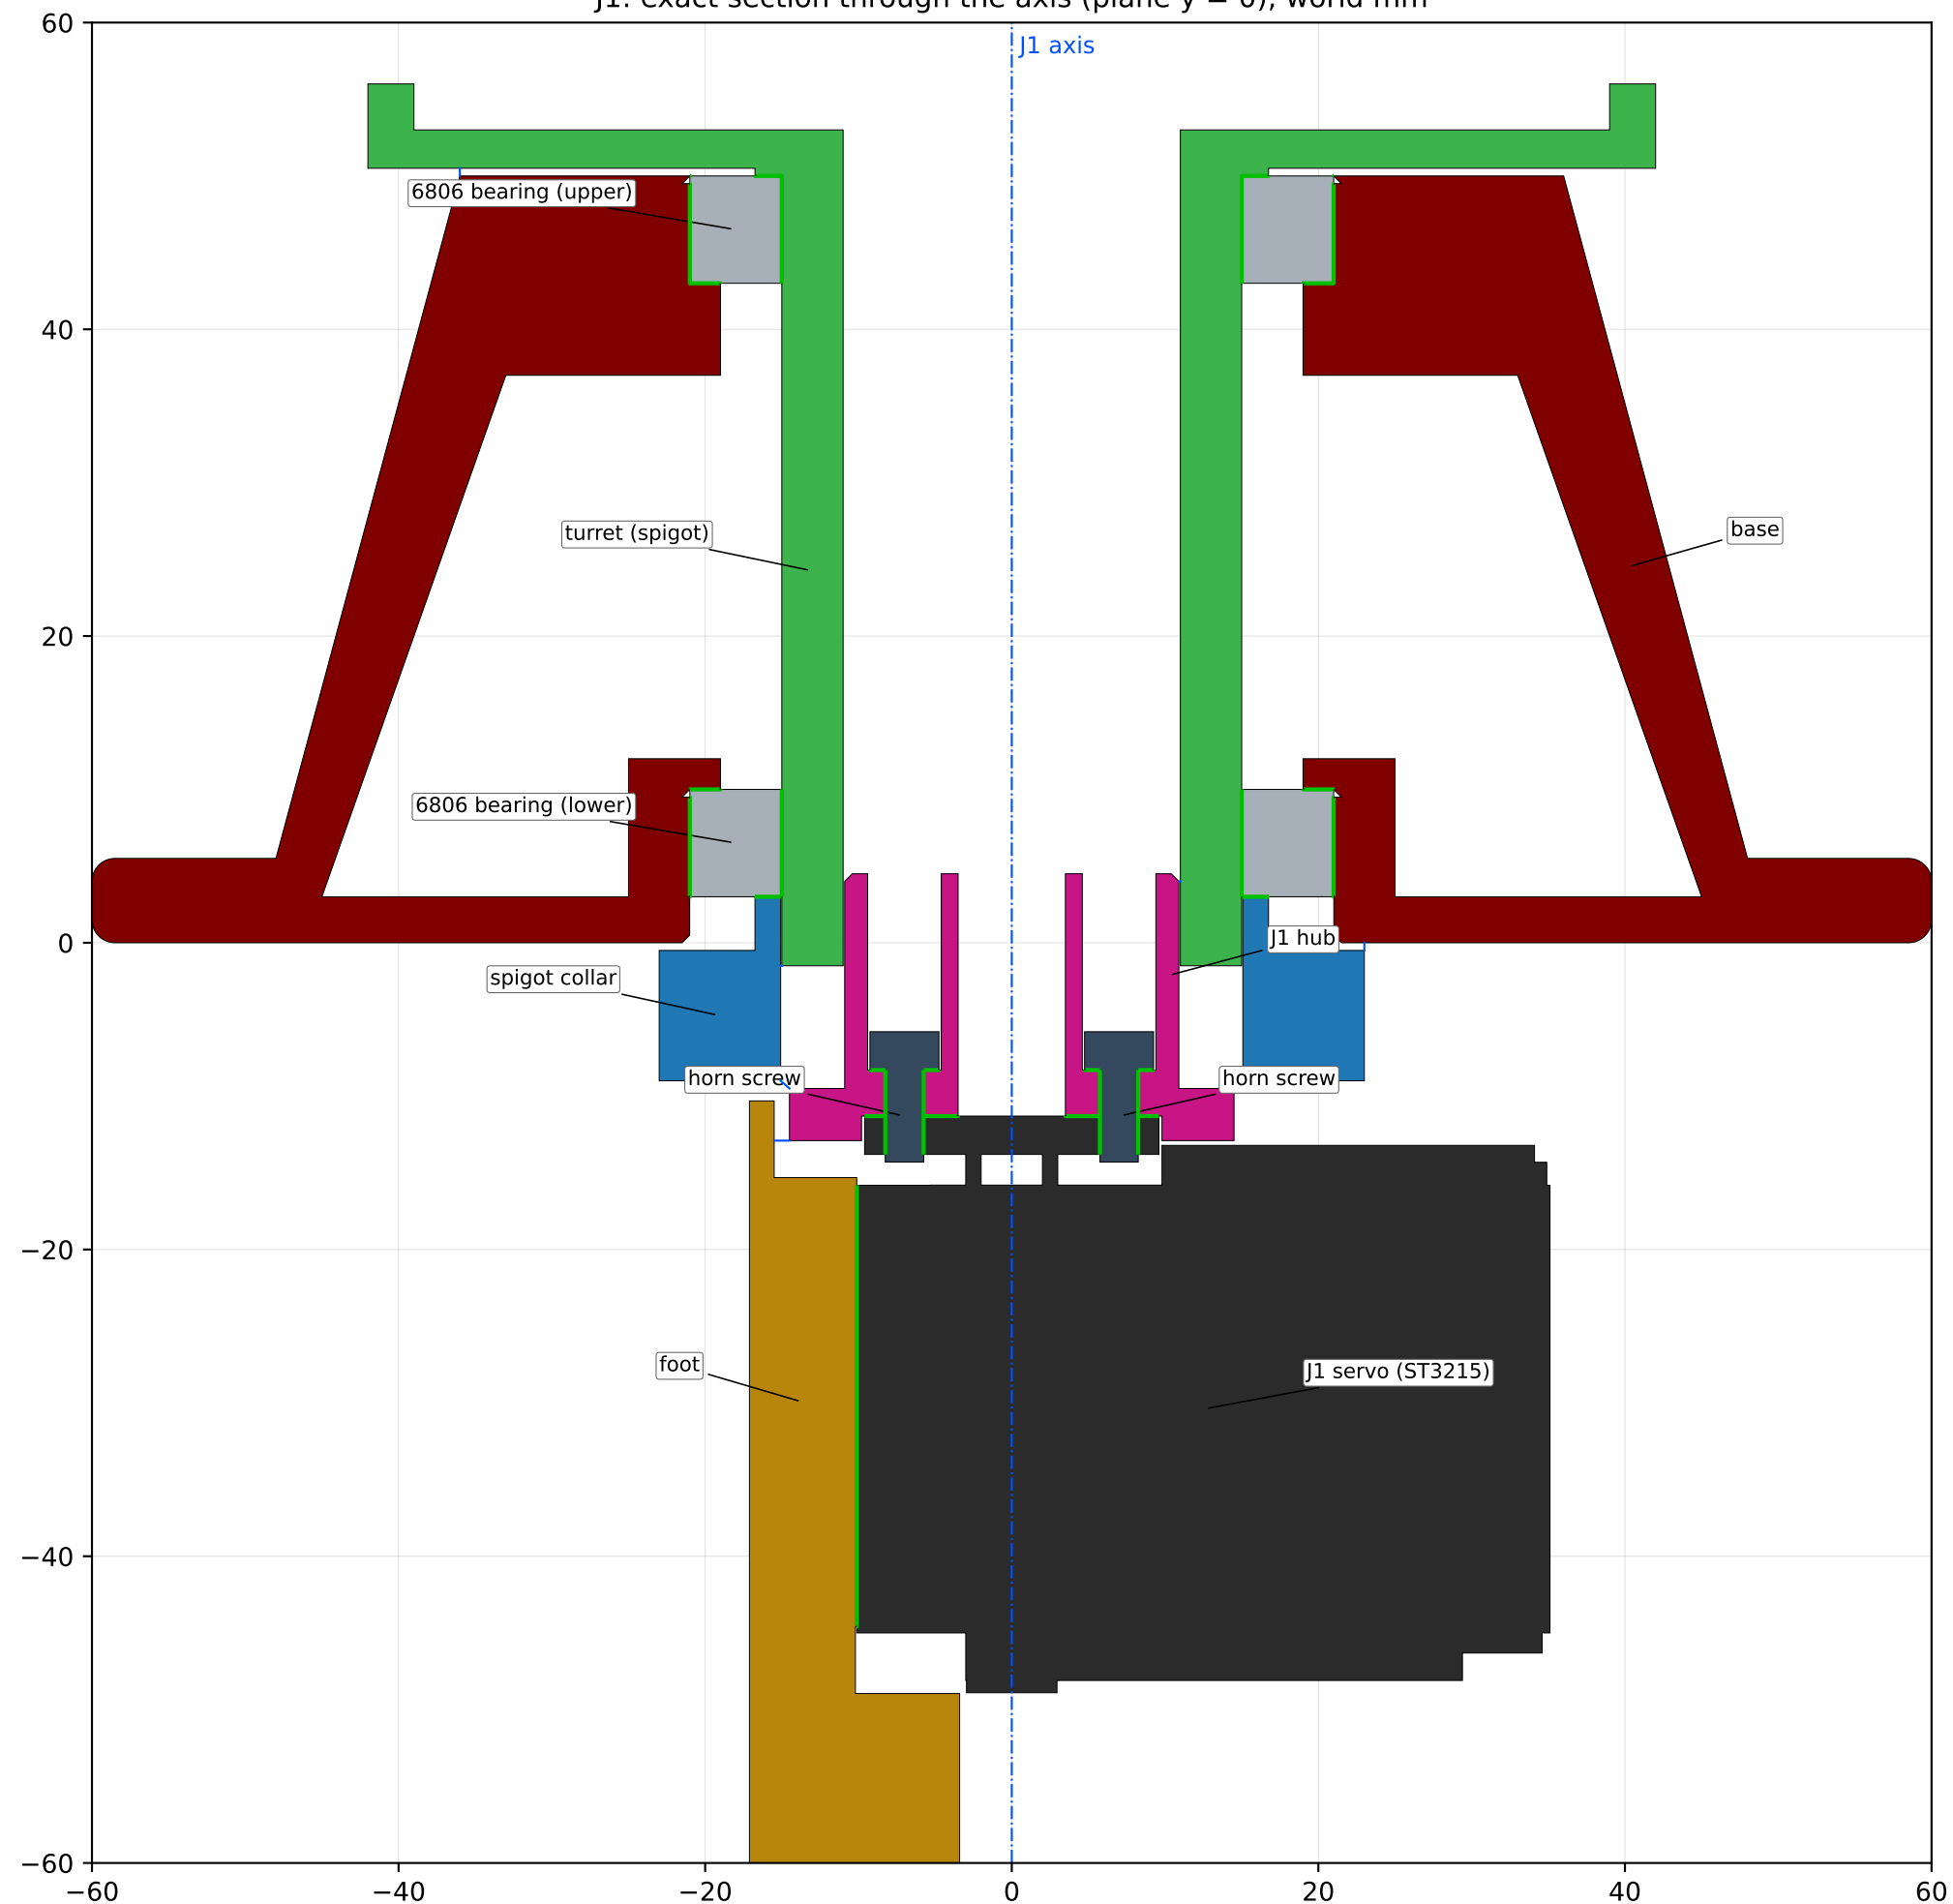

How J1 is connected, driven and aligned

- 1 The servo's horn turns. The servo is held in the foot: pinch walls, lips, end wall, and 4 posts with its own screws.
- 2 4 x M2.5 bolt the J1 HUB's flange to the horn face.
- 3 The hub's plug has a D-flat; it sits in the turret spigot's D-key: that turns the turret (a key, not friction).
- 4 The spigot's end is slit (a collet); the SPIGOT COLLAR round it is pinched by one M3 bolt and clamps it onto the plug: no play.
- 5 ALIGNMENT: the spigot runs in the base's two 6806 bearings, 40 mm apart. They take the arm's weight and tipping moment into base -> 4 columns -> foot plate; the servo only gives torque.
- 6 Servo output axis = bearing axis (measured both ways: 0.000 mm).

green line = contact, blue = measured gap,
orange hatch = designed fit, red = overlap (none)