

#### **Datasheet**

#### **Key Features**

- High-end security controller
- Common Criteria Certified EAL6+ (high) hardware
- Turnkey solution
- Up to 10kB user memory
- PG-USON-10-2 package (3 x 3 mm)
- Standard, Extreme & Extended temperature ranges
- I2C interface with Shielded Connection (encrypted communication)
- Cryptographic support: ECC NIST P256/P384, SHA-256, TRNG, DRNG, RSA® 1024/2048
- OPTIGA™ Trust M1 Software Framework on Github (<a href="https://github.com/Infineon/optiga-trust-m">https://github.com/Infineon/optiga-trust-m</a>)
- Crypto ToolBox commands for SHA-256, ECC NIST P256/P384 (sign, verify, key generation, and ECDH(E)),
   RSA® 1024/2048 (sign, verify, key generation, encrypt and decrypt) and key derivation (TLS v1.2 PRF)
- Device Security Monitor
- 4 Monotonic up counters
- Hibernate for zero power consumption
- Lifetime for Industrial Automation and Infrastructure is 20 years and 15 years for other Application Profiles

#### **Benefits**

- · Protection of IP and data
- Protection of business case
- Protection of corporate image
- Safeguarding of quality and safety

#### **Applications**

- Industrial control and automation
- Consumer electronics and Smart Home
- Medical devices

#### **About this document**

#### Scope and purpose

This Datasheet provides information to enable integration of a security device, and includes package, connectivity and technical data.

#### Intended audience

This Datasheet is intended for device integrators and board manufacturers.



#### **Datasheet**





Abou	t this documentt	1
1	Introduction	4
1.1	Broad range of benefits	4
1.2	Enhanced security	4
1.3	Fast and easy integration	4
1.4	Applications	4
1.5	Device Features	4
2	System Block Diagram	7
3	Interface and Schematics	9
3.1	System Integration Schematics	g
3.2	System Integration Schematics with Hibernation support	
4	Description of packages	10
4.1	PG-USON-10-2	
4.2	Production sample marking pattern	11
5	Technical Data	
5.1	I2C Interface Characteristics	
5.1.1	I2C Standard/Fast Mode Interface Characteristics	
5.1.2	I2C Fast Mode Plus Interface Characteristics	15
5.1.3	Electrical Characteristics	16
5.1.4	DC Electrical Characteristics	16
5.1.5	AC Electrical Characteristics	16
5.1.6	Start-Up of I2C Interface	17
5.1.6.	· ·	
5.1.6.	2 Startup for Warm Resets	18
6	Connecting to Host	
6.1	OPTIGA™ Trust M1 Host Software Architecture	
6.2	Release Package Folder Structure	
6.3	Porting Notes	
6.4	Communication with OPTIGA™ Trust M1	
6.5	Reference code on XMC4500 for communicating with OPTIGA™ Trust M1	
7	OPTIGA™ Trust M1 External Interface	
7.1	Commands	
7.2	Crypto Performance	
8	Security Monitor	
8.1	Security Events	
8.2	Security Policy	
9	RoHS Compliance	30
10	Appendix A - Infineon I2C Protocol Registry Map	
10.1	Infineon I2C Protocol Variations	33
11	Appendix B - OPTIGA™ Trust M1 Command/Response I2C Sample Logs	35
11.1	Sequence of commands to read Coprocessor UID from OPTIGA™ Trust M1	
11.1.1		
11.1.2	1 11	
11.1.3	Read Coprocessor UID	36
12	Appendix C - Power Management	37
12.1	Hibernation	
12.2	Low Power Sleep Mode	37

## Datasheet



## **About this document**

Revision history	38
------------------	----

3

#### **Datasheet**

#### **About this document**



#### 1 Introduction

As embedded systems (e.g. IoT devices) are increasingly gaining the attention of attackers, Infineon offers the OPTIGA™ Trust M1 as a turnkey security solution for industrial automation systems, smart homes, consumer devices and medical devices. This high-end security controller comes with full system integration support for easy and cost-effective deployment of high-end security for your assets.

## 1.1 Broad range of benefits

Integrated into your device, the OPTIGA™ Trust M1 supports protection of your brand and business case, differentiates your product from your competitors, and adds value to your product, making it stronger against cyberattacks.

## 1.2 Enhanced security

The OPTIGA™ Trust M1 is based on an advanced security controller with built-in tamper proof NVM for secure storage and Symmetric/Asymmetric crypto engines to support ECC 256/384, RSA® 1024/2048 and SHA-256. This new security technology greatly enhances your overall system security.

## 1.3 Fast and easy integration

The turnkey setup – with full system integration and all key/certificate material preprogrammed – reduces your efforts for design, integration and deployment to a minimum. As a turnkey solution, the OPTIGA™ Trust M1 comes with preprogrammed OS/Application code locked and with host-side modules to integrate with host micro controller software. The temperature range of −40°C to +105°C combined with a standardized I2C interface and the small PG-USON-10-2 footprint will facilitate onboarding in your existing ecosystem. Almost 30 years in a market-leading position with nearly 20 billion security controllers shipped worldwide are the results of Infineon's strong expertise and its commitment to make security a success factor for you.

## 1.4 Applications

The OPTIGA™ Trust M1 covers a broad range of use cases necessary for many types of applications that include the following:

- a) Network node protection using Mutual Authentication such as TLS or DTLS
- b) Protect the Authenticity, Integrity and Confidentiality of your product, data and IP
- c) Secure Communication
- d) Datastore Protection
- e) Lifecycle Management
- f) Platform Integrity Protection
- g) Secure Updates

#### 1.5 Device Features

The OPTIGA™ Trust M1 comes with up to 10kB user memory that can be used to store X.509 certificates and data. OPTIGA™ Trust M1 is based on Common Criteria (CC) Certified EAL6+ (high) hardware enabling it to prevent physical attacks on the device itself and providing high assurance that the keys or arbitrary data stored cannot be accessed by an unauthorized entity. The CC certificate can be found at <a href="www.bsi.bund.de">www.bsi.bund.de</a> by searching for BSI-DSZ-CC-0961-V2-2018 (Hardware Identifier IFX\_CCI\_00000Bh). OPTIGA™ Trust M1 supports a highspeed I2C communication interface of up to 1MHz (FM+).

#### **Datasheet**



## **About this document**

Table 1 Products

Туре	Description	Temperature range	Package
OPTIGA™ Trust M1	Embedded security solution	−25°C to +105°C Extreme	PG-USON-10-2
SLS 32AIA010MC	for connected devices	Temperature Range (XTR)	
OPTIGA™ Trust M1	Embedded security solution	-40°C to +105°C Extended	PG-USON-10-2
SLS 32AIA010MH	for connected devices	Temperature Range (ETR)	
OPTIGA™ Trust M1	Embedded security solution	−25°C to +85°C Standard	PG-USON-10-2
SLS 32AIA010MS	for connected devices	Temperature Range (STR)	
Evaluation Kit	Includes a host micro controller connected to the OPTIGA™ Trust M1 as well as USB/Ethernet adapter to connect to the outside world, enabling you to evaluate the OPTIGA™ Trust M1 features and start the Design-In activities.		Board

Infineon and its distribution partners offer a wide range of customization options (e.g. X.509 certificate generation and key provisioning) for the security chip.

Table 2 Abbreviations

Abbreviation	Definition			
AES	Advanced Encryption Standard			
API	Application Programming Interface			
CA	Certification Authority			
СС	Common Criteria			
DRNG	Deterministic Random Number Generator			
DTLS	Datagram Transport Layer Security			
EAL	Evaluation Assurance Level			
ECC	Elliptic Curve Cryptography			
ECDH	Elliptic Curve Diffie Hellman			
ECDSA	Elliptic Curve Digital Signature Algorithm			
ETR	Extended Temperature Range			
I2C	Inter-Integrated Circuit			
IETF	Internet Engineering Task Force			
IFX	Infineon			
IOT	Internet of Things			
IP	Intellectual Property			
NIST	National Institute of Standards and Technology			
OS	Operating System			
PAL	Platform Abstraction Layer			
PKI	Public Key Infrastructure			
RFC	Request For Comments			
SHA	Secure Hash Algorithm			

## Datasheet



## **About this document**

Abbreviation	Definition			
SKU	Stock Keeping Unit			
STR	Standard Temperature Range			
TLS	Transport Layer Security			
TRNG	True Random Number Generator			
USB	Universal Synchronous Bus			
XTR	Extreme Temperature Range			



#### About this document

## 2 System Block Diagram

The following figure depicts the system block diagram for OPTIGA™ Trust M1.

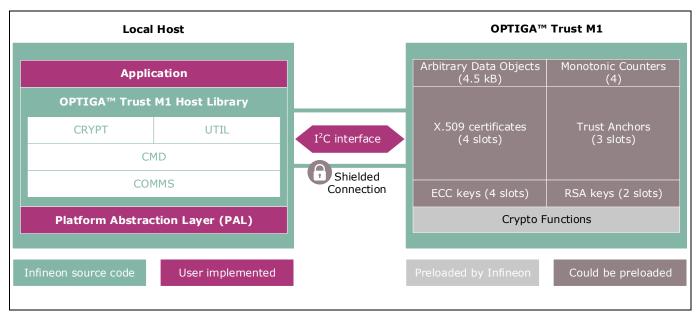


Figure 1 System Block Diagram

The System Block Diagram is explained below for each layer.

#### 1. Local Host

- Local Host Application This is the target application which utilizes OPTIGA™ Trust M1 for its security needs
- OPTIGA™ Trust M1 Host Library
  - CRYPT Provides APIs to perform cryptographic functionalities. Any TLS stack can be integrated on Local Host as part of 3<sup>rd</sup> party Crypto Library to offload crypto operations to OPTIGA™ Trust M1.
  - UTIL Provides APIs such as read/write, protected update of data objects and open/close application (e.g. Hibernate)
  - CMD Provides APIs to send and receive commands (Section 7) to and from OPTIGA™
     Trust M1
  - COMMS Provides wrapper APIs for communication (optional encrypted communication using Shielded Connection) with OPTIGA<sup>TM</sup> Trust M1 which internally uses Infineon I2C Protocol (IFX I2C)
- PAL A layer that abstracts platform specific drivers (e.g. I2C, Timer, GPIO, platform crypto library etc.)

#### 2. OPTIGA™ Trust M1

- Arbitrary Data Objects The target application can store up to 4.5kB (~4600 bytes) of data into OPTIGA™ Trust M1. The data could be additional Trust Anchors, certificates and shared secret.
- Monotonic Counters Provides 4 monotonic counting data objects (up counters). These can be used as general purpose counter or as linked counter to other objects.
  - For more information, please refer to Solution Reference Manual document available as part of the package.

#### **Datasheet**



#### **About this document**

- o X.509 Up to 4 X.509 based Certificates can be stored
- Keys Up to 4 ECC and 2 RSA based keys can be stored
- Trust Anchors 3 slots, for Mutual Authentication (TLS/DTLS) and Firmware Updates can be stored
- Crypto Functions OPTIGA™ Trust M1 provides cryptographic functions that can be invoked via local host

Note:

Unique ECC/RSA private keys and X.509 Certificates – During production at Infineon fab, unique asymmetric keys (private and public) are generated. The public key is signed by customer specific CA and the resulting X.509 certificate issued is securely stored in the OPTIGA™ Trust M1. Special measures are taken to prevent the leakage and modification of private key material at the Common Criteria Certified production site



#### **About this document**

### 3 Interface and Schematics

This section explains the schematics of the product and gives some recommendations as to how the controller should be externally connected.

## 3.1 System Integration Schematics

The following figure illustrates how to integrate OPTIGA™ Trust M1 with your local host.

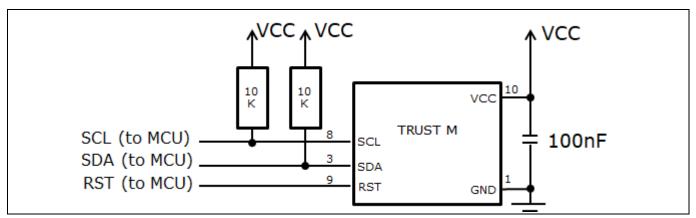


Figure 2 System Integration Schematic Diagram

Note: Value of the pullup resistors depend on the target application circuit and the targeted I2C frequency.

## 3.2 System Integration Schematics with Hibernation support

The following figure illustrates how to integrate OPTIGA™ Trust M1 with hibernation, with your local host.

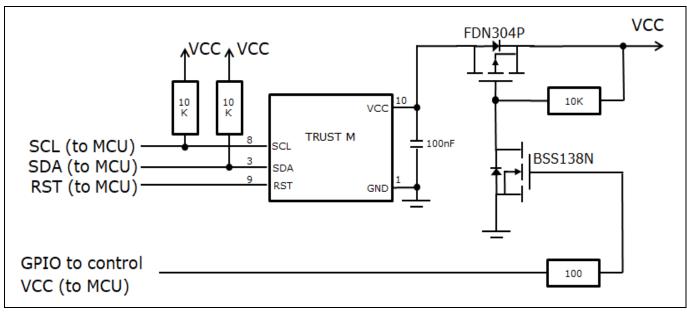


Figure 3 System Integration Schematic Diagram with Hibernation

Note: Value of the pullup resistors depend on the target application circuit and the targeted I2C frequency.



## 4 Description of packages

This chapter provides information on the package types and how the interfaces of each product are assigned to the package pins. For further information on compliance of the packages with European Parliament Directives, see "RoHS Compliance" on Page 30.

For details and recommendations regarding the assembly of packages on PCBs, please see the following: <a href="http://www.infineon.com/cms/en/product/technology/packages/">http://www.infineon.com/cms/en/product/technology/packages/</a>

#### 4.1 PG-USON-10-2

The package dimensions (in mm) of the controller in PG-USON-10-2 packages are given below.

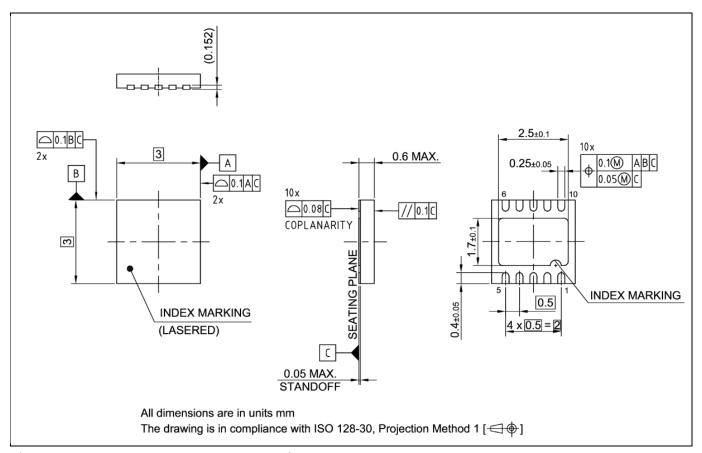


Figure 4 PG-USON-10-2 Package Outline

The following figure shows the footprint of the PG-USON-10-2 package:



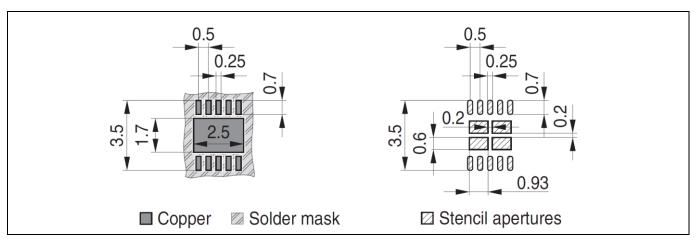


Figure 5 PG-USON-10-2 Package Footprint

The following figure shows the PG-USON-10-2 in top view:

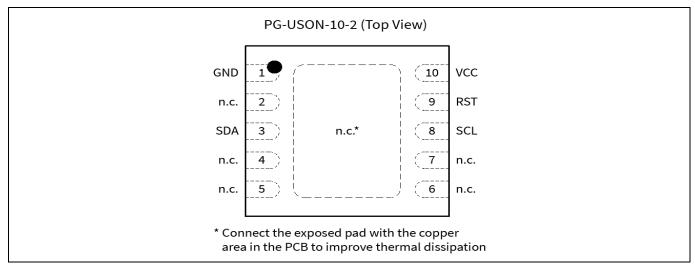


Figure 6 PG-USON-10-2 top view

## 4.2 Production sample marking pattern

The following figure describes the productive sample marking pattern on PG-USON-10-2.



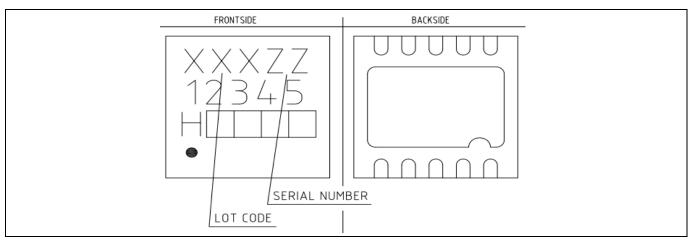


Figure 7 PG-USON-10-2 sample marking pattern

The black dot indicates pin 01 for the chip. The following Table 3 describes the sample marking pattern:

Table 3 Marking table for PG-USON-10-2 packages

Indicator	<b>Description</b> Defined and inserted during fabrication				
LOT CODE					
ZZ	Indicates the Certifying Authority Serial Number / SKU#, e.g. "00" would mean "SKU#00"				
H/E	H = "Halogen-free", E = "Engineering samples" This indicator is followed by "YYWW", where YY is the "Year" and WW is the "Work Week" of the production. This is inserted during fabrication. Engineering samples have "E YYWW" and productive samples have "H YYWW"				
12345	Convention: T&#\$@ where:  • The letter "T" indicates the OPTIGA Trust family  • & indicates the product is a Trust M controller  • # indicates the controller is a XTR (X) variant  • \$ specifies the OPTIGA™ Trust M1 release version number  • @ specifies the software version  Example: "TMX10" means 'OPTIGA™ Trust M1', 'XTR variant', 'release version 1', 'software version 0'</td></tr></tbody></table>				

The contacts and their functionality are given in the Table 4 below.

 Table 4
 Contact definitions and functions of PG-USON-10-2 packages

Pin	Туре	Function
01	GND	Supply voltage (Ground)
02	NC	Not connected / Do not connect externally
03	I/O	Serial Data Line (SDA)
04	NC	Not connected / Do not connect externally

## Datasheet



## **About this document**

Pin	Туре	Function
05	NC	Not connected / Do not connect externally
06	NC	Not connected / Do not connect externally
07	NC	Not connected / Do not connect externally
08	I/O	Serial Clock Line (SCL)
09	IN	Active Low Reset (RST)
10	PWR	Supply voltage (V <sub>cc</sub> )



#### 5 Technical Data

This section summarizes the technical data of the product. It provides the operational characteristics as well as the electrical DC and AC characteristics.

#### 5.1 I2C Interface Characteristics

Table 5 I2C Operation Supply and Input Voltages

Parameter	Symbol	Values			Unit	<b>Note or Test Condition</b>	
		Min.	Тур.	Max.			
Supply voltage	$V_{\text{CC\_I2C}}$	1.62	-	5.5	V		
SDA, SCL input voltage	V <sub>IN_I2C</sub>	-0.3	-	$V_{CC_{-12C}} + 0.5 \text{ or}$ 5.5 <sup>1</sup>	V	V <sub>CC_I2C</sub> is in the operational supply range	
		-0.3	-	5.5	V	V <sub>CC_I2C</sub> is switched off	

<sup>1)</sup> Whichever is lower

Note:

## **5.1.1** I2C Standard/Fast Mode Interface Characteristics

For operation of the I2C interface, the electrical characteristics are compliant with the I2C bus specification Rev. 4 for "standard-mode" ( $f_{SCL}$  up to 100 kHz) and "fast-mode" ( $f_{SCL}$  up to 400 kHz), with certain deviations as stated in the table below.

 $T_A$  as given for the operating temperature range of the controller unless otherwise stated.

**Table 6** I2C Standard Mode Interface Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
SCL clock frequency	$f_{SCL}$	0	_	100	kHz	
Input low-level	V <sub>IL</sub>	-0.3	_	0.3 * V <sub>CC_I2C</sub>	V	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC\_12C} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC\_12C} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	-	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	-	-	250	ns	$C_b \le 400 \text{ pF; } V_{CC\_12C} \ge 2.7 \text{ V}$ $C_b \le 200 \text{ pF; } V_{CC\_12C} \le 2.7 \text{ V}$
Capacitive load for each bus line	Сь	-	-	400 200	pF	$V_{CC_{-12C}} \ge 2.7 \text{ V}$ $V_{CC_{-12C}} < 2.7 \text{ V}$

# **(infineon**

#### **About this document**

**Table 7** I2C Fast Mode Interface Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
SCL clock frequency	f <sub>SCL</sub>	0	-	400	kHz	
Input low-level	V <sub>IL</sub>	-0.3	-	0.3 * V <sub>CC_I2C</sub>	V	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC_{\perp 2C}} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC_{\perp 2C}} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	-	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	20 * V <sub>CC_I2C</sub> / 5.5 V <sup>1</sup>	-	250	ns	$C_b \le 400 \text{ pF}; V_{CC\_12C} \ge 2.7 \text{ V}$ $C_b \le 200 \text{ pF}; V_{CC\_12C} \le 2.7 \text{ V}$
Capacitive load for each bus line	C <sub>b</sub>	15 <sup>2</sup>	-	400 200	pF	$V_{CC\_12C} \ge 2.7 \text{ V}$ $V_{CC\_12C} < 2.7 \text{ V}$

<sup>1)</sup> A min. capacitive load is necessary to reach  $t_{\text{OF}}$ 

#### 5.1.2 I2C Fast Mode Plus Interface Characteristics

For operation of the I2C interface, the electrical characteristics are compliant with the  $I^2C$  bus specification Rev. 4 for "fast mode plus" ( $f_{SCL}$  up to 1 MHz), with certain deviations as stated in the table below.

Note:  $T_A$  as given for the operating temperature range of the controller unless otherwise stated.

Table 8 I2C Fast Mode Plus Interface Characteristics

Parameter	Symbol	Values			Unit	<b>Note or Test Condition</b>
		Min.	Тур.	Max.		
SCL clock frequency	$f_{SCL}$	0	_	1000	kHz	
Input low-level	V <sub>IL</sub>	-0.3	_	0.3 * V <sub>CC_I2C</sub>	٧	
Low-level output voltage	V <sub>OL1</sub>	0	-	0.4	V	Sink current 3 mA; $V_{CC\_I2C} \ge 2.7 \text{ V}$ Sink current 2 mA; $V_{CC\_I2C} < 2.7 \text{ V}$
Low-level output current	I <sub>OL</sub>	3 2	-	-	mA	$V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} \ge 2.7 \text{ V}$ $V_{OL} = 0.4 \text{ V}; V_{CC\_I2C} < 2.7 \text{ V}$
Output fall time from V <sub>IHmin</sub> to V <sub>ILmax</sub> (at device pin)	t <sub>OF</sub>	20 * V <sub>CC_I2C</sub> / 5.5 V <sup>1</sup>	-	120	ns	C <sub>b</sub> ≤ 150 pF
Capacitive load for each bus line	Сь	15 <sup>1</sup>	_	150	pF	

<sup>1)</sup> A min. capacitive load is necessary to reach  $t_{\text{OF}}$ 

<sup>2)</sup> A min. capacitive load is necessary to reach  $t_{\text{fmin}}$ 

#### **Datasheet**

# **infineon**

### **About this document**

#### **5.1.3** Electrical Characteristics

Note:

 $T_A$  as given for the operating temperature range of the controller unless otherwise stated. All currents flowing into the controller are considered positive.

#### 5.1.4 DC Electrical Characteristics

T<sub>A</sub> as given for the controller's operating ambient temperature range unless otherwise stated.

All currents flowing into the controller are considered positive.

**Table 9 Electrical Characteristics** 

Parameter	ameter Symbol Values			Unit	<b>Note or Test Condition</b>	
		Min.	Тур.	Max.		
Supply voltage	V <sub>cc</sub>	1.62	_	5.5	V	Overall functional range
	V <sub>CC_I2C</sub>	1.62	_	5.5	V	Supply voltage range for operation of I2C
Supply current <sup>1</sup>	I <sub>CCAVG</sub>	_	20.0	-	mA	While running a typical authentication profile T <sub>A</sub> = 25°C; V <sub>CC</sub> = 5.0 V
Supply current, in sleep mode	I <sub>CCS3</sub>	-	70	100	μΑ	$T_A = 25^{\circ}\text{C}$ ; $V_{\text{CC\_I2C}} = 3.3 \text{ V}$ ; I2C ready for operation (no bus activity), all other inputs at $V_{\text{CC}}$ , no other interface activity
RST input low voltage	V <sub>IL</sub>	-0.3	_	0.2 * V <sub>cc</sub>	V	I <sub>IL</sub> = -50 μA to +20 μA
RST input high voltage	V <sub>IH</sub>	0.7 * V <sub>cc</sub>	_	V <sub>cc</sub> + 0.3	V	$I_{IL} = -50 \mu A \text{ to } +20 \mu A$

<sup>1)</sup> Supply current can be limited from 6mA to 15mA by software commands.

#### 5.1.5 AC Electrical Characteristics

 $T_{\text{\tiny A}}$  as given for the controller's operating ambient temperature range unless otherwise stated.

All currents flowing into the controller are considered positive.

Table 10 AC Characteristics

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
V <sub>cc</sub> rampup time	t <sub>VCCR</sub>	1	-	1000	μs	400 mV to 90% of V <sub>cc</sub> target voltage ramp

The  $V_{CC}$  ramp is depicted in Figure 8. 90% of the target supply voltage must be reached within  $t_{VCCR}$  after it has exceeded 400 mV. Moreover, its variation must be kept within a  $\pm 10\%$  range.



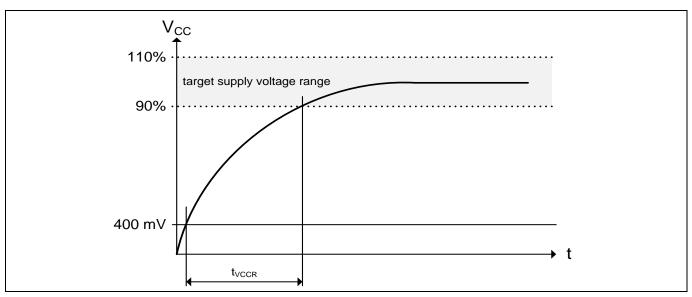


Figure 8 V<sub>cc</sub> Rampup

## 5.1.6 Start-Up of I2C Interface

There are 2 variants possible for performing the startup procedure:

- Startup after power-on
- · Startup for warm resets

### 5.1.6.1 Startup after Power-On

The activation of the I2C interface after power-on needs the following reset procedure.

- VCC is powered up and the state of the SDA and SCL line are set to high level during power-up
- The first transmission may start at the earliest  $t_{\text{STARTUP}}$  after power-up of the device

The following figure shows the startup timing of the I2C interface for this case.

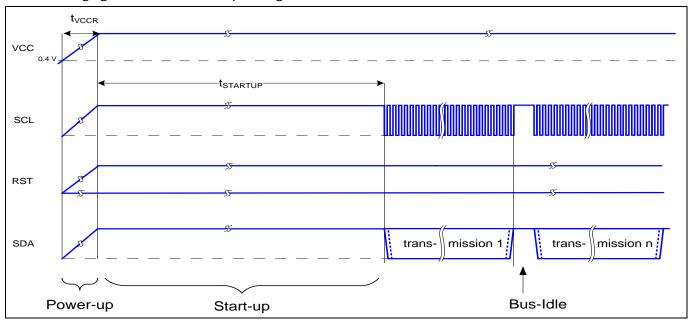


Figure 9 Startup of I2C Interface after Power-On



Table 11 Startup of I2C Interface After Power-On

Parameter	Symbol	Values			Unit	Note or Test Condition
		Min.	Тур.	Max.		
Startup time	t <sub>STARTUP</sub>	15			ms	

### **5.1.6.2** Startup for Warm Resets

When using the reset signal for triggering a warm reset after power-on, the activation of the I2C interface needs the following reset procedure

- VCC remains powered up.
- The terminal stops I2C communication. SDA and SCL lines are set to high level before RST is set to low level.
- After its falling edge, RST has to be kept at low level for at least t<sub>1</sub>. At the latest t<sub>2</sub> after the falling edge of RST, the terminal must set RST to high level.
- ullet The first transmission may start at the earliest  $t_{\text{STARTUP}}$  after the rising edge of RST

The following figure shows the timing for this startup case.

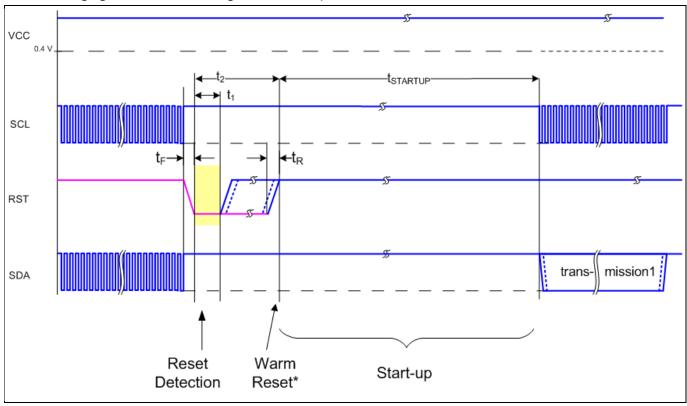


Figure 10 Startup of I2C Interface for Warm Resets

Note: If NVM programming was requested prior to the reset,  $t_{STARTUP}$  will be extended from a typical value of 15 ms to a maximum of 20 ms.

## **Datasheet**



## **About this document**

Table 12 Startup of I2C Interface for Warm Resets<sup>1</sup>

Parameter	Symbol		Values			<b>Note or Test Condition</b>
		Min.	Тур.	Max.		
Startup time	t <sub>STARTUP</sub>	15			ms	
Rise time	t <sub>R</sub>			1	μs	From 10% to 90% of signal amplitude
Fall time	t <sub>F</sub>			1	μs	From 10% to 90% of signal amplitude
Reset detection	t <sub>1</sub>	10			μs	
Reset low		10		2500	μs	

<sup>1)</sup> Reset triggered by software (without power off/on cycle)

## **(infineon**

#### **About this document**

## **6** Connecting to Host

#### **6.1** OPTIGA™ Trust M1 Host Software Architecture

The OPTIGA™ Trust M1 Host Library layers were explained in System Block Diagram Figure 1. In following sections, we will cover how to communicate with OPTIGA™ Trust M1 using I2C.

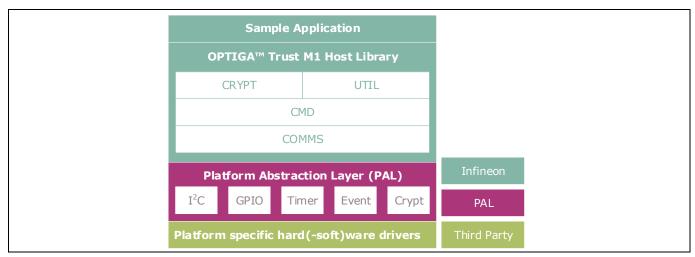


Figure 11 OPTIGA™ Trust M1 Host Software Architecture

## 6.2 Release Package Folder Structure

The following figure shows the release package structure when OPTIGA™ Trust M1 is installed/extracted on PC.

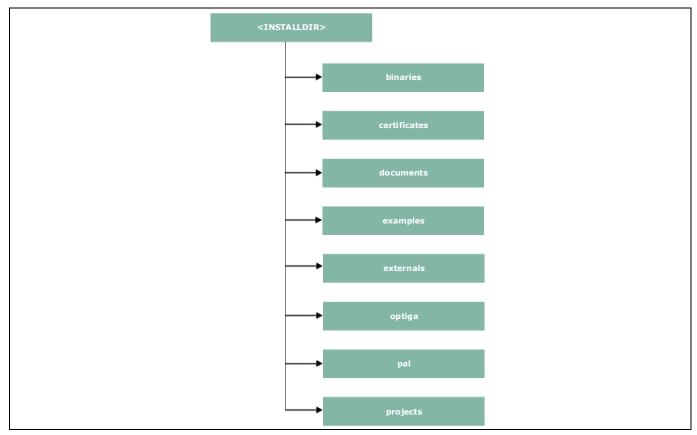


Figure 12 Release Package Folder Structure

#### **Datasheet**



#### **About this document**

#### 1. <INSTALLDIR>

The root directory to which the release contents are installed or extracted. The content of each subdirectory in the installation directory <INSTALLDIR> is explained below.

#### 2. Binaries

This directory contains binaries for OPTIGA™ Trust M1 Host Software.

#### 3. Certificates

This directory contains OPTIGA™ Trust M1 Test and Productive CA certificates.

#### 4. Documents

This directory contains all common OPTIGA™ Trust M1 documentation.

#### 5. Examples

This directory contains the examples code for demonstration of crypt and util APIs.

#### 6. Externals

This directory contains the external source code e.g. mbedTLS or wolfSSL etc.

#### 7. Optiga

This directory contains OPTIGA™ Trust M1 host library source code which is platform agnostic.

#### 8. Pal

This directory contains Platform Abstraction Layer source code which needs to be ported, depending on the platform (e.g. XMC4500)

#### 9. Projects

This directory contains project files for build/compilation (e.g. XMC4500 based on Keil)

Further the following figure elaborates the OPTIGA™ Trust M1 Host Software folder structure.

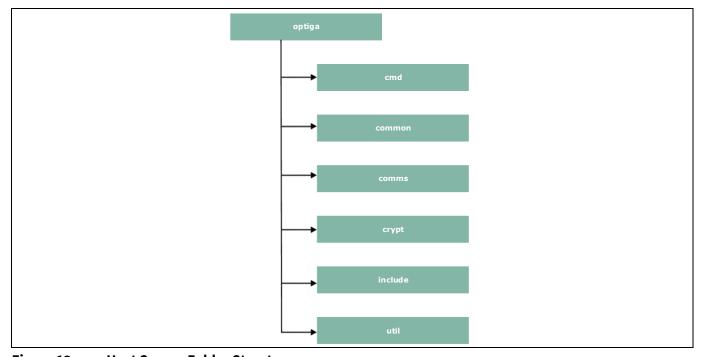


Figure 13 Host Source Folder Structure

- 1. cmd This folder contains sources for all OPTIGA™ Trust M1 commands
- 2. common This folder contains the common functions used across all the modules
- 3. comms This folder contains the driver to communicate with OPTIGA™ Trust M1
- 4. crypt This folder contains sources for cryptographic functionalities

#### **Datasheet**



#### **About this document**

- 5. include This folder contains header files for all OPTIGA™ Trust M1 Host Software
- 6. util This folder contains utility functions e.g. read/write and open/close application

### 6.3 Porting Notes

The implementation of the Platform Abstraction Layer (PAL) need to be updated in order to migrate to a new target platform.

The PAL reference code for the XMC4500 Relax kit is provided as part of package which can be used. The implementation can be found in "</NSTALLDIR>/pal/xmc4500" and the header files are available in "</NSTALLDIR>/optiga/include" with the required APIs used by upper layers. The header files are platform agnostic and would not require any changes. The low level drivers used by PAL for XMC4500 are configured and generated using DAVE™.

#### 6.4 Communication with OPTIGA™ Trust M1

The hardware/platform resource configuration with respect to I2C master and GPIOs (Vdd and Reset) are to be updated in *pal\_ifx\_i2c\_config.c*. These configurations are used by the IFX I2C implementation to communicate with OPTIGA™ Trust M1.

1. Update I2C master platform specific context[e.g. (void\*)&i2c\_master\_0]

```
001
001
             * \brief PAL I2C configuration for OPTIGA
001
            pal i2c t optiga pal i2c context 0 =
002
003
                 /// Pointer to I2C master platform specific context
004
005
                 (void*)&i2c master 0,
006
                 /// Slave address
007
                 0x30,
800
                 /// Upper layer context
009
                 NULL,
010
                 /// Callback event handler
011
                 NULL
012
            };
```

2. Update platform specific context for GPIOs (Vdd and Reset) [e.g. (void\*)&pin\_3\_4]

```
/**
001
002
             * \brief Vdd pin configuration for OPTIGA
003
            */
004
            pal gpio t optiga vdd 0 =
005
006
                 // Platform specific GPIO context for the pin used to toggle Vdd
007
                 (void*) &pin 3 4
008
            };
009
010
011
             * \brief Reset pin configuration for OPTIGA
            */
012
013
            pal_gpio_t optiga_reset_0 =
014
015
                 // Platform specific GPIO context for the pin used to toggle Reset
016
                 (void*) &pin 3 3
017
            };
```

#### **Datasheet**



#### **About this document**

3. Update PAL I2C APIs [pal\_i2c.c] to communicate with OPTIGA™ Trust M1

The pal\_i2c is expected to provide the APIs for I2C driver initialization, de-initialization, read, write and set bitrate kind of operations

- a) pal\_i2c\_init
- b) pal\_i2c\_deinit
- c) pal i2c read
- d) pal\_i2c\_write
- e) pal\_i2c\_set\_bitrate

A few target platforms, the I2C master driver initialization (<code>pal\_i2c\_init</code>) is done during the platform start up. In such an environment, there is no need to implement <code>pal\_i2c\_init</code> and <code>pal\_i2c\_deinit</code> functions. Otherwise, these (<code>pal\_i2c\_init</code> & <code>pal\_i2c\_deinit</code>) functions must be implemented as per the upper layer expectations based on the need. The details of these expectations are available in the Host library API documentation (chm).

The reference implementation of PAL I2C based on XMC4500 Relax kit does not need to have the platform I2C driver initialization explicitly done as part of  $pal\_i2c\_init$  as it is taken care by the DAVE<sup>TM</sup> library initialization. Hence  $pal\_i2c\_init \& pal\_i2c\_deinit$  are not implemented.

In addition to the above specified APIs, the PAL I2C must handle the events from the low level I2C driver and invoke the upper layer handlers registered with PAL I2C context for the respective transaction as shown in the below example.

In above example the I2C driver callback, when transmission is successful invokes the handler to inform the result.

- 4. Update PAL GPIO [pal\_gpio.c] to power on and reset the OPTIGA™ Trust M1
  - a) pal\_gpio\_set\_high
  - b) pal\_gpio\_set\_low
- 5. Update PAL Timer [pal\_os\_timer.c] to enable timer
  - a) pal\_os\_timer\_get\_time\_in\_milliseconds
  - b) pal\_os\_timer\_delay\_in\_milliseconds
- 6. Update Event management for the asynchronous interactions for IFX I2C [pal\_os\_event.c]
  - a) pal\_os\_event\_register\_callback\_oneshot
  - b) pal\_os\_event\_trigger\_registered\_callback

The *pal\_os\_event\_register\_callback\_oneshot* function is expected to register the handler and context provided as part of input parameters and triggers the timer for the requested time. The p\_pal\_os\_event is an event instance created using *pal\_os\_event\_create*.

```
001 void pal_os_event_register_callback_oneshot(
002 pal_os_event_t * p_pal_os_event,
003 register_callback callback,
004 void* callback_args,
005 uint32 t time us)
```



The handler registered must be invoked once the timer has elapsed as shown in pal\_os\_event\_trigger\_registered\_callback. The pal\_os\_event\_trigger\_registered\_callback is to be registered with event timer interrupt to get trigerred when the timer expires. The pal\_os\_event\_0 is the instance in the pal\_os\_event used store the registered callback and context.

```
void pal os event trigger registered callback(void)
002
           {
003
               register callback callback;
004
005
               TIMER ClearEvent (&scheduler timer);
006
               //lint --e{534} suppress "Return value is not required to be checked"
007
               TIMER Stop(&scheduler timer);
008
               TIMER Clear (&scheduler timer);
009
010
               if (pal os event 0.callback registered)
011
               {
012
                   Callback = pal os event 0.callback registered;
013
                    callback ((void*)callback ctx);
014
               }
015
```

## 6.5 Reference code on XMC4500 for communicating with OPTIGA™ Trust M1

```
001
          static volatile uint32 t optiga pal event status;
002
          static void optiga pal i2c event handler (void* upper layer ctx,
003
          uint8 t event);
004
005
          pal i2c t optiga pal i2c context 0 =
006
007
               /// Pointer to I2C master platform specific context
800
               (void*)&i2c master 0,
009
               /// Slave address
010
               0x30,
011
               /// Upper layer context
012
              NULL,
               /// Callback event handler
013
014
              NULL.
015
          };
016
017
          // OPTIGA pal i2c event handler
          static void optiga pal i2c event handler (void* upper layer ctx,
018
                                                       uint8 t event)
019
020
          {
021
               optiga pal event status = event;
022
```



```
023
          /* Function to verify I2C communication with OPTIGA */
024
          pal status t test optiga communication(void)
025
026
              pal status t pal return status;
027
              uint8 t data buffer[10] = \{0x82\};
028
               // set callback handler for pal i2c
029
030
              optiga pal i2c context 0.upper layer event handler =
031
                                      optiga pal i2c event handler;
032
033
              // Send 0x82 to read I2C STATE from optiga
034
              do
035
               {
036
                    optiga pal event status = PAL I2C EVENT BUSY;
037
                    pal return status =
038
                               pal i2c write(&optiga pal i2c context 0,
039
                                              data buffer,
040
                                              1);
041
                   if (PAL STATUS FAILURE == pal return status)
042
043
                     // Pal I2C write failed due to I2C busy is in busy
                      // state or low level driver failures
044
045
                      break:
046
                   }
047
048
              // Wait until writing to optiga is completed
049
                 while (PAL I2C EVENT SUCCESS != optiga pal event status);
050
051
              // Read the I2C STATE from OPTIGA
052
053
              do
054
               {
055
                   optiga pal event status = PAL I2C EVENT BUSY;
056
                   pal return status =
                                 pal i2c read(&optiga pal i2c context 0 ,
057
058
                                               data buffer ,
059
                                               4);
060
                 // Pal I2C read failed due to I2C busy is in busy
                // state or low level driver failures
061
                 if (PAL STATUS FAILURE == pal return status)
062
063
                   {
064
                       break;
065
066
               // Wait until reading from optiga is completed
               } while (PAL I2C EVENT SUCCESS != optiga pal event status);
067
068
069
              return pal return status;
070
          }
071
072
          /* Main Function */
073
          int32 t main(void)
074
075
              DAVE STATUS t status;
076
              pal status t pal return status;
077
078
               // Initialisation of DAVE Apps
```

#### **Datasheet**



## **About this document**

```
079
              status = DAVE Init();
080
              // Stop if DAVE init fails
081
082
              if (DAVE STATUS FAILURE == status)
083
               {
084
                   while (1U)
085
                   { ; }
086
087
              pal_return_status = test_optiga_communication();
088
089
              return (int32_t)pal_return_status;
090
```



#### 7 OPTIGA™ Trust M1 External Interface

#### 7.1 Commands

This section provides short description of the commands exposed by the OPTIGA™ Trust M1 secuirty chip and mapping of these commands w.r.t Use Cases.

Table 13 Command table

Command Name	Description
OpenApplication	Command to launch an application
CloseApplication	Command to close/hibernate an application
GetDataObject	Command to get (read) a data object
SetDataObject	Command to set (write) a data object
SetObjectProtected	Command to set (write) data objects protected (integrity protection)
GetRandom	Command to generate a random stream
CalcHash	Command to calculate a Hash
CalcSign	Command to calculate a signature
VerifySign	Command to verify a signature
CalcSSec	Command to execute a Diffie-Hellmann key agreement
DeriveKey	Command to derive keys
GenKeyPair	Command to generate public/private key pairs
EncryptAsym	Command to encrypt a message
DecryptAsym	Command to decrypt a message

#### Table 14 Mapping of commands with Use cases

Use Case	OPTIGA™ Trust M1 commands used
Secure Communication with (D)TLS	GetRandom, CalcHash, CalcSign, VerifySign, CalcSSec, DeriveKey,
` '	GenKeyPair, EncryptAsym and DecryptAsym
Datastore (user memory ~ 10kB)	GetDataObject and SetDataObject
Secure Firmware Update	VerifySign and DeriveKey
Secure update of Trust Anchors on	SetObjectProtected command
Security Chip	

## 7.2 Crypto Performance

The performance metrics for various schemes are provided by the Table 15 below. If not particularly mentioned, the performance is measured @ OPTIGA™ Trust M1 I/O interface with:

- I2C FM (400KHz)
- Without power limitation
- @ 25°C
- VCC = 3.3V
- RSA Signature scheme: RSA SSA PKCS#1 v1.5 without hashing
- ECDSA Signature scheme: ECDSA FIPS 186-3 without hashing
- Encryption/Decryption scheme: RSAES PKCS#1 v1.5
- Hash scheme: SHA256
- Key Derivation scheme: TLS v1.2 PRF SHA256

#### **Datasheet**



## **About this document**

• RSA Key size: 2048 bits

• ECC Key size: 256 bits (NIST P-256)

**Table 15** Crypto performance

Scheme	Algorithm	Performance in ms <sup>1</sup>	Performance with Shielded Connection in ms <sup>1</sup>	Notes		
Calculate signature	RSA	~ 310	~ 315	Daniel in all daniel and a		
Calculate signature	ECDSA	~ 60	~ 65	Doesn't include message		
Mayif. aimatuus	RSA	~ 45	~ 55	hashing before calling a toolbox function		
Verify signature	ECDSA	~ 85	~ 90			
Diffie-Hellman key agreement	ECC	~ 60	~ 65	Based on ephemeral key pair		
Var. main ann anation	RSA	~ 2900 <sup>2</sup>	~ 2910	Generate 2048 bit RSA key pair		
Key pair generation	ECC	~ 75	~ 80	Generate 256 bit ECC key pair		
Encryption	RSA	~ 30	~ 45	Encrypt 127 bytes		
Decryption	RSA	~ 310	~ 320	Decrypt 127 bytes		
Key derivation	PRF as per TLS v1.2	~135	~ 150			
Hash calculation	SHA256	~ 5 Kbyte/s	~ 4.5 Kbyte/s	In blocks of 500 bytes		

<sup>&</sup>lt;sup>1</sup>Minimum Execution of the entire sequence in milli seconds, except the External World timings

<sup>&</sup>lt;sup>2</sup>RSA key pair generation performance is not predictable and typically have a variation in performance. This could be significantly higher or lower as the one specified in the table which is an average value over collected samples.

# infineon

#### **About this document**

## **8** Security Monitor

The Security Monitor is a central component which enforces the security policy of the OPTIGA™ Trust M1. It consumes security events sent by security aware parts of the OPTIGA™ Trust M1 embedded SW and takes actions accordingly as specified in Security Policy below.

## 8.1 Security Events

The events below actively influence the security monitor.

**Table 16** Security Events

Event	Description
Private Key Use	This event occurs in case the internal services are going to use an OPTIGA™ Trust M1 hosted private key.
Key Derivation	This event occurs in case the DeriveKey command gets applied on a persistent data object (not volatile data object as session context). In that case the persistent data object gets used as pre-shared secret.
Suspect System Behavior	This event occurs in case the embedded software detects inconsistencies with the expected behavior of the system. Those inconsistencies might be redundant information which doesn't fit to their counterpart.

## 8.2 Security Policy

Security Monitor judges the notified security events regarding the number of occurrence over time and in case those violate the permitted usage profile of the system takes actions to throttle down the performance and thus the possible frequency of attacks.

The permitted usage profile is defined as:

- 1.  $t_{max}$  is set to 5 seconds ( $\pm$  5%)
- 2. A Suspect System Behavior event is never permitted and will cause setting the Security Event Counter (SEC) to its maximum (= 255).
- 3. One protected operation (refer to Table 16) events per  $t_{max}$  period.

In other words it must not allow more than one out of the protected operations per  $t_{\text{max}}$  period (worst case, ref to bullet 3. above). This condition must be stable, at least after 500 uninterrupted executions of protected operations.

For more information, please refer to Solution Reference Manual document available as part of the package.

# infineon

#### **About this document**

## 9 RoHS Compliance

On January 27, 2003 the European Parliament and the council adopted the directives:

- 2002/95/EC on the Restriction of the use of certain Hazardous Substances in electrical and electronic equipment ("RoHS")
- 2002/96/EC on Waste Electrical and Electrical and Electronic Equipment ("WEEE")

Some of these restricted (lead) or recycling-relevant (brominated flame retardants) substances are currently found in the terminations (e.g. lead finish, bumps, balls) and substrate materials or mold compounds.

The European Union has finalized the Directives. It is the member states' task to convert these Directives into national laws. Most national laws are available, some member states have extended timelines for implementation. The laws arising from these Directives have come into force in 2006 or 2007.

The electro and electronic industry has to eliminate lead and other hazardous materials from their products. In addition, discussions are on-going with regard to the separate recycling of ceratin materials, e.g. plastic containing brominated flame retardants.

Infineon Technologies is fully committed to giving its customers maximum support in their efforts to convert to lead-free and halogen-free<sup>1</sup> products. For this reason, Infineon Technologies' "Green Products" are ROHS-compliant.

Since all hazardous substances have been removed, Infineon Technologies calls its lead-free and halogen-free semiconductor packages "green." Details on Infineon Technologies' definition and upper limits for the restricted materials can be found here.

The assembly process of our high-technology semiconductor chips is an integral part of our quality strategy. Accordingly, we will accurately evaluate and test alternative materials in order to replace lead and halogen so that we end up with the same or higher quality standards for our products.

The use of lead-free solders for board assembly results in higher process temperatures and increased requirements for the heat resistivity of semiconductor packages. This issue is addressed by Infineon Technologies by a new classification of the Moisture Sensitivity Level (MSL). In a first step the existing products have been classified according to the new requirements.



<sup>&</sup>lt;sup>1</sup>Any material used by Infineon Technologies is PBB and PBDE-free. Plastic containing brominated flame retardants, as mentioned in the WEEE directive, will be replaced if technically/economically beneficial.

#### **About this document**

#### Appendix A - Infineon I2C Protocol Registry Map 10

OPTIGA™ Trust M1 supports IFX I2C v2.01 and is implemented as I2C slave, which uses different address locations for status, control and data communication registers. These registers with description are outlined below in the following table.

Table 17 **IFX I2C Registry Map Table** 

Register Address	Name	Size in Bytes	Description	Master Access
0x80	DATA	DATA_REG_LEN	This is the location where data shall be read from or written to the I2C slave	Read / Write
0x81	DATA_REG_LEN	2	This register holds the maximum data register (Addr 0x80) length. The allowed values are 0x0010 up to 0xFFFF. After writing the new data register length it becomes effective with the next I2C master access. However, in case the slave could not accept the new length it indicates its maximum possible length within this register. Therefore it is recommended to read the value back after writing it to be sure the I2C slave did accept the new value.  Note: the value of MAX_PACKET_SIZE is derived from this value or vice versa (MAX_PACKET_SIZE=DATA_REG_LEN-5)	Read / Write
0x82	I2C_STATE	4	Bits 31:24 of this register provides the I2C state in regards to the supported features (e.g. clock stretching) and whether the device is busy executing a command and/or ready to return a response etc.  Bits 15:0 defining the length of the response data block at the physical layer.	Read only
0x83	BASE_ADDR	2	This register holds the I2C base address as specified by Table 18. Default value is 0x30. After writing a different address the new address become effective with the next I2C master access. In case the bit 15 is set in addition to the new address (bit 6:0) it becomes the new default address at reset (persistent storage).	Write only
0x84	MAX_SCL_FREQU	4	This register holds the maximum clock frequency in KHz supported by the I2C slave. The value gets adjusted to the register I2C_Mode setting. Fast Mode (Fm): The allowed values are 50 up to 400. Fast Mode (Fm+): The allowed values are 50 up to 1000.	Read
0x85	GUARD_TIME <sup>1</sup>	4	For details refer to Table 21	Read only
0x86	TRANS_TIMEOUT <sup>1</sup>	4	For details refer to Table 21	Read only

<sup>&</sup>lt;sup>1</sup> In case the register returns 0xFFFFFFF the register is not supported and the default values specified in Table 'List of protocol variations' shall be applied.

#### **Datasheet**



## **About this document**

Register Address	Name	Size in Bytes	Description	Master Access
0x88	SOFT_RESET	2	Writing to this register will cause a device reset. This feature is optional	Write only
0x89	I2C_MODE	2	This register holds the current I2C Mode as defined by Table 19. The default mode is SM & FM (011B).	Read / Write

#### Table 18 Definition of BASE\_ADDR

Fields	Bits	Value	Description						
DEF_ADDR	15	0	Volatile address setting by bit 6:0, lost after reset.						
		1	Persistent address setting by bit 6:0, becoming default after reset.						
BASE_ADDR	6:0	0x00-0x7F	I <sup>2</sup> C base address specified by Table 17						

15	14	13	12	11	10	9	8
DEF_ADDR				RFU			
7	6	5	4	3	2	1	0
RFU				BASE_ADDR			

15	14	13	12	11	10	9	8
DEF_MODE	MODE RFU						
7	6	5	4	3	2	1	0
		RFU				Mode	

#### Table 19 Definition of I2C\_MODE

Fields	Bits	Value	Description
DEF_MODE	15	0	Volatile mode setting by bit 2:0, lost after reset.  Persistent mode setting by bit 2:0, becoming
			default after reset. This bit is always read as 0.
MODE <sup>2</sup>	2:0	001	Sm
		010	Fm
		011	SM & Fm (fab out default)
		100	Fm+
		other values	not valid; writing will be ignored

 $<sup>^{\</sup>rm 1}$  In case the register returns 0xFFFFFFF the register and its functionality is not supported

 $<sup>^2\,</sup> This\, mode\, defines\, the\, adherence\, of\, the\, bus\, signals\, to\, the\, electrical\, characteristics\, according\, standard\, I2C\, bus\, specification$ 

#### **Datasheet**



## **About this document**

31	30	29	28	27	26	25	24
BUSY	RESP_RDY	RFU		SOFT_RESET	CONT_READ	REP_START	CLK_STRETCHING
23	22 21 20			19	18	17	16
PRESENT_LAYER		RFU					
15-0							
Length of data block to be read							

Table 20 Definition of I2C\_STATE

Field	Bit(s)	Value	Description
BUSY	31	0	Device is not busy
		1	Device is busy executing a command
RESP_RDY	30	0	Device is not ready to return a response
		1	Device is ready to return a response
SOFT_RESET	27	0	SOFT_RESET not supported
		1	SOFT_RESET supported
CONT_READ	26	0	Continue Read not supported
		1	Continue Read supported
REP_START	25	0	Repeated start not supported
		1	Repeated start supported
CLK_STRETCHING	24	0	Clock stretching not supported
		1	Clock stretching supported
PRESENT_LAYER	23	0	Presentation Layer not supported
		1	Presentation Layer supported

## 10.1 Infineon I2C Protocol Variations

To fit best to application specific requirements the protocol might be tailored by specifying a couple of parameters which is described in the following table.

**Table 21** List of Protocol Variations

Parameter	Default Value	Description
MAX_PACKET_SIZE	0x110	Maximum packet size accepted by the receiver. The protocol
		limits this value to 0xFFFF, but there might be project specific
		requirements to reduce the transport buffers size for the sake of
		less RAM footprint in the communication stack. If shortened, it
		could be statically defined or negotiated at the physical layer.
WIN_SIZE	1	Window size of the sliding windows algorithm. The value could
		be 1 up to 2.
MAX_NET_CHAN	1	Maximum number of network channels. The value could be 1 up
		to 16. One indicates the OSI Layer 3 is not used and the CHAN
		field of the PCTR must be set to 0000.
CHAINING	TRUE	Chaining on the transport layer is supported (TRUE) or not
		(FALSE)
TRANS_TIMEOUT	10 ms	(Re) transmission timeout specifies the number of milliseconds
		to be elapsed until the transmitter considers a frame

## Datasheet



## **About this document**

Parameter	Default Value	Description
		transmission is lost and retransmits the non-acknowledged frame. The Timer gets started as soon as the complete frame is transmitted. The value could be 1 up to 1000. However, the higher the number, the longer it takes to recover from a frame transmission error.  Note: The acknowledge timeout on the receiver side must be shorter than the retransmission timeout to avoid unnecessary
		frame repetitions.
TRANS_REPEAT	3	Number of transmissions to be repeated until the transmitter considers the connection is lost and starts a re-synchronization with the receiver. The value could be 1 up to 4.
BASE_ADDR	0x30	I2C (base) address. This address could be statically defined or dynamically negotiated by the physical layer.
MAX_SCL_FREQU	1000 kHz	Maximum SCL clock frequency in kHz.
GUARD_TIME	50 μs	Minimum time to be elapsed at the I2C master measured from read data (STOP condition) until the next write data (Start condition) is allowed to happen.  Note 1: For two consecutive accesses on the same device GUARD_TIME re-specifies the value of t <sub>BUF</sub> as specified by [I2Cbus].  Note 2: Even if another I2C address is accessed in between GUARD_TIME has to be respected for two consecutive accesses on the same device.
SOFT_RESET	1	Any write attempt to the SOFT_RESET register will trigger a warm reset (reset w/o power cycle). This register is optional and its presence is indicated by the I2C_STATE register's "SOFT_RESET" flag.
PRESENT_LAYER	1	This flag at the I2C_STATE register indicates the optional availability of the presentation layer, which is providing confidentiality and integrity protection of payloads (APDUs) transferred across the I2C interface. The presentation layer is used as part of Shielded Connection.

# infineon

#### **About this document**

## Appendix B - OPTIGA™ Trust M1 Command/Response I2C Sample Logs

The default I2C slave address for the OPTIGA™ Trust M1 is 0x30 [I2C\_ADDR]. All the values in this section are specified in decimal form unless stated otherwise.

## 11.1 Sequence of commands to read Coprocessor UID from OPTIGA™ Trust M1

#### **Pre-requisites**

- 1. Ensure that the security device is powered up
- 2. The OPTIGA™ Trust M1 will not acknowledge the slave address sent by a host if it is either busy or in idle state. Hence the host must retry or repeat the transaction until it is successful or timed out for 100 milliseconds (extreme case).
- 3. The specified guard time must be applied between each attempt of write / read operation by the Host I2C driver.
- 4. The log information for OPTIGA™ Trust M1 commands specified in below Tables contains the [IFX I2C] protocol information which comprises sequence numbers and checksum of the transactions.
  - a. A sequence of commands must be strict for the OPTIGA™ Trust M1 (e.g. OpenApplication followed by GetDataObject to read a Coprocessor UID)
  - b. A checksum in the data depends on the data received or sent via write/read operations. So any data change in the transaction is reflected in the check sum. Otherwise the write data transaction will not be accepted/acknowledged by the OPTIGA™ Trust M1.
- 5. The logs specified below are without the presentation layer (used for the Shielded Connection) of [IFX I2C]

## 11.1.1 Check the status [I2C\_STATE]

This is a very basic register read operation which ensures the behavior of the read/write operations of the local host I2C driver.

Table 22 Check I2C\_STATE Register of OPTIGA™ Trust M1

I2C_ADDR	Transaction Type	Data [values in hexadecimal]
30	Write [ 01 Bytes ]	82
30	Read [ 04 Bytes ]	08 80 00 00

## 11.1.2 Issue OpenApplication command

Before issuing any application specific command; e.g. read Coprocessor UID using GetDataObject, it is a must to send the OpenApplication command to initialize the application on the OPTIGA™ Trust M1 as shown below.

Table 23 OpenApplication on OPTIGA™ Trust M1

I2C_ADDR	Transaction Type	Data [values in hexadecimal]		
Step 1: Send OpenApplication command to initiate the application context on the OPTIGA™ Trust M1				
30	Write [ 27 Bytes ]	80 03 00 15 00 <b>70 00 00 10 D2 76 00 00 04 47 65 6E 41 75 74 68 41 70 70 6C</b> 04 1A		

#### **Datasheet**



## **About this document**

Transaction Type	Data [values in hexadecimal]
the I2C_STATE register	[Repeat this step until the read contains the data as specified below]
Write [ 01 Bytes ]	82
Read [ 04 Bytes ]	C8 80 00 05
the DATA register [ <i>Ackn</i>	owledgment from OPTIGA™ Trust M1 for the last data transacation]
Write [ 01 Bytes ]	80
Read [ 05 Bytes ]	80 00 00 0C EC
the I2C_STATE register	[Repeat this step until the read contains the data as specified below]
Write [ 01 Bytes ]	82
Read [ 04 Bytes ]	48 80 00 0A
the DATA register which	n contains the response for the command issued
Write [ 01 Bytes ]	80
Read [ 10 Bytes ]	00 00 05 00 <b>00 00 00 00</b> 14 87
an acknowlegment for	the data read
Write [ 06 Bytes ]	80 80 00 00 0C EC
	the I2C_STATE register Write [ 01 Bytes ] Read [ 04 Bytes ] the DATA register [Acknowledge] Write [ 01 Bytes ] Read [ 05 Bytes ] the I2C_STATE register Write [ 01 Bytes ] Read [ 04 Bytes ] the DATA register which Write [ 01 Bytes ] Read [ 10 Bytes ] Read [ 10 Bytes ] an acknowlegment for

## 11.1.3 Read Coprocessor UID

The Coprocessor UID contains the OPTIGA™ Trust M1 unique ID and the build information details. The GetDataObject command is used to read the Coprocessor UID information.

Table 24 Read Coprocessor UID

I2C_ADDR	Transaction Type	Data [values in hexadecimal]		
Step 1: Sen	d the GetDataObject co	ommand to read the Coprocessor UID		
30	Write [ 17 Bytes ]	80 04 00 0B 00 <b>01 00 00 06 E0 C2 00 00 00 64</b> F0 9F		
Step 2: Rea	d the I2C_STATE regist	er [Repeat this step until the read contains the data as specified below].		
30	Write [ 01 Bytes ]	82		
30	Read [ 04 Bytes ]	48 80 00 25		
Step 3: Rea	d the DATA register wh	ich contains the response for the command issued.		
30	Write [ 01 Bytes ]	80		
30 Read [ 37 Bytes ]		05 00 20 00 <b>00 00 1B CD XX XX</b>		
		Notes:  a. XX is the unique ID part of the co-processor UID  b. "YY YY" is the OPTIGA™ Trust M1 build number in BCD  (Binary Coded Decimal) format  c. ZZ ZZ is the checksum of the transaction		
Step 4: Sen	d an acknowlegment fo	or the data read		
30	Write [ 06 Bytes ]	80 81 00 00 56 30		

#### **Appendix C - Power Management** 12

When operating, the power consumption of OPTIGA™ Trust M1 is limited to meet the requirements regarding the power limitation set by the Host. The power limitation is implemented by utilizing the current limitation feature of the underlying hardware device in steps of 1mA from 6mA to 15 mA with a precision of ±5%.

#### 12.1 Hibernation

This maximizes power saving (zero power consumption), while the I2C bus stays connected. In this case OPTIGA™ Trust M1 saves the application context before power-off (switching off V<sub>CC</sub>) and restores it after powerup. After power-up the application continues seamlessly from the state before hibernate.

#### 12.2 **Low Power Sleep Mode**

The OPTIGA™ Trust M1 automatically enters a low-power mode after a configurable delay. Once it has entered Sleep mode, the OPTIGA™ Trust M1 resumes normal operation as soon as its address is detected on the I2C bus. In case no command is sent to the OPTIGA™ Trust M1 it behaves as shown in Figure 14.

- 1. As soon as the OPTIGA™ Trust M1 is idle it starts to count down the "delay to sleep" time (tsdy).
- 2. In case this time elapses the device enters the "go to sleep" procedure.
- 3. The "go to sleep" procedure waits until all idle tasks are finished (e.g. counting down the SEC). In case all idle tasks are finished and no command is pending, the OPTIGA™ Trust M1 enters sleep mode.

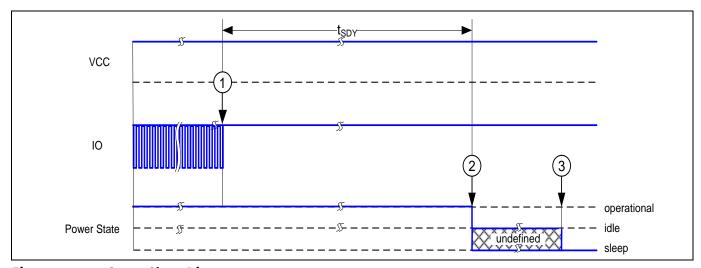


Figure 14 **Go-to-Sleep Diagram** 

## Datasheet

# infineon

## **Revision history**

## **Revision history**

<b>Document version</b>	Date of release	Description of changes
1.65	2019-05-23	RC Release version and update in table 23
1.61	2019-04-22	RC release version and minor updates to features on the first page
1.60	2019-03-15	RC release version
1.50	2019-02-05	ES release version
1.40	2019-01-18	Internal reviews incorporated
1.30	2019-01-07	Updates to all sections
1.20	2018-10-01	Second release with internal reviews incorporation
1.10	2018-09-24	Updates to all sections
1.00	2018-07-07	First Version Release
0.50	2018-06-29	Initial Version (Internal release)

#### **Trademarks**

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2019-05-23

Published by Infineon Technologies AG 81726 Munich, Germany

© 2019 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document?

Email:

**DSSCustomerService@infineon.com** 

**Document reference** 

#### IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

#### WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.