
Common mode Choke removal from DigiOne Board

Step 1: Remove the Common mode choke on the bottom side of the PCB (as shown below figure-1)

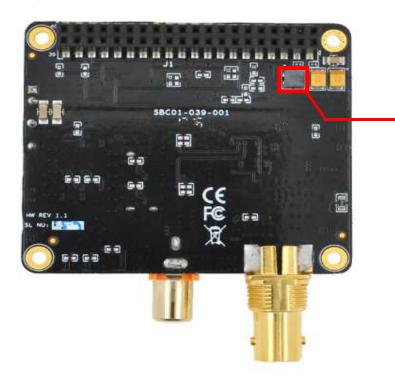

Remove the Common mode Choke

Figure -1

Step 2: Solder the 2 Numbers of 0 OHM resistors (1206 package) horizontally (as shown below figure-2)

Minimum requirement of the resistor is 0 ohm /1206 package/ 0.5W



Two No's of 0 ohm(1206) resistors(horizontal)

1) First resistor between 1 & 2 pads.

2)Second resistor between 3 & 4 pads

Figure -2