


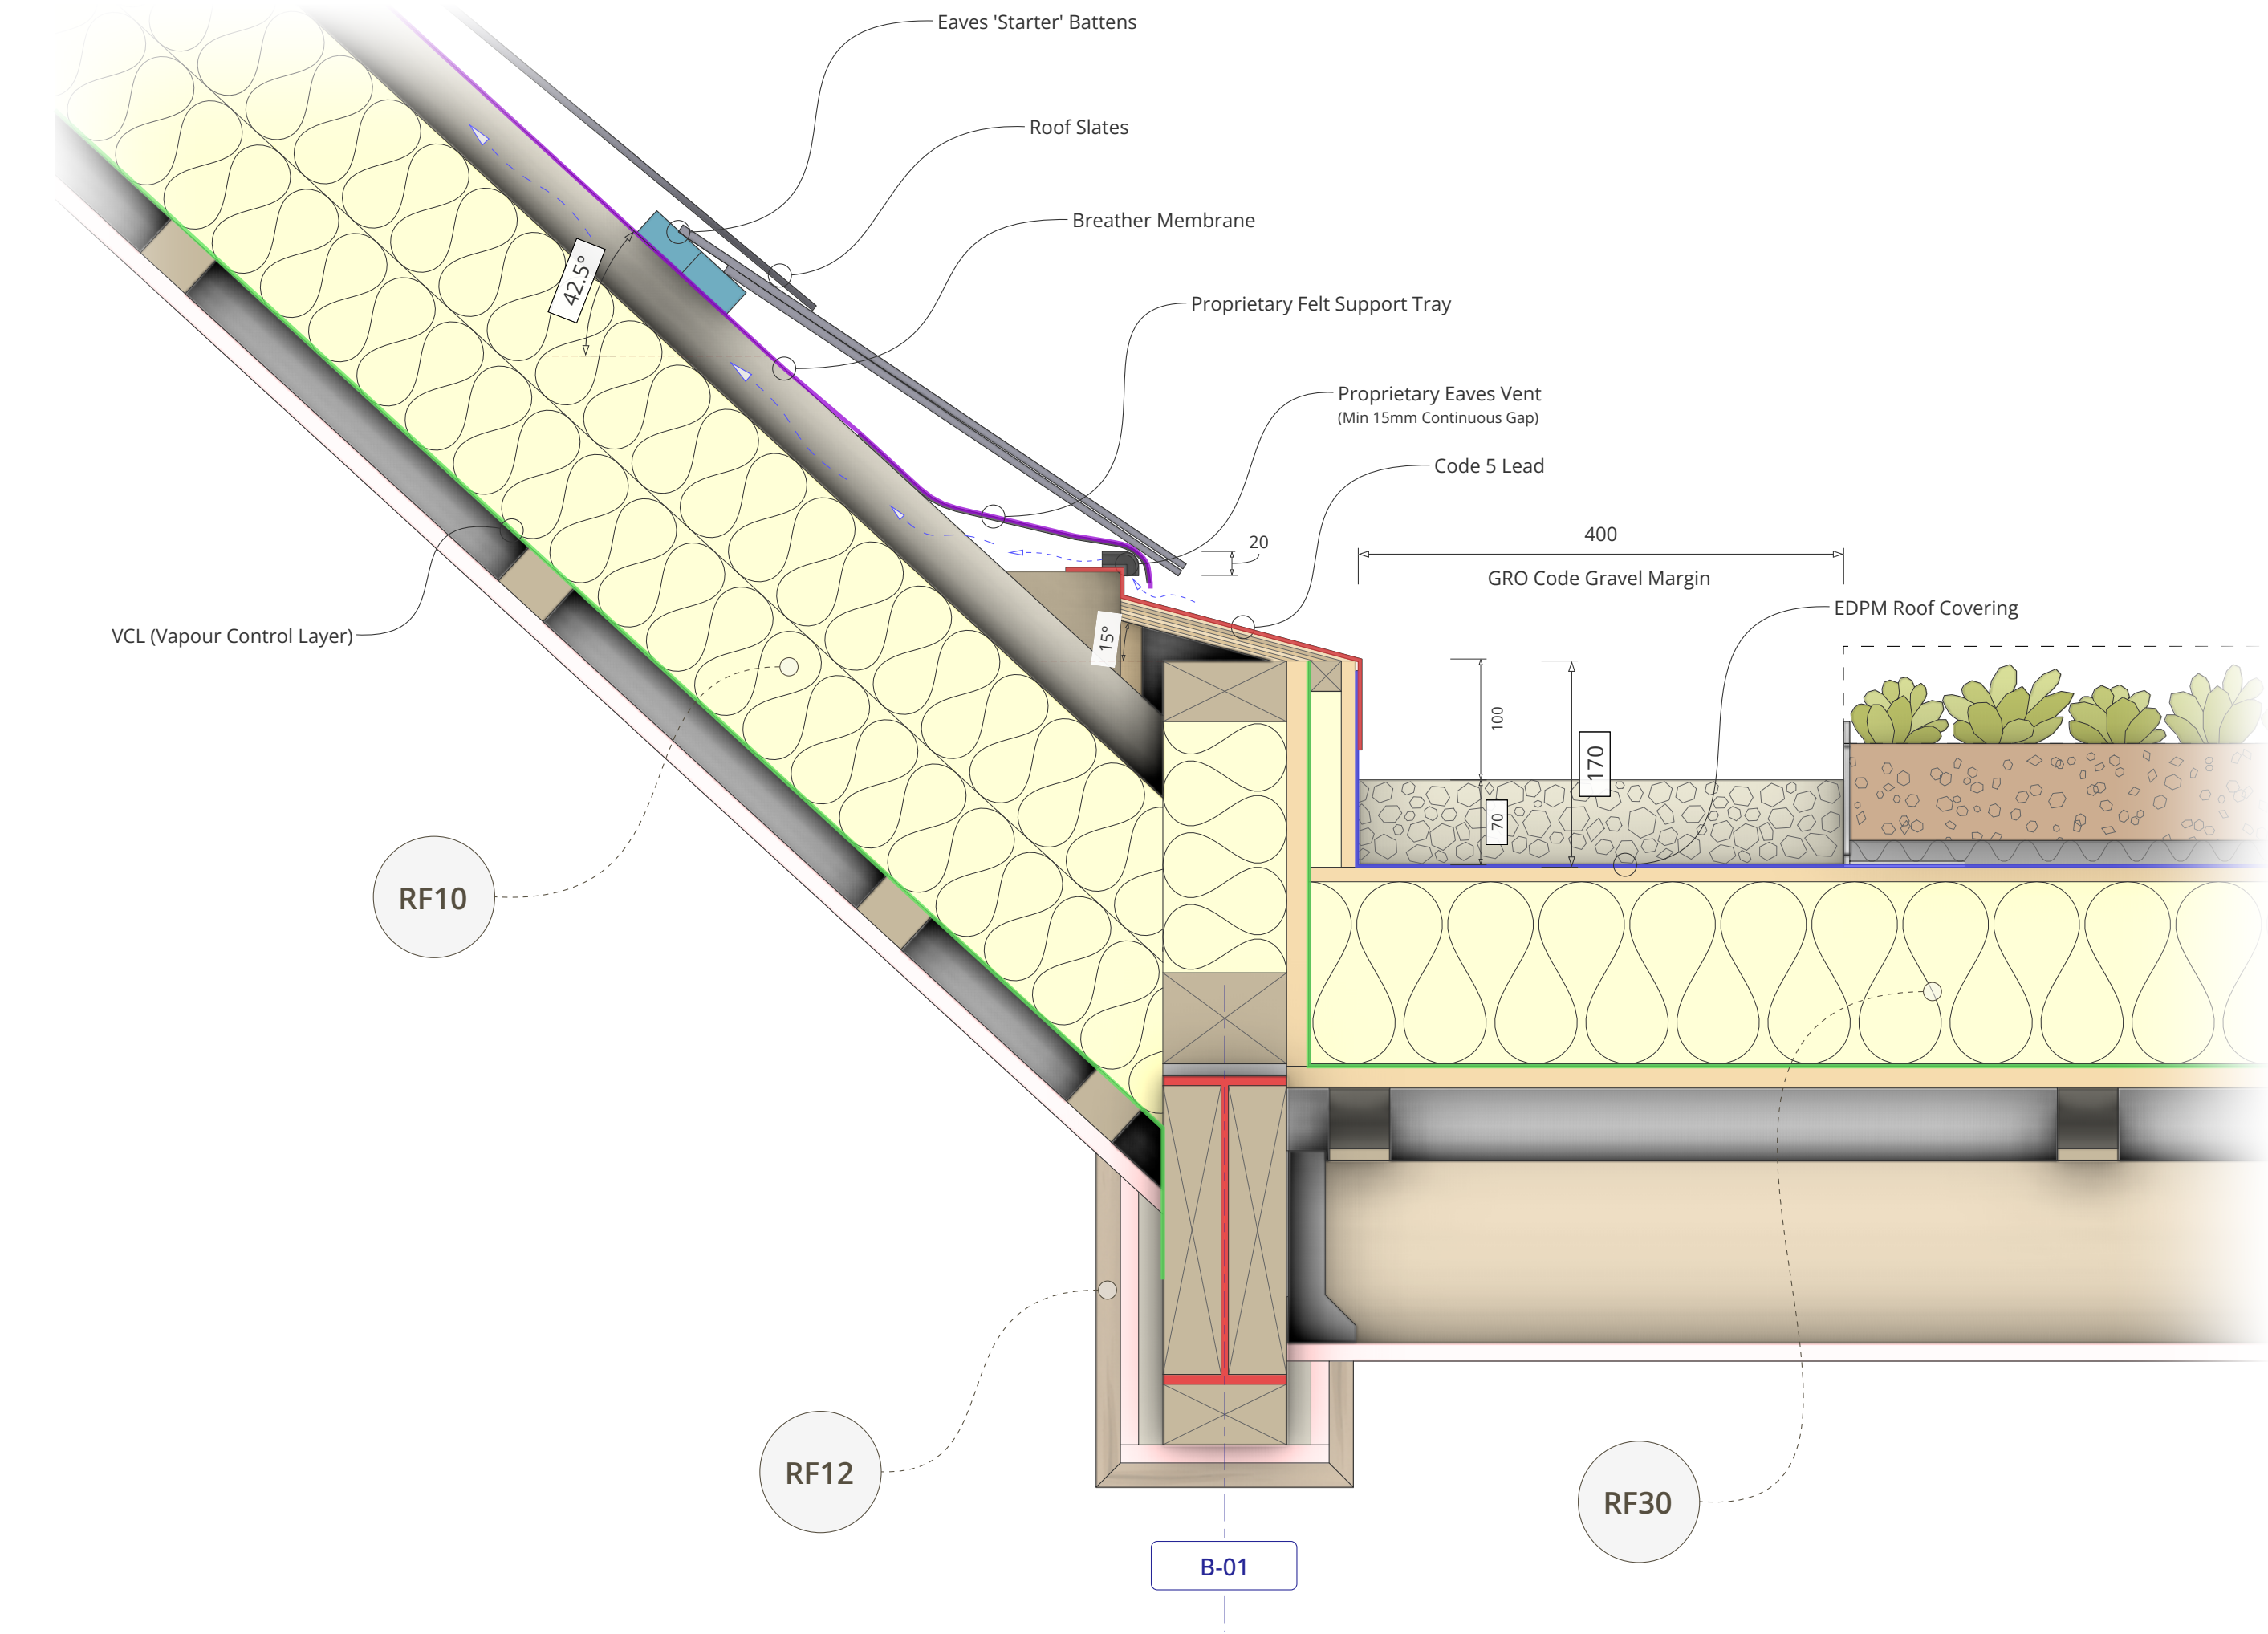

Line	Membranes & Key Layers Legend
	Code 5 Lead
	EDPM Roof Covering
	VCL - Vapour Control Layer
	Breather Membrane

Element	Specifications
Abutment Flashings	Supply and install Code 5 rolled lead sheet cut to lengths suitable for handling and lapping. Use Rolled Lead Sheet to BS EN 12588. Form a continuous apron flashing that dresses under the pitched roof slates and down over the EPDM upstand with a minimum 150mm vertical lap where height permits (reduced to minimum 100mm at high point steps). The lead must overlap the EPDM horizontal face by a minimum of 75mm and be secured with lead clips at 400mm centres to resist wind uplift. Apply patination oil to all fresh leadwork immediately after installation to prevent carbonate runoff staining the EPDM. Comply with BS 6229 and BS 6915.
Pitched Eaves Ventilation	Install a continuous strip providing minimum 25mm equivalent airflow. Use a proprietary Over-Fascia Vent or Eaves Vent System (e.g., Manthorpe/Timloc) fixed to the top of the layboard/fascia prior to tiling. Ensure the vent includes an integral insect grille and maintains a clear path into the rafter void. Ensure the vent is not compressed by the heavy slate load and position the Eaves Protector/Felt Support Tray over the vent to guide membrane runoff into the gutter zone without blocking the airflow. Comply with BS 5250.
Fire Break (Gravel Margin)	Lay a 400mm wide by 95mm deep consolidated zone of 20-40mm washed rounded river stone or ballast (fines free). Install this strip along the entire length of the abutment to separate the Sedum vegetation from the vertical wall/upstand. This is a mandatory fire requirement under Approved Document B and the GRO Code to prevent fire spread from vegetation to the building interior, therefore do not allow sedum to encroach into this zone. Comply with GRO Green Roof Code 2021 and Approved Document B.
Upstand Structure	Construct a timber studwork carcass and fill the stud void completely with rigid PIR insulation or apply a continuous vertical board to the face before waterproofing. This vertical insulation is critical to connect the Flat Roof thermal line to the Pitched Roof thermal line to prevent cold bridging and mould growth at the internal ceiling junction. Comply with Approved Document L.
Waterproofing Upstand	Form a waterproof upstand to the height of the timber kerb (minimum 100mm at pinch points, 150mm elsewhere) using Firestone RubberGard EPDM 'Premium Grade' (1.52mm thickness) or ClassicBond PRO. Dress the field sheet tightly into the angle change and fully adhere up the vertical face of the timber upstand, terminating behind the Code 5 Lead flashing. Ensure the membrane is fully bonded to the vertical substrate to prevent 'tenting' and do not use silicone sealant at the Lead/EPDM lap interface, instead relying on the mechanical overlap or a compression bar. Comply with BS 6229.
Installation	Ensure the 'Felt Support Tray' on the pitched side overlaps the Lead Flashing sufficiently to prevent wind-driven rain from being blown up under the slates. The sequence is: 1. EPDM Upstand -> 2. Lead Flashing -> 3. Eaves Vent/Tray -> 4. Slates. This creates a cascading water shed.
Important	While 100mm is accepted at the high-point (furrings), the contractor must endeavour to maintain 150mm wherever falls allow to comply with BS 6229 best practice. Apply patination oil to lead to stop white staining on the black EPDM/Grey Slate. Install an aluminium gravel stop/angle between the Sedum and the Gravel Margin to maintain the clean 400mm line.
Design Rationale	The Layboard detail manages the transition between the elevated green roof deck and the steep 42.5° pitched roof. The stepped upstand allows for the requisite waterproofing heights while accommodating the extreme pitch differential. A 400mm gravel margin ensures fire compliance at the vertical interface.
Standards	BS 6229:2018 (Flat Roofs), BS 5534 (Slating), BS 6915 (Lead), GRO Code 2021 (Green Roofs), Approved Documents B & L (2025 Editions).



RF12 - Pitched Roof To Green Roof Abutment Detail

Building Control Approval Submission

This drawing is submitted for Building Control approval. Construction must not commence until the Inspector sanctions the proposed structural details, thermal performance, and moisture integrity. The Principal Contractor is fully responsible for coordinating all statutory inspections to verify strict compliance with the Building Regulations 2010.