The 38 mm wall clip held by two M3 socket-head screws

2 steps · illustrated

Parts

1 ×	**Wall clip** FDM print; barrel_dia 38, clearance 0.25, clip_height 32, wall 2.4
2 ×	**M3 socket-head screw, 12 mm** ISO 4762 socket head cap screw, M3, 12 mm under the head

Tools

hex key

1


Place the wall clip.



2

Fasten the wall clip with 2 M3 x 12 mm screws into the mounting surface.

Hardware	**2 × M3 socket-head screw, 12 mm**
Tool	hex key

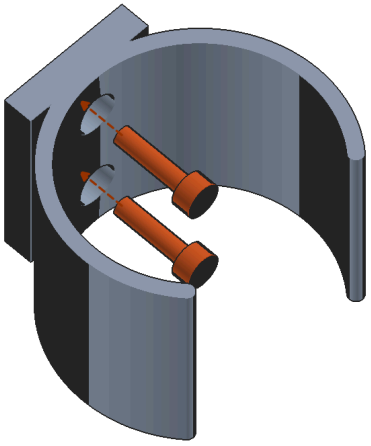

That's every step. The assembly is complete.

Hardware is a simplified envelope (no threads or sockets). Exploded offsets and steps illustrate how the parts go together; they are not a collision-checked tool path or a motion simulation. Fit, retention and strength are not physically tested.

Generated from `assembly/holder_clip.py` (sha256 `6aa1d81928d5`) by the assembly gate (result: PASS). Edit the assembly, not this page.