




OPERATOR GUIDE | ANDROID 10+

TABLE SOCCER LIVE CAM

One camera per table, TV graphics, replay and live output: essential steps from installation to the archive.

The table QR code

The phone receives team names, logos and match timing. The camera operator controls the on-air score.

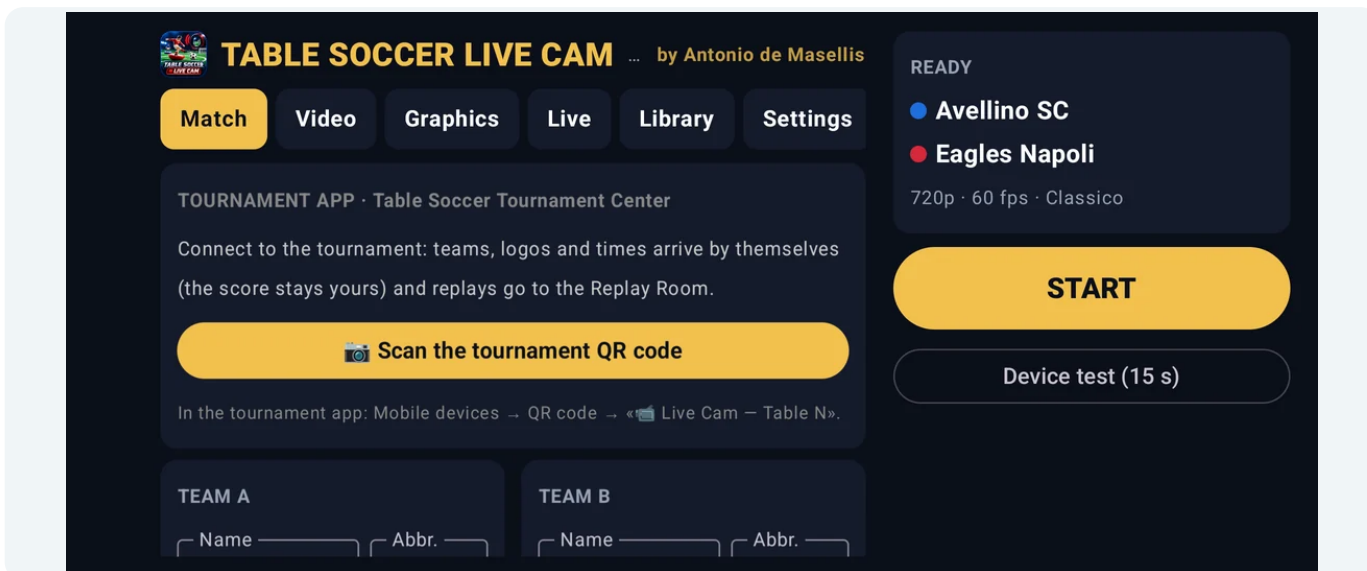

Match: scan the tournament QR code, then start the control room.

01 Install and prepare

Install the APK from the program website on Android 10 or later. Allow camera and microphone access, open **Match** and test the picture before the event.

02 Generate the QR

In the desktop app, open **Control Desk**, then **Connection QR code** and select **Live Cam - Table N**. Each table has its own connection.

03 Scan on the phone

Tap **Scan the tournament QR code**. Check the tournament, table number and two teams. If they are wrong, display the QR for the correct table.

04 Start control


Press **START** once camera, light, sound and orientation are ready. When the table receives another match, load it from the new-match prompt.

IF THE QR WILL NOT CONNECT

Check the phone network, confirm that the desktop app is reachable, and verify that the QR belongs to this table. Then scan again.

Goals and replays

Operator controls stay out of the final video; match graphics become part of the broadcast output.

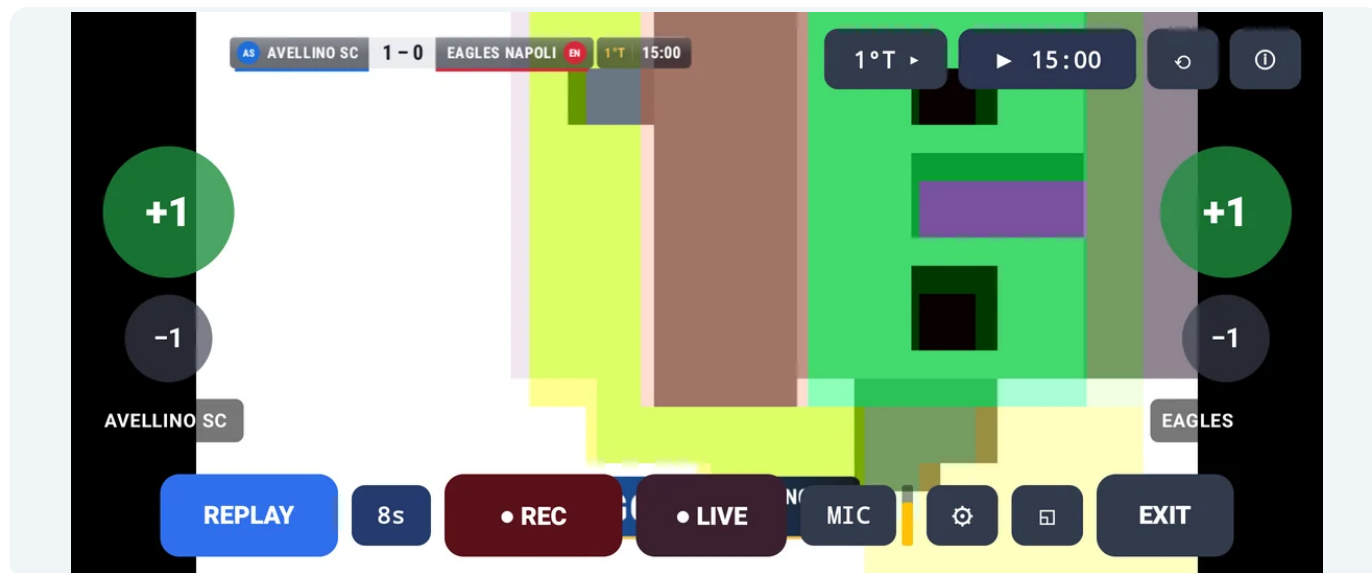

Control view: score, replay, recording and match clock.

01 Update the score

Use the **+1** and **-1** controls for each team. Check the on-air score graphic after every goal before following play again.

02 Capture the goal

Press **REPLAY** after the action: the clip uses the preceding seconds held in memory. Choose 5, 8, 10 or 15 seconds to suit the pace.

03 Record the match

Use **REC** to save the programme and produce highlights. Check free storage and the duration of a test recording before the real match.

04 Check Replay Room


When Live Cam is connected, clips arrive in the desktop **Replay Room**. Send one test clip to confirm networking, playback and sound.

AFTER A GOAL

Update the score, press **REPLAY**, check the action and confirm the clip appears in Replay Room. A full rehearsal is better than a camera-only test.

Graphics, live, archive

Choose the visual style and test the venue network before going online.

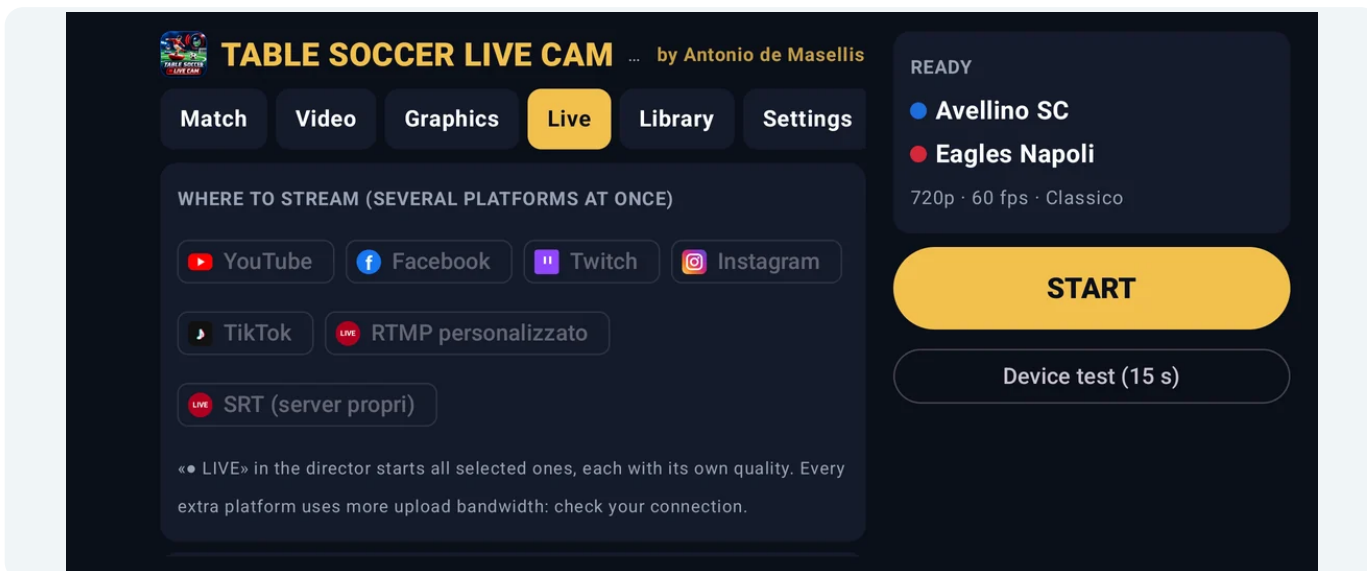

Live: platform, server, stream key and quality settings.

01 Polish the image

In **Graphics**, choose a scoreboard style. In **Tools**, adjust focus, exposure, zoom and microphone. Make sure the ball remains visible.

02 Configure the stream

In **Live**, choose platform and quality, enter the required stream key and save. Press **LIVE** in the control view only after a real network test.

03 Watch the connection

Each additional platform uses more upload bandwidth. If the network is unstable, lower quality and check that the local recording continues.

04 Finish and keep files


Stop LIVE and REC, then open **Library** to review the recording, replays and highlights. Verify sound and both ends of each file before sharing.

FINAL PRE-FLIGHT

Before the first match, check the correct table, light, focus, microphone, storage, network and a short REC/REPLAY test.

The live stream, step by step

From the channel to the close: prepare it days before, test it on the day, then one tap on LIVE.

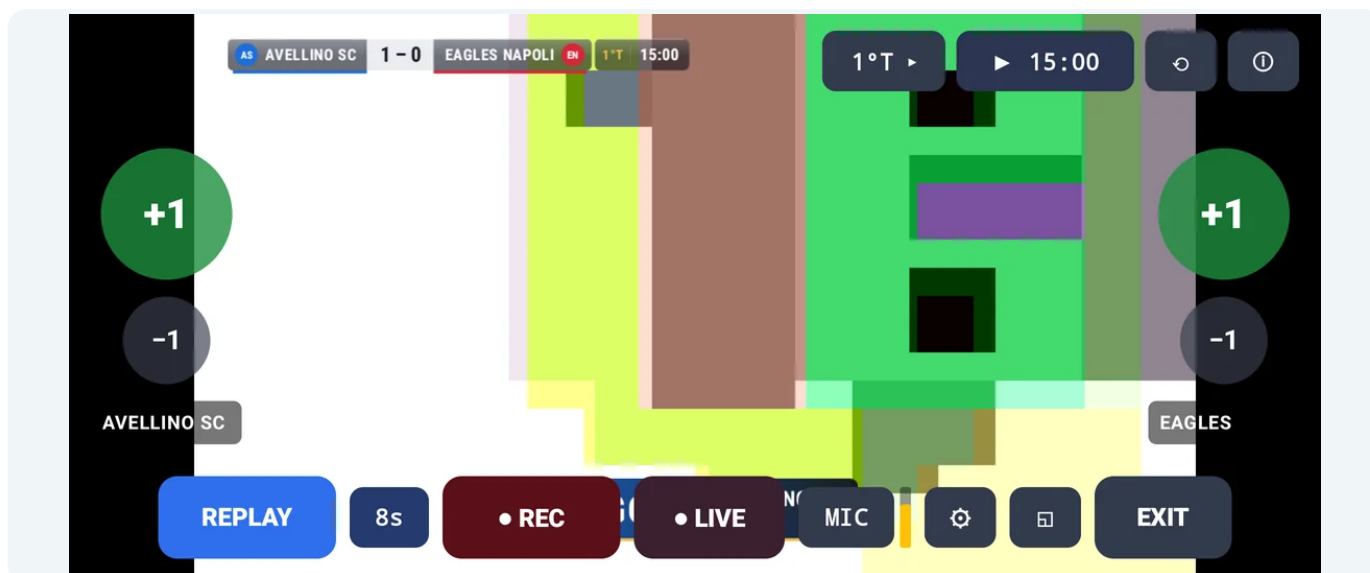

Control view: REPLAY, REC and LIVE; each platform's status appears below the controls.

01 Prepare the channel

Days before: **YouTube** Studio (first enabling can take 24 hours), **Facebook** or **Instagram** with Live Producer, **Twitch** Dashboard, **TikTok** LIVE Studio. Copy the key and prepare title and thumbnail.

02 Test the network

Measure upload at the table: at least 1.5 times the quality for each platform (720p 60 fps = 4.5 Mbps → 7 Mbps free). Phone on charge, notifications silenced.

03 Set up and test

Live → **Set up**: platform, key, quality, **Save**; switch it on under «Where to stream». Run a 2–3 minute **private** test and watch it on another phone.

04 On air and close

- **LIVE** in the control view; on Facebook and Instagram confirm «Go live». Watch Mbps and dropped frames. After the match ■ **LIVE** and end the event on the platform.

IF SOMETHING GOES WRONG

Key rejected: copy it again and save. **Black screen on the platform**: confirm «Go live». **Choppy**: drop to 720p 30 fps or remove a platform. The recording on the phone never stops.