VISVESVARAYA TECHNOLOGICAL UNIVERSITY

"JnanaSangama", Belgaum -590014, Karnataka.



LAB REPORT on

INTERNET OF THINGS LAB

Submitted by ADITYA SHARMA (1BM21CS269)

in partial fulfillment for the award of the degree of BACHELOR OF ENGINEERING in COMPUTER SCIENCE AND ENGINEERING



B.M.S. COLLEGE OF ENGINEERING (Autonomous Institution under VTU) BENGALURU-560019 NOV-2023 to FEB-2024

B. M. S. College of Engineering,
Bull Temple Road, Bangalore 560019
(Affiliated To Visvesvaraya Technological University, Belgaum)
Department of Computer Science and Engineering



CERTIFICATE

This is to certify that the Lab work entitled "Internet Of Things Lab" carried out by ADITYA SHARMA (1BM21CS269), who is bonafide student of B. M. S. College of Engineering. It is in partial fulfillment for the award of Bachelor of Engineering in Computer Science and Engineering of the Visvesvaraya Technological University, Belgaum during the year 2023-2024. The Lab report has been approved as it satisfies the academic requirements in respect of a Internet of things lab - (22CS5PCIOT) work prescribed for the said degree.

Dr. Gauri Kalnoor

Assistant professor Department of CSE BMSCE, Bengaluru Dr. Jyothi S Nayak

Professor and Head Department of CSE BMSCE, Bengaluru

INDEX

Sl. No.	Date	Program Title
1.	15-11-23	LED Blinking
2.	15-11-23	LED ON/OFF Using Pushbutton
3.	15-11-23	LED Fading using Potentiometer
4.	22-11-23	Nightlight Simulation
5.	22-11-23	PIR with Arduino UNO
6.	22-11-23	Ultrasound with Arduino UNO
7.	29-11-23	Fire Alert System
8.	29-11-23	Automatic irrigation controller simulation
9.	06-12-23	Reading the code present on RFID tag
10.	06-12-23	Access control through RFID
11.	27-12-23	HC-05 Bluetooth at Command prompt
12.	10-01-24	HC-05 Bluetooth Controlled by mobile
13.	10-01-24	Bluetooth-Master Slave
14.	17-01-24	GSM Module

LED Blinking

Aim:

1.

Turns on an LED on for one second, then off for one second, repeatedly.

Hardware Required:

- Arduino Board
- LED

Circuit diagram:


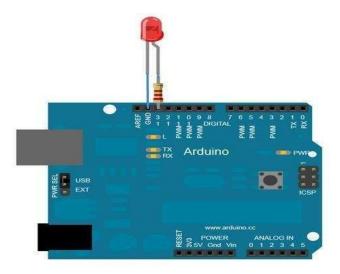


Fig.1.LED blinking

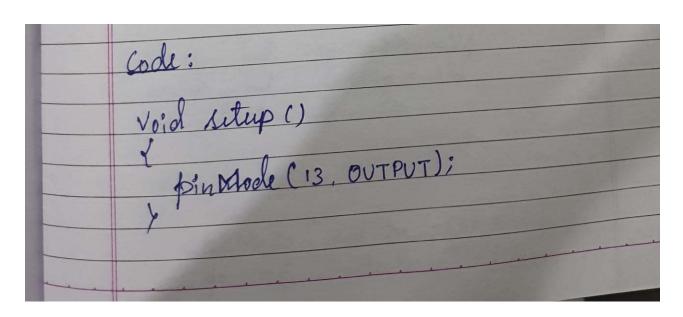

```
Void loop ()
digital Weste (13, HIGH);
altay (1000);
digital Weste (13, Low);
allay (1000);
y
```

```
int led = 13;
void setup()
{
pinMode(led, OUTPUT);
}
void loop() {
digitalWrite(led, HIGH);
delay(1000);
digitalWrite(led, LOW);
delay(1000);
}
```

Observation:

The code establishes a basic program to toggle an LED on and off in one-second intervals. Pin 13 is configured as the output for the LED, and the main loop continuously switches the LED on for one second, then off for another second.

LED ON/OFF Using Pushbutton

Aim:

2.

Turn an LED ON /OFF using a Pushbutton.

Hardware Required:

- Arduino Board
- LED
- Push button

Circuit diagram:

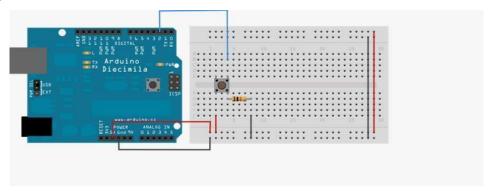


Fig.2.LED on/off using pushbutton

	void loop()
with politic	Void response
37	buttonstate = digitalRead (buttonRend); if (buttonstate == HIGH)
	buttons are - organism
-	if (buttonstate == 11011)
	*
13 6	digital Wente (ledfin, Mbr.H);
C4010-00	4
	,
	else.
	× 1.00 10.1
	digital Write (lidion, LUW),
	digital Weite (lid Pin, LOW);
	Push Button
	y standard men
	15

```
const int buttonPin = 2;
const int ledPin = 13;
int buttonState = 0;
void setup() {
  pinMode(ledPin, OUTPUT);
  pinMode(buttonPin, INPUT); }

void loop() {
  buttonState = digitalRead(buttonPin);
  if (buttonState == HIGH) {
    digitalWrite(ledPin, HIGH);
  } else {
    digitalWrite(ledPin, LOW);
  } }
```

Observation:

The code achieves desired functionality of turning the LED on and off based on the state of the push button. When the button is pressed, the LED lights up. This interactive behavior enhances the user experience, where the LED state is directly controlled by the push button's input.

3. LED Fading using Potentiometer

Aim:

To control the brightness of an LED using a Potentiometer.

Hardware Required:

- Arduino Board
- LED
- Potentiometer

Circuit diagram:

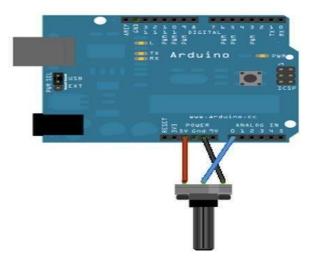


Fig.3-LED fading using potentiometer

In Suci	Void Selupe
- 200- 150	Social begin (9600)
	Social begin (9600);
9 —	
	void loop()
	Seneoy Value = analog Read (analog In Pin);
A -	21 62 +1 h 1,10 = men (Busion Value, 0, 1025)
	in Month & captage all tin, out to
	Secret peunt (sus or Value);
	Secrial perintly output veliles,
	delay(2);

```
const int potPin = A0;
const int ledPin = 9;
void setup() {
  pinMode(ledPin, OUTPUT);
}

void loop() {
  int potValue = analogRead(potPin);
  int brightness = map(potValue, 0, 1023, 0, 255);
  analogWrite(ledPin, brightness);
}
```

Observation:

The code effectively achieves the desired outcome, enabling the dynamic control of the LED's brightness through the potentiometer. As the potentiometer is adjusted, the analogRead function captures its varying values (ranging from 0 to 1023). The mapping of these values to a brightness scale (0 to 255) results in adjustment of the LED's intensity.

Nightlight Simulation

Aim:

4.

Simulating a night light using LDR and PIR

Hardware Required:

- 1 LED
- 1 LDR
- 110K resistor

Connection:

- 1. Attach one leg of LDR to 5V and another leg to Arduino Analog pin A0
- 2. Attach one leg of 110K resistor with that leg of LDR connected to A0
- 3. Attach another leg of resistor to the ground
- 4. Connect the positive leg of LED to pin 11 and negative to GND

Circuit diagram:

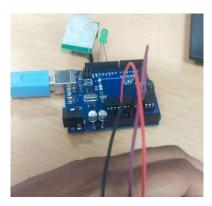


Fig 4.1- when it is bright, the LED is off.

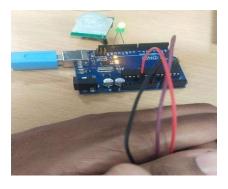


Fig 4.2- when dark, the LED turns on.

```
Code
     int LDR=0;
     av light lens tinky = 500;
     Secual-begin (9600);
pin Mode (11, OUTPUT);
     void loop()
      LDF Value = analog Road (LDR);
Serial preint (LDR value);
Olday (50);
       f (100 value < light-sensifinity)
Observation: when Sucresoundry Light is less, to
LED thems ON, 2 it thems Joff Juhn Siones
```

```
int LDR = 0;
int LDRValue = 0;
int light sensitivity = 500;
void setup()
Serial.begin(9600); pinMode(11, OUTPUT);
void loop()
LDRValue = analogRead(LDR); Serial.println(LDRValue); delay(50);
if (LDRValue < light sensitivity)
digitalWrite(11, HIGH);
else
digitalWrite(11, LOW);
delay(1000);
```

Observation:

The code successfully achieves the goal of simulating a night light based on the ambient light levels detected by the LDR. The analogRead function captures the LDR values, which are printed to the serial monitor for monitoring. The conditional statement compares these values to a light sensitivity threshold, and if the ambient light falls below this threshold, the LED is turned on, simulating a night light.

5. PIR with Arduino UNO

Aim: To detect the presence of human.

Hardware Required:

- 1 LED
- 1 PIR
- Arduino UNO

Circuit diagram:


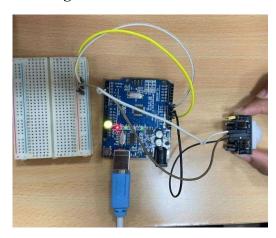


Fig 5- When motion is detected LED is high

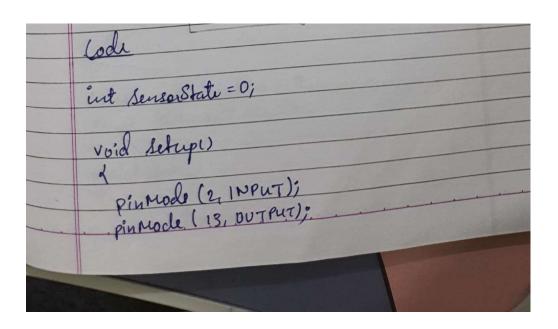

```
Secial begin (3600);

y

void loop()

if (Surson State = digital Keard (2);

if (Surson State = HI MH) 4

alignative (13, MIGH);

Social printly ("Senson a chiraled!");

y

else 4

alignatish waite (13, Low);

y

allay(10);

y
```

```
int sensorState = 0;
void setup()

{
pinMode(2, INPUT);
pinMode(13, OUTPUT);
Serial.begin(9600); }
void loop()
{
sensorState = digitalRead(2);
if (sensorState == HIGH) {
digitalWrite(13, HIGH);
```

```
} else {
digitalWrite(13, LOW);
}
delay(10); }
```

Observation:

The code effectively utilizes the PIR sensor to detect motion and responds by controlling the state of the LED. When motion is detected, the LED is illuminated, and a message is printed to the serial monitor

6. Ultrasound with Arduino UNO

Aim: To detect the distance of an object.

Hardware Required:

- Ultrasonic sensor
- jumper wires(female to male)
- Arduino UNO

Circuit diagram:

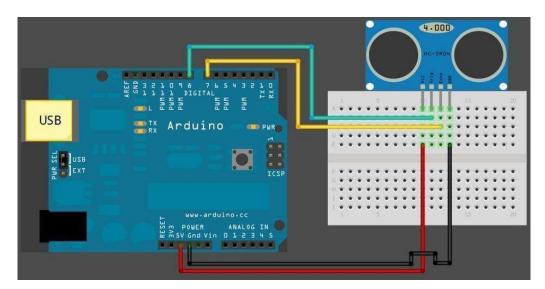




Fig 6-measures the distance of nearest object.

Coust int pinesin = 7;
coust int echopin = 6;

void setup ()

d

Selial-begin (3600);

pinnoch (pinpin, OUTPUT); pinnoch (echofin, INPUT); void looper loy diviation, " when, cur; digital weit (pippin, cow); delay Microbiconels (2) distalmente (pinglin, HIGH);
dilay Microliconds (10);
oligibilmente (pinglin, LOW);
direction = pulseth (echofin, Man); inches = micromends To Inches (divistion); Special perint (inches); Serial · preint (" inches") cm = nicrosuard to Cerhinetery (duration); Serial , peint (cum); Secial becintly ("(m"); day vicuosocod to inches (loy aricroseconds) suheur microsconds /14/2; lay nivergeneral To Continities (long minereseum section in crossords 129/2; Observation: The culturalound busin meanious distance of objects relieve up more at different positions.

```
Code:
```

```
const int pingPin = 7;
const int echoPin=6;
void setup()
Serial.begin(9600);
pinMode(pingPin, OUTPUT);
pinMode(echoPin, INPUT);
void loop()
long duration, inches, cm;
digitalWrite(pingPin, LOW);
delayMicroseconds(2);
digitalWrite(pingPin, HIGH);
delayMicroseconds(10);
digitalWrite(pingPin, LOW);
duration = pulseIn(echoPin, HIGH);
inches = microsecondsToInches(duration);
Serial.print(inches);
Serial.print("inches");
cm = microsecondsToCentimeters(duration);
Serial.print(cm);
Serial.println("cm");
long microsecondsToInches(long microseconds)
return microseconds / 74 / 2; }
```

```
long microsecondsToCentimeters(long microseconds)
{ return microseconds / 29 / 2;
}
```

Observation:

The code effectively utilizes the ultrasonic sensor to measure distance and provides readings in both inches and centimeters. In the loop, a pulse is generated by triggering the ultrasonic sensor, and the duration of the pulse is measured using the pulseIn() function.

7. Fire Alert

Aim:

Fire alarm simulation.

Hardware Required:

- Flame sensor (Analogue Output)
- Arduino
- Bread board
- LED
- Buzzer
- Connecting wires

Connections:

Flame sensor interfacing to Arduino

Flame sensor to Arduino

vcc to vcc

gnd to gnd

A0 to A0

Led interfacing to Arduino

LED +ve is connected to 9th pin of Arduino


LED -ve is connected to gnd pin of arduino

Buzzer interfacing to Arduino

Buzzer +ve is connected to 12th pin of Arduino

Buzzer -ve is connected to GND pin of Arduino

Circuit diagram:

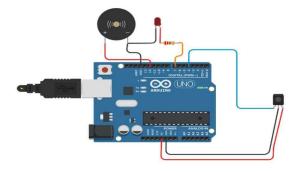



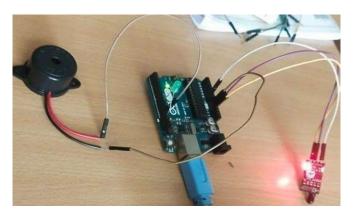


Fig 7- When the fire is detected LED turns on.

Handwritten code pic:

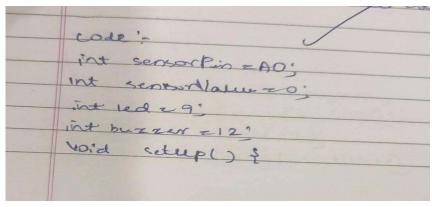

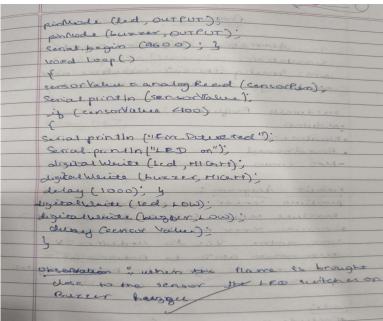

Code:

int sensorPin = A0; // select the input pin for the LDR

```
int sensorValue = 0; // variable to store the value coming from the sensor
int led = 9; // Output pin for LED
int buzzer = 12; // Output pin for Buzzer
void setup() {
pinMode(led, OUTPUT);
pinMode(buzzer,OUTPUT);
Serial.begin(9600);
void loop()
sensorValue = analogRead(sensorPin);
Serial.println(sensorValue);
if (sensorValue < 100)
Serial.println("Fire Detected");
Serial.println("LED on");
digitalWrite(led,HIGH);
digitalWrite(buzzer,HIGH);
delay(1000);
digitalWrite(led,LOW);
digitalWrite(buzzer,LOW);
delay(sensorValue);
```

Observation:

The code effectively simulates a fire alarm by monitoring the analog output of the flame sensor. When the sensor value falls below a predefined threshold (100 in this case), indicating the detection of a flame, the LED and buzzer are activated, and the corresponding messages are printed to the serial monitor.

8. Automatic irrigation controller simulation

Aim:

Sensing the soil moisture and sprinkling the Water simulation.

Hardware Required:

- Arduino
- Moisture Sensor
- Breadboard
- Min servo motor

Connections:

Moisture sensor VCC to Arduino 5V

Moisture sensor GND to Arduino GND

Moisture sensor A0 to Arduino A0

Servo motor VCC to Arduino 5V

Servo motor GND to Arduino GND

Servo Motor Signal to Arduino digital pin 9

Circuit diagram:

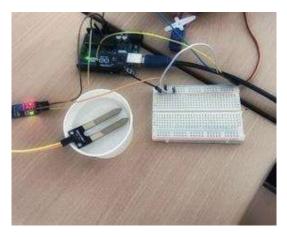


Fig 8- When moisture detected LED High, else Servo motor is on.

trinclude corno no

servo mysono;

int pos ro:

int remorboliu ro:

void setup();

mysono ottach (9);

sural hogin (9600)

Convertable analy Read (senecial)

Serial printin (senecial dues)

if (senecial printin (senecial dues))

for (posso; for 180; pos + 1)

toy (posso; for 180; pos + 1)

toy (posso; posso; posso)

delay (15);

delay (15);

delay (1000);

delay (1000);

oncervation - when the motor sener is

super inside water motor desirat

Totate when they is no warden it relate

Code:

#include <Servo.h>;

Servo myservo;

int pos = 0;

```
int sensorPin = A0;
int sensorValue = 0;
void setup() {
myservo.attach(9);
Serial.begin(9600);
void loop()
sensorValue = analogRead(sensorPin);
Serial.println (sensorValue);
if(sensorValue<500)
for (pos = 0; pos < 180; pos += 1)
{ // goes from 0 degrees to 180 degrees
myservo.write(pos);
delay(15); // waits 15ms for the servo to reach the position
for (pos = 180; pos < 0; pos -= 1)
{ // goes from 180 degrees to 0 degrees
myservo.write(pos);
delay(15); // waits 15ms for the servo to reach the position
delay (1000);
```

Observation:

The code simulates an automatic irrigation controller by utilizing a moisture sensor to monitor soil moisture levels. When the moisture level drops below the defined threshold, the servo motor moves to simulate the activation of a sprinkler system.

9. Reading the code present on RFID tag

Aim:

The following code will read the code present on RFID tag and print it in serial monitor.

Connection:

5V-Arduino 5V

GND-Arduino GND

Tx-pin 9

Circuit diagram:



Code:

```
{ count = 0;
  while(mySerial.available() && count < 12)
  {
    input[count] =mySerial.read();
    count++;
    delay(5); }
  Serial.print(input);
}}</pre>
```

Observation:

The output in the serial monitor is the RFID tag number, and it allows for real-time monitoring and verification of the data read from the RFID tag.

Aim:

The following code will read the code present on RFID tag tapped. If the code matches with the previously known tag (configured in the code), it will grant access (here LED will glow), otherwise access will be denied.

Connection:

5V-Arduino 5V

GND-Arduino GND

Tx-pin 9

Led-pin 12

Circuit diagram:


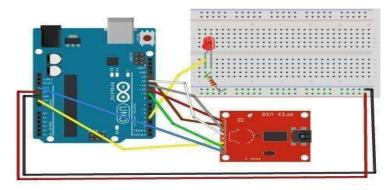


Fig.10.Access control through RFID

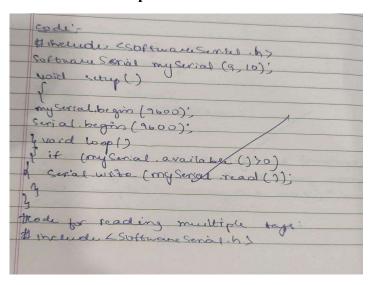

```
Software Served my Social (2010);
 char data temp sRFID data [12] sdata Marellaffie)
soid setup ()
I my coral begin (2000);
  genial . begin (9600)
 Print Data ():
usid receive Da toe ()
(070) eldaliavilable (070)
data demp = my senal read ();
PFID data [read iount] = data ting;
read court ++; y 3
word spredata ( )
if (read Gunt == 12)
  dispusited streng
 for | k = tag lount
 for (j=0; j <12; j++)
mead went =0;
wid Print Data ()
     if (disp control = = true)
```

```
#include<SoftwareSerial.h>;
SoftwareSerial mySerial(9, 10);
#define LEDPIN 12
char tag[] ="5300292DD087;" // Replace with your own Tag ID
char input[12]; // A variable to store the Tag ID being presented
int count = 0; // A counter variable to navigate through the input[] character array
boolean flag = 0; // A variable to store the Tag match status
void setup()
```

```
Serial.begin(9600);
mySerial.begin(9600);
pinMode(LEDPIN,OUTPUT); }
void loop()
if(mySerial.available())
    count = 0;
while(mySerial.available() && count < 12)
input[count] = mySerial.read();
count++; // increment counter
delay(5);
  }
if(count == 12)
count =0; // reset counter varibale to 0
flag = 1;
while(count<12 && flag !=0)
if(input[count]==tag[count])
flag = 1;
else
flag=0;
count++; // increment i }}
if(flag == 1) // If flag variable is 1, then it means the tags match
Serial.println("Access Allowed!");
```

```
digitalWrite(LEDPIN,HIGH);
delay (2000);
digitalWrite (LEDPIN,LOW); }
else
{
    Serial.println("Access Denied"); // Incorrect Tag Message
    digitalWrite(LEDPIN,LOW);
    delay(2000); }
for(count=0; count<12; count++)
{
    input[count]= 'F';
}
count = 0; // Reset counter variable
}
}</pre>
```

Observation:

Upon tapping an RFID tag, the code reads the tag's code and compares it with the predefined tag (tag[]). If the codes match, access is granted, and the LED indicator lights up for a brief period. If there is no match, access is denied, and the LED remains off.

HC-05 Bluetooth Module

```
HC-05 PinOut (Right):
```

- KEY: If brought HIGH before power is applied, forces AT Command Setup Mode.
- LED blinks slowly (2 seconds)
- VCC: +5 Power
- GND: System / Arduino Ground
- TXD: Transmit Serial Data from HC-05 to Arduino Serial Receive. NOTE: 3.3V

HIGH level: OK for Arduino
• RXD: Receive Serial Data from Arduino Serial Transmit
• STATE: Tells if connected or not

11. HC-05 at Command prompt

Aim:


The following code will help establish communication between arduino board and HC-05 Bluetooth module

Hardware Required:

- HC-05 Bluetooth module
- Arduino uno
- Jumper wires

Connections:

- 1.Vcc of Bluetooth to 5v of arduino
- 2.GND of Bluetooth to Ground of arduino
- 3. TXD of Bluetooth to Rx of arduino
- 4. RXD of Bluetooth to Tx of arduino

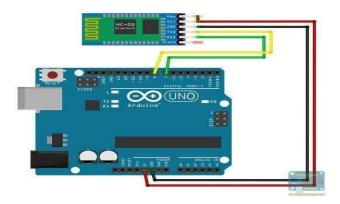

```
riscuit diagram
VCC of Buestouth moderes to 5V doeduns
GND (Bucackooth) to GND (seedung)
RXD (Bluertooth) to 11 (Arduno)
TXD ( Phusooth) do 10 (Addina)
HC-05 at command prompt:
Findude Csof ware Serval b)
Software Serial Bisonal (10,1);
() quites biox
 Serval begin (9600);
  Social princes ("Entre pt commands");
  BT Serial obegin (28 400); 3
 word loop ()
  if Biserial available ()
   Senal write (BTSenal road ());
  if (Senal available ())
```

```
RISUNAL. Write (Gerral read());

Print commonds: and

autput

AT

out; Ok

AT+VERSION?

+

PT+UART=9600,0,0

Ok.

AT+RESET

OK.
```

```
(For this program to work, HC-05 must be in command mode)
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup()
{
Serial.begin(9600);
```

```
Serial.println("Enter AT commands:");

BTSerial.begin(38400); // HC-05 default speed in AT command more
}

void loop ()
{

if (BTSerial.available())

Serial.write(BTSerial.read());

if (Serial.available())

BTSerial.write(Serial.read()); }
```

12. HC-05 Controlled by mobile

Aim:

To control an LED using a Bluetooth module (such as HC-05) in data mode, with commands sent from an Arduino Bluetooth app

Hardware Required:

- HC-05 Bluetooth module
- Led
- Arduino uno
- Jumper wires

Connection:


1. Bluetooth Module (HC-05) to Arduino:

- Connect the TX pin of the HC-05 module to a digital pin on the Arduino (e.g., pin 2).
- Connect the RX pin of the HC-05 module to a digital pin on the Arduino (e.g., pin 3).
- Connect the VCC pin of the HC-05 module to the 5V pin on the Arduino.
- Connect the GND pin of the HC-05 module to the GND pin on the Arduino.

2.LED to Arduino:


- Connect the anode (longer lead) of the LED to the digital pin 13
- Connect the cathode (shorter lead) of the LED to a current-limiting resistor

• Connect the other end of the resistor to the GND pin on the Arduino.

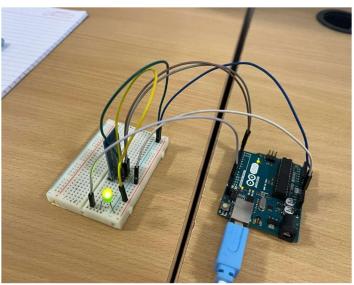

Handwritten code pic:

416-05 controlled by mobile:
Halfine led Pin 13
int state =0;
tood setup () of the contraction
pinMode (ledlin, OUTPUT);
digital Muite (ledlin, LOW);
Sonal begin (38400);
Jan Branch to Mark
waid bop () (
of (Sepa) Chailable (1) 50)
if (Senal available) 70) }
State z Senol read (); y
(200 200)
James (leatin , LOW)
senal prot in "LED. OFF").
The state of the s
(Marco, 22))
again the led lin MICAH):
serial printh ("LED: DAI");

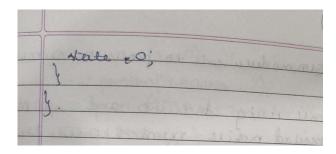

Code:

```
(For this code to work, HC-05 must be in DATA mode and Arduino Bluetooth App)
#define ledPin 13
int state = 0;
void setup() {
 pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(38400);
void loop() {
 if(Serial.available() < 0)
  state = Serial.read(); // Reads the data from the serial port
if (state == "0") {
 digitalWrite(ledPin, LOW); // Turn LED OFF
 Serial.println("LED: OFF");
 state = 0;
else if (state == "1") {
 digitalWrite(ledPin, HIGH);
 Serial.println("LED: ON");;
 state = 0; \}
```

13. BT-Master Slave

Aim:

To establish communication between a Bluetooth master device (likely a smartphone or another microcontroller acting as a master) and a Bluetooth slave device (Arduino with HC-05 module) to control an LED wirelessly.

Hardware Required:

For Bluetooth Slave (BT-Slave):

- Arduino Uno
- HC-05 Bluetooth Module
- Jumper Wires

For Bluetooth Master (BT-Master):

- Arduino Uno
- HC-05 Bluetooth Module
- LED
- Resistor
- Jumper Wires

Connections:

1. Bluetooth Slave (BT-Slave) Connections:

HC-05 Bluetooth Module:

- Connect the TX pin to Arduino digital pin 10.
- Connect the RX pin to Arduino digital pin 11.
- Connect the VCC pin to Arduino 5V.
- Connect the GND pin to Arduino GND.

2. Bluetooth Master (BT-Master) Connections:


HC-05 Bluetooth Module:

- Connect the TX pin to Arduino digital pin 10.
- Connect the RX pin to Arduino digital pin 11.
- Connect the VCC pin to Arduino 5V.
- Connect the GND pin to Arduino GND.

3.LED and Resistor:

• Connect the anode (longer lead) of the LED to Arduino digital pin 9.

- Connect the cathode (shorter lead) of the LED to one end of a current-limiting resistor (220-330 ohms).
- Connect the other end of the resistor to Arduino GND.

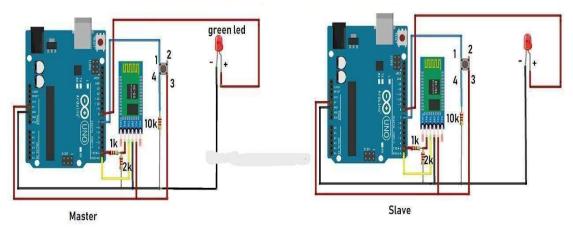

Handwritten code pic:

commands to setup matter made; AT + RMAAD AT + APCN AT TROLECT AT + CMODE TO. AT + PSW'D 21234 " Set AN should be some DT+BIND = caddeur) BIALINE a adoleser > AT+INT . By some program? & wir unde of solucies so rales Software serial (10,11) void suppl) of Siral begin (9600): BT soial begin (284,00); p () good bion if (Senal anibble ()) of string manage a server read sleing () scred proto (navage); Break wite (melege a str) 37 BT morke programs I include & software Sepal in Software Serial 155 serval (10, 11); # define balking thing murage! int potrame io;) () quite bio pinnode (red Pin , 2000 07 POT); agitalunite (led Rin Low); Serial begin (9600); BI seral begin (38400):3 icagod bion F (BTGenal available (120)) if I murage Index of ("yuth ON) > >0) (digital blite (led Fin 11121); also if (murage index of ("SWITEH OFF") 200) of digital herite (deal Rin , Low);) else of serial pointin ("Noting eta do ")" 4 delay (100); delay (10);

```
BT-Slave Program:
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
void setup() {
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
void loop() {
if(Serial.available())
 String message = Serial.readString();
 Serial.println (message);
 BTSerial.write(message.c_str());
   } }
BT-Master Program:
#include <SoftwareSerial.h>;
SoftwareSerial BTSerial(10, 11); // RX | TX
#define ledPin 9
String message;
int potValue = 0;
void setup() {
 pinMode(ledPin, OUTPUT);
 digitalWrite(ledPin, LOW);
 Serial.begin(9600);
 BTSerial.begin(38400); // HC-05 default speed in AT command more
void loop() {
if(BTSerial.available() < 0)
```

```
message = BTSerial.readString();
if(message.indexOf("SWITCH ON")<=0)
{
    digitalWrite(ledPin, HIGH); // LED ON
}
else if(message.indexOf("SWITCH OFF")<=0)
{
    digitalWrite(ledPin, LOW); // LED OFF
}
delay(100); }
delay(100);
}</pre>
```

14.GSM Module

1. GSM Module: Call to a particular number

Aim:


Call using Arduino and GSM Module – to a specified mobile number inside the program.

Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Power Supply
- Jumper wires

Connection:

- 1. Connect the RX pin of the GSM module to pin 2 (TX) on the Arduino.
- 2. Connect the TX pin of the GSM module to pin 3 (RX) on the Arduino.
- 3. Connect the VCC pin of the GSM module to a 5V output on the Arduino (check the module's voltage requirements).
- 4. Connect the GND pin of the GSM module to a GND pin on the Arduino.

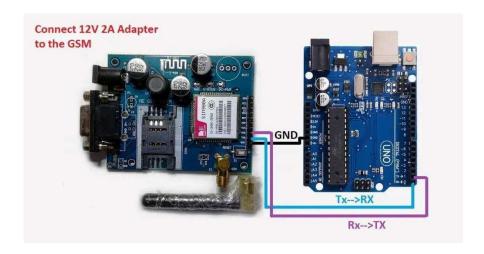

Handwritten code pic:

```
steps for botting est module:

Should simin allocated shot.

pauce on asm modern with 124 power repply

Sheet status I & D. it should being bonce in 3

seconds.

Teall to the number of the sim inverted, you shall

get callbart tone.

Jumpany:

I warm module: call a poetaulor number

Minaural ( Sof burger Schal h?

Column schioos);

delay(500);
```

Smal begin (9600) Serial printho ("CALLING "); ecel protos ("DTD+35 2843364")")" delay (2000 a); y void lasp() (4) sending and puring menage: # metucle C Software Serval. h? Software Serial my Serial (2,3); wood setup () (muserial begin (2600); Senal, begin (3600); delayay (10); } of it (seval avaitable (1)0) switch (Gral read ()) of case 's' Send Muragel); break. car 'r' Recene Muragel) beeak', 4 (f(my Senalavoilable () >0) Senal write (my Senal read ()); raid sudmenage () { my Servial pronth ("AT+ CMER &"); delay (1000); my serial printhofunt + cmas = (" +91924286606 M/D). July (1000) my Serial printing ["Zam sin when ssm"!" delay (100);

```
my senal printh ((chas) 26);

aleay (1000);

loid Receive hereage ()

my senal printh ("AT+ (NMC = 2, 20, 0,0")",

aleay (1000);
```

code:

```
#include <SoftwareSerial.h>;
SoftwareSerial cell(2,3); // (Rx, Tx)
void setup() {
cell.begin(9600);
delay(500);
Serial.begin(9600);
Serial.println("CALLING......");
cell.println("ATD+9538433364;"); // ATD - Attention Dial delay(20000);
}
void loop() {
}
```

Observation:

The code successfully initiates a call to the specified mobile number using the GSM module. The "CALLING.." message is printed to the Serial Monitor, indicating the initiation of the call. The AT command "ATD+9538433364;" is sent to the GSM module, instructing it to dial the specified number.

2. Call to a particular number on an alert

Aim:

Call a specified mobile number mentioned in the program using Arduino and GSM Module when a flame sensor detects "fire".

Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Flame Sensor
- Jumper Wires


Connections:

1.GSM Module to Arduino:

- Connect the RX pin of the GSM module to a digital pin 2 on the Arduino.
- Connect the TX pin of the GSM module to another digital pin 3 on the Arduino.
- Connect the VCC pin of the GSM module to a 5V output on the Arduino
- Connect the GND pin of the GSM module to a GND pin on the Arduino.

2. Flame Sensor to Arduino:

- Connect the signal pin of the flame sensor to a digital pin 4 on the Arduino
- Connect the VCC pin of the flame sensor to a 5V output on the Arduino.
- Connect the GND pin of the flame sensor to a GND pin on the Arduino

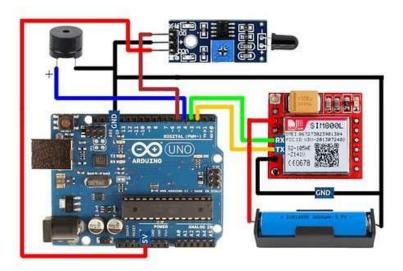

Connections for flame sensor:

Arduino Flame Sensor

5V VCC

GND GND

A0 A0

Program:

```
#include <SoftwareSerial.h>
SoftwareSerialcell(2,3);
void setup() {
cell.begin(9600);
delay(500);
Serial.begin(9600);
void loop() {
intval=analogRead(A0);
Serial.println(val);
delay(1000);
if (val<50)
Serial.println("CALLING......");
cell.println("ATD+919742980606;");
delay(10000);
cell.println("ATH"); // Attention Hook Control
```

3. Sending and Receiving Message

Aim:

1) Send SMS using Arduino and GSM Module – to a specified mobile number inside the

program

2) Receive SMS using Arduino and GSM Module – to the SIM card loaded in the GSM Module.


Hardware Required:

- Arduino Uno
- GSM Module
- SIM Card
- Jumper Wires

Connections:

1.GSM Module to Arduino:

- Connect the RX pin of the GSM module to a digital pin 2 on the Arduino.
- Connect the TX pin of the GSM module to another digital pin 3 on the Arduino.
- Connect the VCC pin of the GSM module to a 5V output on the Arduino
- Connect the GND pin of the GSM module to a GND pin on the Arduino

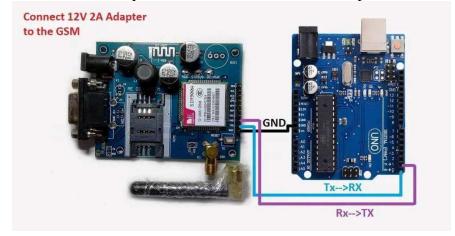

Program:

Note: According to the code, message will be sent and received when 's' and 'r' are pressed

through serial monitor respectively.

#include <SoftwareSerial.h>

SoftwareSerial mySerial(2, 3);

```
void setup()
mySerial.begin(9600); // Setting the baud rate of GSM Module
Serial.begin(9600); // Setting the baud rate of Serial Monitor (Arduino)
delay(100);
```

```
}
void loop()
if (Serial.available()<0)
switch(Serial.read())
Case "s":
SendMessage();
break;
case "r":
RecieveMessage();
break;
if (mySerial.available()<0)</pre>
Serial.write(mySerial.read());
voidSendMessage()
mySerial.println("AT+CMGF=1"); //Sets the GSM Module in Text Mode
//AT+CMGF,
SMS Format
delay(1000); // Delay of 1000 milli seconds or 1 second
mySerial.println("AT+CMGS=\"+919742980606\"\r"); // AT+CMGS, Send Message
delay(1000);
mySerial.println("I am SMS from GSM Module");
delay(100);
mySerial.println((char)26);
delay(1000);
```

```
voidRecieveMessage()
mySerial.println("AT+CNMI=2,2,0,0,0");
delay(1000);
```

4. Controlling LED through received messages:

Aim:

Use received message through Arduino and GSM Module to control Switching ON / OFF the

LED.

Connection: Attach LED to pin 13 and GND.

Program:

```
#include <SoftwareSerial.h>
SoftwareSerial cell(2,3);
Void readfn()
if (cell.available()) {
while (cell.available()) {
Serial.write(cell.read());
} } }
void setup() {
pinMode(13,OUTPUT);
Serial.begin(9600);
cell.begin(9600);
cell.println("AT");
delay(1000);
readfn();
//New SMS alert
cell.println("AT+CNMI=1,2,0,0,0");
```

```
}
void loop() {
if(cell.available())
String message =cell.readString();
Serial.println(message);
if(message.indexOf("SWITCH ON")=0)
digitalWrite(13,HIGH);
else if(message.indexOf("SWITCH OFF")=0)
digitalWrite(13,LOW);
else
Serial.println ("Nothing to do...");
```

