


CALIBRATION -- measure this line with a real ruler. Must read exactly 100.0mm.



J1 TP4056_Module -- as currently modeled in the PCB library
approx. board outline (26–28 x 17–17.5mm range, UNVERIFIED -- context only)

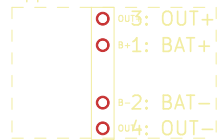

HOW TO USE THIS SHEET:

1. Print at 100% / Actual Size (NOT 'Fit to Page' or 'Shrink to Fit').
2. Measure the 100mm calibration line above with a real ruler to confirm 1:1 scale.
3. Once the physical TP4056 module arrives, hold this sheet behind or under it
so the 4 pad circles line up with the module's own 4 solder pads/holes.
4. If they don't align, measure the real offset and tell Claude -- the
footprint (`hardware/EchoSafe_RevA/lib/symbols/TP4056_Module.pretty/`
`TP4056_Module.kicad_mod`) is a quick, isolated edit to correct.