#### CHAPTER 14

# THE GROUPING AND ZEROING RANGE INTRODUCTION

- 1401. **General**. Although grouping and zeroing (G&Z) may be carried out on most ranges, it is often expedient to include a G&Z range as part of a range complex to enable this task to be carried out concurrently with other shooting practices. The recommended distance for G&Z of rifles and the LSW is 100
- 1402. Aim. This chapter describes the construction requirements for G&Z ranges and in particular:

a.	Introduction	1401 - 1402
b.	Range danger areas	1403
C.	Siting	1404 - 1405
d.	Construction	1406 - 1409
e.	Communications	1410
f.	Maintenance	1411

### RANGE DANGER AREAS

- 1403. The RDA requirements for a G&Z range are:
  - **WDA**. When open ground is used with or without a fall of shot a. bank (see paragraph 1407), the WDA template shown at Figure 19-2 is applied to each firing point. See Figure 14-1.
  - LDA. If the range is constructed to Gallery criteria using a b. mantlet and stop butt, the GR RDA may be applied. See Figure 14-2.

## **SITING**

- 1404. Requirements. A reasonably flat, northerly orientated, well drained site, about 120 m long is required. The width of the range depends on the number and width of the firing lanes.
- 1405. Lane Width. The lane width is normally 6 m but this may be reduced to 4 m to reduce ground works and if insufficient land is available.

#### CONSTRUCTION

- 1406. **General**. A G&Z range is shown in outline at Figure 14-1. The construction has been specifically designed to provide a cost effective, single task range.
- 1407. Fall of Shot Bank. Typically a 1.5-2.5 m high bank is provided only to indicate fall of shot.
- 1408. Targetry. Zeroing screens or AMS may be used.
- 1409. Firing Points. Firing points are required to allow firing from all postures. They should be raised 450 mm above the range floor with a fall of 1:12 to the rear (see Figure 2-13). Fire trenches may be included to extend the use of the range. Figure 2-13 shows a standard firing point.

Feb 12 Chap 14


## **COMMUNICATIONS**

1410. A means of summoning the emergency services, ideally a land laid telephone, is to be available.


## **MAINTENANCE**

1411. Ranges with a Gallery RDA template must be maintained to the full GR standard (see Chapter 15).

Chap 14 Feb 12

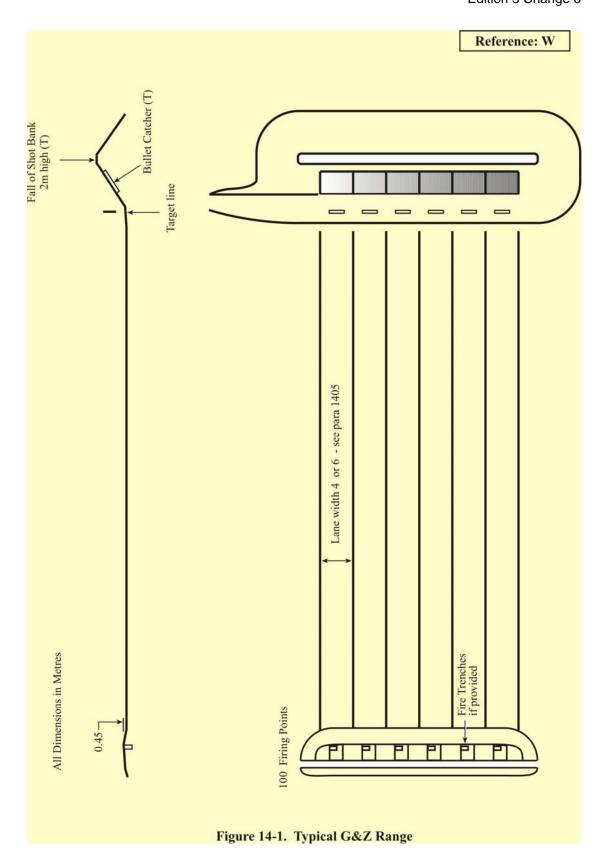

Feb 12 Chap 14 Page 3

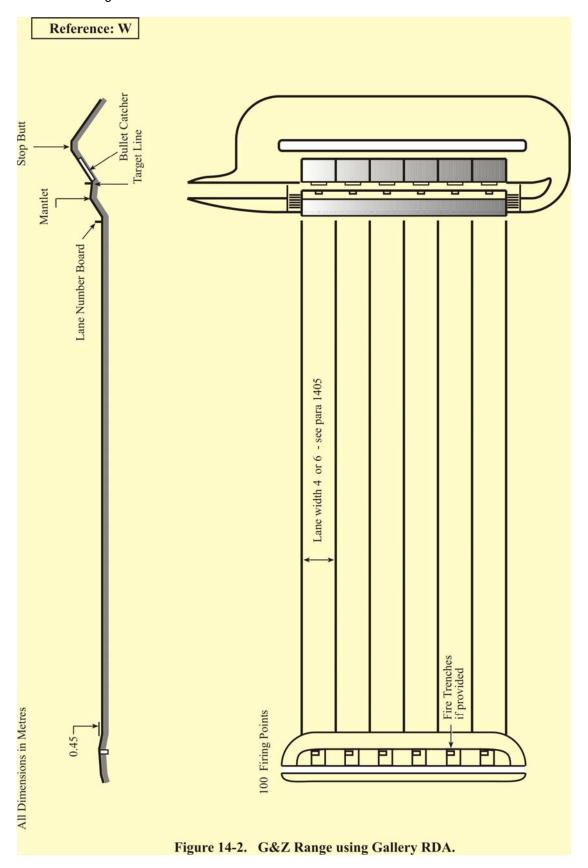

Chap 14 Feb 12 Page 4