

Manual

E-Report Manager Installation+Update SIS-ERM 3.0/3.1

Version 2020-10-07

Last changed on: 08.10.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of Oracle Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	First installation	4
1.1	Requirements.....	4
1.2	Definition of terms	4
1.3	Installing a HYDRA update.....	5
1.4	Running database patch on the HYDRA server.....	5
1.5	Configurations on the MOC	6
1.6	Installation on the E-Report Server.....	8
1.6.1	Overview	8
1.6.2	Installing program files.....	9
1.6.3	Configuration: Print Server service	9
1.6.4	Customizations in MOC applications	10
1.6.5	Configuring List & Label for the Print Server service.....	11
1.6.6	Printer configuration for the Print Server service.....	11
1.6.7	HTTPS / Basic Authentication	12
1.6.8	Installation of the Print Server service	22
1.6.9	Troubleshooting.....	23
1.7	Checking the application on the MOC and setting up test.....	25
2	Update.....	26
2.1	Installing an update	26
2.2	Updating the Print Server service on the e-report server	26


1 First installation



This section describes how to install the E-Report Manager (first installation). If the E-Report Manager has already been installed and you only want to update the installation, go on with section "2 Update".

1.1 Requirements

- HYDRA system as of service pack 12 for HYDRA 8.
- In case of a first installation: Installed ScriptAddOn for service pack 12 for HYDRA 8.
- For communication via HTTPS: service pack 15 (end 2019)
- Cyclic report generation has been implemented as Windows service that must be installed on a Windows host.
- You can install several instances of the E-Report Manager on a Windows host.
- An instance of the E-Report Manager can be connected to exactly one HYDRA system.
- A HYDRA system can be connected to exactly one instance of the E-Report Manager.

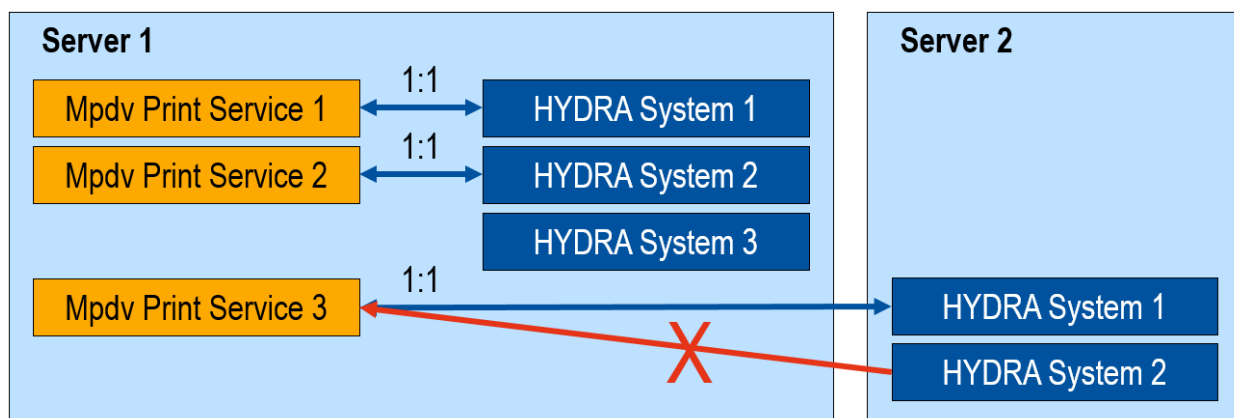

1.2 Definition of terms

E-Report Management

E-Report Manager

Global term for everything in the context of e-reporting: e-report server, Print Server service, MOC application *Configuration E-Report Manager*, ...

E-Report Server

Host where the Print Server service is installed.

Configuration E-Report Manager

Name of the MOC application to configure reports for the E-Report Management.

Print Server service

Windows service that receives the orders to create, print and send reports.

Mpdv Print Service <PsInstanceNo>

Name of the Print Server service in the Windows application "Services". <PsInstanceNo> is replaced with the instance number. The instance numbers start with 1.

MpdvPrintServer.exe

Name of the program file of the Print Server service

1.3 Installing a HYDRA update

If your HYDRA system does not yet include service pack 12, you must first install service pack 12. To identify the current system version including service pack information, go to the file "sp.txt" in the HYDRA directory of the HYDRA server.

If you install the e-report manager for the first time and the ScriptAddOn of service pack version 12 is missing, you must first install the ScriptAddOn of service pack 12. To identify the current version of the ScriptAddOn in your system, go to the file "sp.addOn" in the HYDRA directory of the HYDRA server.

If you want to configure and use the communication via https, you require HYDRA version MW 3.x with service pack 15 or HYDRA version MW 4.0pe. Service pack 15 is probably available by the end of 2019. If you want to use the communication via HTTPS with MW3.x before service pack 15 is available, you require a personalized update. Contact MPDV, if required.

Check the software status and, if required, install the update in each HYDRA or MIP system where you want to use the E-Report Manager.

1.4 Running database patch on the HYDRA server

In case of a first installation, you must extend the HYDRA database. Run a database patch to do so. This patch additionally provides specific initial data for the configuration of the e-report management.

Run the patch in each HYDRA or MIP system where you want to use the E-Report Manager.

Windows:

Start the MS-DOS prompt on the HYDRA server from the "HYDRA Administration" directory for the instance currently processed on the desktop.

Run the following command in the command line:

```
hydscr db_sql/dbp_ereportmanager.hsc > dbp_ereportmanager.pro
```

Linux: Connect to the HYDRA server via telnet connection and start hsys.scr -1 (environment for instance 1).

Run the following command in the command line:

```
hydscr.out db_sql/dbp_ereportmanager.hsc > dbp_ereportmanager.pro
```

Windows and Linux:

Check the output of the patch in the file dbp_ereportmanager.pro. No errors or warnings may occur.

Run the patch in each HYDRA or MIP system where you want to use the E-Report Manager.

1.5 Configurations on the MOC

Checking path configuration

The patch creates two paths that are derived from the path MOCREP. Check in the MOC application *Paths*, if the paths have been created automatically and if the URL path is reasonable.

1. PSLLXML

This path includes the parameter configuration, e.g. the files including the parameter values (selection panel) of the reports.

The name PSLLXML is fixed.

Example with system number 1: d:\hydra\1\custom\leReporting

2. PSREPORT

This path is required to save the report output files. The path is assigned in a field of each data record in the e-report configuration. You are free to select any path name, but we recommend to use PSREPORT.

Example with system number 1: d:\hydra\1\custom\leReporting

3. MOCREP

This path includes the report files. Usually, the path is preconfigured in the HYDRA system.

Example with system number 1: d:\hydra\1\custom\reports



The server/computer including the installation of the Print Server service must be authorized to access the configured file path. Also the user using the Print Server service must be authorized to access the paths.

Example:

Paths									
Drag a column here to group by that column									
Path	Protocol	Host	Port	URL path	User	Description	Modified by	Changed on	
PSLLXML	file	localhost	0	f:\hydra3\3\custom\Reporting	hydadm	eReport application configurat...	PATCH	17.10.2017 00:0...	
PSREPORT	file	localhost	0	f:\hydra3\3\custom\Reporting	hydadm	eReport export target	PATCH	17.10.2017 00:0...	

If the patch could not create the two paths, you must create the paths on the MOC.

Configuration escalation management

The patch creates the event *ESK.MESSAGE* in the *Escalation configuration*, if not yet available. To send reports per mail, you may configure the event only once.

Check in the escalation configuration if the event *ESK.MESSAGE* has been created properly.

The configuration of the recipient type/recipient has the role of a dummy in this escalation configuration. The recipient is configured in the *Configuration of the e-report manager*.

The following values for the event *ESK.MESSAGE* must be entered in the *Escalation configuration*:

Tab	Field	Content
Event	Event	<i>ESK.MESSAGE</i>
Event	Active	<Activated>
Message	Subject	%ESK.MSGSUBJ%
Message	Text	%ESK.MSGTXT%
Notification	Condition 1 / Operator	to
Notification	Condition 1 / Type	E-mail



You must properly activate the escalation management in the HYDRA basic settings. To do so, define an e-mail server (SMTP server) and a sender for the e-mails.

INI configuration URL of the E-Report Server

Store the address of the e-report server on the MOC in an *INI configuration*. If required, you must first create an *INI configuration* and then an *INI data configuration*:

Name: PRINTSERVER

Section:	E-REPORTING
Key:	SERVERURL
Value:	The address where the e-report server is available, incl. protocol and port, e.g. <i>http://testserver:9017</i>

You can also select a deviating port, see also section "1.6.3 Configuration: Print Server service", property "ServiceUri". Especially if you use several instances of the E-Report Manager on one server, you must be careful to select the proper port.

Recommendation for the assignment of ports:

- 9017: Port of first instance of the E-Report Manager on a server
- 9027: Port of second instance of the E-Report Manager on a server
- ...

Perform the configuration in each HYDRA or MIP system where you want to use the E-Report Manager.

1.6 Installation on the E-Report Server

1.6.1 Overview

On the e-report server, a service is installed that gets the orders to create, print and send reports. The service is called "Print Server service".

The e-report server can be identical to the HYDRA server if it is a Windows server.

You can use several instances of the E-Report Manager on one server.

- Each instance is installed in a separate directory.
- The configuration file of the instance is stored in the installation directory of the instance.
- For each instance, a separate Windows service is installed.
- The instances are numbered.
- Numbers start with 1. The instance number is later used in names of directories, services, etc. The placeholder <PsInstanceNo> replaces the instance number in the installation instructions. It must be replaced with the number of the instance currently considered.
- Also use instance number 1 if you install one instance only.

You will usually require one instance of the E-Report Manager only.

1.6.2 Installing program files

Unpack the zip file MpdvPrintServer.zip (<HYDRA>\products\leReporting\MpdvPrintServer.zip) in a folder with write permission, e.g. C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>.

Create a separate folder for each instance and replace <PsInstanceNo> with the instance number.

1.6.3 Configuration: Print Server service

You must modify the settings in the file MpdvPrintServer_<PsInstanceNo>\bin\Release\MpdvPrintServer.exe.config. Set the following parameters in the node <appSettings> of the XML file.

Replace <PsInstanceNo> with the instance number.

The keys in bold letters must absolutely be checked and changed, if required. The keys in normal letters usually work with default values.

KEY	VALUE (example)	Description
PathConfig	C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>	Specifies where the Print Server service is installed.
PathLog	C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Log	Specifies where the log files of the Print Server service are stored.
HydraSys	http://myServer.myDomain.local or https://myServer.myDomain.local	Address of the WSP on the HYDRA server If the communication is made via HTTPS, then the entry must start with "https". Note: To use https, you require further configurations. Use the "fully qualified domain name" because an HTTPS communication is not possible without.
HydraPort	8080	Port of the WSP on the HYDRA server
HydraUsr	eRepServer	HYDRA user (create a separate HYDRA user for the Print Server service)
HydraPsw	4711	Password of the HYDRA user (create a separate user for the Print Server service)
HydraPswCryp	Rbsb43QpvCAcKnGc5TEFTg==	Optional encrypted password of the HYDRA user (create a separate user for the Print Server service) (as of SP15). To encrypt the password, you can use the tool MpdvHyToolDbPassGen described below. As of SP15, the Print Server service encrypts the password on start from the setting HydraPsw to the setting HydraPswCryp.
ServiceUri	http://127.0.0.1:9017/ or https://127.0.0.1:9017/ In case of several instances:	Address where the service is locally available. The IP address 127.0.0.1 is for "localhost" and should not be changed.

	http://127.0.0.1:9027/ or https://127.0.0.1:9027/ ...	If the communication is made via HTTPS, then the entry must start with "https". Note: To use https, you require further configurations. The number after the colon specifies the port used for the Print Server service. If required, you can change the port, e.g. if the port is used by another service. Note: If you change the port, you must also change the port in other places, e.g. in the INI configuration on the MOC. Recommendation for the assignment of ports: • 9017: Port of first instance of the E-Report Manager on a server • 9027: Port of second instance of the E-Report Manager on a server • ...
LoginClient	1	
Culture	de-DE	Standard language of the Print Server service
LogLevel	Off	Important to Support: "Trace"
LogCombit	false	Set to true to activate the logging of the List&Label component.
SecondsBetweenUpdatingTaskList	1680	1680 = 28 min Specifies the update intervals of the Print Server service's TaskList. (Because the WSP is usually configured with a timeout of 30 minutes, the recommended interval for the KEY SecondsBetweenUpdatingTaskList is 28 min. If the interval is larger, the Print Server service might have to log in anew. However, the new login is not a problem).
DefaultSettingScope	Local	Scope to process customizations ("standard" may only be used by MPDV)

1.6.4 Customizations in MOC applications

If you use the E-Report Manager to create reports, which are based on customizations delivered by MPDV or developed yourself, then you must copy these customizations from an MOC to the installation folder of the Print Server service.

You must manually copy customizations of MOC applications from an existing MOC installation and store the customizations in an installation folder of the Print Server service. (Valid as of version 2.2.x.x of the Print Server service)

Copying customizations of the custom scope:

Source on the MOC	Storage location on the e-report server (example)
c:\Program Files\MPDV\MOC\	c:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>
custom\plugins*.*	resources\custom\plugins
custom\conf\MOC\Apps*.*	resources\custom\conf\Apps
custom\resources\data\Properties*.*	resources\custom\data\properties
custom\resources\data\Services*.*	resources\custom\data\services
custom\resources\languages*.*	resources\custom\languages

Copying customizations of the local scope:

Source on the MOC	Storage location on the e-report server (example)
c:\Program Files\MPDV\MOC\	c:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>
local\plugins*.*	resources\local\plugins
local\conf\MOC\Apps*.*	resources\local\conf\Apps
local\resources\data\Properties*.*	resources\local\data\properties
local\resources\data\Services*.*	resources\local\data\services
local\resources\languages*.*	resources\local\languages

1.6.5 Configuring List & Label for the Print Server service

If you want to use List & Label to print reports, you must modify the configuration (MpdvPrintServer.exe.config) with respect to the operating system.

- For x64 (default): x86 is commented out

```
<!-- Run x64: -->
<probing privatePath="vendor/LL20/x64;" />
<!-- Run x86: -->
<!-- <probing privatePath="vendor/LL20;" /> -->
```

- For x86 (default): x64 is commented out

```
<!-- Run x64: -->
<!-- <probing privatePath="vendor/LL20/x64;" /> -->
<!-- Run x86: -->
<probing privatePath="vendor/LL20;" />
```

1.6.6 Printer configuration for the Print Server service

To enable List & Label to print reports, you must install and activate at least one printer on the computer where the Print Server service is installed.

The printer settings then apply for printing.

If no "real" printer is installed, the XPS printer can also be used as default printer.

1.6.7 HTTPS / Basic Authentication

Overview of the communication as of SP 15 (beforehand the MOC directly communicates with the Print Server service):

MOC <-----> WSP <-----> Print Server service

You can secure the communication between Print Server service and WSP using the e-report management:

- The communication between WSP and Print Server service is protected via Basic Authentication.
- The communication between WSP and Print Server service can optionally be made via HTTPS in encrypted form.

Availability:

- Basic Authentication
- Communication via HTTPS



Both features are available as of HYDRA version MW 3.x with service pack 15 or HYDRA version MW 4.0pe. Service pack 15 is probably available by the end of 2019. If you want to use one of the two features with MW 3.x before service pack 15 is available, you require a personalized update. Contact MPDV, if required.

Also at a later point in time, you can still activate or deactivate the communication via HTTPS.



You can also change user and password for Basic Authentication at a later point in time. In both cases, you must restart the WSP and the Print Server service after having changed the configurations.

User and password for Basic Authentication

The WebServiceProvider WSP uses a default user with a default password to access the Print Server service. If no specific user and password is configured, the WSP and the Print Server service use the following default values:

Default user: MPDVPrintService

Default password: Mosbach74821

You can change user and password. Change the configuration for the WSP and the Print Server service:

- 1) For the WSP in the **global** configuration file config.properties
(Example: \\MyServer\HYDRA\JHydraDir\MOC\config.properties)
Note:
Do **not** use the configuration file in the sub folder with the instance number!

```
printservice.user=MPDVPrintService
printservice.user.password=oYOudOFYxRGjbcCI5vWDhg==
```
- 2) For the Print Server service in the configuration file
(Example ...\MpdvPrintServer_<PsInstanceNo>\bin\Release\MpdvPrintServer.exe.config)

```
<add key="WsplInterfaceUsr" value="MPDVPrintService"/>
<add key="WsplInterfacePwdCryp" value="oYOudOFYxRGjbcCI5vWDhg==" />
```

The passwords are saved in encrypted form.

The following tool is available to encrypt user and password:

admtools/java_db_passwd/MpdvHyToolDbPassGen.jar

There are two ways to start the program. Under Windows or another operating system that provides a Windows Manager, double-click the tool to start the GUI of the tool. Enter the user name and the password and click the button *Encrypt password*. The encrypted password can then be copied from the text field *Crypted password*.



The second option to encrypt a password is to use the command line mode. Open a Shell prompt and change to the following directory:
<HYDRA Dir>/admtools/java_db_passwd

Use the command below to create an encrypted password:

```
java -jar MpdvHyToolDbPassGen.jar -u USERNAME -p PASSWORD
```

Automatic encryption of passwords

You can also enter the passwords in the configuration file of the Print Server service without encryption. On start of the Print Server service, the passwords are automatically encrypted. Also with existing installations, the passwords in the configuration file are automatically encrypted on start of the current version of the Print Server service.

The following passwords in the configuration file `MpdvPrintServer.exe.config` in section "appSettings" are automatically encrypted. The setting with the non-encrypted password is set to empty:

- **HydraPsw** is encrypted and converted to **HydraPswCryp** (for the user in setting **HydraUsr**)
- **WspInterfacePwd** is encrypted and converted to **WspInterfacePwdCryp** (for the user in setting **WspInterfaceUsr**)

On saving the encrypted passwords, the section "appSettings" in the configuration file is automatically rewritten. The setting sequence and the comments are lost in this process.



You can still view the original sequence and the comments in the file `MpdvPrintServer.exe.config.initial`. The file `MpdvPrintServer.exe.config.initial` is the sample file delivered with the software.

The Print Server service can only enter the automatically encrypted passwords in the configuration file, if the user who is running the service, has write access to the file `MpdvPrintServer.exe.config`! If this is not the case, the service stops after the start and shows an error message.



The log then includes the following message (example for instance 1):

```
22708|2019-03-26 14:37:35.5627|WARN||String|HandlePwdEncryption. EXCEPTION
:System.UnauthorizedAccessException The access to the path
"C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release\MpdvPrintServer.exe.Config"
has been denied. Void WinIOError(Int32, System.String)
```

HTTPS: General



You can only use the communication via the encrypted protocol HTTPS if this communication is activated for the WSP and for the Print Server service.



If the Print Server service and the WSP are installed on the same server, it is not useful to use the encrypted protocol HTTPS for the communication between Print Server and WSP. The encryption via HTTPS has a slight negative effect on the performance.

HTTPS: Activation for the WSP

To activate the communication via HTTPS from the WSP to the Print Server service, you use the INI configuration "PRINTSERVER / E-REPORTING / SERVERURL". If the URL starts with "https" in this configuration, the communication is made via HTTPS.

If you want to use HTTPS, the public root certificate of the **E-Report Server** (RootCA) must be available in the Java TrustStore.

If the Print Server service is installed on the HYDRA server, you can use the certificate of the HYDRA server for this purpose. But you must also import this certificate to the TrustStore in any case.

How to do this is described in the installation instruction of the system for the WSP.

HTTPS: Activation for the Print Server service

Make the following settings in the configuration file MpdvPrintServer.exe.config:

1. For the protocol of the ServiceUri, enter "https". Use the "fully qualified domain name" because an HTTPS communication is not possible without:

```
<add key="HydraSys" value="https://myServer.myDomain.local"/>
```


2. For the protocol of the ServiceUri, enter "https":

```
<add key="ServiceUri" value="https://127.0.0.1:9018"/>
```

Mind the port numbers if several instances are installed!

For the port of the ServiceUri, you must provide a certificate that is issued for the server of the Print Server service.

If you double-click the certificate (for example: myServer.pfx), a wizard automatically opens for the import of the certificate:

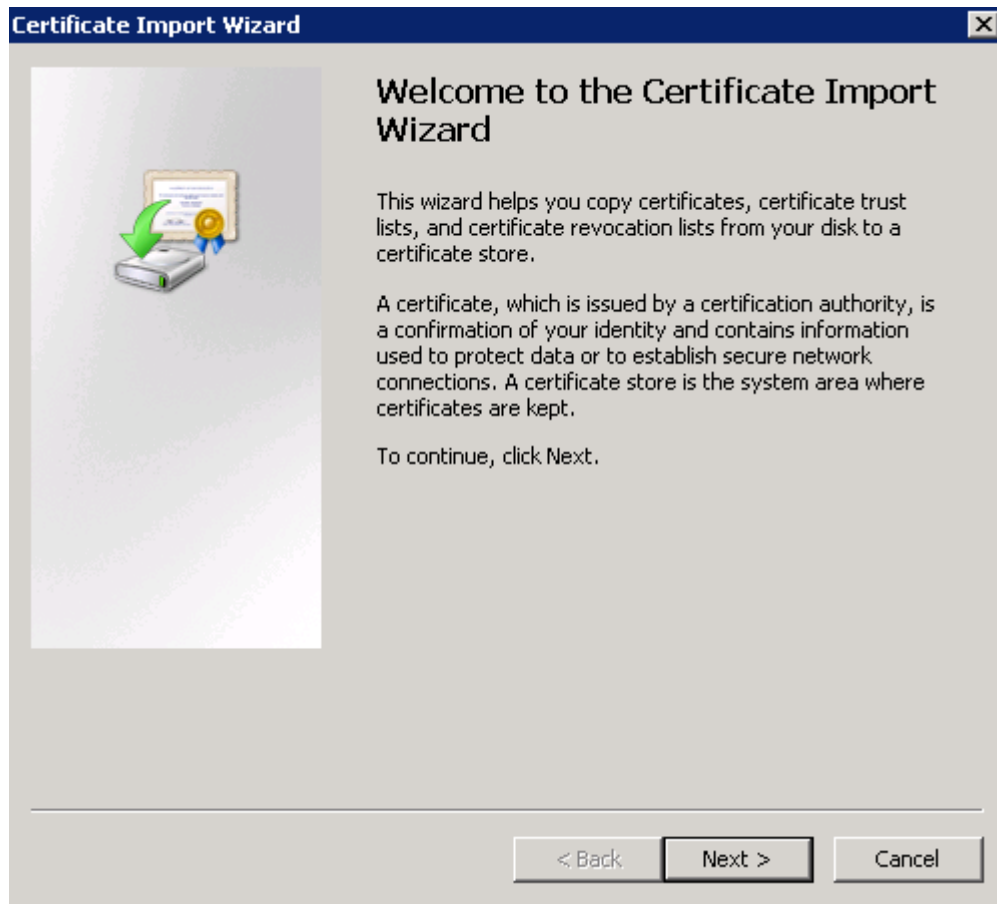

Certificate Import Wizard [X]

File to Import
Specify the file you want to import.

File name:

Note: More than one certificate can be stored in a single file in the following formats:

- Personal Information Exchange- PKCS #12 (.PFX,.P12)
- Cryptographic Message Syntax Standard- PKCS #7 Certificates (.P7B)
- Microsoft Serialized Certificate Store (.SST)

Learn more about [certificate file formats](#)

Certificate Import Wizard

Password

To maintain security, the private key was protected with a password.

Type the password for the private key.

Password:

☐

Enable strong private key protection. You will be prompted every time the private key is used by an application if you enable this option.

☐

Mark this key as exportable. This will allow you to back up or transport your keys at a later time.

☒

Include all extended properties.

Learn more about [protecting private keys](#)

< Back

Next >

Cancel

Certificate Import Wizard

Certificate Store

Certificate stores are system areas where certificates are kept.

Windows can automatically select a certificate store, or you can specify a location for the certificate.

☐ Automatically select the certificate store based on the type of certificate

☒ Place all certificates in the following store

Certificate store:

Personal


Browse...

Learn more about [certificate stores](#)


< Back

Next >


Cancel

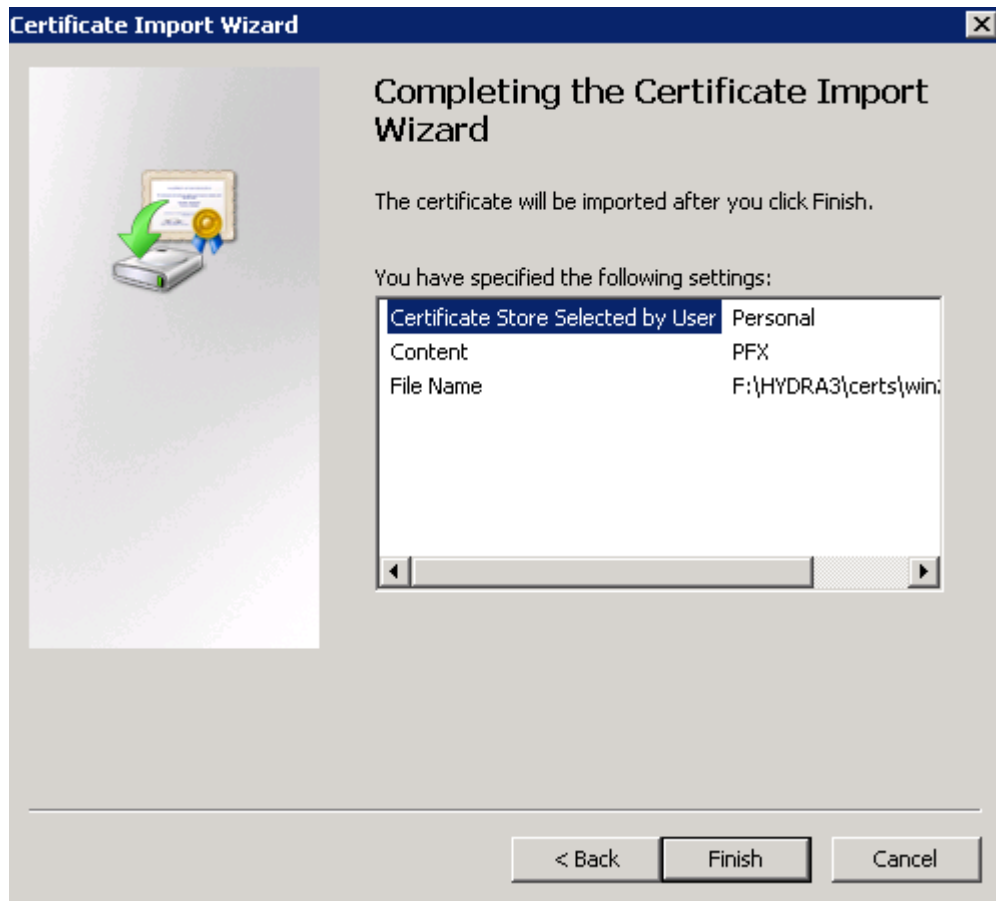

The certificate is now available in the Microsoft Management Console (MMC) (<https://docs.microsoft.com/en-us/dotnet/framework/wcf/feature-details/how-to-view-certificates-with-the-mmc-snap-in>):

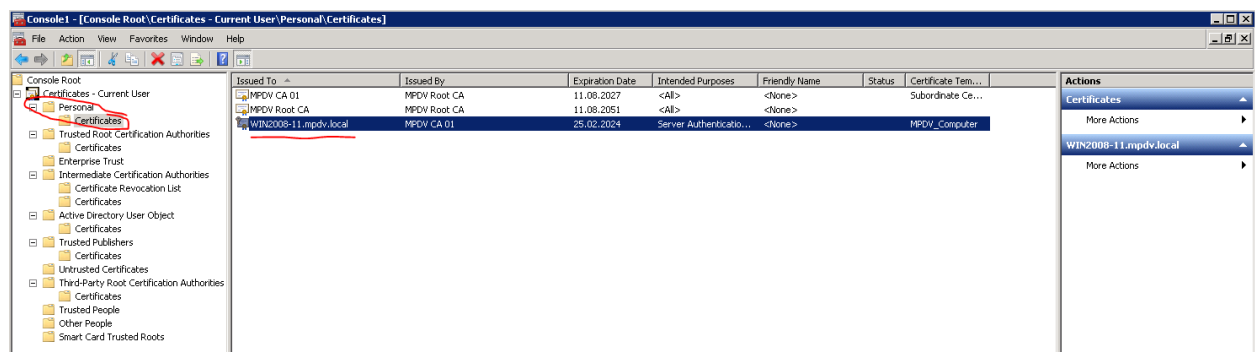

Double-click the certificate to identify the certificate's thumbprint:

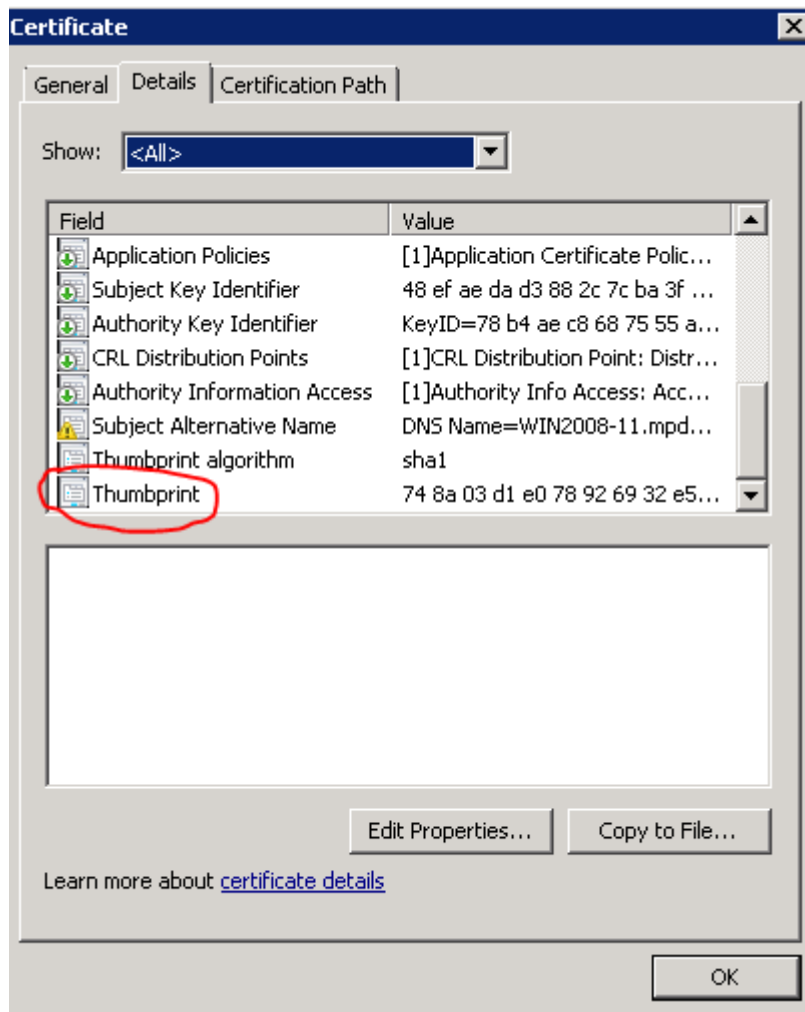

Using this information, the port configuration of the Windows system can be changed. Open a Windows command line as admin (!). Run the following command to release the port:

```
netsh http add urlacl url=https://+:9018/ user="NT AUTHORITY\NETWORKSERVICE"
```


Run the following command to bind the certificate to the port (all in one row):

```
netsh http add sslcert ipport=0.0.0.0:9018
certhash=748a03d1e078926932e53b3343076d43a9335381 appid={00112233-4455-6677-1111-
AABBCCDDEEFF}
```

Here, "certhash" is the thumbprint of the certificate.

"appid" is a GUID that can be freely assigned. It can be used to identify the possessing application. (<https://docs.microsoft.com/en-us/dotnet/framework/wcf/feature-details/how-to-configure-a-port-with-an-ssl-certificate>)

The MPDV Print Service is now available via HTTPS:

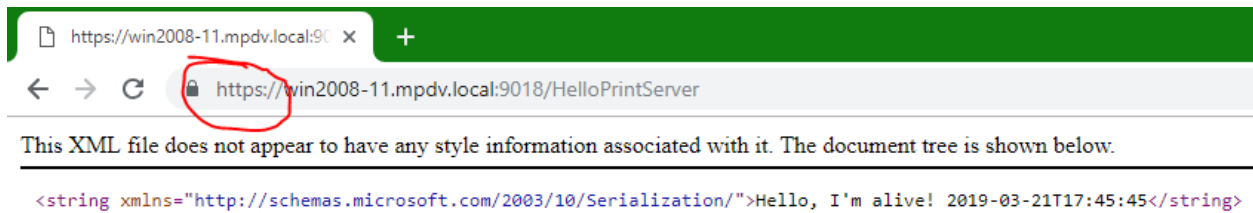

Here, it is important to use the "fully qualified domain name" (for example: win2008-11.mpdv.local)

1.6.8 Installation of the Print Server service

You must install the Print Server service in the Windows services. You require the Microsoft Net Framework 4.5 for the operation of the Print Server service.

Sample installation:



In all places, replace "`_<PsInstanceNo>`" with the number of the instance currently installed.

Start a command line as administrator.

In the command line, change to the directory where the file `mpdvPrintServer.exe` is:

```
C:
cd C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Release
```

Example for instance 1:

```
C:
cd C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release
```

Install the service using the helper program `sc.exe` from Windows SDK ("*SC is a command line program used for communicating with the Service Control Manager and services.*"):

```
sc create MPDVPrintService_<PsInstanceNo> binPath=
"C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Release\MpdvPrintServer.exe" DisplayName=
"MPDV Print Service <PsInstanceNo>"
```

Example for instance 1:

```
sc create MPDVPrintService 1 binPath=
"C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release\MpdvPrintServer.exe" DisplayName= "MPDV Print
Service 1"
```



- You must insert a blank space after the equals sign!
- The entire command must be entered in one line.

You can also use the helper program `sc.exe` to enter a service description:

```
sc description MPDVPrintService_<PsInstanceNo> "MPDV Print Service <PsInstanceNo>"
```

Example for instance 1:

```
sc description MPDVPrintService_1 "MPDV Print Service 1"
```



If required, you can use "sc" to delete the service.

```
sc delete MPDVPrintService_<PsInstanceNo>
```

The service requires access to installed printers. The service must also have write access to its configuration file to be able to automatically encrypt passwords. For this reason, you must start the service using a respective Windows user. If the service is installed on the HYDRA server, this can be the user `hydadm`, for example. Which user is suitable depends on the authorization concept used in your server environment. Define a suitable user having the required authorizations for your service. (Services → right-click *Mpdv Print Service <PsInstanceNo>* → Properties → tab *Log on*).

After the installation, you must start the service "Mpdv Print Service <PsInstanceNo>" manually.

We recommend to set the start type of the "Mpdv Print Service _<PsInstanceNo>" to automatic (go to: Services → right-click *Mpdv Print Service <PsInstanceNo>* → Properties → tab *General* → *Start type*).


Perform the installation of the Print Server service for all required instances.

1.6.9 Troubleshooting

Checking service and printer availability

To use a printer, ensure that the Windows user configured for the service can access a printer and has the appropriate permissions.

Example:

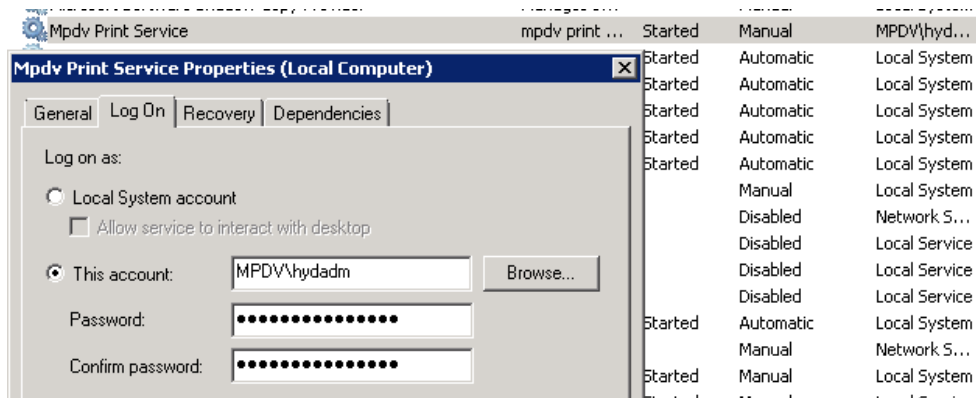

Using the web address of the e-report server, you can query the status of the Print Server service:

- a. Is the service running?

Example: <http://testserver:9017/HelloPrintServer>

Answer:

```
<string xmlns="http://schemas.microsoft.com/2003/10/Serialization/">Hello, I'm alive! 2017-02-09T14:39:47</string>
```

- b. Which printers are available for the Print Server service?

Example: <http://testserver:9017/Printers>

Answer:

```
<ArrayOfstring xmlns="http://schemas.microsoft.com/2003/10/Serialization/Arrays" xmlns:i="http://www.w3.org/2001/XMLSchema-instance">
  <string>Microsoft XPS Document Writer</string>
  <string>CANON-MOS-BA3-40G Farbe</string>
</ArrayOfstring>
```

If the configured web address of the e-report server does not work, you may have to activate the port.

Port sharing: Example of a **user group** (the group "NT AUTHORITY\NETWORKSERVICE" includes all users that can be used for a service, also user MPDV\hydadm of the above example):

```
netsh http add urlacl url=http://+:9017/ user="NT AUTHORITY\NETWORKSERVICE"
```

- **url:** Specifies the fully qualified Uniform Resource Locator (URL).
- **User:** Specifies the name of the user or the user group.

You can also activate the port for **one user**.

```
netsh http add urlacl url=http://+:9017/ user="MPDV\hydadm"
```

But if the service is then not started by this user, the MPDV Print Service cannot be reached via http and the following message is logged in the MPDV Print Service Log (if activated) when the service is started:

```
EXCEPTION :System.ServiceModel.AddressAccessDeniedException HTTP could not register URL.....
```

Log file of the Print Server service

If problems occur, you can check the log file in the directory of the Print Server service (a respective log level is of advantage).

The log file path is included in the configuration file `MpdvPrintServer.exe.config` of the Print Server service. It is set in setting "PathLog". (e.g. "C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Log")

The Print Server service does not start

Check the log file. Possible reasons:

No write access to configuration file

The Print Server service can only enter the automatically encrypted passwords in the configuration file, if the user who is running the service, has write access to the file `MpdvPrintServer.exe.config`! If this is not the case, the service stops after the start and shows an error message.

The log then includes the following message (example for instance 1):

```
22708|2019-03-26 14:37:35.5627|WARN||String|HandlePwdEncryption. EXCEPTION
:System.UnauthorizedAccessException The access to the path
"C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release\MpdvPrintServer.exe.Config
" has been denied. Void WinIOError(Int32, System.String)
```

Use a user with the required authorizations for the Print Server service "Mpdv Print Service". Assign this user in: *Services* → right-click *Mpdv Print Service <PsInstanceNo>* → *Properties* → tab *Log on*).

1.7 Checking the application on the MOC and setting up test

Call the application *Configuration E-Report manager* via the transaction code "rbbj" or the menu.

System administration / System settings / Configuration E-Report manager

The report is tested by the Print Server service on the server.

You can define a printer in the E-Report configuration. The Print Server service must be able to address this printer as described above. The report test includes tests of printing and e-mail dispatch, if printing or e-mail dispatch have been configured in the e-report configuration. During the test, the report files are loaded from the server.

2 Update

2.1 Installing an update

Updates of the SIS-ERM installation are necessary, if you receive a service pack or a separate update for the e-report manager of MPDV.

Before you perform the steps listed below, you must have installed the update or the service pack on the server. If the installation instructions or the separate update already include the steps to update the e-report manager, you need not perform the steps that follow.

2.2 Updating the Print Server service on the e-report server

You require the Microsoft Net Framework 4.5 for the operation of the Print Server service.



You can install several instances of the E-Report Manager on the e-report server. You must run the update for each instance separately.


In the instructions below, replace the placeholder <PsInstanceNo> with the number of the instance currently considered.



E-report managers installed until beginning of year 2021 are probably installed without instance number. In this case, leave out the underscore and the instance number when deinstalling. If you re-install the e-report manager, use the instance number 1, also if the former instance was installed on the server without number. From now on, all installations must be carried out with instance number.

Perform the following steps for each instance on the server where the Print Server service is running:

1. Close the service "Mpdv Print Service <PsInstanceNo>".

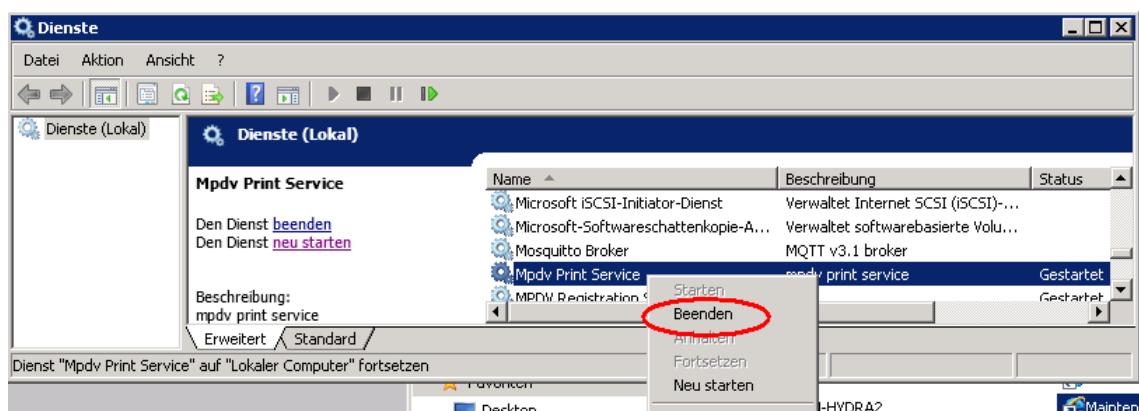

2. Check the start type and the user defined for the service in the *Properties* of the service (right-click *Mpdv Print Service <PsInstanceNo>* → *Properties* → tab *Start type* and tab *Log on*).

Remember or note down the settings because you must manually restore the settings after the reinstallation of the service.

3. Uninstall the service "Mpdv Print Service <PsInstanceNo>".

Open a command line window as administrator.

In the command line, navigate to the directory mpdvPrintServer.exe.

(e.g.: cd C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Release)

In the directory of the file mpdvPrintServer.exe, enter the following command in the command line to uninstall the service:

```
sc delete MPDVPrintService_<PsInstanceNo>
```

Example for instance number 1:

```
sc delete MPDVPrintService_1
```

Example for older system without instance number:

```
sc delete MPDVPrintService
```

(Leave the command line window open. You will need it later on.)

4. Create a directory for a backup copy of the original directory.

Example: ...MpdvPrintServer_<PsInstanceNo>_save

Do not rename the original directory to keep the Windows authorizations untouched.

Copy the contents of the original directory into the backup directory.

5. Empty the original directory MpdvPrintServer_<PsInstanceNo>.
6. If the original directory does not yet include an instance number, rename the original directory and add the instance number, e.g. "MpdvPrintServer_1".
7. Unpack the zip file MpdvPrintServer.zip from the server (<InstallDir>\products\leReporting\MpdvPrintServer.zip) into the emptied directory MpdvPrintServer_<PsInstanceNo>.
8. Restore your configuration by comparing the new file ...MpdvPrintServer_<PsInstanceNo>\bin\Release\MpdvPrintServer.exe.config to your old file from backup ...MpdvPrintServer_<PsInstanceNo>_save\bin\Release\MpdvPrintServer.exe.config. Recommendation: Basically, use the file from the backup and add the configurations that might have been added to the new default file. (Details on the configuration settings are included in the instructions for the new installation of the E-Report Manager).
9. If you have MOC customizations for CUSTOM or LOCAL, also restore these customizations.
10. Reinstall the service "Mpdv Print Service <PsInstanceNo>".

If required, use the command line to navigate to the directory mpdvPrintServer.exe.

(e.g.: cd C:\ProgramData\mpdv\MpdvPrintServer_<PsInstanceNo>\bin\Release)

Example for instance 1:

```
C:
cd C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release
```

Install the service using the helper program sc.exe from Windows SDK ("SC is a command line program used for communicating with the Service Control Manager and services."):

```
sc create MPDVPrintService <PsInstanceNo> binPath=
"C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release\MpdvPrintServer.exe"
DisplayName= "MPDV Print Service <PsInstanceNo>"
```

Example for instance 1:

```
sc create MPDVPrintService_1 binPath=
"C:\ProgramData\mpdv\MpdvPrintServer_1\bin\Release\MpdvPrintServer.exe" DisplayName= "MPDV
Print Service 1"
```



- You must insert a blank space after the equals sign!
- The entire command must be entered in one line.

You can also use the helper program sc.exe to enter a service description:

```
sc description MPDVPrintService_1 <PsInstanceNo> "MPDV Print Service <PsInstanceNo>"
```

Example for instance 1:

```
sc description MPDVPrintService_1 "MPDV Print Service 1"
```

11. Restore the start type and the user defined for the service in the *Properties* of the service (right-click Mpdv Print Service <PsInstanceNo> → *Properties* → tab *Start type* and tab *Log on*).
12. Restart the service "Mpdv Print Service".
13. If several instances of the E-Report Manager are installed: Repeat the update for each instance.