

1 Order Postings for Operations Subject to Batch Management

Summary


In addition to logging the actual operation on, operations subject to management in batches also enable to log on relevant input batches.

Configuration

These system settings have to be made to be able to generally use operations that are subject to management in batches.

Basic screen

Basic terminal screen when a machine is assigned in batch mode:

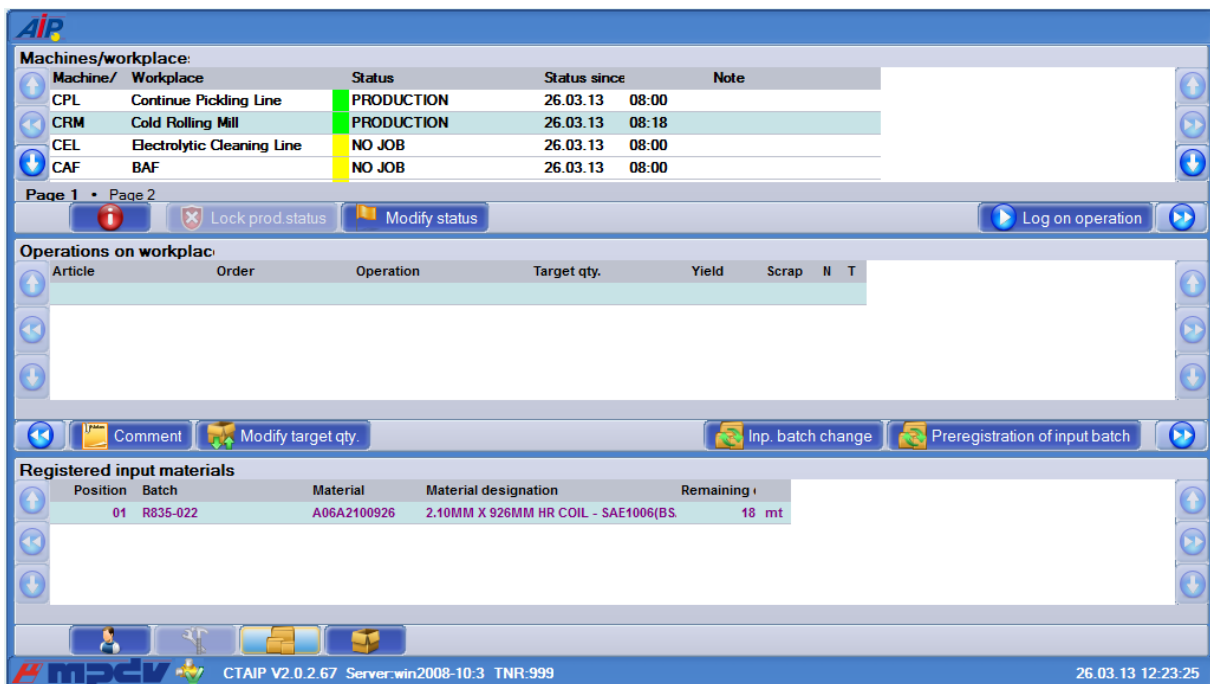

The screenshot displays the AIP (Automated Input Processing) terminal interface. It is divided into several sections:

- Machines/workplace:** A table showing the status of various machines.

Machine/	Workplace	Status	Status since	Note
CPL	Continue Pickling Line	PRODUCTION	26.03.13 08:00	
CRM	Cold Rolling Mill	PRODUCTION	26.03.13 08:18	
CEL	Electrolytic Cleaning Line	NO JOB	26.03.13 08:00	
CAF	BAF	NO JOB	26.03.13 08:00	
- Operations on workplace:** A table for logging operations.

Article	Order	Operation	Target qty.	Yield	Scrap	N	T
- Registered input materials:** A table showing materials currently logged on.

Position	Batch	Material	Material designation	Remaining
01	R835-022	A06A2100926	2.10MM X 926MM HR COIL - SAE1006(BS	18 mt

At the bottom, there is a status bar with the AIP logo, version information (CTAIP V2.0.2.67), server details (Server:win2008-10:3 TNR:999), and the current date and time (26.03.13 12:23:25).

The basic display shows the third list "Input materials currently logged on" for machines for which the "batch management" option is configured. This list shows all active input batches of the selected machine.

OP logon with input batches

By clicking the "log OP on" button a workflow including two tabs is opened. The operation to be logged on is selected in the first tab "select operation".

The "log operation on" tab is reached by clicking the "Next" button where in addition to the selected OP, the defined material components are displayed in a list.

By entering a batch number in the "input batch" field and clicking the "report batch" function a batch may be logged on as input material for a component. During the entry process, the terminal checks whether or not the batch number is known in the system and may be logged on. This is also described in detail within the document dealing with the [input batch change](#).

"Batch" field

When an OP is logged on, a batch number is created simultaneously for the next output batch to be produced. The batch number may be assigned automatically or manually (please also see the settings of "workplace configuration"). The generated batch is created with the batch number in the system and set to the "running" status.

Provided that all required input materials are logged on, the OP may be started via the "OK" button in the "OP logon" dialog. Whether input material has to be logged on or not, can be defined in the assigned material type of the component.

Once the OP has been logged on successfully, all active input batches of the selected machine are displayed in the material list.

If batches are logged on along with the OP and the user cancels the process or cannot log the OP on due to validation checking the input batches will be logged off automatically for this OP. In this case, batches are always logged off without indicating the consumption quantity. By way of the following warning message, the user may confirm the logoff process:

The function that logs input batches off automatically can be activated/deactivated by an option in the hyaipcfg.ini file

HYAIPCFG.INI
[MPL-Options 0/2xxx] ForceAutoLogOffInputBatches=0

Logon of unplanned input material

In addition to planned materials, it is also possible to log "unplanned" material on for an OP, using an additional feature at the component of the OP. If the "replaceable" option is set to "J" the user is able to assign the respective component manually, when batches are logged on. However, the logon is only allowed if the material type of the input batch corresponds to that of the component.

Within the selection list the components are filtered according to the material number and displayed as follows:

Logon of unknown batches

An input batch, which is not yet known in the system, may be logged on for an OP using the "create unknown batches" option in the basic parameter settings.

In this case, it is searched for a valid assignment of input material to the material type of the selected component, when input batches are logged on. Provided that a corresponding assignment is found and the "allow entry of unknown input batches" option is configured in the "input batch processing" tab at the material type, the batch is generated by logging it on to the system and set to the "running" status at the same time. The batch is initially created in a quantity of 1.000.000.000.

Logoff/interruption of OPs

A running OP may be interrupted or logged off by clicking the "logoff/interrupt OP" button. Then a dialog opens, where the following selection can be made:

If "log OP off" is clicked the logoff dialog opens that contains the same input fields like the [output batch change](#) dialog.

Thus, the output batch that is currently still active is completed, when OPs are interrupted or logged off.