

1 Formation of Groups at Group Incentives

Summary

This document describes how entered data can be assigned to the premium groups of the incentive wage determination.

- Groups are mostly formed via the assignment of machines to premium groups. The data recorded at the machines will then be assigned to the corresponding premium group. This static assignment of the machines to the premium groups is made at the client using the *Assignment of premium groups* application.
- Instead of the static assignment of machines to the premium groups, it is also possible to record a premium group at the *terminal when an order is entered in the entry dialog*. All the postings connected to the order logon will then be assigned to the premium group. At one point in time a machine can only be assigned to a single premium group, also if several orders are logged-in to the machine.
- Personal data (from the shop floor data collection and the personnel time management, if any) may as an option be assigned via the client application *Change of groups* to the premium group and this assignment will be personal and be made with the precise time. In this case, however, only the personnel postings (B-records) from the shop floor data collection can be compensated by the method of the time tickets to the premium groups. To do so, the additional function "formula-based premium/ incentive wage" and a corresponding customizing through MPDV will be required.

Order data via the machine used for posting



In the BDE shop floor data collection the premium groups will only be processed for such workplaces/ machines marked by the incentive wage indicator "G" for "group piecework"!

Per operation log-in the operation posting (U- or E-record) and the related personnel postings (B-records) will be assigned to a premium group. Since it is possible that it is worked on several premium groups at one workplace, both the entry of the premium group during the log-in of the operation and the assignment of premium groups to workplaces will be possible. To do so, HYDRA uses the following logic:

1. If a premium group is specified in the login dialog when an operation is logged-in, this premium group will be used.

2. If no premium group is specified when an operation is logged-in, the premium group assigned to the workplaces will be used.
3. If no premium group is specified when an operation is logged-in and if no premium group is assigned to the workplace/ the machine, an error message will be issued; an operation cannot be logged-in without indication of the premium group.

The dialog configuration can be used to control (per terminal) whether the field "premium group" will be available when an operation is logged in or not.

If several persons work on the same operation on group workplaces, the first person will define the premium group. The following persons must not indicate another premium group than the first person.

The assigned premium groups will then be stored for further processing in the order and personnel postings. The editing of postings can be used to correct incorrectly assigned premium groups.

Dialog configuration for entry purposes at the login of OPs

An entry via an OP log-in will only be made if the workplace has the premium indicator "G" and when the module "Calculation of group incentives" is licensed.

In this case the field for the entry of the premium group (LPRGRP) must be configured into the dialog to log-in operations (customizing).

To use this described function, the dialogs Log OP on (A_AN) and Log person on (A_P_AN) must be extended by the entry field "premium group".

The bar codes for premium groups will also be detected in those instances, in which the entry focus is on a different field.

Structure of the bar codes

A bar code starts and ends with an asterisk "*" as start and stop sign.

The bar codes must be completed to **nine** digits useful length (between the asterisks). Due to this amount of numbers the terminal will detect that this scanned bar code is a premium group.

The (shorter) premium group must be completed to **nine** digits: For **filling** purposes and for **blanks** within the premium groups **underscores** "_" must be used!

The bar code must then be formatted as bar code "Code 39" in the font "Codedreineun". This font is available with all console PCs under Windows. It can be used to create tables with bar codes for premium groups in all current Office applications.

The following characters are supported by the bar code "Code 39":

- The numbers 0 to 9
- Capital letters A to Z without umlauts
- Blanks (to express bar codes to be written as underscore "_", see examples).
- Special indicators \$ / - + . %


Other characters such as lower cases will **not** be supported by the bar code "Code 39".

Examples:

Premium group	Barcode content 12345678901	Barcode (font Codedreineun)
12345	*12345____*	*12345____*
PG 12	*PG_12____*	*PG_12____*
73	*73_____*	*73_____*

Maintenance of the premium group in the order-related postings

When BDE data are recorded, they will be assigned to premium groups depending on the system configuration. The premium group is a data field in the BDE postings and is displayed in the "wage data" tab and can also be modified there.

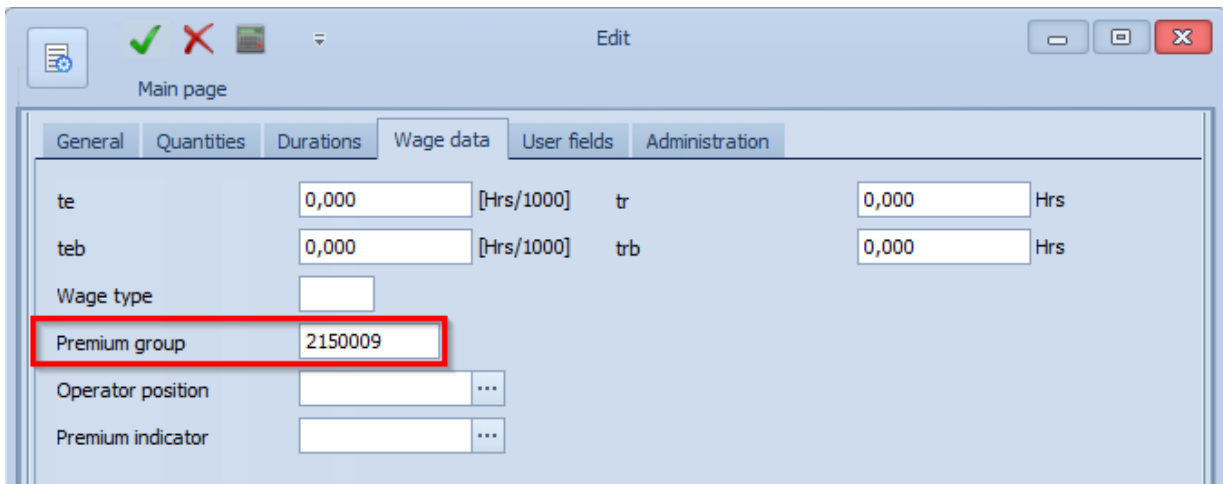

The screenshot shows a software window titled 'Edit' with a 'Main page' tab. The 'Wage data' sub-tab is active. It contains several input fields and labels. The 'Premium group' field is highlighted with a red rectangle and contains the value '2150009'. Other fields include 'te' (0,000 [Hrs/1000]), 'teb' (0,000 [Hrs/1000]), 'Wage type', 'Operator position', and 'Premium indicator'.

When the premium group is changed in the editing of postings, HYDRA will ensure that order and personnel postings that belong together will have the same premium group. The system will recognize that order and personnel postings belong together when the time-related centers of the personnel postings are within the order posting.

Order posting

Personnel postings

