

1 Configuration of QM/CAQ Options

Processing

You can configure certain system options that are specific to the area or the data type. If several area or data type specific entries have been defined, the entries are searched for in a specified order (in descending order according to field **option_id**) until a relevant entry is found. If searching for specific options fails, the global system option is used. The default setting is used if the global option is not configured.



You can only create options manually if the description explicitly includes this possibility.

The sheer existence of specific options makes HYDRA assume that specific fields are available in the database schema. HYDRA therefore tries to maintain these fields. But if the fields are not available, this leads to a faulty system behavior.

You can configure several areas for the individual HYDRA-CAQ modules. You can use the combination with area-specific options to configure an individual behavior for a specific program.



If you want to create an area-specific option or if you want to change an option that is not area-specific into an option that is area-specific, you must check the option Subject to area and enter the areas in the input field Option, area (comma-separated, in square brackets). You can also create options that are specific to the data type (i.e. FEP, WEP). If you use this possibility, enter the valid data types comma-separated and in square brackets into the input field Option, rec. type.

If the input fields *Option, rec. type* and *Option, area* are empty, the option is not specific to an area.

2 Special Options

Special options have a particular structure. The field **option_subnr** defines the sequence of the individual subentries.

Option 1 – Method to search for inspection plan

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Description

This option specifies which fields in the inspection plan header or in the inspection plan characteristics are used to find the respective inspection plan. The field **option_subnr** defines the sequence in which the specified fields are processed. If the search for an inspection plan is successful (using the configured parameters), the search is stopped and the inspection plan found is used to generate inspection steps.

For all fields that are not used in the field "Value", the system checks during the search for an inspection plan if an empty string is available. Below, you can find a list of all possible parameters. The search targets active inspection plans. In case of exceptions, this is indicated with the respective parameter.

- **BER** - Search for an inspection plan in the same area as the inspection requirement.
- **PPL:ID** - Search for an inspection plan with the specified inspection plan number.
- **PPL:ID_IDX** - Search for an inspection plan with the specified inspection plan number and the specified inspection plan index.
- **PPL:ID_IDX INAKTIV**- Search for an inspection plan with the specified inspection plan number and the specified inspection plan index. If you use this parameter to search for an inspection plan, the search includes all inspection plans (also the ones which are not active).
- **ATK:NR_IDX** - Search for an inspection plan with the specified article number and the specified article index.
- **ATK:NR** - Search for an inspection plan with specified article number.

- **ATK:GRP** - Search for an inspection plan of groups for the specified article. The article catalogue specifies the groups the specified article has been assigned to. A respective inspection plan is then searched for these article groups. In order to do so, the group hierarchy is searched from bottom to top.
- **AG:NR_BEZ_PPLKOP** - Search for an inspection plan with the specified operation number and operation designation in the inspection plan header (one single inspection plan for each operation).
- **AG:NR_BEZ_PPLMER** - Search for an inspection plan with the specified operation number and operation designation in the inspection plan characteristics (one inspection plan for all operations).
- **AG:NR_BEZ_EMPTY** - Search for an inspection plan with empty operation number and operation designation (in the inspection plan header or in the inspection plan characteristics). You can use this parameter if for example the search for a specific operation was not successful. You then want to use a default inspection plan (without reference to the operation).
- **KD:NR** - Search for an inspection plan for the specified customer number.
- **KD:GRP** - Search for an inspection plan of groups for the specified customer number. The customer catalog specifies the groups the respective customer is assigned to. The system then searches a respective inspection plan for these customer groups. In order to do so, the group hierarchy is searched from bottom to top.
- **LIEF:NR** - Search for an inspection plan for the specified supplier number.
- **LIEF:GRP** - Search for an inspection plan of groups for the specified supplier number. The supplier catalog specifies which groups have been assigned to the defined supplier. The system now searches for a corresponding inspection plan for these supplier groups. In order to do so, the group hierarchy is searched from bottom to top.
- **HERST:NR** - Search for an inspection plan for the specified manufacturer number.
- **HERST:GRP** - Search for an inspection plan of groups for the specified manufacturer number. The manufacturer catalog specifies the groups the respective manufacturer has been assigned to. The system then searches for a respective inspection plan for these manufacturer groups. In order to do so, the group hierarchy is searched from bottom to top.
- **FU:1** up to **FU:14** – Search for an inspection plan according to the content of one or more direct user fields of the inspection requirement. (requires active option 1171).



The parameters are set in square brackets. You can enter several parameters (separated by comma) in one input field of an option. During the search for an inspection plan, these entered

	parameters are linked using "AND". If you search for option entries during the search for an inspection plan, the system first checks if option entries exist that are specific to a data type or an area. If this is the case, the system only uses these entries. The system does not make a difference if the entry is specific to a data type or an area. The system uses the entries simultaneously, sorted by the option ID and the subnumber. If no active data type or area specific entries are available, the system only uses the global entries during the search for an inspection plan.
--	---

	With option entries that only include the parameters PPL:ID and PPL:ID_IDX, it is not tested during the search for an inspection plan if an empty string is available in the fields that are not used in the field "Value". In this case, these fields can have any values because the inspection plan is used that is specified in the inspection requirement.
---	--

Example

[ATK:NR_IDX] , [AG:NR_BEZ] , [KD:NR]

Option 2 – Method to search for specification lists

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Description

This option specifies the fields that are used to find the respective specification list entry. The field **option_subnr** defines the sequence in which the specified fields are processed. If the search is successful (using the configured parameters), the search is stopped and the specification list entry found is used for the configuration of the inspection step characteristic.

With all fields that are not used in the field "Value", it is tested if an empty string is available during the search for a specification list. Below, you can find a list of all possible parameters.

- **BER** - Search for a specification list entry in the area of the inspection requirement.

- **ATK:NR_IDX** - Search for a specification list entry with the specified article number and the specified article index.
- **ATK:NR** - Search for a specification list entry with the specified article number.
- **AG:NR_BEZ** - Search for a specification list entry with the specified operation number and operation designation.
- **AG:NR** - Search for a specification list entry with the specified operation number.
- **AG:BEZ** - Search for a specification list entry with the specified operation designation.
- **KD:NR** - Search for a specification list entry with the specified customer number.
- **LIEF:NR** - Search for a specification list entry with the specified supplier number.
- **MNR** – Search for a specification list entry with the specified machine number. Using HYDRA 8: Parameter [MNR] is only supported in PDV.
- **FU:1** up to **FU:14** - Search for a specification list entry according to the content of one or several direct user fields of the inspection requirement.
- **RES:TYP_ID** – Search for a specification list entry with the specified tool number (of the inspection requirement). This parameter depends on options 1198 and 1199.

Option 3 – Fields of a distinct inspection requirement

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Description

This option specifies the fields that distinctly identify an inspection requirement. You use this option if interface functions manipulate inspection requirement data and if new inspection requirements are created.

If no parameter 'inspection requirement number' or 'PPS reference number' is available, the system identifies the inspection requirement that has identical field values that are enabled in the option and do not have the status "Finished", "No characteristic" or "Skip lot".

If an inspection requirement is found, this inspection requirement is used for all actions except the initial creation. After successful search, an initial creation is stopped and the note "Data is existing" appears. See also *option 4*.

The number of entries for this option is fixed. There is only one field per entry which is different to options 1 and 2. If the field **Addition** of an entry includes an "A", the corresponding field is used to identify distinct inspection requirements.

The following entries are defined:

- **AUFTRAG** - The order number is used to identify an inspection requirement.
- **ARBGANG** - The operation number and operation designation are used to identify an inspection requirement.
- **CHARGE** - The batch number is used to identify an inspection requirement.
- **KUNDE** - The customer number is used to identify an inspection requirement.
- **HERSTELLER** - The manufacturer number is used to identify an inspection requirement.
- **LIEFERANT** - The supplier number is used to identify an inspection requirement.
- **PRUEFPLATZ** – The inspection station is used to identify an inspection requirement (only on the level of inspection requirements, not on the level of inspection steps).

3 List Options

Option 4 – Create new inspection steps for each requirement

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If you activate this option (value = "Y"), you override the setting of option n° 3 for the initial creation of an inspection requirement.

See also *Option 3*.

A new inspection requirement is created regardless of existing inspection requirements with identical key fields (PPS reference number or entries of option n° 3).

See also *Option 1001*.

Option 1001 – Create inspection requirement without valid inspection plan

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If you activate this option (value="Y"), the result is the following: If you create an inspection requirement and no inspection plan is found, the inspection requirement is created with the status "No inspection plan". The value "N" has the effect that no inspection requirement is created.



If you activate this option, you can avoid that the system is overloaded with inspection requirements that cannot "be performed". If you activate this option, you also avoid that an incomplete inspection planning is documented via inspection requirements that have the status "No inspection plan".

Option 1002 - Cancel also inspection requirement when canceling an inspection step

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If you use this option (value = "Y") and you cancel an inspection step, the respective inspection requirement is automatically canceled, too.



See also option 1003.

Option 1003 – Should the completion of an inspection requirement be prevented if inspection steps are canceled?

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value = "Y"), an inspection requirement is not completed if it includes at least one inspection step that has been canceled.



You activate this option to specify that inspection requirements with canceled inspection steps cannot to be completed. You document this situation with the inspection requirement status "canceled".

See also option 1002.

Option 1004 – Classify canceled inspection steps as "Fail"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If you set this option (value = "Y"), a canceled inspection step results in a negative evaluation of an inspection requirement.



If the inspection result of an inspection requirement is "pass", the inspection requirement is considered as "fail", if it includes a canceled inspection step.

See also option 1003.

Option 1007 – Calculation method for Sigma / cp / cpk

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X*	X		X		X*	

Valid values

0 / 1 / 2 / 3

Subject to area

yes

Description

This option specifies the statistical values based on Sigma that the system displays (cp, cpk, etc.).



Using HYDRA 8, in the MOC the value 0 has no impact. If this value is configured the default value deriving from cp_1 or cpk_1 or. sigma_1 is displayed according to the assignment of values.

For the statistical calculations 1 to 3, the system calculates an estimated Sigma value that is based on 3 different methods:

Value 0: No estimation

Calculations are performed without estimated values.

Value 1: Based on dn

dn is a constant to determine an estimated value for the variance (population) deriving from the range (sample). dn is also called d2 and depends on the sample size which must be constant.

Value 2: Based on an

an is a constant to determine the estimated value for the variance (population) deriving from the variance (sample). an is also called c4 and depends on the sample size which must be constant.

Value 3: Based on a(n+1)

a (n+1) is a constant to determine the estimated value for the variance (population) deriving from the variance (sample). This constant depends on the sample size which must be constant. This estimate is the most unbiased of the 3 methods.

You can change the option as the calculation of the statistic for all samples is performed in the server.

Value 2 is preset.

Formula to calculate Sigma using value 1:

$$R / d_n$$

dn is a constant to determine the estimated value for the variance (population) deriving from the range of the sample. dn is also called d2 and depends on the sample size which must be constant.

Formula to calculate Sigma using value 2:

$$s / a_n$$

Formula to calculate Sigma using value 3:

$$s / a_{n+1}$$

Notes on the constants used

a_n and d_n

a_n and d_n are constants to determine the estimated value for the variance (population). To determine the estimates a_n and d_n all samples are regarded as one global sample. If 10 samples exist with 5 measured values each, then $n=50$.

Based on the number of measured values (n), the values a_n and d_n are calculated for the respective estimate.

a_n is also called c_4 and d_n is also called d_2 .

To calculate s or R , all measured values of the samples are used.

Option 1010 - Automatically complete inspection requirement if all inspection steps are finished

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N / DM / DA

Subject to area

yes

Description

If you enable this option and complete an inspection step, the system searches for other inspection steps of the respective inspection requirement with a status that allows inspection

(e.g. logged on, released, etc.). If this is not the case, the system also completes the respective inspection requirement.

Notes



Y The system completes the inspection requirement of the above example automatically without showing a confirmation prompt.

N The inspection requirement is never completed automatically.

DA Once you have completed the inspection step via the console, a dialog opens where you can correct the suggested result and the usage decision. You can also stop the completion of the inspection requirement.

If an automatic process or the terminal completes the inspection step, the corresponding inspection requirement will also be completed automatically.

DM Once you have completed the inspection step via the console, a dialog opens where you can correct the suggested result and the usage decision. You can also stop the completion of the inspection requirement.

If an automatic process or the terminal completes the inspection step, the corresponding inspection requirement will not be completed automatically.

See also *option 1003*.



If you have enabled the option for the data type **QMS**, you can define parameters in the "addition" field of the option. Here, you can define the usage decision that is transferred to the PPS system upon automatic completion. Enter the following parameters in the "Addition" field:

```
[DLGADD_AUTO:CPAN.VERWEND:KATART=<catalog type of the usage decision>~CPAN.VERWEND:WERK=<site of the usage decision>~CPAN.VERWEND:AUSWMEN=<selected set of the usage decision>~CPAN.VERWEND:CODE=<code of the usage decision>~CPAN.VERWEND:CODGR=<code group of the usage decision>~BZW=J]
```

The value of the parameter specifies the additional data fields transferred to the BAPI. Use a tilde instead of a pipe slash to separate these parameters.

Use the parameter **BZW=J** if you want to ignore all notifications. In this case, the system also completes the inspection requirement if error messages occur that can be overridden. If this

behavior is not required, do not use the parameter **BZW=J**.

Option 1011 – Split all operations of an inspection plan into separate inspection steps

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value= 'Y'), a separate inspection step is generated for each operation defined in the inspection plan characteristics in case of an inspection requirement with operation number or operation designation. The operation information in the inspection requirement is therefore not relevant for the generation of inspection steps.

If the option is not set (value = "N"), the system searches for the respective operation information in the inspection plan characteristics. If at least one characteristic is found, only one inspection step is created for the respective operation for the inspection requirement. Otherwise no inspection step is created and the inspection requirement gets the status "No inspection plan".



See also option 3 or option 4.

Option 1013 - Automatic generation of complaint number

System availability

MW 3.0	MW 2.1	AIP	CTWIN		MOC	Other
--------	--------	-----	-------	--	-----	-------

(server)	(server)					(with comment)
X	X				X	

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value = "Y"), a complaint number is automatically generated during the initial creation.

Option 1014 - Automatically complete inspection steps when all terminals are shut down

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If you set this option (value = "Y") and log off an inspection step in the terminal, the system checks if this inspection step is also checked by other terminals. An inspection step is considered as being checked by another terminal if the inspection step has the status "logged on" or "interrupted". You can find the status of the inspection step in the list of logged on inspection steps. If this is not the case, the inspection step is automatically completed.



You can ignore specific error messages upon completion of inspection steps by using the option "Posting required". To do so, add the parameter **[DLGADD:xyz]** in the "Addition" field of the option. If you want to transfer several additional parameters to the BAPI, enter these parameters in the "addition" field of the option and use a tilde instead of a pipe slash to separate the entries.

Example:

[DLGADD:BZW=J~BZWRET=2936,2905]

See also option 1010.

You can only use the option "Posting required" and enforce the posting in case of the automatic process that completes an inspection step. You cannot enforce the posting if you manually complete the inspection step in the MOC.

Option 1015 – Instantly generate error message if limit values are violated with control charts

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X	X	X			

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value = "Y"), the system checks for each measured value that is stored if calculated statistical values of the current sample violate warning or action limits (Xquer / s / R). In this case, a respective notification is issued.

If this option is not set (value = "N"), the system checks for limit violation only after you have stored the last measured value of the sample.

Option 1017 – Which parameters specify the control chart

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
			X			

Valid values

Combined character string made up of one or more parameters

RECTYP	– current data record type (e.g. production, test equipment etc.)
BER	– current area
PANNR	– current inspection requirement number
PAUNR	– current inspection step number
ANR	– current order number
CNR	– current batch number
ATK	– current article number
ATKIDX	– current article index
PPLID	– current inspection plan number
PPLIDX	– current inspection plan index
PPS:REF	– current PPS reference number
AGNR	– current operation number
AGBEZ	– current operation designation
AFO	– current OP sequence number
CMMNR	– current characteristics number
KDNR	– current customer number
MNR:PAN	– current machine number (of inspection requirement)
PMID:KALIB	– test equipment ID of the current calibration

(only applicable to data type "PMV" - test equipment management)

Put the parameters in square brackets and separate by comma.

Subject to area

yes

Description

This parameter defines which filter criteria are valid for the samples and single values displayed in the control chart and in the histogram of collected measured values.



This definition of options is only valid for the client and not for the display of control chart content in the AIP or MOC.

The parameters for the control chart that is displayed in the AIP during collection are included in the `caq_dc_t_ini` in section [MM] or [PPKT_MM] based on the acronyms of the file "merkmal.lst". Control chart for characteristic information is defined in the files "qee_char_chart_1.ini" and "qee_char_var_process.ini". The basis of available acronyms is equally the file "merkmal.lst".

You can therefore make a configuration to display control charts for all characteristics, even though acronyms, article number, article index, inspection plan number and inspection plan version are not available. In the rectypes FEP, WEP, WAP, you can also filter other fields of inspection plan characteristics, e.g. the user fields, if you do not want to use the inspection plan of groups. You can therefore limit the selection accordingly. But you cannot restrict the contents of control charts to the data that you need to calibrate the same test equipment number because normally the calibration plan is valid for n pieces of test equipment of the same group

If this parameter is empty, only the samples of the current inspection step characteristic are displayed (relates to parameters

`"[RECTYP],[BER],[PANNR],[PAUNR],[AFO]"`).

Example

`[RECTYP],[BER],[ANR],[CMMNR]`

A control chart or histogram is displayed that includes all samples of the current data record type, the current area, the current order number and the current characteristic number for all inspection steps.

Option 1022 - Automatic deactivation of old inspection plans

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value = "Y"), the system checks if inspections plans exist with the same key criteria each time you activate an inspection plan. If this is the case, the respective inspection plans are automatically deactivated.



Key criteria are the data record type (production, goods receipt, etc.), area, article number, article index, operation number, operation designation, customer or supplier or manufacturer number and the configuration of field "Inspection plan + OP". The inspection plans of the test equipment management are an exception.

In case of inspection plans for test equipment, key criteria are only the area and the inspection plan number.

Option 1023 – Limit value as of which a process is stable

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X				X*	

Valid values

Floating point number using a point as a decimal separator (no comma).

Subject to area

yes

Description

This option defines the limit value as of which you generally consider a process as stable.



This option is mainly used for evaluation and printing programs (e.g. initial sample documents). If this option does not exist or if the value is not entered, the standard value 1,33 is used.

If this option is not available or the value has not been assigned, then the classification number calculation is based on the number of measured values n . The following formula is used:

Option 1028 up to 1031 – Supplier evaluation "Proportion of complaints"

General description of the function

You first search for all completed goods receipt inspection requirements of the company you want to evaluate (entered as supplier). The option defines the areas of the inspection requirements. In order to filter only the data of the respective period, the system only considers the inspection requirements with a date within the limits of the evaluation period. Option 1030 defines the date that is used. For all data records that are found, the calculation basis (according to option 1031) is added up and stored in the variable n_{PAN} .

Then the system counts all complaint details of the areas defined in the option. All complaint details are counted where the company you want to evaluate is specified as supplier. In order to restrict the data to the evaluation period, the system only includes complaints with a date within the evaluation period. Option 1030 defines the fields used for the inspection of that period. In order to exclude unjustified complaint details, data with results that are to be ignored is not used (status addition **[IGN]**). For all data records that are found, the calculation basis (according to option 1031) is added up and stored in the variable n_{REK} .

The rating (in percent) of the evaluation criterion is calculated as follows:

$$\left((n_{PAN} - n_{REK}) \div n_{PAN} \right) * 100$$

The decimal rating is issued in "parts per million" (ppm).

Option 1028 up to 1031 Supplier Evaluation "Proportion of Complaints"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the relevant areas of goods receipts for the automatic rating program "proportion of complaints" (REKLAMATION_ANTEIL).

In this option, you can define one or several areas where the system should search for inspection requirements (to calculate the variable `nPAN`).

If this parameter is empty, all goods receipt areas are included in the search. If you want to include more than one area in the search, enter the individual areas comma-separated.

Option 1029 - Supplier evaluation "Proportion of complaints".

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the relevant areas of complaints for the automatic rating program "proportion of complaints" (REKLAMATION_ANTEIL).

In this option, you can define one or several areas where the system should search for complaints (to calculate the variable `nREK`).

If this parameter is empty, all complaint areas are included in the search. If you want to include more than one area in the search, enter the individual areas comma-separated.

Option 1030 - Supplier evaluation "Proportion of complaints".

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the date fields that are used to filter the inspection requirements and complaint details for the automatic rating program "proportion of complaints" (`REKLAMATION_ANTEIL`).



The following date fields are available:

Inspection requirement - inspection of the lower limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

Inspection requirement - inspection of the upper limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

Complaint detail - inspection of the lower limit of the evaluation period

REKDAT	Date of receipt
---------------	-----------------

LIEFDAT	Delivery date
ZIELDAT	Target date of the complaint
ISTDAT	Actual date of the complaint

Complaint detail - inspection of the upper limit of the evaluation period

REKDAT	Date of receipt
LIEFDAT	Delivery date
ZIELDAT	Target date of the complaint
ISTDAT	Actual date of the complaint

The individual parameters are separated by „/“.

If this parameter is empty, the default setting is used:

LIEFDAT/LIEFDAT/LIEFDAT/LIEFDAT

During data collection, the system ignores all data records where one of the configured date fields is empty.

Option 1031 - Supplier evaluation "Proportion of complaints".

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the criterion that is used to specify the variables **n_{PAN}** and **n_{REK}** for the automatic rating program "proportion of complaints" (REKLAMATION_ANTEIL).



The following settings are available:

ANZAHL - the calculation is based on the number of inspection requirements or complaint details.

STUECKZAHL – the calculation is based on the actual delivery quantity of the inspection

requirements and the quantity of the complaint details. If this parameter is set, all data records are ignored during data collection where the respective field is empty. The calculated decimal value is stated as "Parts per million".

If this parameter is empty, the setting **STUECKZAHL** is used.

Options 1032 up to 1034 – Supplier evaluation "Delivery date"

General description of the function

First, the number of completed inspection requirements of the goods receipt is specified that are assigned to the company you want to evaluate (entered as supplier). You specify the number of inspection requirements that are within the areas defined via option. In order to filter the data of the respective period, the system only considers the inspection requirements with a date within the limits of the evaluation period. Option 1033 defines the date that is used. The number of inspection requirements is stored in the variable n_{pan} .

For each inspection requirement found, an evaluation factor f_{TERMIN} is specified according to option 1034. These evaluation factors are also added.

To further calculate, the greatest evaluation factor of option 1034 is specified. That factor is stored in the variable f_{MAX} .

At the end, the sum of the evaluation factors f_{TERMIN} is divided by the number of goods receipt and multiplied with the maximum evaluation factor.

$$\left(\sum_{n_{\text{PAN}}} f_{\text{TERMIN}} \right) \div (n_{\text{PAN}} * f_{\text{MAX}})$$

Option 1032 – Supplier evaluation "Delivery date"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the relevant areas of the goods receipt that are used for the automatic rating program "delivery date (LIEFERUNG_TERMIN)".

In this option, you can define one or several areas where the system should search for inspection requirements (to calculate the variable **n_{PAN}**).

If this parameter is empty, all goods receipt areas are included in the search. If you want to include more than one area in the search, enter the individual areas comma-separated.

Option 1033 – Supplier evaluation "Delivery date"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the date fields that are used to filter inspection requirements for the automatic rating program "delivery date" (LIEFERUNG_TERMIN).



The following date fields are available:

Inspection of the lower limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

Inspection of the upper limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement

HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

The individual parameters are separated by „/“.

If this parameter is empty, the default setting is used:

LIEFDAT/LIEFDAT

During data collection, the system ignores all data records where one of the configured date fields is empty.

Option 1034 – Supplier evaluation "Delivery date"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines the difference between target and actual delivery date as of which a goods receipt is rated using the specified factor (to calculate the variable f_{TERMIN}) for the automatic rating program "delivery date (LIEFERUNG_TERMIN)".

This option can contain several option details which are set in a certain sequence using the sub number of the option. You must generally specify the sequence so that the best class (lowest difference between dates) is on top of the list and therefore has the lowest sub number.

You first state the class, symbolized by letters.

Then you state the evaluation factor f_{TERMIN} , separated by a colon. This is a positive integer.

Then you state the negative deviation (separated by a colon) and, after a slant line, the positive deviation. The deviation is specified as an integer in days. The entry with the highest sub number may not include any specification on deviations (see example below). Therefore all deviations from the delivery date, which are outside the limits of the second last option entry, are put into the last class.

Example

Option-No.	Option sub number	Option identifier	Value
1034	1	0	A:3:-3/+1
1034	2	0	B:2:-5/+2
1034	3	0	C:1:-8/+3
1034	4	0	D:0

In this example, all goods receipts which are up to 3 days too early or 1 day too late, are assigned to class **A** with an evaluation factor f_{termin} of 3.

Goods receipts which are up to 5 days too early or 2 day too late, are assigned to class **B** with an evaluation factor f_{termin} of 2.

Goods receipts which are up to 8 days too early or 3 day too late, are assigned to class **C** with an evaluation factor f_{termin} of 1.

All goods receipts which arrive earlier or later than stated above, are assigned to class **D** with an evaluation factor f_{termin} of 0.

Options 1035 up to 1037 – Supplier evaluation "Delivery quantity"

General description of the function

First, the number of completed inspection requirements of the goods receipt is specified that are assigned to the company you want to evaluate (entered as supplier). You specify the number of inspection requirements that are within the areas defined via option. In order to filter the data of the respective period, the system only considers the inspection requirements with a date within the limits of the evaluation period. Option 1035 defines the date that is used. Goods receipts with a target quantity of zero or if the target or actual quantity is not

specified, are not taken into account for the rating result. The number of inspection requirements is stored in the variable n_{pan} .

For each found inspection requirement an evaluation factor is specified f_{menge} . These evaluation factors are also added.

To further calculate, the greatest evaluation factor of option 1037 is specified. That factor is

$$\left(\sum_{n_{PAN}} f_{MENGE} \right) \div (n_{PAN} * f_{MAX})$$

stored in the variable f_{MAX} .

At the end, the sum of the evaluation factor f_{MENGE} is divided by the number of goods receipts and multiplied with the maximum evaluation factor.

Option 1035 – Supplier evaluation "Delivery Quantity"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

This option defines all relevant areas of goods receipt for the automatic rating program "delivery quantity" (LIEFERUNG_QUANTITY).

In this option, you can define one or several areas where the system should search for inspection requirements (to calculate the variable n_{PAN}).

If this parameter is empty, all goods receipt areas are included in the search. If you want to include more than one area in the search, enter the individual areas comma-separated.

Option 1036 – Supplier evaluation "Delivery Quantity"

System availability

MW 3.0	MW 2.1	AIP	CTWIN	Console		Other
--------	--------	-----	-------	---------	--	-------

(server)	(server)					(with comment)
X	X					

Valid values

See description

Description

This option defines the date fields that are used to filter inspection requirements for the automatic rating program "delivery quantity" (LIEFERUNG_QUANTITY).



The following date fields are available:

Inspection of the lower limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

Inspection of the upper limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDAT	Actual delivery date
LIEFDAT : SOLL	Target delivery date

The individual parameters are separated by „/“.

If this parameter is empty, the default setting is used:

LIEFDAT/LIEFDAT

During data collection, the system ignores all data records where one of the configured date fields is empty.

Option 1037 – Supplier evaluation "Delivery Quantity"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console		Other (with comment)
X	X					

Valid values

See description

Description

This option defines the difference between target and actual delivery date as of which a goods receipt is rated using a specified factor (to calculate the variable f_{MENGE}) for the automatic rating program "delivery quantity (LIEFERUNG_MENGE)".

This option can contain several option details which are set in a certain sequence using the sub number of the option. You must generally specify the sequence so that the best class (lowest difference between dates) is on top of the list and therefore has the lowest sub number.

You first state the class, symbolized by letters.

Then you state the evaluation factor f_{MENGE} , separated by a colon. This is a positive integer.

Then you state the negative deviation (separated by a colon) and, after a slant line, the positive deviation. The deviation is specified as an integer in days. The entry with the highest sub number may not include any specification on deviations (see example below). Therefore all deviations from the delivery date, which are outside the limits of the second last option entry, are put into the last class.

Example

Option-No.	Option sub number	Option identifier	Value
1037	1	0	A:2:-0/+0
1037	2	0	B:1:-5/+10
1037	3	0	C:0

In this example, all goods receipts without a quantity deviation are assigned to class **A** with an evaluation factor f_{Menge} of 2.

Goods receipts where up to 5% less or 10% more than planned is delivered, are assigned to class **B** and to an evaluation factor f_{MENGE} of 1.

Goods receipts, which deviate even more from the planned delivery quantity (positive or negative deviation), are assigned to class **C** with an evaluation factor f_{Menge} of 0.

Option 1038 - Method to identify the inspection result

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X				X	

Valid values

EXIST_FA / NCD_ALL / NCD_LAST / NCD_MMKONF

Valid as of HYDRA-CAQ version

7.1.3

Subject to area

yes

Description

This option defines the method that is used to identify the inspection result of a characteristic.

Notes

The following values are available:

EXIST_FA If a failure type exists for this characteristic (generated manually or automatically), the inspection result of the characteristic is FAIL. In all other cases it is PASS.

NCD_ALL The worst inspection result of all collected samples is used as inspection result of the characteristic. This function relates to tolerance violations during the inspection of n-c samples and is independent of manual or automatic failure collection.

NCD_LAST The inspection result of the last sample collected for this characteristic is used as inspection result of this characteristic.

If the last sample has the status UNGRPRUEFT ("unchecked") due to invalid measured values, this status is also assigned to the characteristic.

NCD_MMKONF The inspection result of the characteristic is identified via the settings of the characteristic. The settings include either the parameter **NCD_LAST** or **NCD_ALL**. This parameter is only available as of HYDRA-CAQ 7.1.24.

If no valid measured value is available for the characteristic, the characteristic is assigned the status **UNGEPRUEFT** ("unchecked").

If this option does not exist or the value is not entered, the standard value **NCD_ALL** is used.

If you change this option during operation, the system does not automatically correct all existing characteristic data where this option applies. Changes are only becoming active if measured values or failure types are entered, deleted or changed.

As of HYDRA-CAQ 7.1.24, this setting is also used to identify inspection results of the entries of a number pool.

In the MOC, you use this option to set the characteristic result. If NCD_MMKONF is set in the option, the acronym basic_inspection_result_enabled is set to 1, otherwise 0. If the value of the acronym is 1, the field *Inspection result base* is visible (in the characteristic master data).



Note on the use of the field *Inspection result base*.

The setting of the inspection plan/inspection step characteristic in the field *Inspection result base* is only used, if this option is set to "NCD_MMKONF" (for this data type/area if required).

If the content of this field in the MOC (with correct option 1038) does not equal "NCD_LAST" and does not equal "EXIST_FA", the system uses "NCD_ALL".

Option 1041 – Data base for dynamic modification history

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with
--------------------	--------------------	-----	-------	--	-----	----------------

						comment)
X	X					

Valid values

For all types of dynamic modification, the following field acronyms are allowed:

RECTYP	– Data record type of the inspection requirement
BER	– Area of the inspection requirement
ATK	– Article number of the inspection requirement
ATKIDX	– Drawing issue number of the inspection requirement
HERSTNR	– Manufacturer from the inspection requirement
LIEFNR	– Supplier from the inspection requirement
KDNR	– Customer from the inspection requirement
AGNR	– Operation number <u>from the inspection requirement</u>
AGBEZ	– Operation designation <u>from the inspection requirement</u>
PANDAT	– Date of requirement
HERSDAT	– Manufacturing date from the inspection requirement
LIEFDAT	– Actual delivery date from the inspection requirement
ANR	– Order number of the inspection requirement
CNR	– Batch number of the inspection requirement
BESTNR	– Order number of the inspection requirement
PPS:REF	– PPS reference number of the inspection requirement
PPLID	– Inspection plan ID <u>of the underlying inspection plan</u>
PPLIDX	– Inspection plan index <u>of the underlying inspection plan</u>
DYNUEBERG	– Transitional definition of the dynamic modification (see comment)
PPLATZ	– Inspection station (see comment)

The following field acronyms are available for the dynamic modification history that additionally includes data of the inspection step characteristics:

AFO	– OP sequence of the inspections step characteristic
CMMNR	– Characteristic number of the inspection step characteristic
SW	– Target value of the inspection step characteristic
OTG	– Upper tolerance limit of the inspection step characteristic
UTG	– Lower tolerance limit of the inspection step characteristic
DYNORM	– Dynamic modification norm of the inspection step characteristic
PNIVEAU	– Inspection level of the dynamic modification norm (from the inspection step characteristic)
DYNMETH	– Method of the dynamic modification norm (from the inspection step characteristic)

AQL	– AQL value of the dynamic modification norm (from the inspection step characteristic)
DYNUEBERG	– Transitional definition of the dynamic modification (see note in the description)
PPLATZ	– Inspection station (see note in the description)

Subject to area

No

Description

This option defines all fields that form the common data base for the dynamic modification history.

When you identify the inspection severity of newly created inspection requirements or inspection step characteristics, all inspection steps or inspection step characteristics are taken into account, which include the same content in the fields defined here as the newly created data record.



The entries are equivalent to the field acronym and set in square brackets. A comma is used to separate.

The user manually decides on the design and the visualization of the data according to this option in the MOC. To do so, the user must group the respective list by the relevant fields.

The user can use the additional field of this option to specify for which type of dynamic modification the data record of this option is valid. Enter the respective type of dynamic modification here (set in square brackets). The following types of dynamic modification are available.

[LOS] or [MERKMAL] Depending on the type of dynamic modification, the field acronyms PPLATZ and DYNUEB refer to the respective fields of the inspection requirement (dynamic modification referring to the batch) or of the inspection step characteristic (dynamic modification referring to the characteristic).

A change of this option only has an effect when you create the next inspection requirement.

Once you have changed this option, the traceability of the identification of the inspection severity is greatly limited for the "old dynamic modification history". Because of the grouping of fields, you can only display one "type" of the dynamic modification history in the MOC.

Inspection step characteristics can have dynamic modification norms with different skip-lot frequencies. For this reason, you should also use parameters that are specific to the characteristics for the batch-related dynamic modification when considering the dynamic modification histo-

ry. You can then make sure, that characteristic A is inspected every third time, but characteristic B only every 6th time. In this case, the system checks for each inspection requirement of the dynamic modification history (according to the selection criteria that are specific to the characteristic) if the characteristic had the status skip-lot. If no characteristic has been found for the inspection requirement that matches the selection criteria, the system proceeds as if a characteristic with the status skip-lot has been found.

If the option for the batch-related dynamic modification does not include acronyms for inspection step characteristics, then the system checks during the search for skip-lot characteristics that must be inspected if the inspection requirement included "any" dynamic characteristic with a status unequal skip-lot.

Example

[RECTYP],[BER],[LIEFNR],[ATK],[ATKIDX]

Option 1044 – Distribution list for measures in case of errors in the inspection planning

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Any character string.

Valid as of HYDRA-CAQ version

7.1.3

Subject to area

yes

Description

You can use this option to define a distribution list that is notified via a specified measure in case of errors in the inspection planning.

Notes

If the system cannot find a distribution list with the identifier defined in this option, the system does not generate a measure.

This option is currently not used. If required, it is specified and individually resolved which error does generate a measure.

Option 1045 – Distribution list for measures in case of errors in the dynamic modification

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Any character string.

Subject to area

yes

Description

You can use this option to define a distribution list that is notified via a specified measure in case of errors in the dynamic modification.



If the system cannot find a distribution list with the identifier defined in this option, the system does not generate a measure.

In conjunction with the escalation management, users can be informed automatically about the generation of a measure.

Option 1046 – Number of samples to identify a trend

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X*	X	X	X			

Valid values

Any integer


Subject to area

yes

Description

This option defines how many samples you need to identify a trend.

This number of samples is only counted as of a corresponding basic value, as shown in the following example (with number = 4).

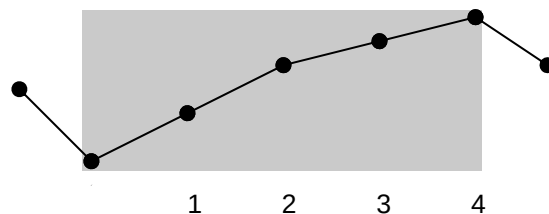

The trend already starts with the basic value and is visualized accordingly.



Use this option to display a trend in control charts.

You also use this option to identify when a respective automatic failure type is created in case of an existing trend. For this, you must have activated the generation of the failure type for the inspection step characteristic.

A trend occurs if x consecutive values of the control chart (depending on the type of control chart XQuer, R, S ...) show a continuous trend in one direction (upwards or downwards).

If the defined value is **0**, the display of the trend is generally suppressed. If this option does not exist, the value **7** is used.

Option 1047 – Number of samples to identify a run

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X*	X	X	X			

Valid values

Any integer

Subject to area

yes

Description

You can use this option to define the minimum number of samples that you need to identify a run.



Use this option to display a run in control charts.

A run occurs, if x consecutive values of the control chart are always above or below the mean value.

If the defined value is 0, the display of the run is generally suppressed. If this option does not exist, the value 7 is used.

Option 1048 – Lower threshold value for middle third in percent

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X*	X	X	X			

Valid values

Any integer

Subject to area

No

Description

This option defines the percentage up to which a warning 'middle third' is displayed (measured values exceed the middle third of the action limits).



You use this option if you display a middle third in the control charts.

The system identifies a middle third, if less than x percent of the values visualized in the control chart is within the middle third (of the area between the action limits).

If this option does not exist, the value 40 is used.

Option 1049 – Upper threshold value for middle third in percent

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X*		X	X			X

Valid values

Any integer

Subject to area

No

Description

This option defines the percentage as of which a warning 'middle third' is displayed (measured values exceed the middle third of the action limits).



You use this option if you display a middle third in the control charts.

The system identifies a middle third, if more than x percent of the values visualized in the control chart is within the middle third (of the area between the action limits).

If this option does not exist, the value 90 is used.

Option 1050 – Autom. deactivation of old control plans

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value = 'Y'), the system checks every time a control plan is activated if control plans with the same key criteria exist. If this is the case, the respective control plans are automatically disabled.



Key criteria are article number, article index, customer-, manufacturer-, and supplier number.

Options 1051 and 1052 – Supplier evaluation "Usage decision goods receipt"

General description of the function

First, the number of completed inspection requirements of the goods receipt is specified that are assigned to the company you want to evaluate (entered as supplier). You specify the number of inspection requirements that are within the areas defined via option. In order to filter the data of the respective period, the system only considers the inspection requirements with a date within the limits of the evaluation period. Option 1052 defines the date that is used. The number of inspection requirements is stored in the variable n_{pan} .

For each inspection requirement found, the percentage f_{PROZ} is specified. The percentage is the parameter "[BEWPENT:xx]" that is included in the additional field of the HYDRA-CAQ status (status type = "PANVERWENT"; status ID = ID of the usage decision). These percentages are also added. **Inspection requirements where no percentage f_{PROZ} could be generated, are ignored during the rating.**

At the end, the sum of the percentages f_{PROZ} is divided by the number of identified goods receipts n_{PAN} .

$$\left(\sum_{n_{PAN}} f_{PROZ} \right) \div n_{PAN}$$

Option 1051 – Supplier evaluation "Usage decision"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

In this option, you can define one or several areas where the system should search for inspection requirements (to calculate the variable n_{PAN}).

If this parameter is empty, all goods receipt areas are included in the search. If you want to include more than one area in the search, enter the individual areas comma-separated.

Option 1052 – Supplier evaluation "Usage decision"

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

See description

Description

You use this option to define the date fields which are used to filter the inspection requirements for the automatic rating program "Usage decision goods receipt (LIEFERUNG_PENTSCHEID)".



The following date fields are available:

Inspection of the lower limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDDAT	Actual delivery date
LIEFDDAT : SOLL	Target delivery date

Inspection of the upper limit of the evaluation period

PANDAT	Date of the requirement
ABSDAT	Completion date of the inspection requirement
HERSTDAT	Production date
LIEFDDAT	Actual delivery date
LIEFDDAT : SOLL	Target delivery date

The individual parameters are separated by „/“.

If this parameter is empty, the default setting is used:

LIEFDDAT/LIEFDDAT

During data collection, the system ignores all data records where one of the configured date fields is empty.

Option 1058 – Copy user fields from the inspection plan into the inspection requirement

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

If this option is set (value='Y'), the system takes over all user fields (direct and indirect) of the underlying inspection plan when you generate an inspection requirement with CAQ 7.x.

As of CAQ 8.1, the system only takes over the direct user fields. As of CAQ 8.1, the indirect user fields are no longer supported.



With CAQ 7.x, note the following with respect to indirect user fields:

If this functionality is activated, you must guarantee that the numbers of the indirect user fields of the inspection plan and the inspection requirement do not conflict.

Example: The inspection plan header data use the indirect user fields 9 to 13. In the inspection requirements, the direct user fields 1 to 8 are needed. An inspection requirement that is based on an inspection plan therefore includes the indirect user fields 1 to 13.

For the configuration of the user fields you must make sure that the field types of the indirect user fields 9 to 13 in the inspection plans correspond to the ones of the inspection requirements.



If this option does not exist or if the value is not filled, the standard value N is used.

Option 1083 – Inspection step characteristics are not generated if specification list entry is not found

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

yes

Description

You can use this option to define whether the generation of characteristics should be suppressed if the corresponding specification list entries are not found. If this option is disabled, the characteristics are generated with status 'FHL'.



This option is not effective for characteristics if the system searches for their details and/or specifications in the characteristics catalog.

Option 1088 – Synchronizing the following number types for calculated characteristics

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

defined number type (see status type NUMMERTYP)

Valid as of HYDRA-CAQ version

CAQ 8.1

Subject to area

yes

Description

In HYDRA 8 and if you record values in relation to an inspection point, this option must be active for the relevant rectype with the value "PPUNKT". By default, this is initially the case for rectype "[FEP]". If you have activated a recording of values in relation to inspection points for other rectypes and if calculated characteristics are used, an active option with the value = "rectype" must also exist for this rectype.

Other values apart from "PPUNKT" are not permitted if you use HYDRA 8.

If the field is empty, the function is disabled.

Notes

Numbers are only taken over for calculated characteristics if the number stored for the respective sample of the inspection point is equal to the number of the characteristics that have been referenced during the calculation of the characteristic. In the field 'Addition', you can use specific flags to better control the behavior.

[AKTNPSTA] The status of the corresponding entry in the number pool is updated depending on the result of all samples. You use the flags PRFERG_INIT:UNGEPR, SP_PRFERG_INIT:IO, SP_PRFERG_INIT:BEDINGT_IO and SP_PRFERG_INIT:NIO of the status entries of status type NUMPOOLSTA to identify the status of the sample result.

Option 1100 – QM Subsystem identification

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

any string (max. length 6 characters)

Valid as of HYDRA-CAQ version / DB patch

CAQ 8.1Subject to area

No

Description

You can use the combination of options 1100 and 1101 to add identifiers that specify the origin of data. These identifiers are added to QM subsystem identifications that are transferred with the inspection batch data from SAP.

The SAP inspection batch data include the subsystem ID of inspection batches in the field SUBSYS of the structure QIWLR. This ID is stored in the field subsys_nr of the inspection requirements.

During uploads for an inspection batch, a corresponding (active) entry of option 1100 is searched for, where the value of the option includes exactly this subsystem ID of the inspection batch.

Then the ID of the option found is used to find the corresponding (active) entry of option 1101. The value of this corresponding option is used as data origin (field QERGDATH) in all uploads of the respective inspection batch.

Cross reference

See also the documentation "MBL_Interface_QMIDI".

Option 1101 – Origin of data for the QM subsystem ID

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with

						comment)
X	X					

Valid values

any string (max. length 2 characters)

Valid as of HYDRA-CAQ version / DB patch

CAQ 8.1Subject to area

No

Description

See Option 1100

Cross reference

See also the documentation "MBL_Interface_QMIDI".

Option 1107 – Overruling the inspection scope with manually generated inspection points for time and piece intervals

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

EGAL / GENAU / GROESSER / KLEINER ("irrelevant/exact/greater/smaller")

Valid as of HYDRA-CAQ version / DB patch

for data type = "QMS": as of CAQ 8.1

for data type <> "QMS": as of service pack 14

Subject to area

yes

Data type of the inspection point <> "QMS"**Description**

If this option includes a value, the value defined in this option overrules the specification, which defines the compliance with the inspection scope. This specification is stored in the characteristic during manual generation of inspection points with cause of creation *Free*.

Data type of the inspection point = "QMS"**Description**

If this option includes a value, this value overrules the specification that is stored in the characteristic during manual generation of inspection points and that defines the compliance with the inspection scope.

However, this only occurs if the cause for the generation of an inspection point deviates from the type of inspection point generation defined in the inspection step.

Example

You have configured for an inspection step that the inspection points are generated at time intervals. All characteristics of the inspection step have been configured so that you must strictly adhere to the inspection scope.

If the system generates automatic inspection points for this inspection step because of a time interval, the identifier to overrule the inspection scope with option 1107 is not affected for the newly generated inspection points. The inspection scope must be adhered to for all characteristics of these inspection points. This does also apply for other automatically created inspection points (e.g. change of machine status).

But if you manually generate an inspection point for this inspection step, the value stored in option 1107 is used to overrule the characteristic specifications for this inspection point. If the option includes the value EGAL ("irrelevant") in our example, you need not adhere to the inspection scope that has been specified for the characteristics of this inspection point.

If like in this example the inspection step is configured so the inspection points are generated manually ("free") then Option 1108 has no impact. As the generation of the inspection points have been executed manually ("free"), the cause of creating an inspection point is identical.

Option 1108 – Overruling the mandatory inspection with manually generated inspection points for time and piece intervals

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

0 / 1

Valid as of HYDRA-CAQ version / DB patch

for data type = "QMS": as of CAQ 8.1

for data type <> "QMS": as of service pack 14

Subject to area

yes

Data type of the inspection point <> "QMS"

Description

If this option includes a value, the value defined in this option overrules the specification, which defines if a mandatory inspection is required. This specification is stored in the characteristic during manual generation of inspection points with cause of creation *Free*.

0 = no mandatory inspection

1 = mandatory inspection

Data type of the inspection point = "QMS"

Description

If this option includes a value, this value overrules the specification that is stored in the characteristic during manual generation of inspection points and that defines if a mandatory inspection is necessary.

However, this only occurs if the cause for the generation of an inspection point deviates from the type of inspection point generation defined in the inspection step.

Example

You have configured for an inspection step that the inspection points are generated at time intervals. All characteristics of this inspection step have been configured so that an inspection result must be recorded.

If the system generates automatic inspection points for this inspection step because of a time interval, the identifier to overrule the mandatory inspection with option 1108 is not affected for the newly generated inspection points. Therefore, you must record inspection results for all characteristics of these inspection points. This does also apply for other automatically created inspection points (e.g. change of machine status).

But if you manually generate an inspection point for this inspection step, the value stored in option 1108 is used to overrule the identifier of the mandatory inspection for this inspection point. If the option includes the value 0 in our example, the collection of inspection results for the characteristics of this inspection point is optional.

If the inspection step in our example were configured so that you could freely generate inspection points, then option 1108 would not have any effect either. Reason: The manual generation of inspection points is "free" and the cause for the generation of the inspection point is again identical.

Option 1109 – Upload skip inspection points to the PPS system

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version / DB patch

CAQ 8.1 Subject to area

yes

Description

You can use this option to define if skip inspection points are confirmed/uploaded to the PPS system.



Skip inspection points are inspection points where no characteristic to be inspected has been assigned..

If this option is disabled, the skip inspection points are not uploaded. The relevant data records contain an "I" for ignore as ID for the upload.

Option 1110 – Immediately completing skip inspection points after generation

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version / DB patch

CAQ 8.1Subject to area

yes

Description

You can use this option to define if skip inspection points are immediately completed after generation.



Skip inspection points are inspection points where no due date is assigned to the characteristic.

If this option is activated, a new skip inspection point is instantly completed after generation.

Option 1111 – Creating initial inspection point for time and piece intervals immediately after OP logon

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version / DB patch

Patch: dbp_qm_idi.hsc

Subject to area

yes

Description

You can use this option to define if characteristics with intervals that are

- time-related and
- piece-related

are included in an inspection point that is created with the operation logon. If an inspection point is generated via operation logon, the respective cause for creation is "OP logon (A_AN)". If this option does not exist or if the option is disabled or includes the value "N", only the characteristics with interval type "once" are included in such inspection points.

If you do not want to generate an inspection point with the OP logon, you must disable this option or set it to the value "N". And there must not be any characteristics with the interval type "once".



When the system generates an inspection point for QMS inspection steps, the cause of the creation is STCK for a piece-related or ZEIT for a time-related generation of the inspection point. An inspection point with interval type "once" is not supported in a QMS.

For inspection steps that are not QMS inspection steps, an inspection point is generated which contains all characteristics of the interval type once, piece and time. This inspection point is assigned the cause of creation "OP logon (A_AN)".



To create an initial inspection point after the OP logon, the active scheduler entry for creating inspection points must exist. The entry also controls the cyclic generation of an inspection point based on time and pieces.

Option 1115 – Linking CAQ and ADE structures

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version / DB patch / license

Patch: dbp_caq_operation_linking
 Patch: dbp_caq71_ade72_integration_qm_idi
 License: ADE-CAQ

Subject to area

yes

Description

You can use this option to define if you want to link ADE and CAQ structures in a global manner or in specific areas.



You can use this option to control that the respective entries for the CAQ structures are generated in the table auftrags_bestand.

- CAQ inspection requirement ⇔ Order header
- CAQ inspection step ⇔ Operation

In this case, the corresponding fields of the table auftrags_bestand link the structures.

This active option can also control if the system searches for inspection plan information for

ADE orders or operations. If the search is successful, the system generates the respective inspection steps with characteristics (this is not valid for the operation as QM subsystem).

In the integrated mode, the HYDRA standard functions (A_AN etc..) are used to log on and log off operations or to interrupt operations.

This (active) option also specifies that the order number of the inspection requirement is generated from the PPS reference number if an order number has not been transferred during generation of the inspection requirement.

If you use this option to disable that ADE and CAQ structures are linked in case of a specific rectype, you can use an additional MOC configuration of the ADE-CAQ area-specific configuration to prevent the generation of orders for inspection requirements. This can be useful if you use e.g. the inspection mode "goods receipt" in the AIP.

Option 1128 – QM-IDI partial uploads

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

This function is valid as of 7.x in connection with QMS.

This option must be generated manually if necessary.

Subject to area

No

Description

If you activate this option, you can configure that you can make partial confirmations/uploads of part quantities for inspection batches to the PPS system before having identified the usage decision.

Use the addition "[DIRECT]" in the field Addition to change the behavior. For further details, please refer to the note below. This addition is only available for test purposes. To use this addition, there is no release.

If this option is not available or inactive, all data of an inspection batch is only confirmed/uploaded to the PPS system when the usage decision is made (completion of the inspection requirement).



If you only activate this option (without the addition [DIRECT]), the following posting behavior is achieved:

- Inspection points are confirmed/uploaded after completion. With the inspection points, the single values and the sample results are uploaded.
- In case of operations that are not relevant to inspection points, the corresponding characteristics including their measured values and samples are uploaded when the inspection step is completed (normally with the final log off of the operation).

Warning:

This can lead to problems when reactivating operations that are relevant for the quality.

- The usage decision is uploaded once it is completed (normally after completion of the inspection requirement).



If you activate this option with the addition [DIRECT], the following posting behavior is achieved:

- All details of inspection points, collection results and failure positions are directly uploaded to the PPS system after collection.
- It is uploaded to the PPS system that the characteristics are finished when the corresponding inspection step has been completed (normally with the final logoff of an operation).

Warning:

This can lead to problems when reactivating operations that are relevant for the quality.

- It is uploaded to the PPS that the sample sets are finished when the respective inspection step or the corresponding inspection point has been completed.

Warning:

This can lead to problems when reactivating operations that are relevant for the quality.

- The usage decision is uploaded once it is completed (normally after completion of the inspection requirement).

Cross reference

See also the documentation "MBL_Interface_QMIDI".

Option 1130 – Plausibility check of staff badge number in CAQ terminal dialogs

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X	(X*)	X		(X*)	

Valid values

Y / N

Valid as of HYDRA-CAQ version

You must set this option manually if required.

Description

You can use this option to configure if the system makes a plausibility check of the staff badge number in the CAQ terminal dialogs during the recording of measured values.

Also, there is the possibility in the "Addition" of this option to store authorizations for the corresponding action.



If you want to use this option with HYDRA 8 in the AIP, you must explicitly test the required configuration.



You can use the additional parameter [OPTIONAL] to configure that the plausibility check is only carried out if you enter a staff badge number in the corresponding dialogs. If the staff badge number is not entered, then the plausibility check is not performed. It is only checked if

the entry of the staff badge number is mandatory for this dialog.

If the parameter is not set, everytime an action is carried out at the terminal a staff badge number is requested.



Use the parameters [AUTH:<BAPI name>:<info field>:<level>] to control which function authorization the employee requires for a specific action.

You can enter the following BAPIs/DDIs as <BAPI name>:

CPAUMW.*, CPAUSP.*, CPANUMP.*, CPAUERR.*, CMASSN.*, Q_MW_GEN,
Q_MW_MOD, Q_PRB_GEN, Q_PRB_ABS, Q_P_AN

Single tasks can be specified for BAPIs like CPAUMW.INSERT, CPAUMW.UPDATE, CPAUMW.DELETE or CPAUSP.ABSCHLIESSEN.

The parameter component <level> can have a numerical value between 1 and 9. 9 is the highest authorization level.

In order to use this function, you must create a CAQ authorization for the staff member in the HR master data. To assign a CAQ authorization, you must configure the fields of the HR master data respectively. This configuration is different in HYDRA versions 7 and 8 and the requirements are different.

Requirements HYDRA 7:

- License: PZE-EPA; user rights: PPE, PADM

Requirements HYDRA 8:

- Function authorization "pefc" and license (PZE-INF, ZKS, BAV or MOC-CFG) for the application "Configuration of HR master data and badge fields" (menu: Master data – Staff).

To create a CAQ authorization, you can only use the fields "number field 1" to "number field 5" (fields of type "numeric value"). These fields correspond to the data base fields "infowert_1" to "infowert_5".

Example for HYDRA 8

In the editing dialog of the field "Number field 1" of the HR master data, you activate this field. You assign to this field e.g. the field name "CAQ authorization". The length is set to 1.

In the HR master data, you assign e.g. the value "7" to person A in this field (tab "Additional infos").

If a plausibility check is performed for a person with the CAQ authorization of level 7 for the BAPI "CPAUMW.*" (create measured value), the parameter

[AUTH:<BAPI name>:<Info field>:<level>]

must be structured as follows:

[AUTH:CPAUMW.*:infowert_2:7].

The person can use BAPIs CPANUMP if they have CAQ authorization 7,8 and 9. In this example, person A would be authorized to save or change measured values.



You can also use the fields "Number field 1" to "Number field 5" to create several CAQ authorization fields. You can for example create a specific CAQ authorization for measures or a specific CAQ authorization for failures. You must then select descriptive names in the fields in tab "Additional info".



To open the screen to record measured values, you use the constant Q_P_AN instead of the BAPI name.

Option 1142 – Automatic calculation of floating statistical values in the sample data records

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Positive integer value between 2.....10

Valid as of HYDRA-CAQ version

Patch: dbp_caq_statistic_enh.hsc

Subject to area

yes

Description

If this option is set (value ≥ 1), the statistical values for the floating XQuer-, R- and s-value are calculated in the sample data records. In tab "Statistics" of the respective applications, the statistical values are displayed independent of this option. The value of the option specifies the number of samples that is used to calculate the floating statistical value.

If this option is set, the corresponding value is also used to calculate the displayed statistics of floating control charts.



Only if the requirements described below are fulfilled, the floating values stored in the statistical calculation match the visualization of the corresponding control chart:

- The data base to display a control chart (see option 1017) corresponds to the value [RECTYP],[BER],[PANNR],[PAUNR],[AFO],[DEVICE:TYP],[DEVICE:ID]
- The samples are recorded continuously over time.
- (the sorting by date/time of the first measured value of a sample is equal to the sorting by sample number).
- The value of the current option equals 2.

If this option is not available or if the numeric value is less than 1, the respective statistical fields are not considered to calculate samples. For the display of floating control charts, the value 2 is used in this case.

Option 1154 – Optional posting possibility to manually interrupt and log off operations with pending inspections

System availability

MW 3.0	MW 2.1	AIP	CTWIN		MOC	Other (with
--------	--------	-----	-------	--	-----	----------------

(server)	(server)					comment)
X	X					

Valid values

Y/N/A_UN

Subject to area

yes

Description

You can use this option to configure that the HYDRA server provides the possibility to log off or interrupt a QM operation although an inspection is still pending ("posting required").



If you activate this option (value = Y) and you log off or interrupt an operation with pending inspections in the terminal, the option is provided to log off or interrupt this operation anyway.

If this option is set to the value = A_UN, you can interrupt a QM operation with pending inspections, but you cannot log it off.

If this option is not available or disabled, the system checks if there are pending inspections when you log off or interrupt an operation. If pending inspections are available, the action is canceled.

You may only activate this option if the respective user action (log off/interrupt) only affects the operation specified in the dialog.

If further operations are logged off and/or interrupted using such an OP logoff (i.e. on the level of single events), you may not activate this function.



The processing code generally defines if any check for pending inspections is performed at all during logoff/interruption.

Option 1157 – Using inspection station instead of machine/machine group even if ADE-CAQ is used?

System availability

MW 3.0 (LR)	MW 2.1 (LR)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X			(X)		

Valid values

Y / N

Valid as of HYDRA-CAQ version

Generally valid as of hymwcaq72.dll version 7.2.1.72

The addition [GROUP:GEPLANT,MNR,MGRP,OPT_PLAN] is valid as of hymwcaq72.dll version 8.1.1.177

This option might not be visible. In this case, you must adapt the database patch dbp_caq_customer_configuration.hsc accordingly.

If the script hydbpatchmw30.scr is not called in an existing customer system after SP 10, you must manually run this patch before changing the option if required.

Subject to area

yes

Description

This option only has an effect on the generation of inspection steps, if the inspection requirements are generated by an operation logon or an order status change. Additionally, the setting "One inspection step for each inspection station" must be enabled in the respective inspection plan.

If this option is not enabled (value unequal "Y") or not available, the characteristics in the inspection steps are grouped by the fields "Scheduled", "Machine group" and "Machine" and not by the inspection station.

If this option is enabled without any further parameters (value equal to "Y", addition empty), the characteristics in the inspection steps are exclusively grouped by the inspection station.

If this option is enabled (value equal to "Y") and the addition of the option includes the parameter [GROUP:GEPLANT,MNR,MGRP,OPT_PLAN], the characteristics in the inspection steps are grouped by the fields "Scheduled", "Machine group", "Machine" and "Inspection sta-

tion". The inspection steps in the fields of the same name always have the contents of the grouping criteria.

Option 1162 – Optional posting possibility to automatically interrupt and log off operations with pending inspections

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y/N/A_UN

Subject to area

yes

Description

You can use this option to configure if the HYDRA server provides the possibility to log off or interrupt a productive operation although an inspection is still pending ("posting required").



If you activate this option (value = Y) and you log off or interrupt an operation with pending inspections in the terminal, the option is provided to log off or interrupt this operation anyway.

If this option is set to the value = A_UN, you can interrupt an operation with pending inspections, but you cannot log it off.

If this option is not available or disabled, the system checks if there are pending inspections when you log off or interrupt an operation. If pending inspections are available, the action is canceled.



The processing code generally defines if any check for pending inspections is performed at all during logoff/interruption.

Option 1167 – Additional parameter to complete inspection step within the CPAN.BEURTEILEN

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Example: BZW=J~BZWRET=2905,2936,2937,2938

Valid as of HYDRA-CAQ version

hymwcaq72.dll version 7.2.1.94

Subject to area

No

Description

If this option is active and contains a value, this value is attached to the dialog CPAU.ABSCHLIESSEN within the function cpan_beurteilen. You can use this option to make a posting ("posting required") and to overrule the plausibility checks (perform mandatory inspections, inspection scope reached, inspection points completed).

Option 1168 – User fields to search for specification lists

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

PAN / PPLMM / NO_SEARCH

Valid as of HYDRA-CAQ version

hymwcaq72.dll version 7.2.1.95

Subject to area

No

Description

If this option is active and includes a value, you can use the value to control which user fields are used to search for specification lists: the user fields of the inspection requirement header (PAN) or of the inspection plan characteristics (PPLMM).

The value "NO_SEARCH" has the effect that the user fields are not included in the search for specification list entries.

In the standard or with a missing/disabled option, the user fields of the inspection requirement header are used.

From Service Pack 13 onwards, an optional parameter [UPPER_USERFIELD_NUMBER:<user field number>] is available. Only use integral values between 1 and 14 for this parameter <user field number>. If this parameter is included, then use only the fast user fields number 1 up to the here configured values for the search of specification list entries.

All other user fields following the configured values are available for other functions that not involved in the specification search.

Option 1169 – Automatically complete inspection steps even if they are available with status interrupted at other machines

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

hymwcaq72.dll version 7.2.1.98

Subject to area

(Indirectly yes, as dependent on option 1014)

Description

If option 1169 is activated and option 1014 is set, inspection steps are automatically completed even if the inspection step in question has the status "interrupted" at another machine. But this does not apply, if the inspection step is still logged on to a machine.



When the inspection step is completed, all entries are automatically set to "completed" for this inspection step.

Option 1170 – Cpk value calculation for characteristics with a one-sided limit or with zero as limit

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X	X					

Valid values

0 / 1 / 2

Valid as of HYDRA-CAQ version

hymwcaq72.dll version 7.2.1.99

hymw.exe version 7.2.1.420

Not valid for CAQ 8.1. Valid again as of CAQ 8.2

Subject to area

No

Description

Option 1170 enables calculating the statistical value cpk, also for unilateral limited characteristics. A characteristic is unilaterally limited if either the upper or the lower tolerance limit has no entry.

In case of characteristics with the value zero as limit, the calculation of the cpk value is changed and the limit 'zero' is considered as a non-existing limit. I.e. the characteristic is considered as a characteristic with a one-sided limit.

You can use the defined value to calculate the cpk value for characteristics with a one-sided limit or the limit 'zero'. The following two options are available:

Value = 1

The cpk value is only calculated for characteristics with a one-sided limit. A characteristic has a one-sided limit, if either the upper or the lower tolerance limit has no entry.

Value = 2

In case of characteristics with zero as limit (one limit is equal to zero and the other limit has a value unequal to empty or zero), the cpk value is calculated in the same way as in case of characteristics with a one-sided limit.. Additionally, the behavior of option 1 applies.

Default behavior in CAQ 8.x

Value = 0

No cpk value calculation for characteristics with a one-sided limit or the limit 'zero'

Default behavior in CAQ 7.x



In case of characteristics with a one-sided limit or the limit 'zero' (is considered as non-existent), one part of the cpk formula is omitted.

Option 1171 – Use PAN user fields to search for inspection plan

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 8.1Subject to area

yes

Description

If this option is activated, the content of one or several direct user fields of the inspection requirement is used to search for an inspection plan.

The contents of the direct user fields of the inspection requirement must then match the contents of the direct user fields of the active inspection plan.

(See also Option 1)

Option 1174 – Correcting decimal places of measured values before upload to SAP

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 8.1

You must create this option manually if required.

Subject to area

No

Description

If this option is activated, the measured value format of the characteristic is read out and the measured value, which e.g. has been generated by a measuring device, is formatted according to the measured value format.

This way, you can ensure that the number of decimal places of the uploaded measured value matches the number expected by SAP.



This option only applies for uploads of single values of individual piece inspections to SAP (record types Q51 to Q56).

Option 1175 – Plausibility check of the inspection scope when completing a sample

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with
--------------------	--------------------	-----	-------	--	-----	----------------

						comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 7.2, if the patch

dbp_caq_aip_enhancement.hsc

has been run and hymwcaq72.dll includes a version which is either the same or higher than 7.2.1.107.

Subject to area

yes

Description

If this option is active, a plausibility check is performed on completing the sample. The system checks if at least the number of valid individual inspections is available that has been defined using the identifier of the inspection scope and the specified sample size.



The plausibility check is used for the manual completion of the sample. This is only possible, if the inspection has been performed with reference to the sample and not with reference to the inspection point.

This option also activates the plausibility check of the inspection scope when samples are evaluated for non QMS data types.

The plausibility check of the target sample size is performed if the following conditions are fulfilled:

- Inspection scope indicator "GENAU" ("exact"):
The actual sample size does not exactly match the target sample size.
- Inspection scope indicator "GROESSER" ("greater"):
The actual sample size is smaller than the target sample size.
- Inspection scope indicator "KLEINER" ("smaller"):
The actual sample size is greater than the target sample size.

If the inspection scope indicator is "EGAL" ("irrelevant") or empty, no plausibility check is per-

formed. And if the target sample size is smaller than 1.

Option 1176 – Default values for additional characteristic fields

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 8.1

The following scripts implement the function of this option. The scripts must be available in the relevant target system:

- b_cmm#aip#.hsc
- b_cpplmm#aip#.hsc
- b_cmm#aip#.hsc
- util_caq_scr.hsc

As of version 8.1.1.176 (service pack 10) of the program hymwcaq72.dll/so, this option is also used when new inspection step characteristics are created.

Subject to area

yes

Description

If this option is activated, the fields defined in the addition can be populated using the respective values if the values are not provided by the corresponding dialog data string.

This option has an impact on the defined fields when you add or edit entries in the following areas:

- Characteristics catalog
- Inspection plan characteristics
- Inspection step characteristics

If this option is disabled or not available, the fixed values used for the AIP operation are not populated.



If this option is active (value = Y), it is only effective in combination with the following individual parameters in the respective context:

- [PRFUMF:<inspection scope indicator for all characteristics>]
- [PRFUMF_A:<Inspection scope indicator for attributive characteristics>]
→ overrules the global entry [PRFUMF:<value>] if it exists
- [PRFUMF_V:<inspection scope indicator for variable characteristics>]
→ overrules the global entry [PRFUMF:<value>] if it exists
- [PRFUMF_F:<inspection scope indicator for inspection chart characteristics>]
→ overrules the global entry [PRFUMF:<value>] if it exists
- [ERFART:<input type for all characteristics>]
- [ERFART_A:<input type for all attributive characteristics>]
→ overrules the global entry [ERFART:<value>] if it exists
- [ERFART_V:<input type for variable characteristics>]
→ overrules the global entry [ERFART:<value>] if it exists
- [ERFART_F:<input type for all inspection chart characteristics>]
→ overrules the global entry [ERFART:<value>] if it exists
- [ERFART_PZ: :<Collection type for sampling characteristics>]
→ overrules the global entry [ERFART:<value>] if it exists
- [ERFART_V_FORMEL:<Input type for variable characteristics with individual calculation>]
→ only available as of CAQ 8.2
→ overrules the global value [ERFART_V:<value>] if it exists

- overrules the global entry [ERFART:<value>] if it exists
- [ERFART_A_CODE:<Input type for attributive characteristics with catalog evaluation without random selection>]
 - only available as of CAQ 8.2
 - overrules the global value [ERFART_A:<value>] if it exists
 - overrules the global value [ERFART:<value>] if it exists
- [ERFART_A_CODE_ZUFALL:<Input type for attributive characteristics with catalog evaluation and random selection>]
 - only available as of CAQ 8.2
 - overrules the global value [ERFART_A:<value>] if it exists
 - overrules the global value [ERFART:<value>] if it exists
- [ERFART_F_RASTER:<Input type for inspection chart characteristics with visual inspection>]
 - only available as of CAQ 8.2
 - overrules the global value [ERFART_F:<value>] if it exists
 - overrules the global entry [ERFART:<value>] if it exists

For the characteristics catalog, it is always the global option that is used.

It is possible to configure other parameters for specific data types and/or areas using options that are specific to an area (subject to area).



The AIP default configuration includes the following parameter values:

- [PRFUMF:KLEINER]

To record data based on samples:

- [ERFART_A:BEWERT_STICHPR_PPUNKT_SIMPLE]
- [ERFART_V:MESSW_ESTCK_PPUNKT_SIMPLE]
- [ERFART_F:BEWERT_STICHPR_PPUNKT_FSK]
- [ERFART_V_FORMEL:MESSW_ESTCK_STICHPR_CALC] (as of CAQ 8.2)

To record data based on inspection points:

- [ERFART_A:BEWERT_STICHPR_PPUNKT_SIMPLE]
- [ERFART_V:MESSW_ESTCK_PPUNKT_SIMPLE]
- [ERFART_F:BEWERT_STICHPR_PPUNKT_FSK]
- [ERFART_PZ:PROBENZUG_PPUNKT_SIMPLE] or
[ERFART_PZ:PROBENZUG_PPUNKT_ERWEITERT] (as of CAQ 8.2)
- [ERFART_A_CODE:CODE_STICHPR_PPUNKT_SIMPLE] (as of CAQ 8.2)
- [ERFART_A_CODE_ZUFALL:CODE_STICHPR_PPUNKT_ZUF_SIMPLE] (as of CAQ 8.2)
- [ERFART_F_RASTER:BEWERT_STICHPR_PPUNKT_RASTER] (as of CAQ 8.2)
- [ERFART_V_FORMEL:MESSW_ESTCK_PPUNKT_CALC] (as of CAQ 8.2)

In addition to the parameters that you can configure here, other parameters are populated with fixed values in the scripts. But other fixed values are not filled in, if new inspection step characteristics are created that are based on an inspection plan characteristic.

To edit the characteristics catalog, the system always uses the global settings. To edit the inspection plan and inspection step characteristics, the system uses the settings that are specific to an area.

For the data type QMS, a data type specific and disabled option must be available in order not to influence the QMS standard processing (explicit exceptions are possible).

In the AIP, the inspection scope indicators for characteristics that are recorded with reference to cavities are not used.

Option 1177 – Default values for inspection point parameters in the inspection step

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 8.1

The option is implemented in the following scripts which must be available when activating the option in the relevant target system:

- b_cpau#aip#.hsc
- util_caq_scr.hsc

Subject to area

yes

Description

If this option is active, the fields defined in the addition can be populated using the respective values if the values are not provided during the generation of the inspection step.

This option is only effective with the defined fields if inspection steps are added (via inspection plan search, interface or manually).

If this option is disabled or not available, the fixed values used for the AIP operation are not populated.



For the AIP with MW 3.0, a change of the option is only effective if a new inspection point is generated.



The following entry in the configuration file "qee_insppoint.ini" in the AIP sub folder "functions" is required to display the checkpoint user fields.

[CONFIGURATION]
SHOW_OPTIONAL_USERFIELDS=ON



If this option is active (value = Y), it is only effective in combination with the following individual parameters in the respective context:

- [RELEVANT:<Flag inspection point relevant [0 or 1] → Default: 1>]
- [BEW_REL:<Flag inspection point relevant for evaluation [0 or 1] → Default: 0>]
- [KATART:<Catalog type for inspection point usage decisions>
→ Default QM_PP_BEW]
- [WERK:<site for inspection point usage decisions>→ Default 0001]
- [AUSWMEN:<Selected set for inspection point usage decisions>
→ Default PPKT_VE]
- [CODGR_A:<code group for inspection point usage decision acceptance
→ Default 01>]
- [CODE_A:<code for inspection point usage decision acceptance
→ Default A>]
- [CODGR_A:<code group for inspection point usage decision rejection
→ Default 01>]
- [CODE_A:<code for inspection point usage decision rejection
→ Default R>]
- [PRB_REL:<Flag physical sample relevant [0 to 99] → Default: 0>]
- [PRB_LAB:<Label for physical sample>→ Default: Probe>]
- [TPL_REL:<Flag for functional location relevant [0 to 99] → Default: 0>]
- [TPL_LAB:<Label for functional location>]
- [EQU_REL:<Flag for equipment relevant [0 to 99] → Default: 0>]

Important:

If a data collection with reference to cavities is available (database patch dbp_qm_cavities_inspoint_charact_variable.hsc), this flag is automatically activated irrespective of the settings made here if the corresponding inspection requirement is configured to collect cavities (unequal to KEINE (none), <zero>).

- [EQU_LAB:<Label for Equipment>]

- [UC1_REL:<Flag for USERC1 relevant [0 to 99] → Default: 0>]
- [UC1_LAB:<Label for USERC1>]
- [UC2_REL:<Flag for USERC2 relevant [0 to 99] → Default: 0>]
- [UC2_LAB:<Label for USERC2>]
- [UN1_REL:<Flag for USERN1 relevant [0 to 99] → Default: 0>]
- [UN1_LAB:<Label for USERN1>]
- [UN2_REL:<Flag for USERN2 relevant [0 to 99] → Default: 0>]
- [UN2_LAB:>Label forUSERN2>]
- [UD1_REL:<Flag for USERD1 relevant [0 to 99] → Default: 0>]
- [UD1_LAB:<Label for USERD1>]
- [UT1_REL:<Flag for USERT1 relevant [0 to 99] → Default: 0>]
- [UT1_LAB:<Label for USERT1>]
- [TLOS_PFL:<Flag for partial lot requirement [0 or 1] → Default: 0>]
- [CNR_PFL:<Flag for batch requirement [0 or 1] → Default: 0>]
- [MEN_PFL:<Flag for input requirement of quantities [0 or 1] → Default: 0>]

In addition to the parameters that you can configure here, other parameters that are relevant for the inspection point are populated with fixed values in the script b_cpau#aip#.hsc.



For the data type QMS, a data type specific and disabled option should be available in order not to influence the QMS standard processing (explicit exceptions are possible).



The AIP default configuration includes the following parameter values:

- [RELEVANT:1]

- [BEW_REL:0]
- [KATART:QM_PP_BEW]
- [WERK:0001]
- [AUSWMEN:PPKT_VE]
- [CODGR_A:01]
- [CODE_A:A]
- [CODGR_R:01]
- [CODE_R:R]
- [UC1_REL:99]
- [UC1_LAB:Charge]
- [UD1_REL:1]
- [UD1_LAB:date]
- [UT1_REL:2]
- [UT1_LAB:time]
- [PRB_LAB:sample]

Explanation of the "_REL" levels:

- 0 => Field not active
- 99 => field is active but there is no mandatory inspection, i.e. when you complete the inspection point, it is not checked if this field includes a content.
- 1 to 98 => field is active. When you complete the inspection point, it is checked if this field includes a content. The field with the lowest number is checked first.

Option 1190 – Table and index space alias for PDV single value reloads

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Name of an existing tablespace

Valid as of HYDRA PDV version

hp_insert.exe version 7.2.1.10 (19-May-2011)

Subject to area

No

Description

If this option is available, the value of this option is used to identify the table and index space where the tables of the reloaded PDV single values should be created.

You use the alias used here (also called DB group name) to identify the actual names of the table and index spaces via the HYDRA default mechanisms.

If this option does not exist or if it is disabled, then the table and index space alias PDV2_DBS is used to import PDV single values.

Option 1192 – Transfer of article information during generation of orders and operations using the ADE integration

System availability

MW 3.0	MW 2.1	AIP	CTWIN		MOC	Other (with
--------	--------	-----	-------	--	-----	----------------

(server)	(server)					comment)
X	X					

Valid values

Y / N

Valid as of HYDRA-CAQ version

CAQ 7.2 if the following conditions are fulfilled:

- as of hymwcaq72.dll version: 7.2.1.114 (MW20/MW21)
- as of hymwcaq72.dll version: 7.2.1.112 (MW30)

Subject to area

yes

Description

If option 1192 is active and contains the value Y, then the following fields are added from the inspection requirement fields when generating ADE orders and operations.

- Article number
- Drawing issue number (if the field is available→)
- Article name (from article master data)



These fields are recorded in the order and in the operation when you create the order or the operation.

Changed field contents are not synchronized later on.

Option 1196 – Display of histogram for samples with n=1

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X	X					

Valid values

Y / N

Subject to area

No

Description

If this option 1196 is active and contains the value Y, then the existing list of the histogram is extended for (valid) samples with sample size 1. This is carried out using a union statement where characteristics of the inspection type "V" are checked. Additionally, the status (type=ERFASSART) must contain in the addition "[BAPI:CPAUSP]".

The calculation is based on XQ of the sample.

Option 1208 – MPL QM integration: Generating inspection points for MPL output batches

You must not activate this option. Currently, only the dialog "CA_WL" provides the function to create an inspection point in case of an output batch change. This does not require a specific configuration of an option.

Option 1209 – MPL-QM integration: Storage of detailed information of batches in inspection points

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

CAQ 8.1: The patch "dbp_caq_mpl_integration.hsc (MW30)" must have been executed.

The option and the attached function is initially available in the standard as of CAQ 8.2.

Subject to area

yes

Description

If this option is active (value=Y), the information detailing the current batch is stored in defined fields of the inspection point.

If a batch is created in the functions described in option 1208, then the 'respective batch number' derives from the triggering MPL functions.

In all other cases where the batch number is unknown, the current batch number is identified at the point in time of the generation of the inspection point.

It is the point in time when the inspection point is actually generated in HYDRA (in the server). To identify the corresponding batch, only the information can be used which is known to the HYDRA server at that point in time.

There are exceptions where this batch information cannot match the current batch. See the following examples:

- There is no current output batch and therefore no batch can be referenced.
- A delayed generation of an inspection point after an output batch change can lead to a "wrong" assignment of an output batch number. If inspection events are due,

which are generated via scheduling (this is the case with inspection points generated via the events 'time', 'piece', 'once'), the inspection point can possibly obtain a 'wrong' output batch number. Instead of using the batch that is available at the point in time of the actual event, the system assigns the batch that is available at the point in time of the inspection point generation.

The identified batch number is stored in the new field "caq_numpool.losnr". This field is used to control which batch is affected by any actions when an inspection point is completed.

Using the individual functions described below, you can store additional batch information in other fields of the inspection point.

[PPKT_TLOS:<Reference to batch information>]

This parameter identifies which additional batch information is edited as a partial batch of the corresponding inspection point (field caq_numpool.ppkt_teillos). The information is therefore available to the user as an identification criterion (contrary to the field hidden in the interface "caq_numpool.losnr").

Please note that this field is only used when generating an inspection point. A later change of the batch information does not cause a change of the partial batch in the inspection point.

For <Reference to batch information> the following values are available:

- Internal batch number CNR
- Batch number DLL
- ERP batch (former PPS charge) SAPNR
- MES batch number EXTCNR
- Batch information BEM
- Alternative batch number 1 to 20 CNR:ALT1 - CNR:ALT20



To create this option, you must only use the before mentioned patch, as only that patch can enable/guarantee the required DB structures.

If you activate this option, the option 1207 must also be active (created using the before mentioned DB patch). As of CAQ 8.2, the option 1207 is created and immediately activated by default.

Example

If the option with the addition described below is activated, the batch number of the respective batch (that is possibly identified at that moment) is added for the inspection point when the inspection point is generated in the field "Partial batch".

[PPKT_TLOS:DLL]

Option 1210 – MPL-QM integration: Changing batch data upon completion of the corresponding inspection point

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

CAQ 8.1: The patch "dbp_caq_mpl_integration.hsc (MW30)" must have been executed.

The option and the attached function is initially available in the standard as of CAQ 8.2.

Subject to area

yes

Description

If this option is active (value=Y), specific parameters of a batch, which has been assigned to an inspection point, can automatically be changed upon completion of the respective inspection point.

You can vary the list of parameters that you want to change and their contents according to the usage decision of the inspection point (pass/fail).

The respective batch is exclusively identified using the new field "caq_numpool.losnr".

Details of the control are specified using the below mentioned individual function buttons in the addition of the option.

- [ABS_IO_DLG:<Parameter list to edit batch data>]

The parameters specified here are only assigned if the inspection points include the usage decision "Pass" upon completion. The parameter list can include 1 to n parameters. These are separated using a tilde ~. All parameters can be selected which are known to the dialog CNR.UPDATE.

- [ABS_NIO_DLG:<Parameter list to edit batch data>]

The parameters specified here are only assigned if the inspection points include the usage decision "Fail" upon completion. The parameter list can include 1 to n parameters. These are separated using a tilde ~. All parameters can be selected which are known to the dialog CNR.UPDATE.

- [ABS_IO_SPERRE]

If this option is set, it is prevented that the parameters described in [ABS_IO_DLG:<parameter list to edit batch data>] are changed if the quality status of the batch is S (blocked).



The functionality of this option cannot be applied to throughput batches.



To create this option, you must only use the before mentioned patch, as only that patch can enable/guarantee the required DB structures.

If you activate this option, the option 1207 must also be active (created using the before mentioned DB patch). As of CAQ 8.2, the option 1207 is created and immediately activated by default.



All parameters can be used that are available in dialog "CNR.UPDATE". For details on this dialog, please refer to the PDM documentation.

Example

If this option is activated with the addition described below, the quality status of the batch is set to "Free" and the comment "OK" is stored in the batch when an inspection point is completed with the usage decision "Pass".

If you complete an inspection point with the usage decision "Fail", the quality status of the batch is set to "Blocked" and the comment "Not OK" is stored in the batch.

[ABS_IO_DLG:CNR.QST=F~CNR.BEM=OK];
[ABS_NIO_DLG:CNR.QST=S~CNR.BEM=nicht OK]

Option 1214 – AIP CAQ 'lean' data processing

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
		X				

Valid values

Y / N

Valid as of HYDRA-CAQ version

caq_dc_t.dll >= 2.0.2.36

caq72.dll >= 2.0.2.28

mpdv-aip.zip >= 15-FEB-2015

Subject to area

No

Description

If this option is enabled, you can use specific entries in the field "Addition" to achieve a "lean" processing and therefore a quicker collection of inspection data in the AIP CAQ terminal.

The following entries in the field "Addition" can control this:

- [SKIP_RK]
- [SLIM_DATA]

- [SKIP_AET]

The different entries do *not depend* on each other and can be combined in *any* way.

Separate the entries by commas in the field "Addition".



If you use QMS (quality management as subsystem), you must disable this option or you must extend the default filters by the specific QMS fields in the AIP configuration file "caq_slim_data.ini" in the folder .\packets\.

[SKIP_RK]

Processing and display of control charts are disabled in the input dialog of inspection results for the following input types.

- BEWERT_STICHPR_PPUNKT_SIMPLE
- BEWERT_STICHPR_SIMPLE
- MESSW_ESTCK_PPUNKT_SIMPLE
- MESSW_ESTCK_STICHPR_SIMPLE



If you only want to disable processing and display of control charts for specific input types, use the respective status of the status type "ERFASSART". If you remove the parameter "[RK]", you disable the control chart function for this input type. For further details, please refer to the status documentation "Configuration_QM_Status".

[SLIM_DATA]

Data filters are added to reduce the data volume when requesting the dialogs to record inspection results. This accelerates processing.



You can change the default filters in the AIP configuration file "caq_slim_data.ini" within the folder .\packets\. If you have changed the file, store the file in the custom directory in the server.



For further configuration details, please refer to the documentation "Configuration_AIP-QM".

[SKIP AET]

Processing and display of the lists of automatic failures are disabled for specific input dialogs of inspection results.

The following input types support processing of automatic failure lists:

- BEWERT_STICHPR_PPUNKT_SIMPLE
- BEWERT_STICHPR_SIMPLE
- MESSW_ESTCK_PPUNKT_SIMPLE
- MESSW_ESTCK_STICHPR_SIMPLE



For further configuration details, please refer to the documentation "Configuration_AIP-QM".



The use of automatic failure lists is **NOT** available in combination with DS100.

Because of this incompatibility of the DS100 and the list of automatic failures, you must set the flag SKIP_AET for the respective system.

Option 1215 – Not resetting the inspection scope of sampling characteristics

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN		MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

CAQ 8.1: The patch“ dbp_caq_sample_insppoint_enhanced.hsc (MW30)” must have been executed.

The option and the attached function is initially available in the standard as of CAQ 8.2.

Subject to area

yes

Description

If this option is active (value = Y), the inspection scopes of sampling characteristics are not reset when you release an inspection step.



To create this option, you must only use the mentioned patch. Requirement: The respective programs must be up-to-date (as of CAQ 82).

Option 1218 – Display of unit designations in the AIP inspection process

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X		x				

Valid values

Y / N

Valid as of

The function is available as of service pack 11 for CAQ 8.1 and higher and for the program versions AIP 8.1 and higher.

Subject to area

No

Description

You must create this option manually if required.

If this option is created with the value "Y", the unit designation is displayed in the AIP inspection process instead of the 3 digits of the unit ID number. Depending on the length of the unit

designation, you must change the AIP dialogs that show the unit and adapt the field length to display the unit designation.

If the option 1218 does not exist, if it is disabled or if the value is "N", the ID number of the unit is displayed.

Option 1219 - Checking existing complaints during OP logon

System availability

MW 3.0 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X		x				

Valid values

Y / N

Valid as of

The function is available as of service pack 13 for CAQ 8.1 and higher and for the AIP 8.1 and higher.

Subject to area

No

Description

You must create this option manually if required.

When creating this option with the value "Y", the configuration parameters in the *Addition* field in the OP logon are checked for existing complaints for the article or article + drawing issue number of the production order (order header). If complaints are found, then they are displayed in a message.

Example:

internal complaint: 1

customer complaint: 2

If option 1219 is not available or the option is enabled, then the system does not check existing complaints during OP logon.

The following entries in the field *Addition* control the check:

- [MON:n]
n= The system checks all complaints that were created n months ago or later (required parameters).
- [ATKIDX:Y]
You must specify this parameter[ATKIDX:Y] (optional) if you want to check the combination article number with drawing issue number instead of only the article number.
- [MSGTIME:n]
n = n is the number of seconds after which the message is automatically closed on the AIP (optional; default value: 30 seconds).

Example configuration in the field *Addition*:

- [MON:6],[AKTIDX:Y],[MSGTIME:15]
- Looking at complaints dating back the last 6 months for the combination "article number" and "drawing issue number". The message is displayed on the AIP for up to 15 seconds.

You define in the respective status of the complaint types, results and statuses which complaints you want to include in the check, i.e. which "Complaint types", "Results" (complaint header and complaint detail) and "Statuses" (complaint header and complaint detail). For further details, please refer to the status documentation.

Add the parameter"[AGAN]" to the respective statuses in the CAQ status application in the field "Addition" if you want to include complaints of this type with this result (complaint header and detail) and status (complaint header and detail).

Relevant complaint types must be identified with the parameter „[AGAN]“. If no active entries with the parameter"[AGAN]" have been found for a complaint status, complaint results, complaint detail status and/or complaint results, then all entries in the context are considered "relevant".

The current implementation requires that the article number and the drawing issue no. of the order header are transferred directly in the dialog of the operation logon using the acronyms "ANR.ATK" and "ANR.ATKIDX". If this is not feasible for certain application cases, then you have to extend the dialog by these acronyms.

Option 1220 – Escalations with more than 1024 characters

System availability

MW 3.0/3.1 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)

X						
---	--	--	--	--	--	--

Valid values

Y / N

Valid as of

The function is available as of service pack 13 for CAQ 8.1 and higher.

Subject to area

No

Description

You must create this option manually if required.

If you create this option with the value "Y", then you can configure the following escalation events with more than 1024 characters.

- CPAUERR.INSERTED (create a failure)
- CPANUMP.COMPLETED (completion of inspection point)

If this option is not available, enabled or has the value "N", then the above mentioned escalation events are restricted to 1024 characters.



If you enable this option, the escalation events are processed slower.

Option 1221 – Stop the completion of an inspection if the mandatory inspection was not fulfilled on the AIP

System availability

MW 3.0/3.1 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

The function is available as of service pack 13 for CAQ 8.1 and higher.

Subject to area

yes

Description

You must create this option manually if required.

If you create this option with the value "Y", then the inspection point including characteristics that have a pending mandatory inspection, are not completed on the AIP. You can complete the inspection point on the MOC, even with an activated option of "Posting required".

If you do not create the option, or the option is inactive or has the value "N", you can also close an inspection point on the AIP with "Posting required", depending on the configuration.

Option 1222 – Last off inspection

System availability

MW 3.0/3.1 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

This function is available with the function extension of the in-production inspection (licensed via FEP-AQF).

Subject to area

yes

Description

You must create this option manually if required.

If you create this option with the value "Y", you can use the characteristic user field specified in field *Addition* to define if the relevant characteristic is included in a last off inspection. Specify the user field in field *Addition* as follows:

[FU:1] for user field "FU:1".

[FU:2] for user field "FU:2".

etc.

The user fields [FU:1] to [FU:10] are available.

The user must manually create the relevant user field for the characteristic master data (object type CMM, user field key SYSTEM) , the inspection plan characteristics (object type CPPLMM and e.g. user field key FEP for the in-production inspection) and the inspection step characteristics (object type CPAUMM and e.g. user field key FEP for the in-production inspection).

The user must define in field *Addition* which events trigger a last off inspection. The following events (configuration parameters) are available:

- order logoff ([AG_AB])
- order interruption ([AG_UN])

Sample configuration in field *Addition* to trigger a last off inspection at operation logoff and interruption. The relevant characteristics are identified in the numeric user field 6:

[FU:6],[AG_AB],[AG_UN]

If this option is not created, inactive or has the value "N", then the function of the last off inspection is not available.

To identify the characteristic as relevant for the last off inspection, enter a value unequal empty and unequal "N" if you use alphanumeric user fields [FU:1] to [FU:5]. If you use numeric user fields [FU:6] to [FU:10], enter a value greater than 0.

Option 1223 – Setup inspection

System availability

MW 3.0/3.1 (server)	MW 2.1 (server)	AIP	CTWIN	Console	MOC	Other (with comment)
X						

Valid values

Y / N

Valid as of

This function is available with the installation of the CAQ 8.2 add-ons (licensed via FEP-AQF).

Subject to area

No

Description

You must create this option manually if required.

If you create this option with the value "Y", the measured values and attributive inspection results specified in the inspection point decision entered in field *Addition* are set to invalid when an inspection point is completed with this inspection point decision. Define the inspection point decision for a setup inspection as follows:

[WERK:W],[AUSWM:X],[CODEGRP:Y],[CODE:Z]

W = content of field "Site" of the inspection point decision defined in the MOC

X = content of field "Selected set" of the inspection point decision defined in the MOC

Y = content of field "Code group" of the inspection point decision defined in the MOC

Z = content of field "Code" of the inspection point decision defined in the MOC

Note: The inspection point decisions are defined in the MOC master data catalog "Catalog" with catalog type "Usage decision for inspection points".

If this option is not created, inactive or has the value "N", then the function of the setup inspection is not available. For inspection points of data type "QMS", the functionality of the option is not available.



You cannot use the function of the setup inspection, if a logging function or signature check is active when measured values are changed.

4 Customer-specific options

Options with a number greater or equivalent to 100.000 are identified as customer-specific options.

These options can be used to enable or disable CAQ functions at specific sites of template customers. These options are not available via configuration; the options are only available within the scope of a (extended) customization.