

1 Installation of Offline Component Connection

1.1 Installation of an update for HYDRA

HYDRA systems initially installed before the third quarter of 2014 usually require an installation procedure on the HYDRA server, even if current Service Packs have been installed.

This installation procedure is used to provide the necessary prerequisites in the HYDRA database.

This subsequent installation is coordinated by the MPDV project management, if required, and implemented with the aid of a separate installation manual.




HYDRA systems initially installed from the third quarter of 2014 onwards in the version of Service Pack 5 already meet the requirements on the HYDRA server so that an installation is not necessary there.

1.2 Requirements

- The HYDRA server must have Java version 1.5 as a minimum requirement.
- The KABA B-COMM software (server + GUI) must have been installed. The installation guide for the KABA B-COMM software is included as PDF file on the installation medium.

1.3 Basic configurations in the B-COMM GUI

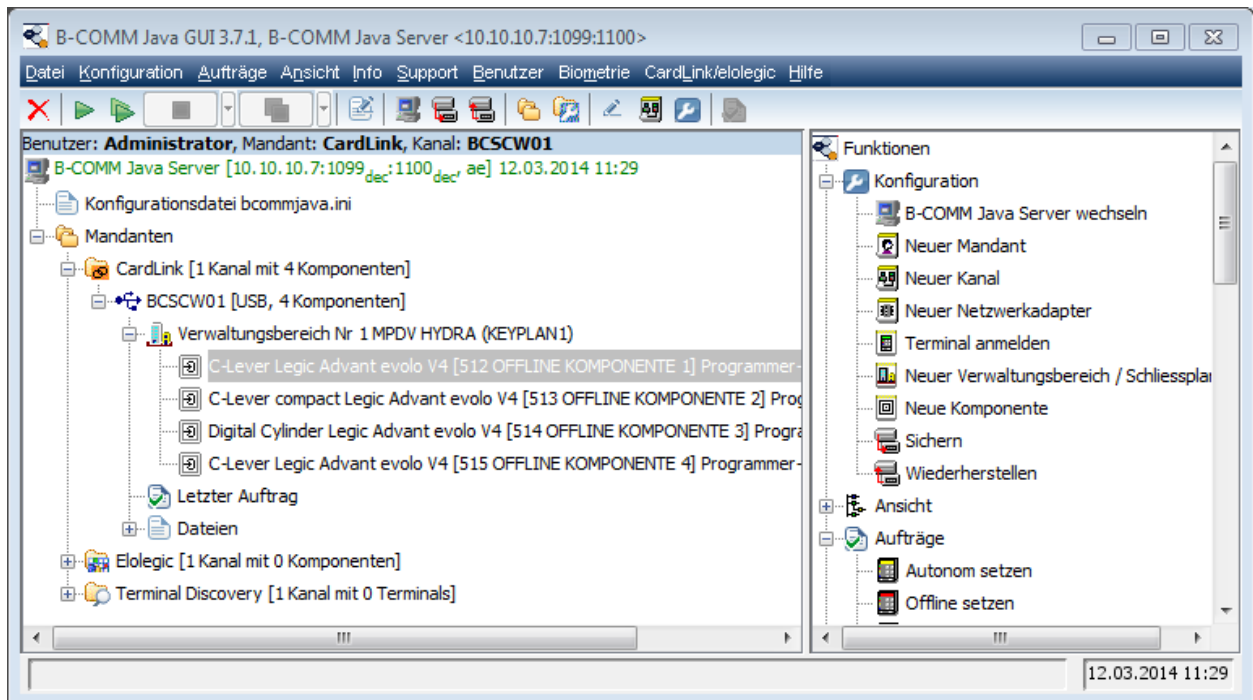

1.3.1 CardLink instance

A CardLink instance with the name "CardLink" has to be created manually. The option "instance for CardLink" has to be activated. Subsequently, a USB channel named BCSCW01 is automatically created in the "CardLink" instance.

The name "CardLink" for the instance synchronized from HYDRA is fixed.

All settings related to the instance and channel must be managed in B-COMM. HYDRA will not synchronize any data in the instance or channel.

1.3.2 Administration area

An administration area must be created manually in this CardLink instance in B-COMM. By default, HYDRA synchronizes with the administration area with *Number 1*.

The data of the tabs *Parameters* and *Master* must be maintained in the administration area in B-COMM. HYDRA will not synchronize any data in these tabs, since there are no corresponding settings in HYDRA.



When creating an administration area, it must be observed that the *media technology* is set correctly, since it cannot be changed subsequently.

Parameters tab

Number

By default, HYDRA expects an administration area with *Number* 1. Another number can also be used. This must then be taken into consideration when the interface is set up in HYDRA, see below.

Name

Assign a meaningful name.

Validation periods and validation method

The validation period 3 must be configured, e.g. for 1 or 2 days. This validation period will be used by HYDRA for all components and badges.

Other fields

The other fields must be maintained in accordance with the B-COMM documentation.

Master tab

Other fields

The other fields must be maintained in accordance with the B-COMM documentation.



The data in the tabs *Door (groups)* and *Days off/Special days* must not be entered manually in B-COMM, but are maintained in HYDRA and synchronized to B-COMM.

1.3.3 Create component

The components include settings and parameters not known by HYDRA. For this reason, automatic synchronization requires a "copy template" in order to be able to create new components via automatic synchronization. This copy template must be created once in B-COMM upon installation.

Please use door number 512 and the component type you will primarily use for this purpose!

HYDRA will then always use the component with the lowest door number (Door (groups) tab, Door number field) as copy template, if new accesses not yet existing in B-COMM are created in HYDRA. Please observe that valid door numbers for CardLink start from 512.

The key for synchronizing the HYDRA accesses to the components in B-COMM is the *Door number* managed in the *Door (groups)* tab.



Accesses for Kaba offline components must be created in HYDRA in an access number range from 512 to 4511. Synchronization with B-COMM only takes place for accesses where the *Offline component* option is set.

Details as to which tabs and fields are synchronized upon synchronization from HYDRA can be found in the document dealing with the [configuration of offline components](#).



If you use offline components of different *Types*, it may be necessary to make a manual correction after synchronization, since the type of the component with the lowest number will also be copied.

1.4 Set up the interface to B-COMM in HYDRA

The settings for the interface have to be made in HYDRA. The configurations are managed via the [INI configuration](#).

For this purpose, the INI configuration **CARDLINK** has to be entered first.

Subsequently, a number of [INI data configurations](#) have to be made:

Section BCOMM, key JAVA_INST_PATH

Installation path of Java installation, e.g. "c:\Program Files\Java\jdk1.5.0_16\bin". Setting the parameter is mandatory to ensure correct assignment of the Java version. The path must be indicated without the trailing slash/backslash!

Section BCOMM, key RMI_SERVER


Name or IP address of the computer on which the B-COMM server is installed. Specification is mandatory.

Section BCOMM, key RMI_PORT

RMI port number. Specification is optional, default value is 1099.

Section BCOMM, key ADMIN_AREA_IDX

Number of the administration area managed by HYDRA. Specification is optional, default value is Administration area 1.

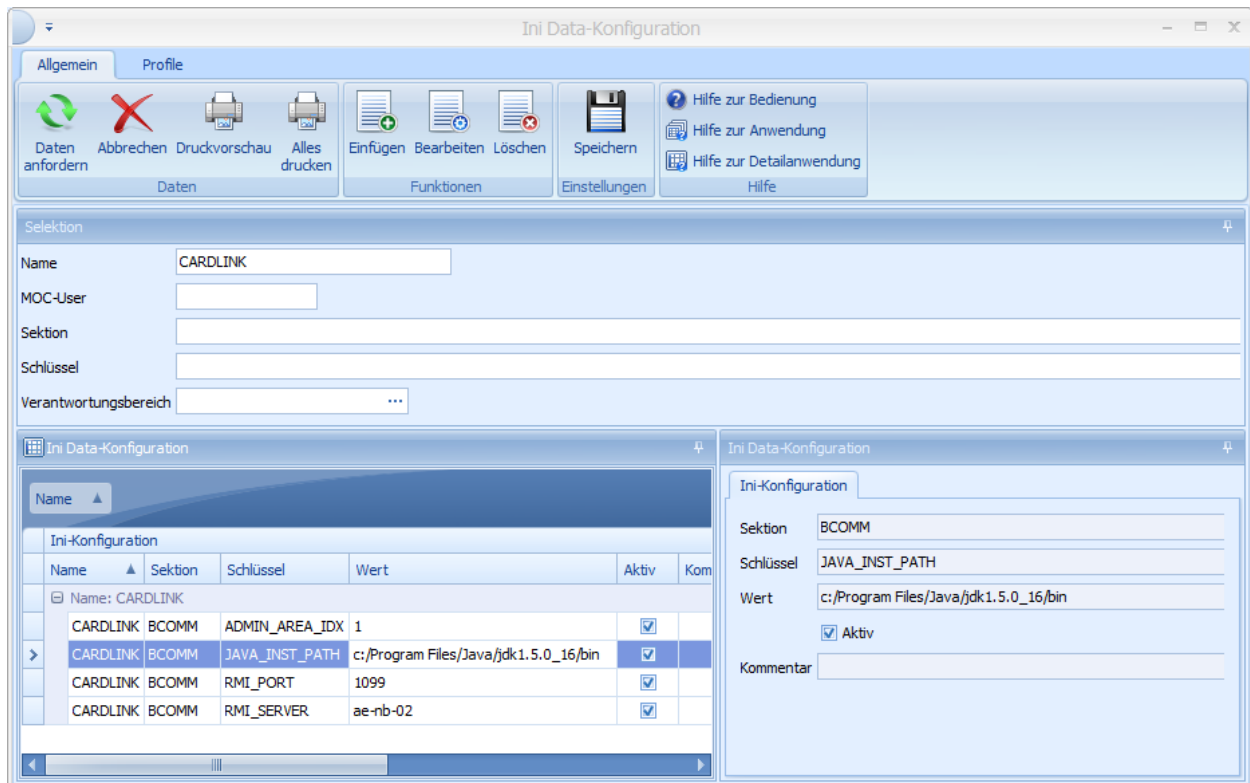

1.5 Setup of provision of CardLink data

The authorizations for the access at Kaba offline components are provided cyclically on the HYDRA server and loaded cyclically by the HYDRA PZE terminals in order to write them on the badges of the employees. This configuration only provides authorizations for accesses with KABA offline components. This refers to accesses assigned to a terminal of the type "KABA Programmer".

1.5.1 Configuration of badge type

The type of the badges used for CardLink must be set via an [INI configuration](#). A standardized badge type must be used for each HYDRA system.

For this purpose, the INI configuration **CARDLINK** has to be entered first, if required.

Subsequently, the following [INI data configuration](#) has to be made:


Section OPTIONS, key BADGETYPE

The badge type is indicated as a number:

- 1 = Legic Prime (default)
- 2 = Mifare/Legic Advant

1.5.2 Activation in scheduler

The HYDRA server cyclically updates and provides the data required to load authorizations on the badges. For this purpose, an entry must be set up in the Scheduler.

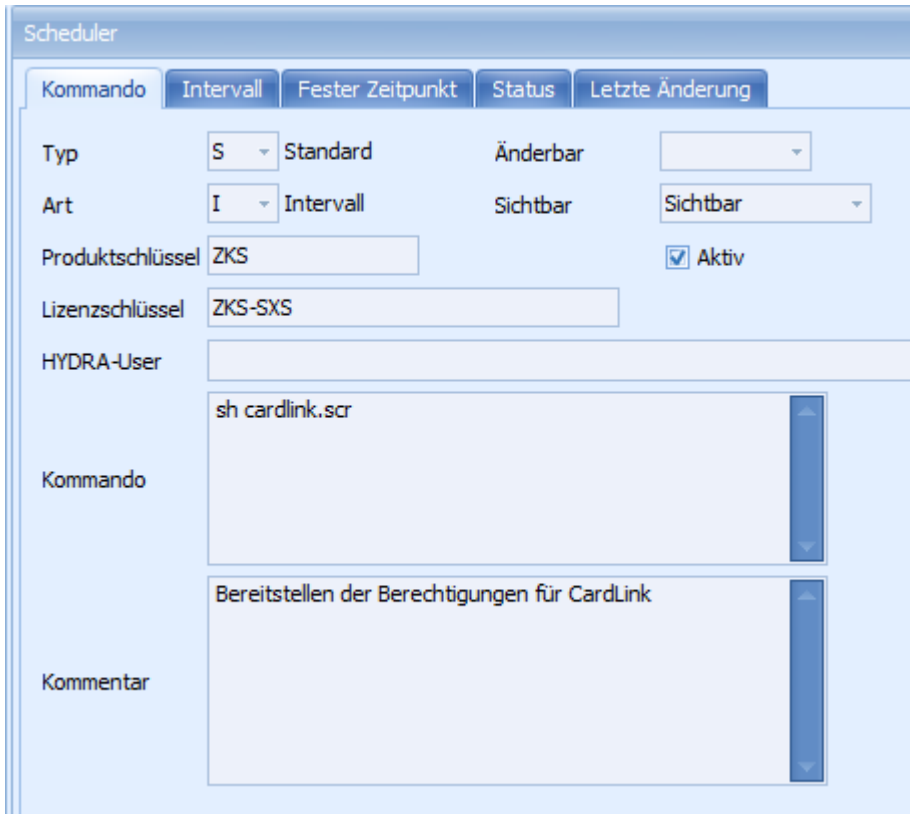

The job is to be set up as 5-minute interval job.

"Comment" tab:

Type	S=Standard
Kind	I=Interval
Visible	Visible
Active	[X] Activated
Product key	ZKS
License key	ZKS-SOK
Command (depending on the server operating system)	
Windows:	sh cardlink.scr
Linux:	cardlink.scr

The administration area can be transferred to the shell script cardlink.scr as a parameter. Multiple administration areas are used, for example, if several productive instances are installed on one HYDRA server.

Comment	Provision of authorizations for CardLink
---------	--

"Interval" tab:

Interval	0:05:00
----------	---------



With the default settings, the authorizations are provided on the server every 5 minutes and loaded to the PZE terminals every 5 minutes, too. So it may take up to 10 minutes with these settings until a modified authorization is available at the PZE-terminal and can be loaded on the badge.