

1 Configurations for Merging Batches in the AIP

Usage


You use the function to merge several batches into one batch at the AIP terminal. Subject to the batch type, batches may be merged in the following ways:

- Merging simple batches and/or their quantities to one batch
- Merging individual batches belonging to an already existing merged batch to one new merged batch

Dialog configuration

Dialog configuration (CNR.SUMMARIZE)

Define the function key "pool batches" by copying the layout *guiV_anr.xml* to *guiV_anr_ln.xml* and the key "BDE comments". Then the following entries must be changed in the configuration of the copied key:

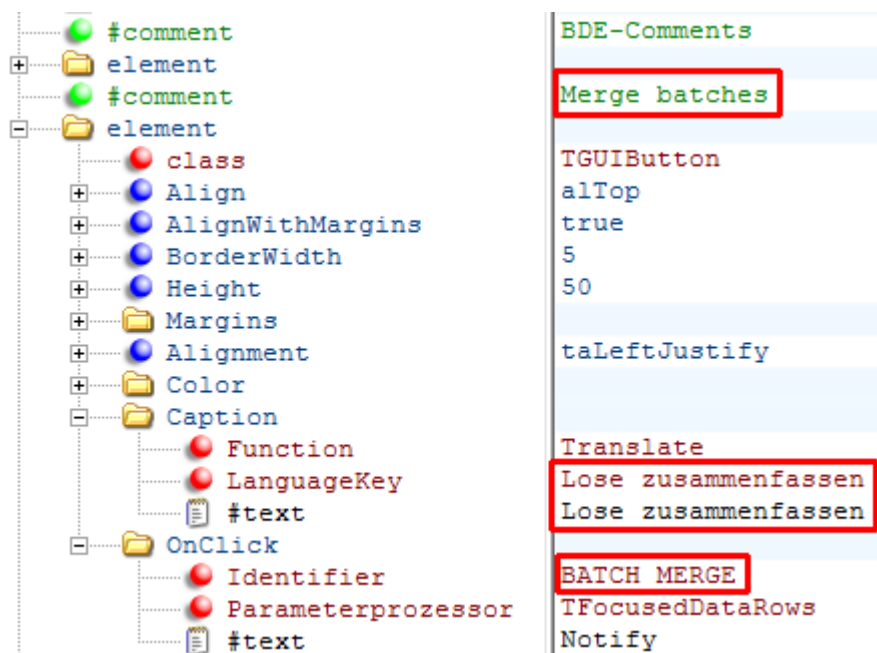

If you do not use tiles for the AIP2, define the function key in the file *ctaipbut.ini*:

```
[ANR-LN-Page3]
```

```
...
```

```
2=BATCH_MERGE,I,Lose zusammenfassen,Lose_zusammenfassen.png
```

The sections [BATCH_MERGE] and [DOC_BATCH_MERGE.LST] and [ATTR_BATCH_MERGE.LST] are required for the layout configuration of *ctaiplay.ini*, irrespective of the used design:

```
[BATCH_MERGE]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite


EXAMINE_SCANEXPR1=SLOS=J

EXAMINE_SCANCOLOR1=clBlue


DLL=C20,150,Z,batch

ATK=C20,150,L,article

SGR:REST=N12.0,100,R,quantity

EINH=C3,60,Z,unit


[DOC_BATCH_MERGE.LST]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite

LINK=C20,400,L,link/document


[ATTR_BATCH_MERGE.LST]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite

;GRID_ORDER=DAT=- | ZEI=- | SNR


ATTR=C20,100,L,attribute

VALUE=C20,80,L,value
```

`EINH=C20,60,L,unit`

`TEXT=C20,200,L,text`

System configuration

Further system configurations are not required in order to merge batches.