

Manual

Template Editor Shop Floor Monitor (Graphic Machinery) MDS-SMT 8.1

Version 1.2.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	General	4
2	Template Editor – Graphic Machinery (Shop Floor Monitor)	5
3	Deployment of Layouts of the Shop Floor Monitor.....	49

1 General

Purpose

The Shop Floor Monitor (Graphic Machinery) visualizes, among other things, a company's machinery on a specific level (production hall, foreman area, etc.). Not only does it show master data but also current data collected as part of Machine Data Collection (MDE) and Shop Floor Data Collection (BDE).

Data is presented in "layouts" created by templates or standard geometries. Different templates to design layouts are available by default. The template editor can be used to modify existing templates or to create new templates.

2 Template Editor – Graphic Machinery (Shop Floor Monitor)

Overview

Menu	-
Transaction code	mparkte
Function authorization	mparkte
Function key	-

Integration

The Template Editor is integrated in the MOC and requires the license MDS-SMT and the appropriate function authorization. Since the Template Editor is not integrated in the menu, you must call the Template Editor for the *Graphic machinery* using the transaction code mentioned above.

Templates in the *Graphic machinery*

The *Graphic machinery* provides ready-made templates for the below-mentioned object types and uses the listed web services for the data display.

- | | |
|--|-------------------------------------|
| • Workplaces/machines | BOResource.workplaceOverview |
| • Groups (capacity groups) | MDResourceGroup.overview |
| • Lines (workplaces/machines of the "L" type) | BOResource.workplaceOverview |
| • Material buffer | BOBatch.stockMonitoring |
| • Resources (no DNC and file resources) | BOResource.list |
| • Terminals | Terminal.list |
| • Access points | AccessStatus.list |
| • Access groups | AccessGroups.list |
| • Key performance indicators relating to workplaces of the current shift | Keyfigure.listWorkplaceCurrentShift |
| • Operations logged on | BOOperation.listCurrentlyLoggedInOn |

You can use the parameters provided by the web services to display data in the *Graphic machinery*. The service documentation provides further information on available parameters.

Directory structure / filing templates

Each created template is saved along with all relevant information such as images, in a separate *.zip file.

Standard templates

\\<Server>\<Hydra directory>\<Instance number>\custom\mpark\templates.zip

- This zip file includes zip files with different standard templates.
- To customize a template, take the relevant template from the standard zip file and then modify the template with the template editor.

Content: template zip file

- DataSourceKey_<object type>_<Template name>
-> Image displayed in the layout editor for the template
- Images.xml
-> references image file for display
- Layout.xml
-> xaml code generated by the template editor
- Template.xml
-> xaml code defining the template

Deployment of templates

Each created template is saved along with all relevant information such as images in a separate *.zip file.

Copy the customized template *.zip file to the zipped file "templatescustom.zip" in the following server directory if you want to use this template to design layouts in the graphic machinery:

\\<Server>\<Hydra directory>\<Instance number>\custom\mpark\templatescustom.zip

Create the file "templatescustom.zip" if the server does not include this file.



If you use a Linux system, consider case sensitivity of the folder name (lower case).

The standard templates included in the standard delivery of the *Graphic machinery* are stored in the following path:

\\<Server>\<Hydra directory>\<Instance number>\custom\mpark\templates.zip

Toolbar



Please note that the Template Editor does not provide a quick launch bar and the toolbar cannot be minimized.

The Template Editor does not support functions of the MES Development Suite.

The Template Editor does not support the functions  "print preview" and  "print all".

Layout category



Save

Click "save" if you changed the template.



Zooms out the template in the Template Editor.



Zooms in the template in the Template Editor.

Text category

Use the functions described in the paragraphs that follow to format a static text transferred to the template

by drag&drop via the button .




Changes always affect the entire text within a text field.

Note:


- the buttons do not show current formatting of a text and
- font type, font size and color are also reset if you change the format (e.g. change to *italics*).



Changes the font of a static text.



Changes the font size of a static text.



Changes the font color of a static text. Changes the entire text included in the text field.



Shows the text in bold letters.

Click the button once more to undo formatting.



Shows the text in italic letters.

Click the button once more to undo formatting.



Underlines the text.

Click the button once more to undo formatting.



Left aligns static text:

asasjaskj sjd aksjda ksjdlaksdj
alksjdalksjda lkdjklaksöa jdlaksjd
aksjdak lsdja iedkpo qwie qowiep
qoiweq poeiqow oqw pow iqpo
weipoq eipqowi epqowieqoi



Center aligns static text:

asasjaskj sjd aksjda ksjdlaksdj
alksjdalksjda lkdjklaksöa jdlaksjd
aksjdak lsdja iedkpo qwie qowiep
qoiweq poeiqow oqw pow iqpo
weipoq eipqowi epqowieqoi



Right aligns static text:

asasjaskj sjd aksjda ksjdlaksdj
alksjdalksjda lkdjklaksöa jdlaksjd
aksjdak lsdja iedkpo qwie qowiep
qoiweq poeiqow oqw pow iqpo
weipoq eipqowi epqowieqoi



Justifies static text:

asasjaskj sjd aksjda ksjdlaksdj
alksjdalksjda lkdjklaksöa jdlaksjd
aksjdak lsdja iedkpo qwie qowiep
qoiweq poeiqow oqw pow iqpo
weipoq eipqowi epqowieqoi

Alignment category

Use the functions of this category to align graphic objects.



Brings the currently selected item to the foreground



Brings the currently selected item into the background



Moves the currently selected item one level forward.



Moves the currently selected item one level back.



Left aligns the selected items.



Right aligns the selected items.



Top aligns the selected items.



Bottom aligns the selected items.

Draw category

Use the functions described in the paragraphs that follow to format a graphic object transferred to the template by drag&drop via the button  | .

Background color

  LightGray ▾


Changes the object color for objects without color gradient.

Changes the first color for objects with color gradient.

This is the background color for text fields; change the foreground color by choosing the color in the *text* category.

2nd background color

  LightGray ▾


Changes the second color of objects with color gradient.

With text fields, the background color changes; you can change the foreground color by choosing the color in the *text* category.

Line color/border color Black ▼



Changes the line color.



Changes the border color of the object.

▼



Changes the line thickness.



Specifies the fill effect, i.e. fill or gradient.

With text, the background is specified.

Left-click to select a fill effect before drawing one of the objects -   .



Click this icon if you want to draw a rectangle (rectangle, square). Drag and drop the item to the template.



Click this icon if you want to draw a circle or oval. Drag and drop the item to the template.



Click this icon if you want to draw a vertical line. Drag and drop the line in the defined thickness (see above) to the template.

After dropping the "object" in the template panel, the line is shown and selected. You can change the size and form of the object as long as it is selected.

Note: You cannot draw diagonal lines.



Click this icon if you want to draw a horizontal line. Drag and drop the line in the defined thickness (see above) to the template.

After dropping the "object" in the template panel, the line is shown and selected. You can change the size and form of the object as long as it is selected.

Note: You cannot draw diagonal lines.



Click this icon if you want to enter a (static) text. Drag and drop the text in the defined font, font size, color and/or background color (see above) to the template.

After releasing the icon in the template panel, the application displays a text field showing the letters "ABC". You can change this text as long as the object is selected.




Use this icon to insert an image into the layout. After releasing the icon in the drawing area, a "File Open" dialog appears where you can select and insert the image into the layout.

The following formats are supported: jpg, png, bmp, gif.

Please note: The image is transferred to the template, i.e. to the zip file of the template. Therefore, the file size affects the load time of the template. We recommend using compressed file formats for images. The file size should range between double-digit and triple-digit kilobytes at most.



Use this icon to integrate videos or video streams. Select the icon, drag it into the template and then drop it. A dialog opens where you can enter the path of the video or video stream.

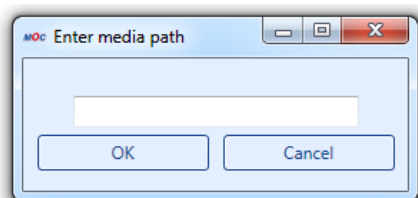

The following formats are supported:

- Video: mp4, wmv
You can enter an absolute or relative path referring to the MOC directory.
- Video stream: mms
The MMS protocol (Microsoft Media Server Protocol) is a protocol developed by Microsoft that has been designed to transfer multimedia streams. The stream has to start with mms://, e.g. mms://192.168.50.10:8080/

Please note: The video is not transferred to the template, but only the path to the video. Therefore, make sure that the video is stored in a central location that all MOC clients can access.



Please note: If you select an object in a template, the functions provided are adjusted to the properties of the selected object. Except for these options:

- Underlined
- Alignment (right, left, center, justify)

General operation



Note that the Template Editor does not provide an "undo" function.

Integrating a graphic object, e.g. rectangle, line, text, image, etc. in the template

In general, you can position a graphic object in the drawing area as follows:

1. If you want to add a rectangle, circle or text, choose the fill effect first by left clicking:




. The selected icon is highlighted in color.

2. Left-click to select an object: . The selected icon is highlighted in color.

3. Hold the left mouse button down and drag this object to the drawing area and drop it at the required position (drag&drop).

4. If you insert an image or video/video stream, a dialog opens to select the image or an input field opens where you can enter the path of the video and/or video stream.

5. As long as the object is selected,

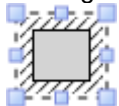

you can change its properties or move the object to another position by drag&drop.

Selecting an object in the layout

To select a single graphic object, click that object. A "border" is shown around the object. Please find below an example for a square:

Before (before clicking):




After (after clicking):




Selecting several objects in the layout

To select multiple objects at a time, hold the left mouse button down and "go" around the required objects so that an orange-colored, dotted circle occurs. Then release the left mouse button:

Before releasing the left mouse button:

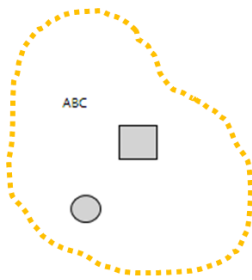

After releasing the left mouse button:

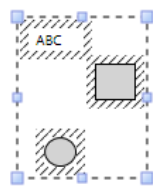

Changes to the format, such as changing the (background) color now affect all selected objects.

Operation / handling of the Template Editor

Any changes you make to the template using the functions described above are transferred to the XAML code presented below the template. You can change the XAML code directly.

If you change the XAML code directly, you must integrate these changes into the template by clicking "apply changes".



You can insert all functions and/or formatting available in XAML into the template by editing the XAML code.

Assign an object type

Once you have created a new template, you must define the type of the template (i.e. the object type) before saving by clicking the option "define object type" in the context menu. Here you can select the object types listed above from a drop-down list.

You cannot save a template if the object type is missing. To do so, choose one of the following object types:

- AccessGroups (access groups)
- AccessPoints (accesses)
- LineResources (lines)
- MachineGroups (machine groups)
- Machines (machines)
- MaterialBuffers (material buffers)

- Resources (resources without machines)
- Terminals (terminals)
- KeyFigures (current key performance indicators for each machine)
- OperationsCurrentlyLoggedOn (operations logged on)

Export templates

You can also export generated templates and save these templates with a new name. You can find this function in the context menu of a selected object via the option "export template".

Please note: Proceed as described below to modify an existing template:

- Open and export the existing template using a new, customized name (U_) (locally).
- Then close the Template Editor and reopen the new template.
- Now you can edit the new, local template.
- When you have finished editing, store the new template on the server as described in section 6 "Deployment of templates" before you can use this template in the *Graphic machinery*.

Edit properties

Select the option "Edit properties" to assign properties or dynamics and the relevant parameters to an object. The Template Editor currently supports the following properties or dynamics that may be used:

- Visibility
for further details see [here](#)
- Height (fill level)
for further details see [here](#)
- Text (display of text)
for further details see [here](#)
- Fill (colored representation)
for further details see [here](#)
- Flashing
for further details see [here](#)

The list also provides further properties, however, they are not fully supported.

Export elements

<Future Use>

Presentation of contents (text)

If you want to display the contents of individual objects of web services, you have to insert the technical field names in square brackets into an existing text field.

Example: You want to display the machine number in a template. To do so, insert the technical name of the machine number from the web service "resoure.id" as follows in a text field:


[resource.id]

If you insert the template for a specific machine in a layout, the application shows the machine number with appropriate formatting at this position.

This process inserts the following data into the XAML code (after saving):

```
<TextBox TextWrapping="Wrap" Background="#FFD3D3D3" Foreground="#FF000000"
FontFamily="Arial" FontSize="28" Width="100" Height="40"
InputMethod.IsInputMethodEnabled="True" InkCanvas.Top="301" InkCanvas.Left="218">
  <TextBox.Tag>
    <gmuw:ConfigItemList Capacity="4">
      <gmuw:ConfigItem Attribute="IsReadOnly" Value="true" />
      <gmuw:ConfigItem Attribute="Text" Value="{{Binding Path=[resource.id], Mode=OneWay}}"/>
    </gmuw:ConfigItemList>
  </TextBox.Tag>[resource.id]</TextBox>
```

Note: You can also enter the data directly into the XAML code and then integrate this data into the template by clicking "apply changes".

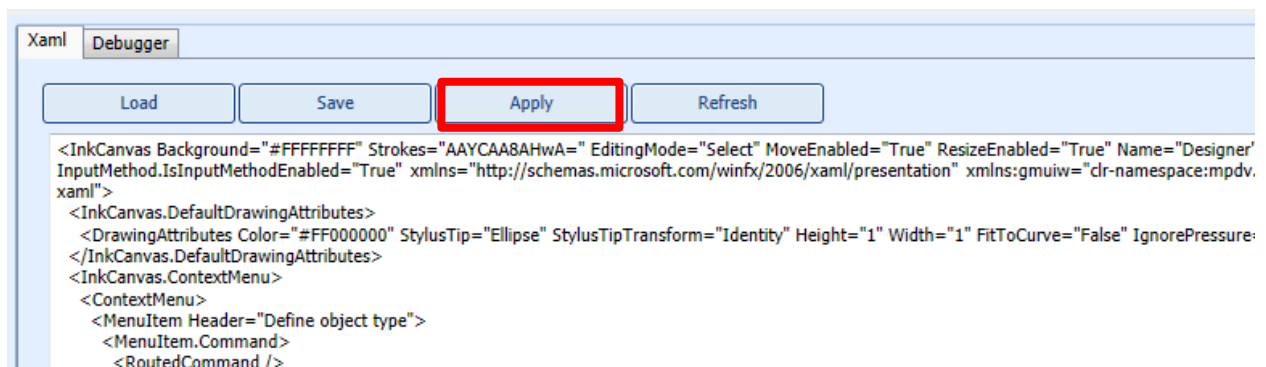

Formatting

Use a format tag and/or label tag to format and display labels in front of inserted contents.

- Label["acronym"] → shows the label of a field in the template
- Format["acronym"] → formats the content based on specified formatting, e.g. formatting of the actual cycle

Individual formatting

Apart from the tag "Format" to format a field using predefined options, you can add free formats to the XAML code at any time. Here are some examples:

- Text displayed with bold characters: `FontWeight="Bold"`
- Font color: `Foreground="#FF00A8FF"`
- Font size: `FontSize="14"`
- Italic: `FontStyle="Italic"`
- Transparent background: `Background="{x:Null}"`
- Display with 2 decimal places: `StringFormat=f2`

Formatting example: Calculated field with 2 decimal places:

`Text="{Binding`

`Path=[(resource.act.shift.rpa11*resource.partitioning.actual)/(resource.cycle.target/1000)],StringFormat=f2, Mode=OneWay}"`



If you insert contents directly in the XAML code and edit the template once more in the template editor, you can delete these inserted contents from the template.

Inserting free, multilingual texts

In addition to inserting field labels, you can also integrate individual language keys in the templates.

Example: `<TextBlock Background="#ffc1d8ef" Foreground="#ff3e6aaa" Padding="1" TextAlignment="Center" Text="{local:Translate Key='lkresourcegroup.count.production'}/>`

Inserting dynamics

Dynamic: Visible (Visibility)

Use the dynamic "visible" to show or hide elements if certain conditions are met.

Assign the dynamic to an object by right clicking (context menu) and choosing the option "edit properties". Proceed as follows after selecting the "edit properties" option:

1. Select the attribute you want to add. In this example choose the attribute "visibility".
2. Enter the acronym in the menu option "enter values". Use square brackets, e.g. `[resource.status]`.
3. Then select the converter "ConditionalSelectionConverter".

- Define the conditions for displaying or hiding elements in the window that opens.

Example:

<result>;<operator>;<operand>|+ where <operator> in EQ,LT,LE,GT,GE,

Visible;EQ;1|Visible;EQ;2|Hidden;EQ;3|

Explanation: If the value is 1 or 2, the object is shown. Select the value 3 to hide the object.

Visible;EQ;1|Hidden;GT;1

Explanation: Select 1 to show the object. Choose a value greater than 1 to hide the object.

These operators are available to define conditions:

- EQ= Equal
- LT = Lower than
- LE = Lower or Equal
- GT = Greater than
- GE = Greater or Equal than

The system processes the ConverterParameters from the left to the right. Once a criterion is "true", processing is stopped and the relevant "result" (hidden, visible) is applied.

Dynamic: Fill level (Height)

Use the "height" dynamic to expand objects to the top and/or to the bottom. In general, the graphic machinery uses this dynamic to compare target quantities with the actually produced quantities.

Assign the dynamic to an object by right clicking (context menu) and choosing the option "edit properties". Proceed as follows after selecting the "edit properties" option:

- Select the attribute you want to add. Choose the "HEIGHT" attribute.
- Enter the value to be displayed or the formula in the menu option "enter values".
- Enter the following if you want to compare the target quantity of the current OP with the actually produced quantity:
[operation.act.yield.primary/operation.plan.yield.primary]:
- Then select the converter "FractionToLengthConverter".

This process inserts the following data into the XAML code (after saving):

```
<Rectangle Stroke="#FFFFFF" StrokeThickness="1" Width="21" Height="212"
InputMethod.IsInputMethodEnabled="True" InkCanvas.Top="18" InkCanvas.Left="29">
  <Rectangle.Fill>
    <LinearGradientBrush StartPoint="0,0" EndPoint="1,0">
      <LinearGradientBrush.GradientStops>
        <GradientStop Color="#FFF0000" Offset="0" />
        <GradientStop Color="#FFFE4E1" Offset="1" />
      </LinearGradientBrush.GradientStops>
    </LinearGradientBrush>
  </Rectangle.Fill>
</Rectangle>
```

```

</LinearGradientBrush>
</Rectangle.Fill>
<Rectangle.Tag>
  <gmuiw:ConfigItemList Capacity="4">
    <gmuiw:ConfigItem Attribute="Height" Value="{Binding
Path=[operation.act.yield.primary/operation.plan.yield.primary], Converter={StaticResource
FractionToLengthConverter}, ConverterParameter=-212, Mode=OneWay}" />
  </gmuiw:ConfigItemList>
</Rectangle.Tag>
</Rectangle>

```

Note: You can also enter the contents directly into the XAML code and then integrate these contents into the template by clicking "apply".

The ConverterParameter in this example assigned to the value -212 within XAML specifies the height and direction for expansion. If you change the object size later on, you also must adjust this parameter in the XAML code.

Dynamic: Colored presentation (Fill)

Use the "fill" dynamic to highlight elements in color based on color information from the web service. In general, the graphic machinery uses the fill dynamic for the colored status display based on color information provided by the web service.

Assign the dynamic to an object by right clicking (context menu) and choosing the option "edit properties". Proceed as follows after selecting the "edit properties" option:

1. Select the attribute you want to add. Select the "FILL" attribute.
2. Enter the web service value including the color information from HYDRA in "enter values".
3. Enter the following value, for example, if you want to highlight the machine status in color:
[resource.status.color]
4. Then select the converter "MpdvColorConverter" in order to convert the web service information into a color.

This process inserts the following data into the XAML code (after saving):

```

<Ellipse Fill="#FFD3D3D3" Stroke="#FF000000" StrokeThickness="1" Width="100" Height="100"
InputMethod.IsInputMethodEnabled="True" InkCanvas.Top="15" InkCanvas.Left="18">
  <Ellipse.Tag>
    <gmuiw:ConfigItemList Capacity="4">
      <gmuiw:ConfigItem Attribute="Fill" Value="{Binding Path=[resource.status.color],
Converter={StaticResource MpdvColorConverter}, Mode=OneWay}" />
    </gmuiw:ConfigItemList>
  </Ellipse.Tag>
</Ellipse>

```

Note: You can also enter the contents directly into the XAML code and then integrate these contents into the template by clicking "apply".

Dynamic: flashing

Use the "flashing" dynamic to present elements flashing based on defined information deriving from the web service. In general, the graphic machinery uses the flashing dynamic if a specific status (e.g. status 99) exists at the machine.

Enter this information in the XAML code to define the dynamic:

```
<Ellipse Fill="{x:Null}" Stroke="#FF000000" StrokeThickness="1" Tag="{x:Null}" Width="100" Height="100"
InputMethod.IsInputMethodEnabled="True" Canvas.Left="0" Canvas.Top="0">
  <Ellipse.Resources>
    <Style TargetType="Ellipse" x:Key="{x:Type Ellipse}">
      <Style.Triggers>
        <DataTrigger Binding="{Binding Path=[resource.status], Mode=OneWay}" Value="99">
          <DataTrigger.EnterActions>
            <BeginStoryboard>
              <Storyboard>
                <Storyboard.Children>
                  <DoubleAnimation From="1" To="0.1" AutoReverse="True" Duration="00:00:01"
RepeatBehavior="Forever" Storyboard.TargetProperty="Opacity" />
                </Storyboard.Children>
              </Storyboard>
            </BeginStoryboard>
          </DataTrigger.EnterActions>
          <DataTrigger.ExitActions>
            <BeginStoryboard>
              <Storyboard>
                <Storyboard.Children>
                  <DoubleAnimation To="1" Duration="00:00:01" Storyboard.TargetProperty="Opacity" />
                </Storyboard.Children>
              </Storyboard>
            </BeginStoryboard>
          </DataTrigger.ExitActions>
        </DataTrigger>
      </Style.Triggers>
    </Style>
  </Ellipse.Resources>
  <Setter Property="UIElement.Opacity">
    <Setter.Value>
      <s:Double>1</s:Double>
    </Setter.Value>
  </Setter>
</Ellipse>
```

DataTriggers can change the properties of elements subject to values. In the below example, the circle starts flashing when the **resource.status** field has the value **99**.

These configurations are required to enable flashing:

- `<Setter Property="Opacity" Value="1"/>` sets the "transparency" value to "non-transparent".
- `<DataTrigger Binding="{Binding Path=[resource.status], Mode=OneWay}" Value="99">` triggers the animation stored in `DataTrigger.EnterActions`, if the field `[resource.status]` has the value 99. If the value does not equal 99, `DataTrigger.ExitActions` does not trigger the animation.

The animation defined in `EnterActions` constantly changes the transparency value from 1 (non-transparent) to 0.1 (almost transparent). `AutoReverse="True"` results in restarting the animation, once the target value has been achieved.

`RepeatBehavior="Forever"` constantly repeats the animation until animation is interrupted by calling `ExitAction` via the `DataTrigger`.

If `ExitAction` is missing, the animation from `EnterAction` is continued even if the condition defined in the `DataTrigger` is no longer met.

Tooltip

There is exactly 1 tooltip for each object type.

Tooltips are also templates. The tooltip ZIPs are contained in the `template.zip` (`\\<server>\<Hydra directory>\<client number>\custom\mpark\templates.zip`).

The system performs assignments by the name that is entered in the `Template.xml` of the tooltip zip file.



You must not edit tooltips in the Template Editor, as otherwise they will no longer work.

Integrate the customized tooltips in

`\\<server>\<Hydra directory>\<instance number>\custom\mpark\templatescustom.zip`

File name:

`<Object type>_TooltipTemplate.zip`

`-> template.xml`

Inserting a new entry

`<TextBlock Width="Auto" Height="Auto" Grid.Column="1" Grid.Row="45" Text="{Binding Path=Format[<Acronym>], Mode=OneWay}" ></TextBlock>`.

If you insert a new line, you also have to add a new line in

```
<Grid.RowDefinitions>
```

```
    <RowDefinition Height="Auto" />
```

If you insert a new column, you also have to add a new line in

```
<Grid.ColumnDefinitions>
```

```
    <ColumnDefinition Width="Auto" />
```

Customization - adding new objects

Via customization, you can change definitions for existing objects like machines in the Template Editor and you can add new objects to the *Graphic machinery* and the relevant Layout and Template Editor.

Define the fields and data sources in the following configuration file:

For the *Graphic machinery*:

```
<MOC path>\local\conf\MOC\Apps\GraphicMachinery2\MparkDataSources.config
```

For the layout editor of the *Graphic machinery*:

```
<MOC path>\local\conf\MOC\Apps\ GraphicMachinery2Edit\MparkDataSources.config
```

For the Template editor of the *Graphic machinery*:

```
<MOC path>\local\conf\MOC\Apps\ GraphicMachinery2Template\MparkDataSources.config
```

Use the following tags to define and/or edit the configuration files:

- *Label* – Language key displayed in the list of objects in the layout editor
- *DisplaySortOrder* – sorting and sequence of objects in the Layout Editor
- *DataSourceId* – unique name for the new object and/or the object to be integrated (please note: the name "object" must not be included within this name)
- *TemplateGridColumnns* – definition of columns shown for the object in the table within the Layout Editor.
- *ServiceName* – specifies the web service to be used
- *KeyColumnStatement* – defines the key value for requesting data
- *MandatoryColumns* – defines columns already been loaded as part of the data initialization. Loaded when requested and also displayed. Please note: Only integrate data that must be displayed immediately.

- *DataLogicName* – unique name for the service to be used

If you define an entirely new section, you can provide a new object for presentation purposes:

This is an example for integrating the display of process parameters:

```
<MParkObjectDataSource>
  <Label>??</Label>
  <DisplaySortOrder>5</DisplaySortOrder>
  <Visible>true</Visible>
  <DataSourceId>Processparameter</DataSourceId>
  <TemplateGridColumnns>
    <string>resource.id</string><string>resource.id</string>
    <string>lastevent.id</string>
    <string>resource.short_name</string>
    <string>lastevent.type</string>
  </TemplateGridColumnns>
  <DataSourceDescriptor xsi:type="MParkWebServiceDataSourceDescriptor">
    <ServiceName>ProcessEvent.listLastEvent</ServiceName>
    <DataSourceFilterStatement />
    <KeyColumnStatement>lastevent.id</KeyColumnStatement>
    <MandatoryColumns>
      <string>resource.id</string><string>resource.id</string>
      <string>lastevent.id</string>
      <string>resource.short_name</string>
      <string>lastevent.type</string>
    </MandatoryColumns>
    <DataItemFilterStatement />
    <DataLogicName>ProcessEventListLastEvent</DataLogicName>
    <FilterParams />
  </DataSourceDescriptor>
</MParkObjectDataSource>
```

Filter parameters for own data sources in the Graphic Machinery

The attribute *FilterParams* does not allow DataFilter including IN operators in the graphic machinery. Only DataFilter with the operator "Equal" and a filtering by single values are supported. You can use the following data types:

- string
- string[]
- integer
- boolean

Customization - how to proceed to add new objects

- Copy data from the standard directory to the local directory (mind the directory structure!)

- Delete the no longer required entries from the files and add the new section.
- Change the setting entry to "local"
<Setting Key=„LocalDataSources" Description=...>.

The system merges the local files and the standard files. The local files then define the additional, customer-specific object types.

Restart the client after changing the configuration file.

Data of the objects

Below, the document lists the web services and the default fields currently used in the templates. For the complete documentation, refer to the MPDV Repository Client (MRC). You can find it here:

- [Repository Client](#)
- [Repository](#)

Data of the objects *workplaces/machines* and *lines* (workplaces/machines of type "L")

Web service: BOResource.workplaceOverview

ServiceName	Acronym	Web service type
BOResource.workplaceOverview	cycleprogression.action_limit.negative.percentage	integer
BOResource.workplaceOverview	cycleprogression.action_limit.positive.percentage	integer
BOResource.workplaceOverview	cycleprogression.tolerance_limit.negative.percentage	integer
BOResource.workplaceOverview	cycleprogression.tolerance_limit.positiv.percentage	integer
BOResource.workplaceOverview	operation.act.calc_rpa10	integer
BOResource.workplaceOverview	operation.act.calc_rpa11	integer
BOResource.workplaceOverview	operation.act.calc_rpa12	integer
BOResource.workplaceOverview	operation.act.calc_rpa1	integer
BOResource.workplaceOverview	operation.act.calc_rpa2	integer
BOResource.workplaceOverview	operation.act.calc_rpa3	integer
BOResource.workplaceOverview	operation.act.calc_rpa4	integer
BOResource.workplaceOverview	operation.act.calc_rpa5	integer
BOResource.workplaceOverview	operation.act.calc_rpa6	integer
BOResource.workplaceOverview	operation.act.calc_rpa7	integer
BOResource.workplaceOverview	operation.act.calc_rpa8	integer
BOResource.workplaceOverview	operation.act.calc_rpa9	integer
BOResource.workplaceOverview	operation.act.problem.primary	decimal
BOResource.workplaceOverview	operation.act.rework.primary	decimal
BOResource.workplaceOverview	operation.act.scrap.primary	decimal

BOResource.workplaceOverview	operation.act.yield.primary	decimal
BOResource.workplaceOverview	operation.articledesignation	string
BOResource.workplaceOverview	operation.article	string
BOResource.workplaceOverview	operation.color	string
BOResource.workplaceOverview	operation.cycle.actual	integer
BOResource.workplaceOverview	operation.cycle.difference	decimal
BOResource.workplaceOverview	operation.cycle.plan	integer
BOResource.workplaceOverview	operation.designation	string
BOResource.workplaceOverview	operation.id	string
BOResource.workplaceOverview	operation.operation	string
BOResource.workplaceOverview	operation.partitioning.plan	integer
BOResource.workplaceOverview	operation.partitioning.target	decimal
BOResource.workplaceOverview	operation.plan.scrap.primary	decimal
BOResource.workplaceOverview	operation.plan.unit.primary	string
BOResource.workplaceOverview	operation.plan.yield.primary	decimal
BOResource.workplaceOverview	operation.sequence	string
BOResource.workplaceOverview	operation.split_number	string
BOResource.workplaceOverview	operation.strokes.actual	decimal
BOResource.workplaceOverview	operation.strokes.difference	decimal
BOResource.workplaceOverview	operation.suboperation	string
BOResource.workplaceOverview	operation.tool	string
BOResource.workplaceOverview	order.id	string
BOResource.workplaceOverview	reportgroup.id	string
BOResource.workplaceOverview	resource.act.shift.counter1	integer
BOResource.workplaceOverview	resource.act.shift.counter3	integer
BOResource.workplaceOverview	resource.act.status.textnumber	integer
BOResource.workplaceOverview	resource.company	string
BOResource.workplaceOverview	resource.costcenter	string
BOResource.workplaceOverview	resource.cycle.actual	integer
BOResource.workplaceOverview	resource.cycle.color	integer
BOResource.workplaceOverview	resource.cycle.difference.color	integer
BOResource.workplaceOverview	resource.cycle.difference	decimal
BOResource.workplaceOverview	resource.cycle.target	decimal
BOResource.workplaceOverview	resource.designation	string
BOResource.workplaceOverview	resource.expected_end_ts_d	*date
BOResource.workplaceOverview	resource.expected_end_ts_t	*time
BOResource.workplaceOverview	resource.expected_end_ts	datetime
BOResource.workplaceOverview	resource.flash	boolean
BOResource.workplaceOverview	resource.group	string
BOResource.workplaceOverview	resource.id	string
BOResource.workplaceOverview	resource.predicted_downtime	integer
BOResource.workplaceOverview	resource.remaining_downtime	integer

BOResource.workplaceOverview	resource.responsibilityarea	string
BOResource.workplaceOverview	resource.rpa.number	integer
BOResource.workplaceOverview	resource.shift.begin_ts_d	*date
BOResource.workplaceOverview	resource.shift.begin_ts_t	*time
BOResource.workplaceOverview	resource.shift.begin_ts	datetime
BOResource.workplaceOverview	resource.shift.date	datetime
BOResource.workplaceOverview	resource.shift.end_ts_d	*date
BOResource.workplaceOverview	resource.shift.end_ts_t	*time
BOResource.workplaceOverview	resource.shift.end_ts	datetime
BOResource.workplaceOverview	resource.shift.number	integer
BOResource.workplaceOverview	resource.shift.problem_base	decimal
BOResource.workplaceOverview	resource.shift.problem_primary	decimal
BOResource.workplaceOverview	resource.shift.problem_secondary	decimal
BOResource.workplaceOverview	resource.shift.problem_tertiary	decimal
BOResource.workplaceOverview	resource.shift.rework_base	decimal
BOResource.workplaceOverview	resource.shift.rework_primary	decimal
BOResource.workplaceOverview	resource.shift.rework_secondary	decimal
BOResource.workplaceOverview	resource.shift.rework_tertiary	decimal
BOResource.workplaceOverview	resource.shift.scrap_base	decimal
BOResource.workplaceOverview	resource.shift.scrap_primary	decimal
BOResource.workplaceOverview	resource.shift.scrap_secondary	decimal
BOResource.workplaceOverview	resource.shift.scrap_tertiary	decimal
BOResource.workplaceOverview	resource.shift.total_time	integer
BOResource.workplaceOverview	resource.shift.yield_base	decimal
BOResource.workplaceOverview	resource.shift.yield_primary	decimal
BOResource.workplaceOverview	resource.shift.yield_secondary	decimal
BOResource.workplaceOverview	resource.shift.yield_tertiary	decimal
BOResource.workplaceOverview	resource.short_name	string
BOResource.workplaceOverview	resource.state.led	string
BOResource.workplaceOverview	resource.status.begin_ts_d	*date
BOResource.workplaceOverview	resource.status.begin_ts_t	*time
BOResource.workplaceOverview	resource.status.begin_ts	datetime
BOResource.workplaceOverview	resource.status.color	integer
BOResource.workplaceOverview	resource.status.text	string
BOResource.workplaceOverview	resource.status	integer
BOResource.workplaceOverview	resource.strokes.actual	decimal
BOResource.workplaceOverview	resource.strokes.difference	decimal
BOResource.workplaceOverview	resource.strokes.target	decimal
BOResource.workplaceOverview	resource.strokes.total	decimal
BOResource.workplaceOverview	resource.type	string
BOResource.workplaceOverview	resource.unit.base	string
BOResource.workplaceOverview	resource.unit.primary	string

BOResource.workplaceOverview	resource.unit.secondary	string
BOResource.workplaceOverview	resource.unit.tertiary	string
BOResource.workplaceOverview	resource.userfield01	datetime
BOResource.workplaceOverview	resource.userfield02	datetime
BOResource.workplaceOverview	resource.userfield03	datetime
BOResource.workplaceOverview	resource.userfield04	datetime
BOResource.workplaceOverview	resource.userfield05	datetime
BOResource.workplaceOverview	resource.userfield06	datetime
BOResource.workplaceOverview	resource.userfield07	integer
BOResource.workplaceOverview	resource.userfield08	integer
BOResource.workplaceOverview	resource.userfield09	integer
BOResource.workplaceOverview	resource.userfield10	integer
BOResource.workplaceOverview	resource.userfield11	integer
BOResource.workplaceOverview	resource.userfield12	integer
BOResource.workplaceOverview	resource.userfield13	integer
BOResource.workplaceOverview	resource.userfield14	integer
BOResource.workplaceOverview	resource.userfield15	integer
BOResource.workplaceOverview	resource.userfield16	integer
BOResource.workplaceOverview	resource.userfield17	integer
BOResource.workplaceOverview	resource.userfield18	integer
BOResource.workplaceOverview	resource.userfield19	integer
BOResource.workplaceOverview	resource.userfield20	integer
BOResource.workplaceOverview	resource.userfield21	integer
BOResource.workplaceOverview	resource.userfield22	integer
BOResource.workplaceOverview	resource.userfield23	decimal
BOResource.workplaceOverview	resource.userfield24	decimal
BOResource.workplaceOverview	resource.userfield25	decimal
BOResource.workplaceOverview	resource.userfield26	decimal
BOResource.workplaceOverview	resource.userfield27	decimal
BOResource.workplaceOverview	resource.userfield28	decimal
BOResource.workplaceOverview	resource.userfield29	string
BOResource.workplaceOverview	resource.userfield30	string
BOResource.workplaceOverview	resource.userfield31	string
BOResource.workplaceOverview	resource.userfield32	string
BOResource.workplaceOverview	resource.userfield33	string
BOResource.workplaceOverview	resource.userfield34	string
BOResource.workplaceOverview	resource.userfield35	string
BOResource.workplaceOverview	resource.userfield36	string
BOResource.workplaceOverview	resource.userfield37	string
BOResource.workplaceOverview	resource.userfield38	string
BOResource.workplaceOverview	resource.userfield39	string
BOResource.workplaceOverview	resource.userfield40	string

BOResource.workplaceOverview	resource.userfield41	string
BOResource.workplaceOverview	resource.userfield42	string
BOResource.workplaceOverview	resource.userfield43	string
BOResource.workplaceOverview	resource.userfield44	string
BOResource.workplaceOverview	resource.userfield45	string
BOResource.workplaceOverview	resource.userfield46	string
BOResource.workplaceOverview	resource.userfield47	string
BOResource.workplaceOverview	resource.userfield48	string
BOResource.workplaceOverview	resource.userfield49	string
BOResource.workplaceOverview	resource.userfield50	string
BOResource.workplaceOverview	resource.userfield51	string
BOResource.workplaceOverview	resource.userfield52	string
BOResource.workplaceOverview	resource.userfield53	string
BOResource.workplaceOverview	resource.userfield54	string
BOResource.workplaceOverview	resource.userfield55	string
BOResource.workplaceOverview	resource.userfield56	string
BOResource.workplaceOverview	resource.userfield57	string
BOResource.workplaceOverview	resource.userfield58	string
BOResource.workplaceOverview	resource.userfield59	string
BOResource.workplaceOverview	resource.userfield60	string
BOResource.workplaceOverview	resource.userfield61	string
BOResource.workplaceOverview	resource.userfield62	string
BOResource.workplaceOverview	resource.userfield63	string
BOResource.workplaceOverview	resource.userfield64	string
BOResource.workplaceOverview	resource.userfield65	string
BOResource.workplaceOverview	resource.userfield66	string
BOResource.workplaceOverview	resource.userfieldkey	string
BOResource.workplaceOverview	resource.workplacecategory	string
BOResource.workplaceOverview	resource.workplacetype	string
BOResource.workplaceOverview	responsibilityarea.id	string
BOResource.workplaceOverview	status.min_duration	integer
BOResource.workplaceOverview	statustext.id	integer

Data of the object *groups* (capacity groups)

Web service: MDResourceGroup.overview

ServiceName	Acronym	Web service type
MDResourceGroup.overview	checkresponsibilityarea	boolean
MDResourceGroup.overview	resourcegroup.analyzinggroup	boolean
MDResourceGroup.overview	resourcegroup.capacitygroup	boolean
MDResourceGroup.overview	resourcegroup.company	string

ServiceName	Acronym	Web service type
MDResourceGroup.overview	resourcegroup.consider_production_variant_by_takeover	string
MDResourceGroup.overview	resourcegroup.consider_production_variant_in_planning	string
MDResourceGroup.overview	resourcegroup.costcenter	string
MDResourceGroup.overview	resourcegroup.count.break	integer
MDResourceGroup.overview	resourcegroup.count.downtime	integer
MDResourceGroup.overview	resourcegroup.count.production	integer
MDResourceGroup.overview	resourcegroup.count.setup	integer
MDResourceGroup.overview	resourcegroup.designation	string
MDResourceGroup.overview	resourcegroup.id	string
MDResourceGroup.overview	resourcegroup.linegroup	boolean
MDResourceGroup.overview	resourcegroup.locationgroup	boolean
MDResourceGroup.overview	resourcegroup.modified_by	string
MDResourceGroup.overview	resourcegroup.modified_ts	datetime
MDResourceGroup.overview	resourcegroup.performancelevel	integer
MDResourceGroup.overview	resourcegroup.plan.continuous_capacity	boolean
MDResourceGroup.overview	resourcegroup.plan.reduction_capacity	boolean
MDResourceGroup.overview	resourcegroup.plan.shortage_capacity	boolean
MDResourceGroup.overview	resourcegroup.responsabilityarea	string
MDResourceGroup.overview	resourcegroup.shiftmodel	integer
MDResourceGroup.overview	resourcegroup.simu.continuous_capacity	boolean
MDResourceGroup.overview	resourcegroup.simu.reduction_capacity	boolean
MDResourceGroup.overview	resourcegroup.simu.shortage_capacity	boolean
MDResourceGroup.overview	resourcegroup.singletype	boolean
MDResourceGroup.overview	resourcegroup.upload_upon_completion	string
MDResourceGroup.overview	resourcegroup.user	string
MDResourceGroup.overview	resourcegroup.userfield01	integer
MDResourceGroup.overview	resourcegroup.userfield02	integer
MDResourceGroup.overview	resourcegroup.userfield03	integer
MDResourceGroup.overview	resourcegroup.userfield04	integer
MDResourceGroup.overview	resourcegroup.userfield05	decimal
MDResourceGroup.overview	resourcegroup.userfield06	decimal
MDResourceGroup.overview	resourcegroup.userfield07	string
MDResourceGroup.overview	resourcegroup.userfield08	string
MDResourceGroup.overview	resourcegroup.userfield09	string
MDResourceGroup.overview	resourcegroup.userfield10	string
MDResourceGroup.overview	resourcegroup.userfield11	string
MDResourceGroup.overview	resourcegroup.userfield12	string
MDResourceGroup.overview	resourcegroup.userfield13	string
MDResourceGroup.overview	resourcegroup.userfield14	string
MDResourceGroup.overview	resourcegroup.userfield15	string
MDResourceGroup.overview	resourcegroup.userfield16	string

ServiceName	Acronym	Web service type
MDResourceGroup.overview	resourcegroup.userfieldkey	string
MDResourceGroup.overview	resourcegroup.usergroup	string

Data of the object *material buffer*

Web service: BOBatch.stockMonitoring

ServiceName	Acronym	Web service type
BOBatch.stockMonitoring	batch.articledesignation	string
BOBatch.stockMonitoring	batch.article	string
BOBatch.stockMonitoring	batch.remainingquantity	decimal
BOBatch.stockMonitoring	batch.status	string
BOBatch.stockMonitoring	batch.unit	string
BOBatch.stockMonitoring	checkresponsibilityarea	boolean
BOBatch.stockMonitoring	inventorylimit.maxalarmlevel	integer
BOBatch.stockMonitoring	inventorylimit.maxstocklevel	integer
BOBatch.stockMonitoring	inventorylimit.maxwarnlevel	integer
BOBatch.stockMonitoring	inventorylimit.minalarmquantity	integer
BOBatch.stockMonitoring	inventorylimit.minstocklevel	integer
BOBatch.stockMonitoring	inventorylimit.minwarnlevel	integer
BOBatch.stockMonitoring	longtermdata	boolean
BOBatch.stockMonitoring	materialbuffer.area	string
BOBatch.stockMonitoring	materialbuffer.company	string
BOBatch.stockMonitoring	materialbuffer.costcenter	string
BOBatch.stockMonitoring	materialbuffer.department	string
BOBatch.stockMonitoring	materialbuffer.designation	string
BOBatch.stockMonitoring	materialbuffer.filllevel	string
BOBatch.stockMonitoring	materialbuffer.id	string
BOBatch.stockMonitoring	materialbuffer.storage location	string
BOBatch.stockMonitoring	materialbuffer.type	string
BOBatch.stockMonitoring	materialtype.id	string

Data of the object *resources* (no DNC and file resource)

Web service: BOResource.list

ServiceName	Acronym	Web service type
BOResource.list	checkresponsibilityarea	boolean
BOResource.list	productionlevel.kbn_id	string
BOResource.list	resource.accuracyclass	string
BOResource.list	resource.acquisition_costs	decimal
BOResource.list	resource.act.activity1	decimal

ServiceName	Acronym	Web service type
BOResource.list	resource.act.activity2	decimal
BOResource.list	resource.act.activity3	decimal
BOResource.list	resource.act.activity4	decimal
BOResource.list	resource.act.activity5	decimal
BOResource.list	resource.act.activity6	decimal
BOResource.list	resource.act.collective_block_counter	integer
BOResource.list	resource.act.deviation.reason_textno	integer
BOResource.list	resource.act.deviation.reason	integer
BOResource.list	resource.act.is_active	string
BOResource.list	resource.act.last_status_ts	datetime
BOResource.list	resource.act.logged_on_machine	string
BOResource.list	resource.act.logged_on_order	string
BOResource.list	resource.act.machine_status	integer
BOResource.list	resource.act.measure	integer
BOResource.list	resource.act.new_status	integer
BOResource.list	resource.act.optimized_version	string
BOResource.list	resource.act.predicted_downtime_ts	datetime
BOResource.list	resource.act.predicted_downtime	integer
BOResource.list	resource.act.previous_status	integer
BOResource.list	resource.act.problem.base	decimal
BOResource.list	resource.act.problem.primary	decimal
BOResource.list	resource.act.problem.reason_textno	integer
BOResource.list	resource.act.problem.reason	integer
BOResource.list	resource.act.problem.secondary	decimal
BOResource.list	resource.act.problem.tertiary	decimal
BOResource.list	resource.act.production_lock	integer
BOResource.list	resource.act.resourcestatus.color	integer
BOResource.list	resource.act.resourcestatus.text	string
BOResource.list	resource.act.resourcestatus	integer
BOResource.list	resource.act.rework.base	decimal
BOResource.list	resource.act.rework.primary	decimal
BOResource.list	resource.act.rework.reason_textno	integer
BOResource.list	resource.act.rework.reason	integer
BOResource.list	resource.act.rework.secondary	decimal
BOResource.list	resource.act.rework.tertiary	decimal
BOResource.list	resource.act.rpa.abbreviation	string
BOResource.list	resource.act.rpa.number	integer
BOResource.list	resource.act.rpa.text	string
BOResource.list	resource.act.rpa10	integer
BOResource.list	resource.act.rpa11	integer
BOResource.list	resource.act.rpa12	integer

ServiceName	Acronym	Web service type
BOResource.list	resource.act.rpa1	integer
BOResource.list	resource.act.rpa2	integer
BOResource.list	resource.act.rpa3	integer
BOResource.list	resource.act.rpa4	integer
BOResource.list	resource.act.rpa5	integer
BOResource.list	resource.act.rpa6	integer
BOResource.list	resource.act.rpa7	integer
BOResource.list	resource.act.rpa8	integer
BOResource.list	resource.act.rpa9	integer
BOResource.list	resource.act.scrap.base	decimal
BOResource.list	resource.act.scrap.primary	decimal
BOResource.list	resource.act.scrap.reason_textno	integer
BOResource.list	resource.act.scrap.reason	integer
BOResource.list	resource.act.scrap.secondary	decimal
BOResource.list	resource.act.scrap.tertiary	decimal
BOResource.list	resource.act.shift.activity10	decimal
BOResource.list	resource.act.shift.activity1	decimal
BOResource.list	resource.act.shift.activity2	decimal
BOResource.list	resource.act.shift.activity3	decimal
BOResource.list	resource.act.shift.activity4	decimal
BOResource.list	resource.act.shift.activity5	decimal
BOResource.list	resource.act.shift.activity6	decimal
BOResource.list	resource.act.shift.activity7	decimal
BOResource.list	resource.act.shift.activity8	decimal
BOResource.list	resource.act.shift.activity9	decimal
BOResource.list	resource.act.shift.break	integer
BOResource.list	resource.act.shift.counter1	integer
BOResource.list	resource.act.shift.counter2	integer
BOResource.list	resource.act.shift.counter3	integer
BOResource.list	resource.act.shift.counter4	integer
BOResource.list	resource.act.shift.counter5	integer
BOResource.list	resource.act.shift.counter6	integer
BOResource.list	resource.act.shift.end_ts	datetime
BOResource.list	resource.act.shift.number	integer
BOResource.list	resource.act.shift.problem.base	decimal
BOResource.list	resource.act.shift.problem.primary	decimal
BOResource.list	resource.act.shift.problem.secondary	decimal
BOResource.list	resource.act.shift.problem.tertiary	decimal
BOResource.list	resource.act.shift.rework.base	decimal
BOResource.list	resource.act.shift.rework.primary	decimal
BOResource.list	resource.act.shift.rework.secondary	decimal

ServiceName	Acronym	Web service type
BOResource.list	resource.act.shift.rework.tertiary	decimal
BOResource.list	resource.act.shift.rpa10	integer
BOResource.list	resource.act.shift.rpa11	integer
BOResource.list	resource.act.shift.rpa12	integer
BOResource.list	resource.act.shift.rpa1	integer
BOResource.list	resource.act.shift.rpa2	integer
BOResource.list	resource.act.shift.rpa3	integer
BOResource.list	resource.act.shift.rpa4	integer
BOResource.list	resource.act.shift.rpa5	integer
BOResource.list	resource.act.shift.rpa6	integer
BOResource.list	resource.act.shift.rpa7	integer
BOResource.list	resource.act.shift.rpa8	integer
BOResource.list	resource.act.shift.rpa9	integer
BOResource.list	resource.act.shift.scrap.base	decimal
BOResource.list	resource.act.shift.scrap.primary	decimal
BOResource.list	resource.act.shift.scrap.secondary	decimal
BOResource.list	resource.act.shift.scrap.tertiary	decimal
BOResource.list	resource.act.shift.start_ts	datetime
BOResource.list	resource.act.shift.strokes.total	decimal
BOResource.list	resource.act.shift.strokes.yield	decimal
BOResource.list	resource.act.shift.total_time	integer
BOResource.list	resource.act.shift.yield.base	decimal
BOResource.list	resource.act.shift.yield.primary	decimal
BOResource.list	resource.act.shift.yield.secondary	decimal
BOResource.list	resource.act.shift.yield.tertiary	decimal
BOResource.list	resource.act.start_of_resourcestatus	datetime
BOResource.list	resource.act.start_of_status	datetime
BOResource.list	resource.act.status.color	integer
BOResource.list	resource.act.status.textnumber	integer
BOResource.list	resource.act.status.text	string
BOResource.list	resource.act.status	integer
BOResource.list	resource.act.storage_location	string
BOResource.list	resource.act.strokes.total	decimal
BOResource.list	resource.act.strokes.yield	decimal
BOResource.list	resource.act.time_for_new_status	datetime
BOResource.list	resource.act.time_for_release_status	datetime
BOResource.list	resource.act.total_time	integer
BOResource.list	resource.act.unit.base	string
BOResource.list	resource.act.unit.primary	string
BOResource.list	resource.act.unit.secondary	string
BOResource.list	resource.act.unit.tertiary	string

ServiceName	Acronym	Web service type
BOResource.list	resource.act.yield.base	decimal
BOResource.list	resource.act.yield.primary	decimal
BOResource.list	resource.act.yield.secondary	decimal
BOResource.list	resource.act.yield.tertiary	decimal
BOResource.list	resource.advanced_logon_time	integer
BOResource.list	resource.allocation_of_manual_problem	string
BOResource.list	resource.allocation_of_manual_rework	string
BOResource.list	resource.allocation_of_manual_scrap	string
BOResource.list	resource.allocation_of_manual_yield	string
BOResource.list	resource.auto_dist_reason_req_delay	boolean
BOResource.list	resource.auto_dist_reason_req	boolean
BOResource.list	resource.auto_generation_of_batch_no	string
BOResource.list	resource.back_posting_of_cycles	string
BOResource.list	resource.base_quantity_conversion	string
BOResource.list	resource.batch_change_signal	string
BOResource.list	resource.batch_option	string
BOResource.list	resource.batchnumber	string
BOResource.list	resource.blocked	boolean
BOResource.list	resource.calculatory_runtime	integer
BOResource.list	resource.capacity_year_model	integer
BOResource.list	resource.category	string
BOResource.list	resource.check_order_backlog_spec	string
BOResource.list	resource.collective_block	boolean
BOResource.list	resource.commentary1	string
BOResource.list	resource.commentary2	string
BOResource.list	resource.commentary3	string
BOResource.list	resource.commentary4	string
BOResource.list	resource.commentary5	string
BOResource.list	resource.commentary6	string
BOResource.list	resource.company	string
BOResource.list	resource.comparison.1.difference.percentage	decimal
BOResource.list	resource.comparison.1.difference.value	decimal
BOResource.list	resource.comparison.1.resource.act.last_status_ts	datetime
BOResource.list	resource.comparison.1.resource.id	string
BOResource.list	resource.comparison.1.resource.internal_id	integer
BOResource.list	resource.comparison.1.resource.reset_ts	datetime
BOResource.list	resource.comparison.1.resource.resource.act.yield.primary	decimal
BOResource.list	resource.comparison.1.resource.resource.plan.unit.primary	string
BOResource.list	resource.comparison.1.resource.type	string
BOResource.list	resource.comparison.2.difference.percentage	decimal
BOResource.list	resource.comparison.2.difference.value	decimal

ServiceName	Acronym	Web service type
BOResource.list	resource.comparison.2.resource.act.last_status_ts	datetime
BOResource.list	resource.comparison.2.resource.id	string
BOResource.list	resource.comparison.2.resource.internal_id	integer
BOResource.list	resource.comparison.2.resource.reset_ts	datetime
BOResource.list	resource.comparison.2.resource.resource.act.yield.primary	decimal
BOResource.list	resource.comparison.2.resource.resource.plan.unit.primary	string
BOResource.list	resource.comparison.2.resource.type	string
BOResource.list	resource.compulsory_sequence	string
BOResource.list	resource.configuration_setting	string
BOResource.list	resource.consumptionbalance	boolean
BOResource.list	resource.correction_factor	decimal
BOResource.list	resource.costcenter	string
BOResource.list	resource.currency_code	string
BOResource.list	resource.cycle.actual	integer
BOResource.list	resource.cycle.extension	integer
BOResource.list	resource.cycle.minimum_time	integer
BOResource.list	resource.cycle.target	decimal
BOResource.list	resource.date_of_acquisition	datetime
BOResource.list	resource.definition_file	string
BOResource.list	resource.delaytime	integer
BOResource.list	resource.delivery.date	datetime
BOResource.list	resource.designation	string
BOResource.list	resource.dialog_control	string
BOResource.list	resource.dig_out.machine_lock	integer
BOResource.list	resource.dig_out.malfunction	integer
BOResource.list	resource.dig_out.target_quantity	integer
BOResource.list	resource.disp_material_list_logon_op	string
BOResource.list	resource.display_of_third_list	string
BOResource.list	resource.dnc_family	integer
BOResource.list	resource.drawing_issue_number	string
BOResource.list	resource.emg.absolute_value_limit	decimal
BOResource.list	resource.engraving_number	string
BOResource.list	resource.equaltype	string
BOResource.list	resource.evaluation_year_model	integer
BOResource.list	resource.evaluation	boolean
BOResource.list	resource.extended_weekend_automatic	boolean
BOResource.list	resource.external_designation	string
BOResource.list	resource.external_device_address	integer
BOResource.list	resource.external_device	string
BOResource.list	resource.external_workplacea	boolean
BOResource.list	resource.family.designation	string

ServiceName	Acronym	Web service type
BOResource.list	resource.family	integer
BOResource.list	resource.file_exist	string
BOResource.list	resource.filename	string
BOResource.list	resource.free_input_output	integer
BOResource.list	resource.graphic_filename	string
BOResource.list	resource.group	string
BOResource.list	resource.guaranteed.date	datetime
BOResource.list	resource.hourly_rate_of_machines	decimal
BOResource.list	resource.hourly_rate_of_persons	decimal
BOResource.list	resource.id	string
BOResource.list	resource.input_buffer	string
BOResource.list	resource.internal_id	integer
BOResource.list	resource.inventory_number	string
BOResource.list	resource.kbn_article	string
BOResource.list	resource.kbn_nr	integer
BOResource.list	resource.kbn_quantity	decimal
BOResource.list	resource.loaded_via_pps	string
BOResource.list	resource.location_group	string
BOResource.list	resource.logged_with_op	string
BOResource.list	resource.machine_parameter10	integer
BOResource.list	resource.machine_parameter15	decimal
BOResource.list	resource.machine_parameter16	decimal
BOResource.list	resource.machine_parameter4	integer
BOResource.list	resource.machine_parameter7	integer
BOResource.list	resource.machine_parameter9	integer
BOResource.list	resource.manual_problem_as_cycles	boolean
BOResource.list	resource.manual_rework_as_cycles	boolean
BOResource.list	resource.manual_scrap_as_cycles	boolean
BOResource.list	resource.manual_yield_as_cycles	boolean
BOResource.list	resource.manufacturer	string
BOResource.list	resource.master_tolerance.from	decimal
BOResource.list	resource.master_tolerance.to	decimal
BOResource.list	resource.master_value	decimal
BOResource.list	resource.measurement_range.from	decimal
BOResource.list	resource.measurement_range.to	decimal
BOResource.list	resource.message_for_not_logged_on_operations	boolean
BOResource.list	resource.metaresource	boolean
BOResource.list	resource.modified_by	string
BOResource.list	resource.modified_ts	datetime
BOResource.list	resource.monitoring_kind	string
BOResource.list	resource.no_of_ops_in_sequencing_list	integer

ServiceName	Acronym	Web service type
BOResource.list	resource.no_target_cycles_to_production	integer
BOResource.list	resource.number_of_evaluation_cycles	integer
BOResource.list	resource.number_of_resources	integer
BOResource.list	resource.occupation	string
BOResource.list	resource.op_log_at_shift	string
BOResource.list	resource.opttranrin	boolean
BOResource.list	resource.opttranrout	boolean
BOResource.list	resource.order_change	string
BOResource.list	resource.original_filename	string
BOResource.list	resource.output_buffer	string
BOResource.list	resource.owner	string
BOResource.list	resource.parallel_logon	boolean
BOResource.list	resource.parallel_orders	string
BOResource.list	resource.partitioning.actual	decimal
BOResource.list	resource.partitioning.machine	decimal
BOResource.list	resource.partitioning.target	decimal
BOResource.list	resource.pep_indicator	string
BOResource.list	resource.performancelevel	decimal
BOResource.list	resource.pieciwork_indicator	string
BOResource.list	resource.plan.activity1	decimal
BOResource.list	resource.plan.activity2	decimal
BOResource.list	resource.plan.activity3	decimal
BOResource.list	resource.plan.activity4	decimal
BOResource.list	resource.plan.activity5	decimal
BOResource.list	resource.plan.activity6	decimal
BOResource.list	resource.plan.unit.base	string
BOResource.list	resource.plan.unit.primary	string
BOResource.list	resource.plan.unit.secondary	string
BOResource.list	resource.plan.unit.tertiary	string
BOResource.list	resource.planned_cycles	decimal
BOResource.list	resource.planning_function	string
BOResource.list	resource.planning_option	string
BOResource.list	resource.planning_year_model	integer
BOResource.list	resource.plant	string
BOResource.list	resource.post_quantity_to_person	string
BOResource.list	resource.posting_during_productionlock	string
BOResource.list	resource.posting	boolean
BOResource.list	resource.primary_qty.denominator	integer
BOResource.list	resource.primary_qty.numerator	integer
BOResource.list	resource.printer	string
BOResource.list	resource.problem_manual	boolean

ServiceName	Acronym	Web service type
BOResource.list	resource.process_data_indicator	boolean
BOResource.list	resource.pulse_factor.target	integer
BOResource.list	resource.pulse_factor	decimal
BOResource.list	resource.purchase_order_number	string
BOResource.list	resource.ratio_posting_working_time	string
BOResource.list	resource.res_type.designation	string
BOResource.list	resource.reset_ts	datetime
BOResource.list	resource.resource.act.yield.primary	decimal
BOResource.list	resource.resource.cycle.target	decimal
BOResource.list	resource.resource.partitioning.actual	decimal
BOResource.list	resource.resource.partitioning.target	decimal
BOResource.list	resource.resource.plan.unit.primary	string
BOResource.list	resource.resource.userfield01	datetime
BOResource.list	resource.resource.userfield02	datetime
BOResource.list	resource.resource.userfield03	datetime
BOResource.list	resource.resource.userfield04	datetime
BOResource.list	resource.resource.userfield05	datetime
BOResource.list	resource.resource.userfield06	datetime
BOResource.list	resource.resource.userfield07	integer
BOResource.list	resource.resource.userfield08	integer
BOResource.list	resource.resource.userfield09	integer
BOResource.list	resource.resource.userfield10	integer
BOResource.list	resource.resource.userfield11	integer
BOResource.list	resource.resource.userfield12	integer
BOResource.list	resource.resource.userfield13	integer
BOResource.list	resource.resource.userfield14	integer
BOResource.list	resource.resource.userfield15	integer
BOResource.list	resource.resource.userfield16	integer
BOResource.list	resource.resource.userfield17	integer
BOResource.list	resource.resource.userfield18	integer
BOResource.list	resource.resource.userfield19	integer
BOResource.list	resource.resource.userfield20	integer
BOResource.list	resource.resource.userfield21	integer
BOResource.list	resource.resource.userfield22	integer
BOResource.list	resource.resource.userfield23	decimal
BOResource.list	resource.resource.userfield24	decimal
BOResource.list	resource.resource.userfield25	decimal
BOResource.list	resource.resource.userfield26	decimal
BOResource.list	resource.resource.userfield27	decimal
BOResource.list	resource.resource.userfield28	decimal
BOResource.list	resource.resource.userfield29	string

ServiceName	Acronym	Web service type
BOResource.list	resource.resource.userfield30	string
BOResource.list	resource.resource.userfield31	string
BOResource.list	resource.resource.userfield32	string
BOResource.list	resource.resource.userfield33	string
BOResource.list	resource.resource.userfield34	string
BOResource.list	resource.resource.userfield35	string
BOResource.list	resource.resource.userfield36	string
BOResource.list	resource.resource.userfield37	string
BOResource.list	resource.resource.userfield38	string
BOResource.list	resource.resource.userfield39	string
BOResource.list	resource.resource.userfield40	string
BOResource.list	resource.resource.userfield41	string
BOResource.list	resource.resource.userfield42	string
BOResource.list	resource.resource.userfield43	string
BOResource.list	resource.resource.userfield44	string
BOResource.list	resource.resource.userfield45	string
BOResource.list	resource.resource.userfield46	string
BOResource.list	resource.resource.userfield47	string
BOResource.list	resource.resource.userfield48	string
BOResource.list	resource.resource.userfield49	string
BOResource.list	resource.resource.userfield50	string
BOResource.list	resource.resource.userfield51	string
BOResource.list	resource.resource.userfield52	string
BOResource.list	resource.resource.userfield53	string
BOResource.list	resource.resource.userfield54	string
BOResource.list	resource.resource.userfield55	string
BOResource.list	resource.resource.userfield56	string
BOResource.list	resource.resource.userfield57	string
BOResource.list	resource.resource.userfield58	string
BOResource.list	resource.resource.userfield59	string
BOResource.list	resource.resource.userfield60	string
BOResource.list	resource.resource.userfield61	string
BOResource.list	resource.resource.userfield62	string
BOResource.list	resource.resource.userfield63	string
BOResource.list	resource.resource.userfield64	string
BOResource.list	resource.resource.userfield65	string
BOResource.list	resource.resource.userfield66	string
BOResource.list	resource.resource.userfieldkey	string
BOResource.list	resource.resource_parameter1	string
BOResource.list	resource.resource_parameter2	boolean
BOResource.list	resource.resource_parameter3	string

ServiceName	Acronym	Web service type
BOResource.list	resource.resource_parameter4	integer
BOResource.list	resource.resource_parameter5	integer
BOResource.list	resource.resource_parameter6	integer
BOResource.list	resource.resource_parameter7	decimal
BOResource.list	resource.resourceattribute1	string
BOResource.list	resource.resourceattribute2	string
BOResource.list	resource.resourceattribute3	string
BOResource.list	resource.resourceattribute4	string
BOResource.list	resource.resourceattribute5	string
BOResource.list	resource.resourceattribute6	string
BOResource.list	resource.resourcetype	string
BOResource.list	resource.responsibilityarea	string
BOResource.list	resource.rework_manual	boolean
BOResource.list	resource.scrap_manual	boolean
BOResource.list	resource.scrap_processing	string
BOResource.list	resource.secondary_qty.denominator	integer
BOResource.list	resource.secondary_qty.numerator	integer
BOResource.list	resource.sequencing_list	string
BOResource.list	resource.serial_number_external_device	integer
BOResource.list	resource.short_name	string
BOResource.list	resource.short_term_disturbance_time	decimal
BOResource.list	resource.show_attributes	boolean
BOResource.list	resource.show_only_superordinate_resources	boolean
BOResource.list	resource.specifications_list	string
BOResource.list	resource.staff_log_at_shift	string
BOResource.list	resource.start_time	integer
BOResource.list	resource.start_up.date	datetime
BOResource.list	resource.storage_location	string
BOResource.list	resource.supplier.company.address1	string
BOResource.list	resource.supplier.company.address2	string
BOResource.list	resource.supplier.company.address3	string
BOResource.list	resource.supplier.company.designation	string
BOResource.list	resource.supplier.company.id	string
BOResource.list	resource.supplier.party_in_charge.firstname	string
BOResource.list	resource.supplier.party_in_charge.lastname	string
BOResource.list	resource.supplier.party_in_charge.type	string
BOResource.list	resource.supplier.party_in_charge	string
BOResource.list	resource.suppress_posting_ade_and_mde	string
BOResource.list	resource.teardown_time	integer
BOResource.list	resource.tertiary_qty.denominator	integer
BOResource.list	resource.tertiary_qty.numerator	integer

ServiceName	Acronym	Web service type
BOResource.list	resource.ticket_print_in_case_of_scrap	string
BOResource.list	resource.ticket_print_out_batch_change	string
BOResource.list	resource.type.based_on_files	boolean
BOResource.list	resource.type.designation	string
BOResource.list	resource.type.dnc_processing	boolean
BOResource.list	resource.type	string
BOResource.list	resource.unit	string
BOResource.list	resource.usage	string
BOResource.list	resource.use_employee_shift_model	string
BOResource.list	resource.userfield01	datetime
BOResource.list	resource.userfield02	datetime
BOResource.list	resource.userfield03	datetime
BOResource.list	resource.userfield04	datetime
BOResource.list	resource.userfield05	datetime
BOResource.list	resource.userfield06	datetime
BOResource.list	resource.userfield07	integer
BOResource.list	resource.userfield08	integer
BOResource.list	resource.userfield09	integer
BOResource.list	resource.userfield10	integer
BOResource.list	resource.userfield11	integer
BOResource.list	resource.userfield12	integer
BOResource.list	resource.userfield13	integer
BOResource.list	resource.userfield14	integer
BOResource.list	resource.userfield15	integer
BOResource.list	resource.userfield16	integer
BOResource.list	resource.userfield17	integer
BOResource.list	resource.userfield18	integer
BOResource.list	resource.userfield19	integer
BOResource.list	resource.userfield20	integer
BOResource.list	resource.userfield21	integer
BOResource.list	resource.userfield22	integer
BOResource.list	resource.userfield23	decimal
BOResource.list	resource.userfield24	decimal
BOResource.list	resource.userfield25	decimal
BOResource.list	resource.userfield26	decimal
BOResource.list	resource.userfield27	decimal
BOResource.list	resource.userfield28	decimal
BOResource.list	resource.userfield29	string
BOResource.list	resource.userfield30	string
BOResource.list	resource.userfield31	string
BOResource.list	resource.userfield32	string

ServiceName	Acronym	Web service type
BOResource.list	resource.userfield33	string
BOResource.list	resource.userfield34	string
BOResource.list	resource.userfield35	string
BOResource.list	resource.userfield36	string
BOResource.list	resource.userfield37	string
BOResource.list	resource.userfield38	string
BOResource.list	resource.userfield39	string
BOResource.list	resource.userfield40	string
BOResource.list	resource.userfield41	string
BOResource.list	resource.userfield42	string
BOResource.list	resource.userfield43	string
BOResource.list	resource.userfield44	string
BOResource.list	resource.userfield45	string
BOResource.list	resource.userfield46	string
BOResource.list	resource.userfield47	string
BOResource.list	resource.userfield48	string
BOResource.list	resource.userfield49	string
BOResource.list	resource.userfield50	string
BOResource.list	resource.userfield51	string
BOResource.list	resource.userfield52	string
BOResource.list	resource.userfield53	string
BOResource.list	resource.userfield54	string
BOResource.list	resource.userfield55	string
BOResource.list	resource.userfield56	string
BOResource.list	resource.userfield57	string
BOResource.list	resource.userfield58	string
BOResource.list	resource.userfield59	string
BOResource.list	resource.userfield60	string
BOResource.list	resource.userfield61	string
BOResource.list	resource.userfield62	string
BOResource.list	resource.userfield63	string
BOResource.list	resource.userfield64	string
BOResource.list	resource.userfield65	string
BOResource.list	resource.userfield66	string
BOResource.list	resource.userfieldkey	string
BOResource.list	resource.version	string
BOResource.list	resource.wait_time	integer
BOResource.list	resource.workplacecategory	string
BOResource.list	resource.workplacetype	string
BOResource.list	resource.year_model	integer
BOResource.list	resource.yield_manual	boolean

Data of the object *terminal*

Web service: Terminal.list

ServiceName	Acronym	Web service type
Terminal.list	area.id	string
Terminal.list	checkresponsibilityarea	boolean
Terminal.list	rectype.id	string
Terminal.list	terminal.absencereason1.text	string
Terminal.list	terminal.absencereason1	string
Terminal.list	terminal.absencereason2.text	string
Terminal.list	terminal.absencereason2	string
Terminal.list	terminal.absencereason3.text	string
Terminal.list	terminal.absencereason3	string
Terminal.list	terminal.absencereason4.text	string
Terminal.list	terminal.absencereason4	string
Terminal.list	terminal.active	boolean
Terminal.list	terminal.additional_function	integer
Terminal.list	terminal.ade_terminal	boolean
Terminal.list	terminal.areafunction_active	boolean
Terminal.list	terminal.area	string
Terminal.list	terminal.barcode_connection	string
Terminal.list	terminal.batch_management	string
Terminal.list	terminal.caq.bapi_activation_flag	string
Terminal.list	terminal.caq.check_characteristic_at_order_logon	boolean
Terminal.list	terminal.caq.entering_measured_value_only_if_inspector_known	boolean
Terminal.list	terminal.caq.entry_for	string
Terminal.list	terminal.caq.identify_inspector_before_entering_measured_value	boolean
Terminal.list	terminal.caq.identify_inspector_before_open_inspection_dialog	boolean
Terminal.list	terminal.caq.input_of_piece_numbers	boolean
Terminal.list	terminal.caq.inspection_attributes	boolean
Terminal.list	terminal.caq.inspection_station	string
Terminal.list	terminal.caq.logon_logoff_inspector	boolean
Terminal.list	terminal.caq.only_record_if_insp_station_equals	boolean
Terminal.list	terminal.caq.only_show_measured_value_of_this_insp_station	boolean
Terminal.list	terminal.caq.open_failure_recording_automatically	string
Terminal.list	terminal.caq.open_inspection_dialog_only_if_inspector_known	boolean
Terminal.list	terminal.caq_terminal	boolean
Terminal.list	terminal.check.offline	boolean
Terminal.list	terminal.check_online	boolean
Terminal.list	terminal.check_pzestatus	string
Terminal.list	terminal.collectiveoperations.inclentryofquantities	boolean
Terminal.list	terminal.collectiveoperations.machiningcenter	boolean

ServiceName	Acronym	Web service type
Terminal.list	terminal.collectiveoperations.type	string
Terminal.list	terminal.collectiveoperations	boolean
Terminal.list	terminal.company	string
Terminal.list	terminal.configurationcharacteristics_1	integer
Terminal.list	terminal.configurationcharacteristics_2	string
Terminal.list	terminal.costcenter	string
Terminal.list	terminal.cycle_duration_status_message	integer
Terminal.list	terminal.cyclicloadingtime_pze	integer
Terminal.list	terminal.cyclicloadingtime	integer
Terminal.list	terminal.default_status.text	string
Terminal.list	terminal.default_status	string
Terminal.list	terminal.designation	string
Terminal.list	terminal.dhcp_dynamipaddress	boolean
Terminal.list	terminal.dialog.input_badge_number_mde_functions	boolean
Terminal.list	terminal.dialog.interrupt_reasons	boolean
Terminal.list	terminal.dialog.logon.check_machinestatus	boolean
Terminal.list	terminal.dialog.logon.check_ordertype	boolean
Terminal.list	terminal.dialog.logon.check_workplace	boolean
Terminal.list	terminal.dialog.operatorposition	boolean
Terminal.list	terminal.dialog.quantities.orderrelated	boolean
Terminal.list	terminal.dialog.query_logpersonsoff	boolean
Terminal.list	terminal.dialog.scrapquantities	boolean
Terminal.list	terminal.dialog.scrapreasons	boolean
Terminal.list	terminal.dialog.wagepremiumindicator	boolean
Terminal.list	terminal.dialog.yields	boolean
Terminal.list	terminal.display_date_of_latest_evaluation	boolean
Terminal.list	terminal.display_durationinfo	integer
Terminal.list	terminal.display_recent_clockingrecords	boolean
Terminal.list	terminal.execute_restart_ts	datetime
Terminal.list	terminal.execute_restart	boolean
Terminal.list	terminal.goingoffline_ts	datetime
Terminal.list	terminal.id	integer
Terminal.list	terminal.industrial_minutes_display	string
Terminal.list	terminal.informationdisplay.infofrom1	integer
Terminal.list	terminal.informationdisplay.infofrom2	integer
Terminal.list	terminal.informationdisplay.infofrom3	integer
Terminal.list	terminal.informationdisplay.infofrom4	integer
Terminal.list	terminal.informationdisplay.infofrom5	integer
Terminal.list	terminal.informationdisplay.infoto1	integer
Terminal.list	terminal.informationdisplay.infoto2	integer
Terminal.list	terminal.informationdisplay.infoto3	integer

ServiceName	Acronym	Web service type
Terminal.list	terminal.informationdisplay.infoto4	integer
Terminal.list	terminal.informationdisplay.infoto5	integer
Terminal.list	terminal.informationdisplay	string
Terminal.list	terminal.infile_download	boolean
Terminal.list	terminal.infile_upload	boolean
Terminal.list	terminal.input_badge_number_ade_functions	boolean
Terminal.list	terminal.ipaddress	string
Terminal.list	terminal.labelprinting	boolean
Terminal.list	terminal.language	string
Terminal.list	terminal.last_loading_of_program_ts	datetime
Terminal.list	terminal.last_reading_authorizations_ts	datetime
Terminal.list	terminal.last_restart_ts	datetime
Terminal.list	terminal.last_status_message_ts	datetime
Terminal.list	terminal.license_status	string
Terminal.list	terminal.location	string
Terminal.list	terminal.logging	string
Terminal.list	terminal.logon_user_with_order	string
Terminal.list	terminal.machine_coupling	string
Terminal.list	terminal.machineinterface_connection	string
Terminal.list	terminal.master_terminal_id	integer
Terminal.list	terminal.material_and_stockpostings	boolean
Terminal.list	terminal.mde_terminal	boolean
Terminal.list	terminal.message.text	string
Terminal.list	terminal.modified_by	string
Terminal.list	terminal.modified_ts	datetime
Terminal.list	terminal.network_port	integer
Terminal.list	terminal.number_of_local_datarecords	integer
Terminal.list	terminal.number_of_people_with_accessauthorization	integer
Terminal.list	terminal.number_of_subsystems_ok	integer
Terminal.list	terminal.number_of_subsystems	integer
Terminal.list	terminal.online	boolean
Terminal.list	terminal.ordersequencinglist	boolean
Terminal.list	terminal.programmversion	string
Terminal.list	terminal.program	string
Terminal.list	terminal.pze.textkey1	string
Terminal.list	terminal.pze.textkey2	string
Terminal.list	terminal.pze.textkey3	string
Terminal.list	terminal.pze.textkey4	string
Terminal.list	terminal.pze_operation_mode	string
Terminal.list	terminal.pze_terminal	boolean
Terminal.list	terminal.pzezks_terminal	boolean

ServiceName	Acronym	Web service type
Terminal.list	terminal.quantities.personrelated	boolean
Terminal.list	terminal.quantities_via_lan	boolean
Terminal.list	terminal.reader_number	integer
Terminal.list	terminal.relaytime	integer
Terminal.list	terminal.reloadprogram	boolean
Terminal.list	terminal.remotemaintenance.activate	boolean
Terminal.list	terminal.remotemaintenance.status	string
Terminal.list	terminal.remotemaintenance.type	string
Terminal.list	terminal.reread_authorizations	boolean
Terminal.list	terminal.returntime	integer
Terminal.list	terminal.shiftmodel	integer
Terminal.list	terminal.status.color	integer
Terminal.list	terminal.status.led	string
Terminal.list	terminal.status	string
Terminal.list	terminal.stop_at_end_of_shift	boolean
Terminal.list	terminal.symbolic_machine_display	string
Terminal.list	terminal.systemnumber	string
Terminal.list	terminal.terminal_company	string
Terminal.list	terminal.terminalnumber_ipaddress_conflict	boolean
Terminal.list	terminal.ticketprint_for_batchentry	boolean
Terminal.list	terminal.timezone	string
Terminal.list	terminal.type.description	string
Terminal.list	terminal.type	integer
Terminal.list	terminal.upload_diagnosisfiles	boolean
Terminal.list	terminal.waitingperiod_staff_logon	integer
Terminal.list	terminal.zks_terminal	boolean

Data of the object *access points*

Web service: AccessStatus.list

ServiceName	Acronym	Web service type
AccessStatus.list	accessstatus.access_attempts	integer
AccessStatus.list	accessstatus.access_status	string
AccessStatus.list	accessstatus.accessgroup.designation	string
AccessStatus.list	accessstatus.accessgroup.designation_short	string
AccessStatus.list	accessstatus.accessgroup.id	integer
AccessStatus.list	accessstatus.accessgroup.location	string
AccessStatus.list	accessstatus.accesspoint.designation	string
AccessStatus.list	accessstatus.accesspoint.designation_short	string
AccessStatus.list	accessstatus.accesspoint.id	integer

ServiceName	Acronym	Web service type
AccessStatus.list	accessstatus.accesspoint.offline_component	boolean
AccessStatus.list	accessstatus.accesspoint.reader_number	integer
AccessStatus.list	accessstatus.accesspoint.responsibilityarea	string
AccessStatus.list	accessstatus.accesspoint.terminal.designation	string
AccessStatus.list	accessstatus.accesspoint.terminal.id	integer
AccessStatus.list	accessstatus.accesspoint.type	string
AccessStatus.list	accessstatus.active_alert	boolean
AccessStatus.list	accessstatus.admissible_accesses	integer
AccessStatus.list	accessstatus.alarms	integer
AccessStatus.list	accessstatus.authorizations_date	datetime
AccessStatus.list	accessstatus.authorizations_time	integer
AccessStatus.list	accessstatus.authorized_people	integer
AccessStatus.list	accessstatus.badge_status	string
AccessStatus.list	accessstatus.batterie_status	string
AccessStatus.list	accessstatus.begin_date	datetime
AccessStatus.list	accessstatus.begin_time	integer
AccessStatus.list	accessstatus.disturbances	integer
AccessStatus.list	accessstatus.duration	integer
AccessStatus.list	accessstatus.end_date	datetime
AccessStatus.list	accessstatus.end_time	integer
AccessStatus.list	accessstatus.log_date	datetime
AccessStatus.list	accessstatus.log_time	integer
AccessStatus.list	accessstatus.modified_date	datetime
AccessStatus.list	accessstatus.modified_time	integer
AccessStatus.list	accessstatus.permitted_accesses	integer
AccessStatus.list	accessstatus.program_version	string
AccessStatus.list	accessstatus.status.color	integer
AccessStatus.list	accessstatus.synchronize_date	datetime
AccessStatus.list	accessstatus.synchronize_time	integer
AccessStatus.list	accessstatus.synchronized_people	integer

Data of the object *access group*

Web service: AccessGroups.list

ServiceName	Acronym	Web service type
AccessGroups.list	accessgroup.counter.error	integer
AccessGroups.list	accessgroup.counter.error.signed	integer
AccessGroups.list	accessgroup.counter.ok	integer
AccessGroups.list	accessgroup.designation	string
AccessGroups.list	accessgroup.designation_short	string

ServiceName	Acronym	Web service type
AccessGroups.list	accessgroup.id	integer
AccessGroups.list	accessgroup.location	string
AccessGroups.list	accessgroup.modified_by	string
AccessGroups.list	accessgroup.modified_ts	datetime
AccessGroups.list	accessgroup.responsibilityarea	string
AccessGroups.list	accessgroup.status.color	integer

Data of the object *key performance indicators*

Web service: Keyfigure.listWorkplaceCurrentShift

ServiceName	Acronym	Web service type
Keyfigure.listWorkplaceCurrentShift	checkresponsibilityarea	Boolean
Keyfigure.listWorkplaceCurrentShift	keyfigure.color	Integer
Keyfigure.listWorkplaceCurrentShift	keyfigure.id	String
Keyfigure.listWorkplaceCurrentShift	keyfigure.language_key	String
Keyfigure.listWorkplaceCurrentShift	keyfigure.lower_action_limit	decimal
Keyfigure.listWorkplaceCurrentShift	keyfigure.lower_tolerance_limit	decimal
Keyfigure.listWorkplaceCurrentShift	keyfigure.shift.begin	Datetime
Keyfigure.listWorkplaceCurrentShift	keyfigure.shift.date	Datetime
Keyfigure.listWorkplaceCurrentShift	keyfigure.shift.end	Datetime
Keyfigure.listWorkplaceCurrentShift	keyfigure.shift.number	Integer
Keyfigure.listWorkplaceCurrentShift	keyfigure.target_value	Decimal
Keyfigure.listWorkplaceCurrentShift	keyfigure.upper_action_limit	Decimal
Keyfigure.listWorkplaceCurrentShift	keyfigure.upper_tolerance_limit	Decimal
Keyfigure.listWorkplaceCurrentShift	keyfigure.value	Decimal
Keyfigure.listWorkplaceCurrentShift	resource.designation	String
Keyfigure.listWorkplaceCurrentShift	resource.id	String
Keyfigure.listWorkplaceCurrentShift	resource.short_name	String

Data of the object *operations logged on*

Web service: BOOperation.listCurrentlyLoggedOn

ServiceName	Acronym	Web service type
BOOperation.listCurrentlyLoggedOn	bookingrelation.workplace	String
BOOperation.listCurrentlyLoggedOn	order.id	String
BOOperation.listCurrentlyLoggedOn	operation.id	String
BOOperation.listCurrentlyLoggedOn	operation.article	String
BOOperation.listCurrentlyLoggedOn	operation.plan.yield.primary	Decimal

ServiceName	Acronym	Web service type
BOOperation.listCurrentlyLoggedOn	operation.act.yield.primary	Decimal
BOOperation.listCurrentlyLoggedOn	operation.act.scrap.primary	Decimal

3 Deployment of Layouts of the Shop Floor Monitor

Usage

If layouts are created for the Shop Floor Monitor (MDE-SFM), they may also be transferred to other systems.

Prerequisites

These requirements have to be met:

- The layouts have to be created in the Shop Floor Monitor. It is impossible to transfer layouts from a machinery used with HYDRA 7 or run based on java applets. (Previous version MPARK)
- The used templates and objects, such as workplaces have to be available in the target system.
- The target system has to match the technical status of the source system.
- The target system must not include layouts with the same name.

Procedure

Please proceed as follows to deploy layouts:

- Copy the required layouts (*.zip directories) from the source server to the target system (target server) in the same folder structure:
`<Server>\<HYDRA directory>\<system number>\custom\mpark`
The ZIP files stored here are filed with their unambiguous, technical name. This name can be shown in the list of layouts of the Shop Floor Monitor application.
- The table `hyd_parklayout` can be unloaded and transferred with the following restrictions:

```
xunload to hyd_parklayout.unl  
select * from hyd_parklayout where typ = 'N'
```

Please note: The restriction "type = N" only exports layouts that were created in the Shop Floor Monitor.