

# Manual

## E-Report Manager Installation+Update SIS-ERM 4.0<sub>pe</sub>

Version 1.3

Last changed on: 01.07.2019

## **Copyright**

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of Oracle Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

# Contents

|       |                                                                |    |
|-------|----------------------------------------------------------------|----|
| 1     | First installation .....                                       | 4  |
| 1.1   | Requirements.....                                              | 4  |
| 1.2   | Definition of terms .....                                      | 4  |
| 1.3   | Installing a HYDRA update.....                                 | 4  |
| 1.4   | Running database patch on the HYDRA server.....                | 5  |
| 1.5   | Configurations on the MOC .....                                | 5  |
| 1.6   | Installation on the E-Report Server.....                       | 7  |
| 1.6.1 | Overview .....                                                 | 7  |
| 1.6.2 | Installing program files.....                                  | 7  |
| 1.6.3 | Configuration of the Print Server service .....                | 7  |
| 1.6.4 | Customizations in MOC applications .....                       | 9  |
| 1.6.5 | Configuring List & Label for the Print Server service.....     | 9  |
| 1.6.6 | Printer configuration for the Print Server service.....        | 10 |
| 1.6.7 | HTTPS / Basic Authentication .....                             | 10 |
| 1.6.8 | Installation of the Print Server service .....                 | 19 |
| 1.6.9 | Troubleshooting.....                                           | 20 |
| 1.7   | Checking the application on the MOC and setting up test.....   | 21 |
| 2     | Update.....                                                    | 22 |
| 2.1   | Installing an update .....                                     | 22 |
| 2.2   | Updating the Print Server service on the e-report server ..... | 22 |

## 1 First installation



This section describes how to install the E-Report Manager (first installation). If the E-Report Manager has already been installed and you only want to update the installation, go on with section "2 Update".

### 1.1 Requirements

- HYDRA system as of service pack 12 for HYDRA 8.
- In case of a first installation: Installed ScriptAddOn for service pack 12 for HYDRA 8.
- For communication via HTTPS: service pack 15 (end 2019)

### 1.2 Definition of terms

#### **E-Report Management**

##### **E-Report Manager**

Global term for everything associated with e-reporting: e-report server, the Print Server service, the MOC application *Configuration E-Report Manager*, ...

##### **E-Report Server**

Host where the Print Server service is installed.

##### **Configuration E-Report Manager**

Name of the MOC application to configure reports for the E-Report Management.

##### **Print Server service**

Windows service that receives the orders to create, print and send reports.

##### **Mpdv Print Service**

Name of the Print Server service in the Windows application "Services".

##### **MpdvPrintServer.exe**

Name of the program file of the Print Server service

### 1.3 Installing a HYDRA update

If your HYDRA system does not yet include service pack 12, you must first install service pack 12. To identify the current system version including service pack information, go to the file "sp.txt" in the HYDRA directory of the HYDRA server.

If you install the e-report manager for the first time and the ScriptAddOn of service pack version 12 is missing, you must first install the ScriptAddOn of service pack 12. To identify the current version of the ScriptAddOn in your system, go to the file "sp.addOn" in the HYDRA directory of the HYDRA server.

If you want to configure and use the communication via https, you require HYDRA version MW 3.x with service pack 15 or HYDRA version MW 4.0pe. Service pack 15 is probably available by the end of 2019. If you want to use the communication via HTTPS with MW3.x before service pack 15 is available, you require a personalized update. Contact MPDV, if required.

## 1.4 Running database patch on the HYDRA server

In case of a first installation, you must extend the HYDRA database. Run a database patch to do so. This patch additionally provides specific initial data for the configuration of the e-report management.

### Windows:

Start the MS-DOS prompt on the HYDRA server from the "HYDRA Administration" directory for the instance currently processed on the desktop.

Run the following command in the command line:

```
hydscr db_sql/dbp_ereportmanager.hsc > dbp_ereportmanager.pro
```

**Linux:** Connect to the HYDRA server via telnet connection and start hysys.scr -1 (environment for instance 1).

Run the following command in the command line:

```
hydscr.out db_sql/dbp_ereportmanager.hsc > dbp_ereportmanager.pro
```

### Windows and Linux:

Check the output of the patch in the file dbp\_ereportmanager.pro. No errors or warnings may occur.

## 1.5 Configurations on the MOC

### Checking path configuration

The patch creates two paths that are derived from the path MOCREP. Check in the MOC application *Paths*, if the paths have been created automatically and if the URL path is reasonable.

#### 1. PSLLXML

This path includes the parameter configuration, e.g. the files including the parameter values (selection panel) of the reports.

The name PSLLXML is fixed.

Example:       d:\hydra\1\custom\eReporting

## 2. PSREPORT

This path is required to save the report output files. The path is assigned in a field of each data record in the e-report configuration. You are free to select any path name, but we recommend to use PSREPORT.

Example: d:\hydra\1\custom\eReporting

## 3. MOCREP

This path includes the report files. Usually, the path is preconfigured in the HYDRA system.

Example: d:\hydra\1\custom\reports



The server/computer including the installation of the Print Server service must be authorized to access the configured file path. Also the user using the Print Server service must be authorized to access the paths.

Example:

| Paths                                      |          |           |      |                               |        |                                   |             |                    |  |
|--------------------------------------------|----------|-----------|------|-------------------------------|--------|-----------------------------------|-------------|--------------------|--|
| Drag a column here to group by that column |          |           |      |                               |        |                                   |             |                    |  |
| Path                                       | Protocol | Host      | Port | URL path                      | User   | Description                       | Modified by | Changed on         |  |
| PSLLXML                                    | file     | localhost | 0    | f:\hydra3\3\custom\eReporting | hydadm | eReport application configurat... | PATCH       | 17.10.2017 00:0... |  |
| PSREPORT                                   | file     | localhost | 0    | f:\hydra3\3\custom\eReporting | hydadm | eReport export target             | PATCH       | 17.10.2017 00:0... |  |

If the patch could not create the two paths, you must create the paths on the MOC.

## Configuration escalation management

The patch creates the event *ESK.MESSAGE* in the *Escalation configuration*, if not yet available. To send reports per mail, you may configure the event only once.

Check in the escalation configuration if the event *ESK.MESSAGE* has been created properly.

The configuration of the recipient type/recipient has the role of a dummy in this escalation configuration. The recipient is configured in the *Configuration of the e-report manager*.

The following values for the event *ESK.MESSAGE* must be entered in the *Escalation configuration*:

| Tab          | Field                  | Contents           |
|--------------|------------------------|--------------------|
| Event        | Event                  | <i>ESK.MESSAGE</i> |
| Event        | Active                 | <Activated>        |
| Message      | Subject                | %ESK.MSGSUBJ%      |
| Message      | Text                   | %ESK.MSGTXT%       |
| Notification | Condition 1 / Operator | to                 |
| Notification | Condition 1 / Type     | E-mail             |



You must properly activate the escalation management in the HYDRA basic settings. To do so, define an e-mail server (SMTP server) and a sender for the e-mails.

## INI configuration URL of the E-Report Server

Store the address of the e-report server on the MOC in an *INI configuration*. If required, you must first create an *INI configuration* and then an *INI data configuration*:

|          |                                                                                                                    |
|----------|--------------------------------------------------------------------------------------------------------------------|
| Name:    | PRINTSERVER                                                                                                        |
| Section: | E-REPORTING                                                                                                        |
| Key:     | SERVERURL                                                                                                          |
| Value:   | The address where the e-report server is available,<br>incl. protocol and port, e.g. <i>http://testserver:9017</i> |

You can also select a deviating port, see also section "1.6.3 Configuration of the Print Server service", property "ServiceUri".

## 1.6 Installation on the E-Report Server

### 1.6.1 Overview

On the e-report server, a service is installed that gets the orders to create, print and send reports. The service is called "Print Server service".

The e-report server can be identical to the HYDRA server if it is a Windows server.

### 1.6.2 Installing program files

Unpack the zip file MpdvPrintServer.zip (<HYDRA>\products\leReporting\MpdvPrintServer.zip) in a folder with write permission, e.g. C:\ProgramData\mpdv\MpdvPrintServer

### 1.6.3 Configuration of the Print Server service

You must modify the paths in the MpdvPrintServer\bin\Release\MpdvPrintServer.exe.config. Set the following parameters in the node <appSettings> of the XML file:

| KEY        | VALUE (example)                     | Description                                            |
|------------|-------------------------------------|--------------------------------------------------------|
| PathConfig | C:\ProgramData\mpdv\MpdvPrintServer | Specifies where the Print Server service is installed. |

|                                |                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------|-------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PathLog                        | C:\ProgramData\mpdv\MpdvPrintServer\bin\Log                       | Specifies where the log files of the Print Server service are stored.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| HydraSys                       | http://myServer.myDomain.local or https://myServer.myDomain.local | Address of the WSP on the HYDRA server<br>If the communication is made via HTTPS, then the entry must start with "https".<br>Note: To use https, you require further configurations.<br>Use the "fully qualified domain name" because an HTTPS communication is not possible without.                                                                                                                                                                                                                                                                                         |
| HydraPort                      | 8080                                                              | Port of the WSP on the HYDRA server                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| HydraUsr                       | eRepServer                                                        | HYDRA user (create a separate HYDRA user for the Print Server service)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| HydraPsw                       | 4711                                                              | Password of the HYDRA user (create a separate user for the Print Server service)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| HydraPswCryp                   | Rbsb43QpvCAcKnGc5TEFTg==                                          | Optional encrypted password of the HYDRA user (create a separate user for the Print Server service) (as of SP15). To encrypt the password, you can use the tool MpdvHyToolDbPassGen described below. As of SP15, the Print Server service encrypts the password on start from the setting HydraPsw to the setting HydraPswCryp.                                                                                                                                                                                                                                               |
| ServiceUri                     | http://127.0.0.1:9017/ or https://127.0.0.1:9017/                 | Address where the service is locally available.<br>The IP address 127.0.0.1 is for "localhost" and should not be changed.<br><br>If the communication is made via HTTPS, then the entry must start with "https".<br>Note: To use https, you require further configurations.<br><br>The number after the colon specifies the port used for the Print Server service. If required, you can change the port, e.g. if the port is used by another service. Note: If you change the port, you must also change the port in other places, e.g. in the INI configuration on the MOC. |
| LoginClient                    | 1                                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Culture                        | de-DE                                                             | Standard language of the Print Server service                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| LogLevel                       | Off                                                               | Important to Support: "Trace"                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| LogCombit                      | false                                                             | Set to true to activate the logging of the List&Label component.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| SecondsBetweenUpdatingTaskList | 1680                                                              | 1680 = 28 min<br>Specifies the update intervals of the Print Server service's TaskList.<br>(Because the WSP is usually configured with a timeout of 30 minutes, the recommended interval for the KEY SecondsBetweenUpdatingTaskList is 28 min. If the interval is larger, the Print Server service might have to log in anew. However, the new login is not a problem).                                                                                                                                                                                                       |



|                     |       |                                                                       |
|---------------------|-------|-----------------------------------------------------------------------|
| DefaultSettingScope | Local | Scope to process customizations ("standard" may only be used by MPDV) |
|---------------------|-------|-----------------------------------------------------------------------|

## 1.6.4 Customizations in MOC applications

You must manually copy customizations of MOC applications from an existing MOC installation and store the customizations in an installation folder of the Print Server service. (valid as of version 2.2.x.x of the Print Server service)

Copying customizations of the custom scope:

| Source on the MOC                    | Storage location on the e-report server (example) |
|--------------------------------------|---------------------------------------------------|
| c:\Program Files\MPDV\MOC\           | c:\ProgramData\mpdv\MpdvPrintServer\              |
| custom\plugins\*.*                   | resources\custom\plugins                          |
| custom\conf\MOC\Apps\*.*             | resources\custom\conf\Apps                        |
| custom\resources\data\Properties\*.* | resources\custom\data\properties                  |
| custom\resources\data\Services\*.*   | resources\custom\data\services                    |
| custom\resources\languages\*.*       | resources\custom\languages                        |

Copying customizations of the local scope:

| Source on the MOC                   | Storage location on the e-report server (example) |
|-------------------------------------|---------------------------------------------------|
| c:\Program Files\MPDV\MOC\          | c:\ProgramData\mpdv\MpdvPrintServer\              |
| local\plugins\*.*                   | resources\local\plugins                           |
| local\conf\MOC\Apps\*.*             | resources\local\conf\Apps                         |
| local\resources\data\Properties\*.* | resources\local\data\properties                   |
| local\resources\data\Services\*.*   | resources\local\data\services                     |
| local\resources\languages\*.*       | resources\local\languages                         |

## 1.6.5 Configuring List & Label for the Print Server service

If you want to use List & Label to print reports, you must modify the configuration (MpdvPrintServer.exe.config) with respect to the operating system.

- For x64 (default): x86 is commented out

```
<!-- Run x64: -->
<probing privatePath="vendor/LL20/x64;" />
<!-- Run x86: -->
<!-- <probing privatePath="vendor/LL20;" /> -->
```

- For x86 (default): x64 is commented out

```
<!-- Run x64: -->
<!-- <probing privatePath="vendor/LL20/x64;" /> -->
<!-- Run x86: -->
<probing privatePath="vendor/LL20;" />
```

## 1.6.6 Printer configuration for the Print Server service

To enable List & Label to print reports, you must install and activate at least one printer on the computer where the Print Server service is installed.

The printer settings then apply for printing.

If no "real" printer is installed, the XPS printer can also be used as default printer.

## 1.6.7 HTTPS / Basic Authentication

Overview of the communication as of SP 15 (beforehand the MOC directly communicates with the Print Server service):

MOC <-----> WSP <-----> Print Server service

You can secure the communication between Print Server service and WSP:

- The communication between WSP and Print Server service is protected via Basic Authentication.
- The communication between WSP and Print Server service can optionally be made via HTTPS in encrypted form.

Availability:

- Basic Authentication
- Communication via HTTPS



Both features are available as of HYDRA version MW 3.x with service pack 15 or HYDRA version MW 4.0pe. Service pack 15 is probably available by the end of 2019. If you want to use one of the two features with MW 3.x before service pack 15 is available, you require a personalized update. Contact MPDV, if required.

Also at a later point in time, you can still activate or deactivate the communication via HTTPS.



You can also change user and password for Basic Authentication at a later point in time. In both cases, you must restart the WSP and the Print Server service after having changed the configurations.

## User and password for Basic Authentication

The WebServiceProvider WSP uses a default user with a default password to access the Print Server service. If no specific user and password is configured, the WSP and the Print Server service use the following default values:

Default user: MPDVPrintService

Default password: Mosbach74821

You can change user and password. Change the configuration for the WSP and the Print Server service:

- 1) For the WSP in the **global** configuration file config.properties  
(Example: \\MyServer\HYDRA\JHydraDir\MOC\config.properties)

Note:

Do **not** use the configuration file in the sub folder with the instance number!

```
printservice.user=MPDVPrintService
```

```
printservice.user.password=oYOudOFYxRGjbcCI5vWDhg==
```

- 2) For the Print Server service in the configuration file  
(Example MpdvPrintServer\bin\Release\MpdvPrintServer.exe.config)

```
<add key="WsplInterfaceUsr" value="MPDVPrintService"/>
```


```
<add key="WsplInterfacePwdCryp" value="oYOudOFYxRGjbcCI5vWDhg==" />
```

The passwords are saved in encrypted form.

The following tool is available to encrypt user and password:

admtools/java\_db\_passwd/MpdvHyToolDbPassGen.jar

There are two ways to start the program. Under Windows or another operating system that provides a Windows Manager, double-click the tool to start the GUI of the tool. Enter the user name and the password and click the button *Encrypt password*. The encrypted password can then be copied from the text field *Crypted password*.

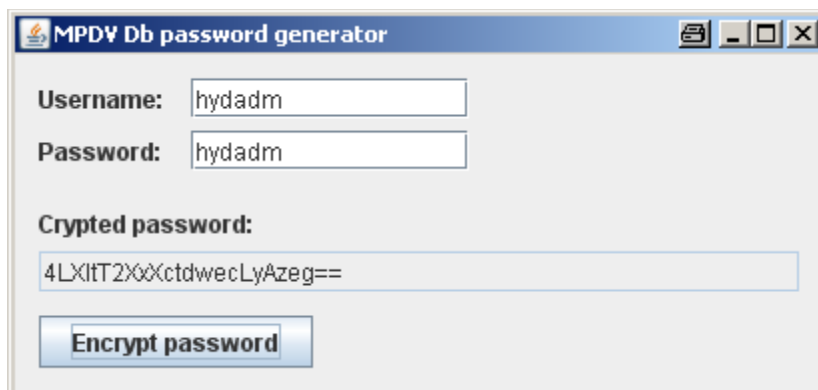

The second option to encrypt a password is to use the command line mode. Open a Shell prompt and change to the following directory:

<HYDRA Dir>/admtools/java\_db\_passwd

Use the command below to create an encrypted password:

```
java -jar MpdvHyToolDbPassGen.jar -u USERNAME -p PASSWORD
```

## Automatic encryption of passwords

You can also enter the passwords in the configuration file of the Print Server service without encryption. On start of the Print Server service, the passwords are automatically encrypted. Also with existing installations, the passwords in the configuration file are automatically encrypted on start of the current version of the Print Server service.

The following passwords in the configuration file MpdvPrintServer.exe.config in section "appSettings" are automatically encrypted. The setting with the non-encrypted password is set to empty:

- **HydraPsw** is encrypted and converted to **HydraPswCryp** (for the user in setting **HydraUsr**)
- **WsplInterfacePwd** is encrypted and converted to **WsplInterfacePwdCryp** (for the user in setting **WsplInterfaceUsr**)

On saving the encrypted passwords, the section "appSettings" in the configuration file is automatically rewritten. The setting sequence and the comments are lost in this process.



You can still view the original sequence and the comments in the file MpdvPrintServer.exe.config.initial. The file MpdvPrintServer.exe.config.initial is the sample file delivered with the software.

The Print Server service can only enter the automatically encrypted passwords in the configuration file, if the user who is running the service, has write access to the file MpdvPrintServer.exe.config! If this is not the case, the service stops after the start and shows an error message.



The log then includes the following message:

```
22708|2019-03-26 14:37:35.5627|WARN||String|HandlePwdEncryption. EXCEPTION
:System.UnauthorizedAccessException The access to the path
"C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\MpdvPrintServer.exe.Config"
has been denied. Void WinIOError(Int32, System.String)
```

## HTTPS: General



You can only use the communication via the encrypted protocol HTTPS if this communication is activated for the WSP and for the Print Server service.



If the Print Server service and the WSP are installed on the same server, it is not useful to use the encrypted protocol HTTPS for the communication between Print Server and WSP. The encryption via HTTPS has a slight negative effect on the performance.

## HTTPS: Activation for the WSP

To activate the communication via HTTPS from the WSP to the Print Server service, you use the INI configuration "PRINTSERVER / E-REPORTING / SERVERURL". If the URL starts with "https" in this configuration, the communication is made via HTTPS.

If you want to use HTTPS, the public root certificate of the **E-Report Server** (RootCA) must be available in the Java TrustStore.

If the Print Server service is installed on the HYDRA server, you can use the certificate of the HYDRA server for this purpose. But you must also import this certificate to the TrustStore in any case.

How to do this is described in the installation instruction of the system for the WSP.

## HTTPS: Activation for the Print Server service

Make the following settings in the configuration file MpdvPrintServer.exe.config:

1. For the protocol of the ServiceUri, enter "https". Use the "fully qualified domain name" because an HTTPS communication is not possible without:



```
<add key="HydraSys" value="https://myServer.myDomain.local"/>
```

2. For the protocol of the ServiceUri, enter "https":

```
<add key="ServiceUri" value="https://127.0.0.1:9018"/>
```

For the port of the ServiceUri, you must provide a certificate that is issued for the server of the Print Server service.

If you double-click the certificate (for example: myServer.pfx), a wizard automatically opens for the import of the certificate:

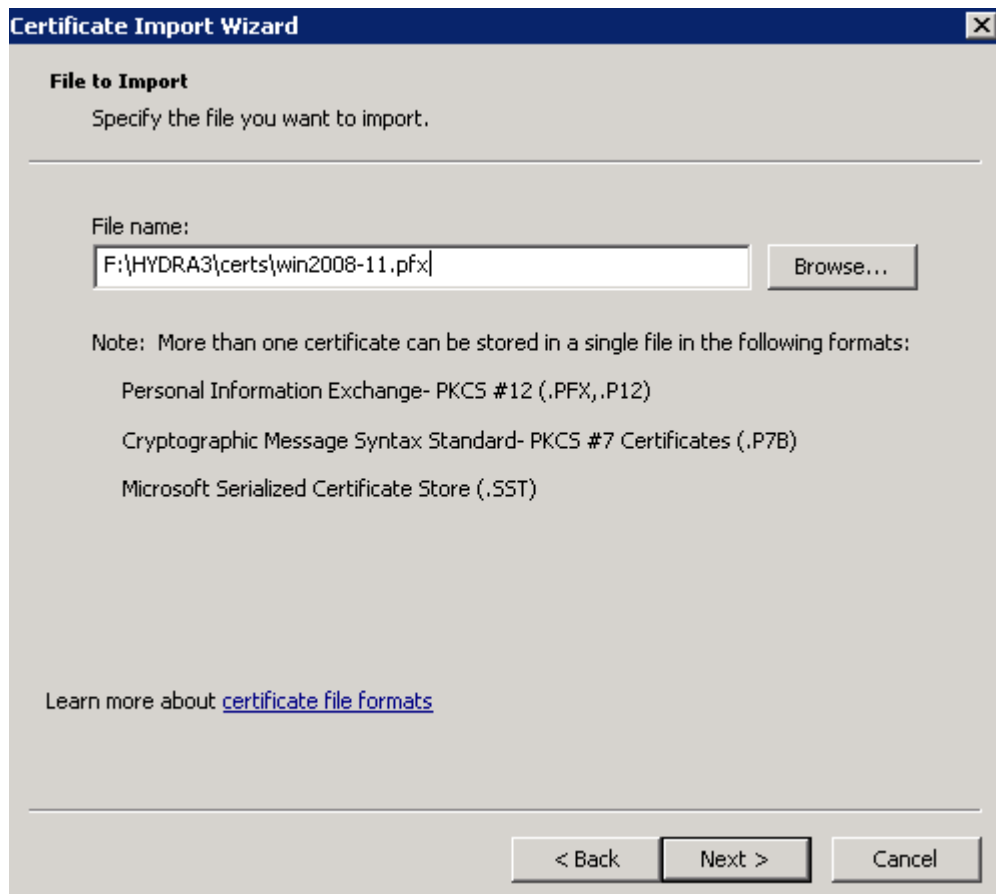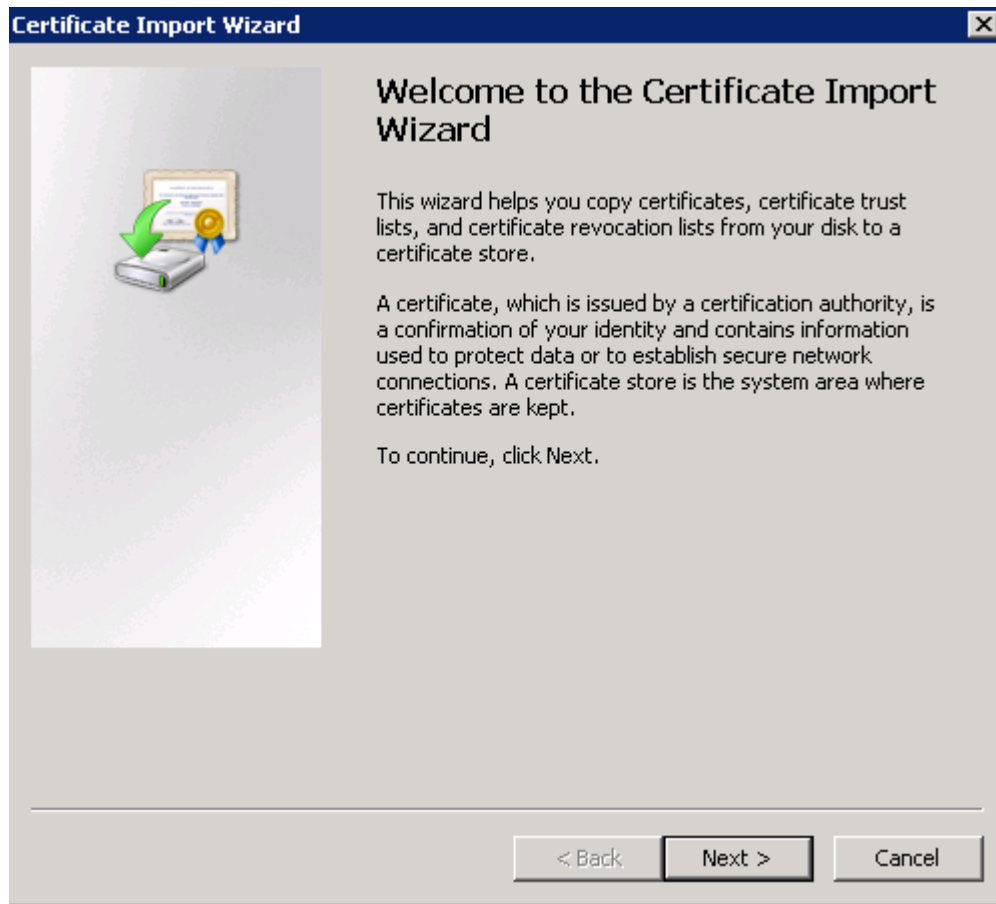

**Certificate Import Wizard**

**Password**

To maintain security, the private key was protected with a password.

---

Type the password for the private key.

Password:

.....

☐ Enable strong private key protection. You will be prompted every time the private key is used by an application if you enable this option.

☐ Mark this key as exportable. This will allow you to back up or transport your keys at a later time.

☒ Include all extended properties.

Learn more about [protecting private keys](#)

---

< Back    Next >    Cancel

**Certificate Import Wizard**

**Certificate Store**

Certificate stores are system areas where certificates are kept.

---

Windows can automatically select a certificate store, or you can specify a location for the certificate.

☐ Automatically select the certificate store based on the type of certificate

☒ Place all certificates in the following store


Certificate store:

Personal    Browse...

Learn more about [certificate stores](#)


---

< Back    Next >    Cancel

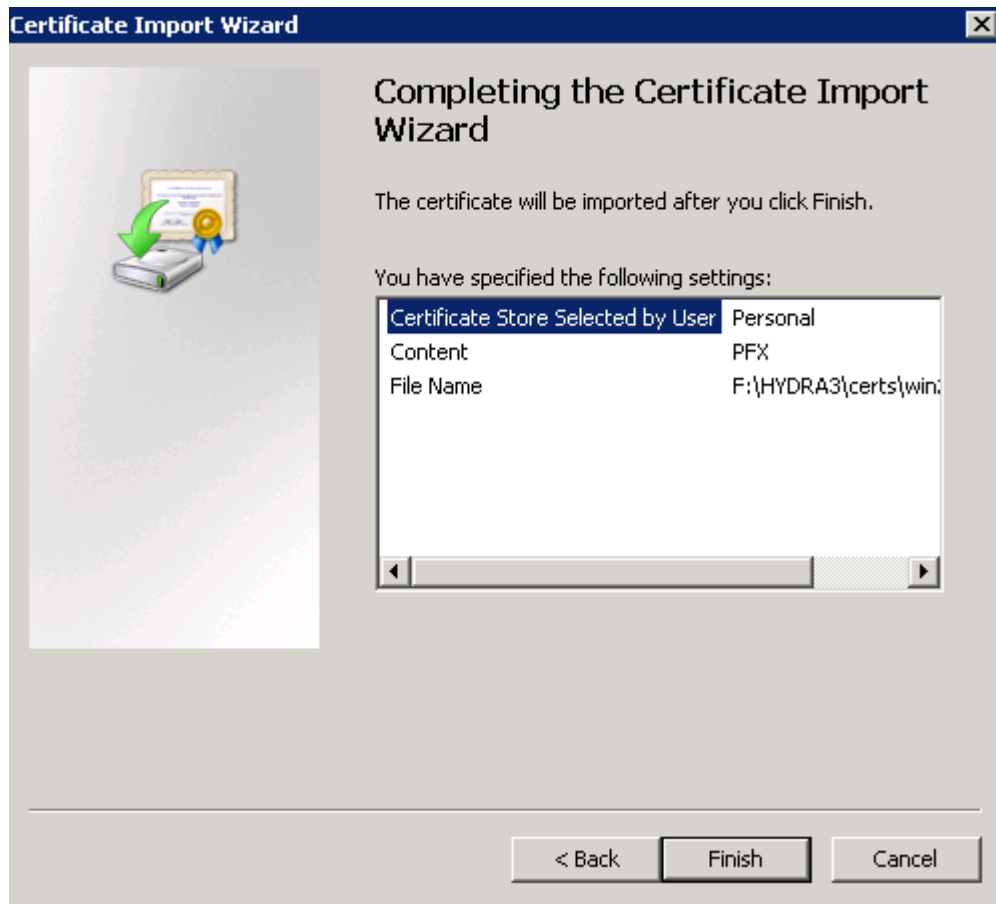


The certificate is now available in the Microsoft Management Console (MMC) (<https://docs.microsoft.com/en-us/dotnet/framework/wcf/feature-details/how-to-view-certificates-with-the-mmc-snap-in>):



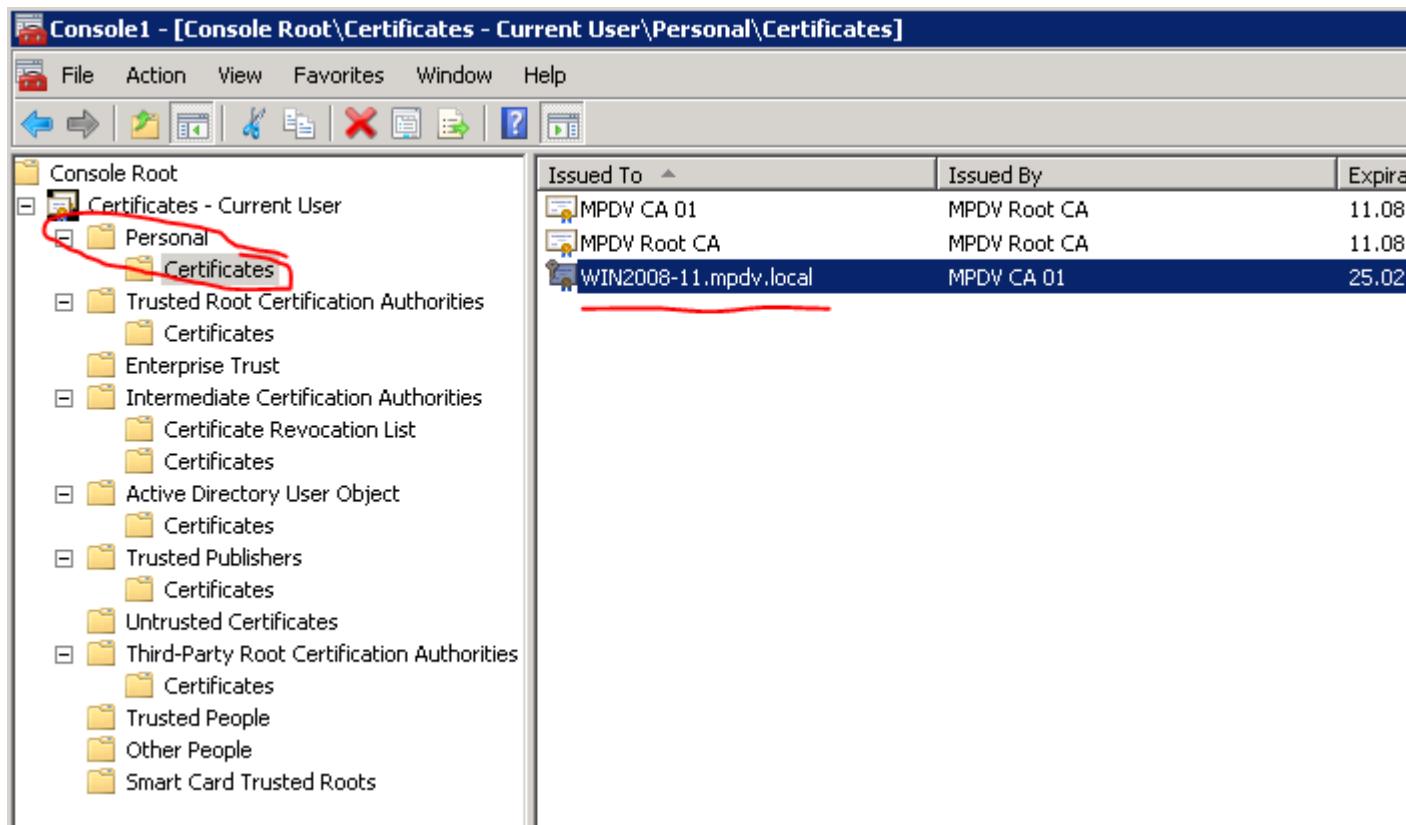

Double-click the certificate to identify the certificate's thumbprint:

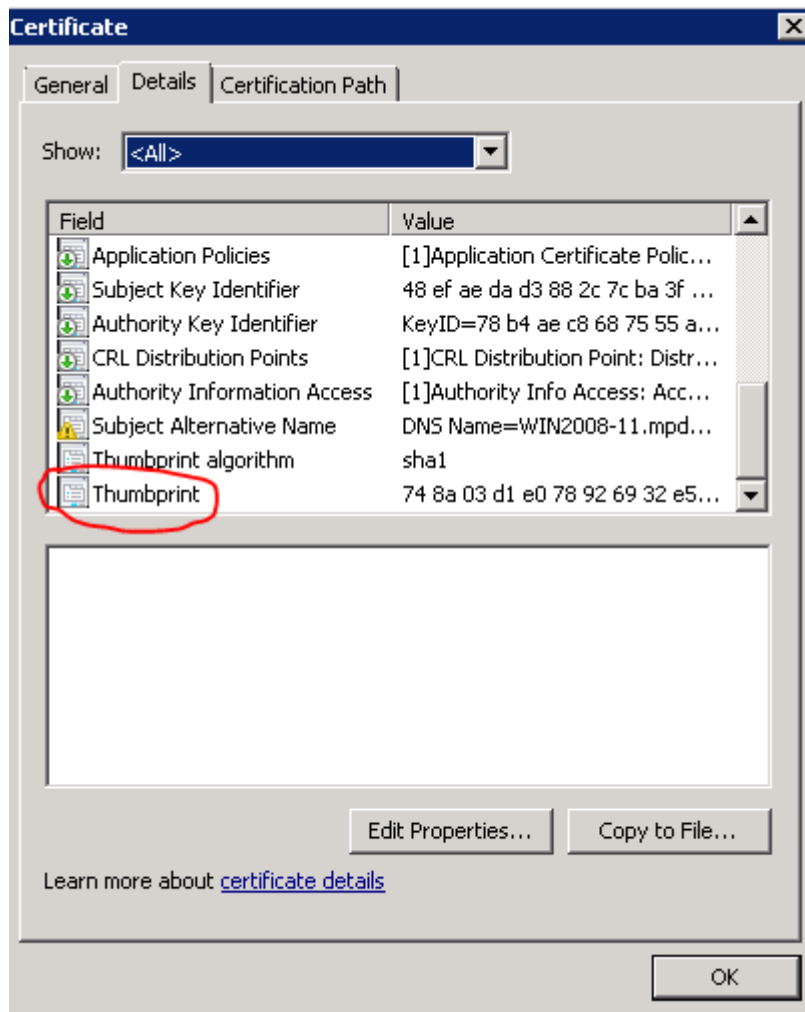

Using this information, the port configuration of the Windows system can be changed. Open a Windows command line as admin (!). Run the following command to release the port:

```
netsh http add urlacl url=https://+:9018/ user="NT AUTHORITY\NETWORKSERVICE"
```


Run the following command to bind the certificate to the port (all in one row):

```
netsh http add sslcert ipport=0.0.0.0:9018  
certhash=748a03d1e078926932e53b3343076d43a9335381 appid={00112233-4455-6677-1111-  
AABBCCDDEEFF}
```

Here, "certhash" is the thumbprint of the certificate.

"appid" is a GUID that can be freely assigned. It can be used to identify the possessing application. (<https://docs.microsoft.com/en-us/dotnet/framework/wcf/feature-details/how-to-configure-a-port-with-an-ssl-certificate> )

The MPDV Print Service is now available via HTTPS:

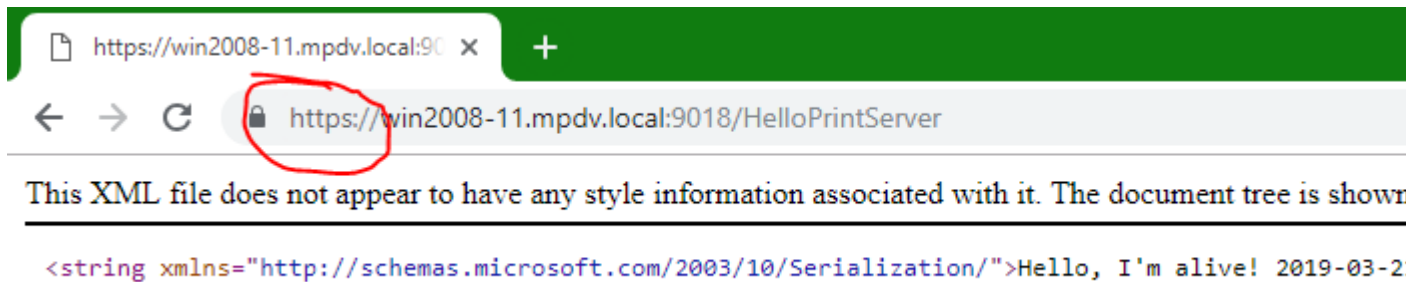

Here, it is important to use the "fully qualified domain name" (for example: win2008-11.mpdv.local)

## 1.6.8 Installation of the Print Server service

You must install the Print Server service in the Windows services. You require the Microsoft Net Framework 4.5 for the operation of the Print Server service.

Sample installation:

In the command line, change to the directory where the file mpdvPrintServer.exe is:

```
C:
cd C:\ProgramData\mpdv\MpdvPrintServer\bin\Release
```

Install the service using the utility program of the .NET Framework:

```
C:\WINDOWS\Microsoft.NET\Framework\v4.0.30319\InstallUtil.exe mpdvPrintServer.exe
```

The service requires access to installed printers. The service must also have write access to its configuration file to be able to automatically encrypt passwords. You must therefore assign a Windows user with the relevant authorizations to the service. If the service is installed on the HYDRA server, this can be the user hydadm, for example. Which user is suitable depends on the authorization concept used in your server environment.

Assign a Windows user with the required authorizations to the service: (*Services* → right-click *Mpdv Print Service* → *Properties* → tab *Log on*).

After the installation, you must start the service *Mpdv Print Service* manually.


MPDV recommends to set the start type of the *Mpdv Print Service* to "automatic" (go to: *Services* → right-click *Mpdv Print Service* → *Properties* → tab *General* → *Start type*).

## 1.6.9 Troubleshooting

### Checking service and printer availability

To use a printer, ensure that the Windows user configured for the service can access a printer and has the required authorizations.

Example:

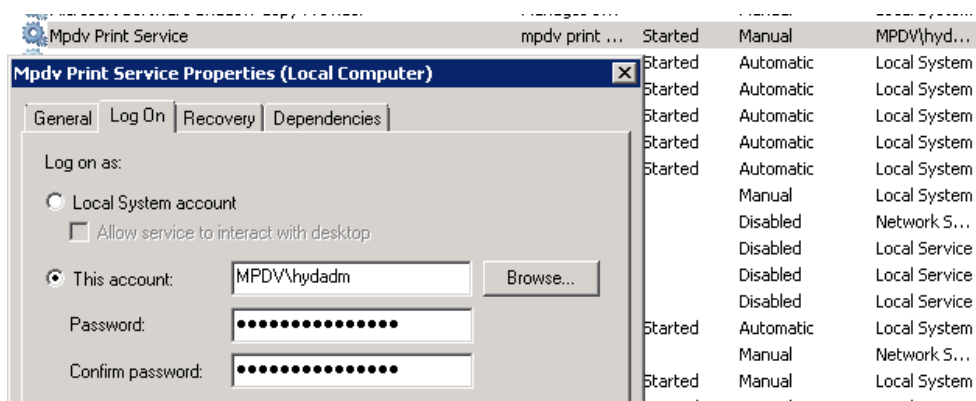

Using the web address of the e-report server, you can query the status of the Print Server service:

- a. Is the service running?

Example:

<http://testserver:9017/HelloPrintServer>

Answer:

```
<string xmlns="http://schemas.microsoft.com/2003/10/Serialization/">Hello, I'm alive! 2017-02-09T14:39:47</string>
```

- b. Which printers are available for the Print Server service?

Example:

<http://testserver:9017/Printers>

Answer:

```
<ArrayOfstring xmlns="http://schemas.microsoft.com/2003/10/Serialization/Arrays" xmlns:i="http://www.w3.org/2001/XMLSchema-instance">
  <string>Microsoft XPS Document Writer</string>
  <string>CANON-MOS-BA3-40G Farbe</string>
</ArrayOfstring>
```

If the configured web address of the e-report server does not work, you may have to activate the port.

Example:

```
netsh http add urlacl url=http://+:9017/ user="NT AUTHORITY\NETWORKSERVICE"
```

## Log file of the Print Server service

If problems occur, you can check the log file in the directory of the Print Server service (a respective log level is of advantage).

The log file path is included in the configuration file `MpdvPrintServer.exe.config` of the Print Server service. It is set in setting "PathLog". (e.g. "C:\ProgramData\mpdv\MpdvPrintServer\bin\Log")

## The Print Server service does not start

Check the log file. Possible reasons:

### No write access to configuration file

The Print Server service can only enter the automatically encrypted passwords in the configuration file, if the user who is running the service, has write access to the file `MpdvPrintServer.exe.config`! If this is not the case, the service stops after the start and shows an error message.

The log then includes the following message:

```
22708|2019-03-26 14:37:35.5627|WARN||String|HandlePwdEncryption. EXCEPTION
:System.UnauthorizedAccessException The access to the path
"C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\MpdvPrintServer.exe.Config"
has been denied. Void WinIOError(Int32, System.String)
```

Assign a suitable Windows user to the Print Server service "Mpdv Print Service": *Services* → right-click *Mpdv Print Service* → *Properties* → tab *Log on*).

## 1.7 Checking the application on the MOC and setting up test

Call the application *Configuration E-Report manager* via the transaction code "rbbj" or the menu.

System administration / System settings / Configuration E-Report manager

The report is tested by the Print Server service on the server.

You can define a printer in the E-Report configuration. The Print Server service must be able to address this printer as described above. The report test includes tests of printing and e-mail dispatch, if printing or e-mail dispatch have been configured in the e-report configuration. During the test, the report files are loaded from the server.

## 2 Update

### 2.1 Installing an update

Updates of the SIS-ERM installation are necessary, if you receive a service pack or a separate update for the e-report manager of MPDV.


Before you perform the steps listed below, you must have installed the update or the service pack. If the installation instructions or the separate update already include the steps to update the e-report manager, you need not perform the steps that follow.

### 2.2 Updating the Print Server service on the e-report server

You require the Microsoft Net Framework 4.5 for the operation of the Print Server service.

Perform the following steps on the server where the Print Server service is running:

1. Close the service "Mpdv Print Service".

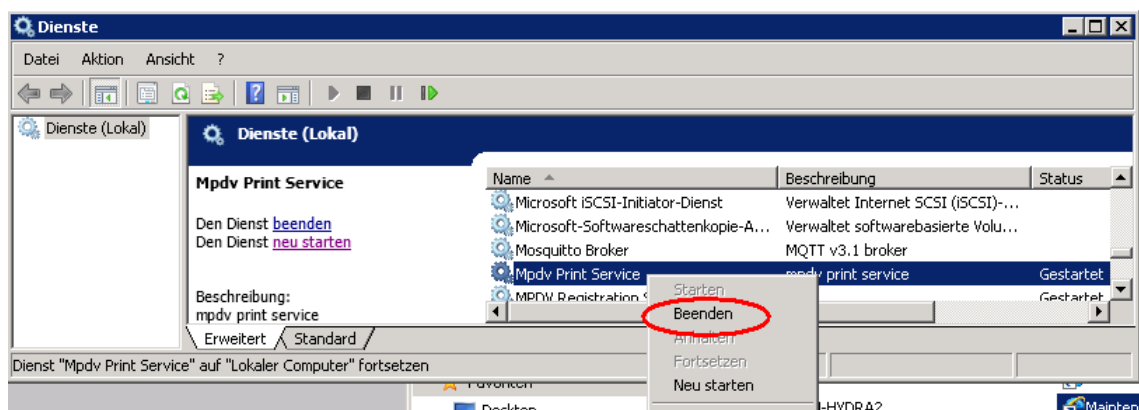

Check the start type and the Windows user defined for the service in the *Properties* of the service (right-click *Mpdv Print Service* → *Properties* → tab *Start type* and tab *Log on*). Remember or note down the two settings because you must restore the settings after the reinstallation of the service.

2. Uninstall the service "Mpdv Print Service".


Open a command line window.

In the command line, navigate to the directory `mpdvPrintServer.exe`.

(e.g.: `cd C:\ProgramData\mpdv\MpdvPrintServer\bin\Release`)

In the directory of the file `mpdvPrintServer.exe`, enter the following command in the command line to uninstall the service:

```
C:\WINDOWS\Microsoft.NET\Framework\v4.0.30319\InstallUtil.exe /u
mpdvPrintServer.exe
```

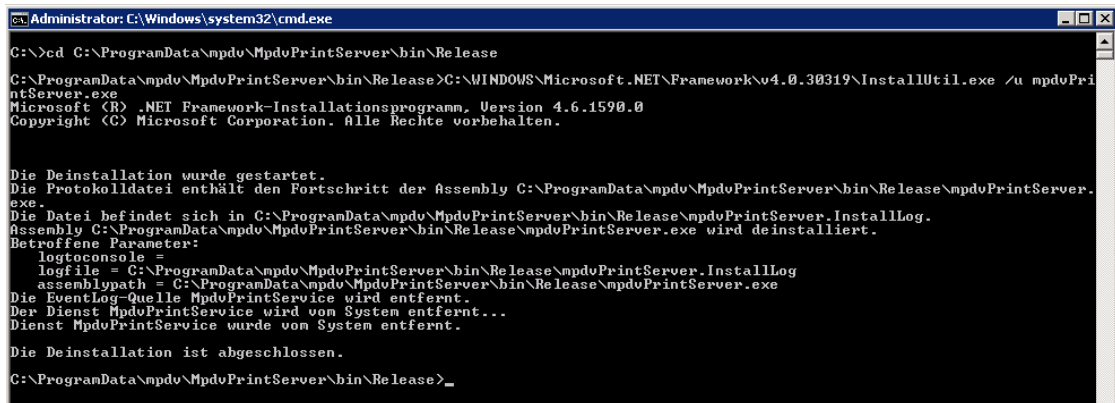

```
Administrator: C:\Windows\system32\cmd.exe

C:\>cd C:\ProgramData\mpdv\MpdvPrintServer\bin\Release
C:\ProgramData\mpdv\MpdvPrintServer\bin\Release>C:\WINDOWS\Microsoft.NET\Framework\v4.0.30319\InstallUtil.exe /u mpdvPri
ntServer.exe
Microsoft (R) .NET Framework-Installationsprogramm, Version 4.6.1590.0
Copyright (C) Microsoft Corporation. Alle Rechte vorbehalten.

Die Deinstallation wurde gestartet.
Die Protokolldatei enthält den Fortschritt der Assembly C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\mpdvPrintServer.
exe.
Die Datei befindet sich in C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\mpdvPrintServer.InstallLog.
Assembly C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\mpdvPrintServer.exe wird deinstalliert.
Betroffene Parameter:
logfile = C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\mpdvPrintServer.InstallLog
assemblypath = C:\ProgramData\mpdv\MpdvPrintServer\bin\Release\mpdvPrintServer.exe
Die EventLog-Quelle MpdvPrintService wird entfernt.
Der Dienst MpdvPrintService wird vom System entfernt...
Dienst MpdvPrintService wurde von System entfernt.

Die Deinstallation ist abgeschlossen.
C:\ProgramData\mpdv\MpdvPrintServer\bin\Release>
```

(Leave the command line window open. You will need it later on.)

3. Create a directory for a backup copy of the original directory.  
e.g. MpdvPrintServer\_save  
Do not rename the original directory to keep the Windows authorizations untouched.  
Copy the contents of the original directory into the backup directory.
4. Empty the original directory MpdvPrintServer.
5. Unpack the zip file: MpdvPrintServer.zip (<HYDRA>\products\leReporting\MpdvPrintServer.zip)  
to the empty MpdvPrintServer directory.
6. Restore your configuration by comparing the new  
MpdvPrintServer\bin\Release\MpdvPrintServer.exe.config to your old  
MpdvPrintServer\_save\bin\Release\MpdvPrintServer.exe.config.  
If you have customizations for CUSTOM or LOCAL, also restore these customizations.
7. Reinstall the service "Mpdv Print Service".  
If required, use the command line to navigate to the directory mpdvPrintServer.exe.  
(e.g.: cd C:\ProgramData\mpdv\MpdvPrintServer\bin\Release)

In the directory of the file mpdvPrintServer.exe, enter the following command in the command line  
to reinstall the service:

```
C:\WINDOWS\Microsoft.NET\Framework\v4.0.30319\InstallUtil.exe
mpdvPrintServer.exe
```

Restore the start type and the Windows user defined for the service in the *Properties* of the service  
(right-click *Mpdv Print Service* → *Properties* → tab *Start type* and tab *Log on*).

8. Restart the service "Mpdv Print Service".