

Manual

MES Weaver
SIS-MWV 4.0_{pe}

Version 1.6.23347

Last changed on: 01.07.2019

Copyright

©Copyright 2019 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	MES Weaver 4.0 _{pe} - Overview	40
2	MES Weaver 4.0 _{pe} - Technical Overview	42
3	Maintenance Manager 2.0	48
3.1	Purpose.....	48
3.2	Login	48
3.3	Configuration.....	49
3.4	Package Deployment	53
3.4.1	General	53
3.4.2	Internal Package Types.....	53
3.4.3	Deployment	54
3.4.4	Finishing an update	56
3.4.5	Automatic installation of updates	57
3.5	Deployment.....	58
3.5.1	Administration of update packages.....	58
3.5.2	Creating update packages.....	61
3.5.3	Activating the software status	61
3.6	Other functions.....	63
3.6.1	Request version of the Java components	63
3.6.2	Request version of the client components	64
3.6.3	Administration.....	64
4	Multilingual Database Contents	67
5	Password of the HYDRA Database	82
6	Time-Controlled Host Interfacing	88
7	MLE Communication.....	105
8	Logical Systems	113
9	Distribution Model	116

10 Status Monitor MLE Communication.....	119
11 Inbound Transactions.....	122
12 Outbound Transactions.....	127
13 MLE Archiving	132
14 Parallel Dispatchers in Inbound Processing	134
15 Log book	139
16 Checks for Business Parameter Containers (BSCs)	142
17 Errorcodes and Returncodes	145
17.1 Overview	145
17.1.1 Errorcode 10: Order not available.....	145
17.1.2 Errorcode 11: Order number ■■.. not allowed.....	145
17.1.3 Errorcode 20: Order is already running.....	145
17.1.4 Errorcode 30: Order has been finished.....	146
17.1.5 Errorcode 31: Order has been interrupted	146
17.1.6 Errorcode 32: Invalid OP status change	147
17.1.7 Errorcode 40: 1 order can only be logged on to mach.	147
17.1.8 Errorcode 41: 1 order can only be logged on to stat.	147
17.1.9 Errorcode 42: Opt. finish oper. when target qua. reach.....	148
17.1.10 Errorcode 50: Order status is not available	148
17.1.11 Errorcode 51: Old order - logon not possible	148
17.1.12 Errorcode 52: Order header status not available	149
17.1.13 Errorcode 60: OP cannot be logged on several times.....	149
17.1.14 Errorcode 70: Order is already running on this mach.....	149
17.1.15 Errorcode 73: The operation is still blocked by MLE	150
17.1.16 Errorcode 74: OP is deleted logically	150
17.1.17 Errorcode 75: Order cannot be recorded	150
17.1.18 Errorcode 76: Order is blocked.....	150
17.1.19 Errorcode 77: Order cannot be logged on.....	151
17.1.20 Errorcode 78: OP cannot be logged on.....	151
17.1.21 Errorcode 79: Invalid order status.....	152

17.1.22 Errorcode 80: Invalid OP status	153
17.1.23 Errorcode 81: The status cannot be assigned manually	153
17.1.24 Errorcode 82: Status change not allowed	153
17.1.25 Errorcode 83: Status not allowed for this order type	154
17.1.26 Errorcode 84: Invalid machine status.....	154
17.1.27 Errorcode 85: The operation is still blocked	154
17.1.28 Errorcode 86: Target quantity change not allowed.....	155
17.1.29 Errorcode 87: The OP is prepared.....	155
17.1.30 Errorcode 89: The OP is not active	155
17.1.31 Errorcode 90: Machine ■■■■■■■■ not available	156
17.1.32 Errorcode 91: Machine is no machining center	156
17.1.33 Errorcode 94: Machine group ■■■■■■■■ not available	156
17.1.34 Errorcode 95: Posting outside synchronization!	157
17.1.35 Errorcode 100: It's not possible to logon to this mach.	157
17.1.36 Errorcode 101: No data available!	157
17.1.37 Errorcode 102: Unknown dialog ■■■■■■■■■■■■■■■■■■■■	158
17.1.38 Errorcode 103: Unknown event ■■■■■ ■■■■■■■■■■■■■■■■■■■■	158
17.1.39 Errorcode 104: Unknown command	158
17.1.40 Errorcode 105: Parameters are missing	158
17.1.41 Errorcode 106: Invalid date ■■■■■■■■■■	159
17.1.42 Errorcode 107: Incorrect order type	159
17.1.43 Errorcode 108: Material staging!.....	159
17.1.44 Errorcode 109: Logon/off of OP has alr. been confirmed	160
17.1.45 Errorcode 110: Invalid time stamp ■■■■■■■■	160
17.1.46 Errorcode 111: Area functions are not active	160
17.1.47 Errorcode 112: Logon not intended at this workplace.	161
17.1.48 Errorcode 113: Logon n. possible at this mach./category	161
17.1.49 Errorcode 114: No premium group assigned	162
17.1.50 Errorcode 115: Invalid premium group.....	162
17.1.51 Errorcode 116: Another premium group already assigned	162
17.1.52 Errorcode 117: Status production is not available	163
17.1.53 Errorcode 118: The machine is blocked.....	163
17.1.54 Errorcode 119: Overlap quantity exceeded.....	163
17.1.55 Errorcode 130: Invalid serial number ■■■■■■■■■■■■■■■■■■■■	164
17.1.56 Errorcode 131: Serial number ■■■■■■■■■■■■■■■■■■■■ assigned	164
17.1.57 Errorcode 132: Predecessor send-ahead qty. n.y. reached	164

17.1.58 Errorcode 134: Too many lines; therefore only one item.....	165
17.1.59 Errorcode 144: No data have been changed!	165
17.1.60 Errorcode 145: Process offline	165
17.1.61 Errorcode 146: Communication with client not possible.....	166
17.1.62 Errorcode 150: No valid INI configuration	166
17.1.63 Errorcode 400: Same user no. as ■■■■■■■■■■■■■■■■■■■■■■	166
17.1.64 Errorcode 410: Error when opening/writing the file.	167
17.1.65 Errorcode 411: Status text is not available.....	167
17.1.66 Errorcode 412: Can only be set man.if prod_kenn empty	167
17.1.67 Errorcode 413: Production characteristic not distinct	167
17.1.68 Errorcode 414: Indicated group does not exist.....	168
17.1.69 Errorcode 415: RESTYP does not fit in single type grp.....	168
17.1.70 Errorcode 416: Function group is not available	168
17.1.71 Errorcode 417: Event that is not defined.....	169
17.1.72 Errorcode 418: Please enter message.....	169
17.1.73 Errorcode 419: Please read message at first.....	169
17.1.74 Errorcode 420: Wrong or missing recipient type	169
17.1.75 Errorcode 421: Please enter solution.....	170
17.1.76 Errorcode 422: Communication error with escalation man.....	170
17.1.77 Errorcode 424: Error in User-Bapi (see protocol).....	170
17.1.78 Errorcode 425: Responsibility profile not available	170
17.1.79 Errorcode 426: Group still in use (group assignment)	171
17.1.80 Errorcode 427: Function profile is not available	171
17.1.81 Errorcode 428: Message is already closed	171
17.1.82 Errorcode 429: Circular reference detected	172
17.1.83 Errorcode 430: Function requires development license	172
17.1.84 Errorcode 431: DEF/0: Requires development license	172
17.1.85 Errorcode 432: Data requires development license	173
17.1.86 Errorcode 500: Order is not logged on.....	173
17.1.87 Errorcode 501: The container does not belong to order	173
17.1.88 Errorcode 502: Wrong sequence of containers.....	174
17.1.89 Errorcode 503: Log container on only to 1st OP	174
17.1.90 Errorcode 504: Container still active on preceding OP.....	174
17.1.91 Errorcode 505: The 1st OP has not yet been finished.....	175
17.1.92 Errorcode 510: Person is not authorized!.....	175
17.1.93 Errorcode 520: Creating not allowed	175

17.1.94	Errorcode 522: Station-related logons/offers not allowed	176
17.1.95	Errorcode 523: Station is already occupied	176
17.1.96	Errorcode 524: OP must not be deleted.....	176
17.1.97	Errorcode 526: Order has not been confirmed.....	177
17.1.98	Errorcode 600: Invalid mode ■■ of plausibility check	177
17.1.99	Errorcode 601: There are no events for the plaus. check.....	177
17.1.100	Errorcode 602: Invalid date/time [■■■■■■■■■■■■■■■■■■■■] in event [■■■■■■■■■■]	177
17.1.101	Errorcode 603: Unknown event [■■■■■■■■■■] in plaus. check 178	178
17.1.102	Errorcode 604: Database error when creating a temporary table 178	178
17.1.103	Errorcode 605: The logoff of person ■■■■■■■■■■ is missing at machine ■■■■■■■■■■	178
17.1.104	Errorcode 606: The logoff of OP ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■	178
17.1.105	Errorcode 607: The logoff of batch ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■	179
17.1.106	Errorcode 608: The logoff of input batch ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■	179
17.1.107	Errorcode 609: The logoff of output batch ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■	179
17.1.108	Errorcode 610: Invalid event [■■■■■■■■■■] in the data maintenance.....	180
17.1.109	Errorcode 611: Confirmations active-recalculation blocked at the moment!	180
17.1.110	Errorcode 612: Cost center is invalid	180
17.1.111	Errorcode 613: Cost center is blocked	180
17.1.112	Errorcode 619: Pallet not available.	181
17.1.113	Errorcode 629: 20 OPs can only be logged on simultan.....	181
17.1.114	Errorcode 630: A negative consumption is not allowed.	181
17.1.115	Errorcode 700: Day model is not available.....	182
17.1.116	Errorcode 701: Day model already exists	182
17.1.117	Errorcode 702: Day model is used within year model	182
17.1.118	Errorcode 703: Day model is used today	182
17.1.119	Errorcode 704: Status is available in MDE protocol	183

17.1.120	Errorcode 705: Status is available in ADE protocol	183
17.1.121	Errorcode 706: Status is active at the machine	184
17.1.122	Errorcode 707: Machine has not been indicated	184
17.1.123	Errorcode 708: Machine status has not been indicated	184
17.1.124	Errorcode 709: Target machine has not been indicated	184
17.1.125	Errorcode 710: Target status has not been stated	185
17.1.126	Errorcode 711: Processing mode has not been stated	185
17.1.127	Errorcode 712: Processing mode is invalid	185
17.1.128	Errorcode 713: Machine status is not available	186
17.1.129	Errorcode 714: Machine status is already available	186
17.1.130	Errorcode 715: Production characteristic is missing	186
17.1.131	Errorcode 716: Product. character. already assigned	187
17.1.132	Errorcode 717: RPA is not available	187
17.1.133	Errorcode 718: Status text is not available	187
17.1.134	Errorcode 719: Disturbance class is not available	187
17.1.135	Errorcode 720: Machine is no line	188
17.1.136	Errorcode 721: Year model is assigned to a machine	188
17.1.137	Errorcode 722: Year model is assigned to a person	188
17.1.138	Errorcode 723: Year model has not been indicated	189
17.1.139	Errorcode 724: Year has not been stated	189
17.1.140	Errorcode 725: Target year model has not been stated	189
17.1.141	Errorcode 726: Target year has not been stated	190
17.1.142	Errorcode 727: Year model is not available	190
17.1.143	Errorcode 728: Year model already exists	190
17.1.144	Errorcode 729: Reference has not been stated	190
17.1.145	Errorcode 730: Date has not been stated	191
17.1.146	Errorcode 731: Holiday is not available	191
17.1.147	Errorcode 732: Holiday already exists	191
17.1.148	Errorcode 733: Status text is assigned to a machine	192
17.1.149	Errorcode 734: Status text no. has not been stated	192
17.1.150	Errorcode 735: Status text is not available	192
17.1.151	Errorcode 736: Status text already exists	193
17.1.152	Errorcode 737: Machine is available in MDE protocol	193
17.1.153	Errorcode 738: Machine is available in ADE protocol	193
17.1.154	Errorcode 739: Machine is available in LZV protocol	194
17.1.155	Errorcode 740: An OP is still logged on to machine	194

17.1.156	Errorcode 741: Person is still logged on to machine	194
17.1.157	Errorcode 742: Batch is still logged on to machine.....	195
17.1.158	Errorcode 743: The machine is assigned to a line.....	195
17.1.159	Errorcode 744: Machine is assigned to a terminal.....	195
17.1.160	Errorcode 745: Machine already exists	196
17.1.161	Errorcode 746: Terminal no. has not been stated	196
17.1.162	Errorcode 747: Position has not been stated	196
17.1.163	Errorcode 748: Disturbance class no. already exists.....	196
17.1.164	Errorcode 749: Disturbance class abbrev. alr. exists	197
17.1.165	Errorcode 750: Disturb. class is assigned to a status.....	197
17.1.166	Errorcode 751: Wage/premium indicator not available	197
17.1.167	Errorcode 752: Wage/premium indicator alr. available	198
17.1.168	Errorcode 753: Wage/premium indicat. has been recorded	198
17.1.169	Errorcode 754: Operator position not available	198
17.1.170	Errorcode 755: Operator position already available	199
17.1.171	Errorcode 756: Operator position has been recorded	199
17.1.172	Errorcode 757: Deviation reason not available.....	199
17.1.173	Errorcode 758: Deviation reason already available	200
17.1.174	Errorcode 759: Deviation reason has been recorded	200
17.1.175	Errorcode 760: Process parameter not available	200
17.1.176	Errorcode 761: Process parameter already available.....	201
17.1.177	Errorcode 762: Scrap reason not available	201
17.1.178	Errorcode 763: Scrap reasons are already available.....	201
17.1.179	Errorcode 764: Terminal is already available	201
17.1.180	Errorcode 765: Maintenance instruction not available	202
17.1.181	Errorcode 766: Maintenance instruct. is alr. available	202
17.1.182	Errorcode 767: Order no. has not been indicated.....	202
17.1.183	Errorcode 768: Tool family has not been indicated	202
17.1.184	Errorcode 769: Tool family is not available.....	203
17.1.185	Errorcode 770: Tool family is already available	203
17.1.186	Errorcode 771: Target tool family has not been stated.....	203
17.1.187	Errorcode 772: Tool reason no. has not been stated	203
17.1.188	Errorcode 773: Tool reason no. is not available	204
17.1.189	Errorcode 774: Tool reason no. is already available	204
17.1.190	Errorcode 775: Target tool reason no. not indicated	204
17.1.191	Errorcode 776: Tool no. has not been indicated.....	205

17.1.192	Errorcode 777: Target tool no. has not been indicated.....	205
17.1.193	Errorcode 778: Tool number is already available	205
17.1.194	Errorcode 779: Tool number is not available	206
17.1.195	Errorcode 780: Blocking reason/measure not available	206
17.1.196	Errorcode 783: Invalid status change	206
17.1.197	Errorcode 784: Day model is used within year model	206
17.1.198	Errorcode 785: Year model is assigned to a machine	207
17.1.199	Errorcode 786: Order no.corresponds to result.order no.	207
17.1.200	Errorcode 787: Max. no. of chainings reached.....	207
17.1.201	Errorcode 788: All orders have been commissioned	207
17.1.202	Errorcode 789: Invalid material	207
17.1.203	Errorcode 790: Chaining qty. greater than OP targ. qty.....	208
17.1.204	Errorcode 791: A running batch must not be changed	208
17.1.205	Errorcode 792: Event maintenance is blocked	208
17.1.206	Errorcode 793: Event maint. blocked due to recalculat.	208
17.1.207	Errorcode 794: Invalid machine for this action	209
17.1.208	Errorcode 795: Short-time dist. alr. assigned f. mach.....	209
17.1.209	Errorcode 796: Status is available in MDE protocol-LT	209
17.1.210	Errorcode 797: Confirmations are active at the moment	209
17.1.211	Errorcode 798: Posted time too small for reposting.....	210
17.1.212	Errorcode 799: Month-end closing has alr. been done	210
17.1.213	Errorcode 800: Order technically completed in SAP	210
17.1.214	Errorcode 801: Storage could not be requested.....	211
17.1.215	Errorcode 802: Status alr. assigned when shift free	211
17.1.216	Errorcode 803: Reposting leads to problem when compar.....	211
17.1.217	Errorcode 806: No appropriate U or E record available.....	211
17.1.218	Errorcode 808: MDE event not alterable as OP is running	212
17.1.219	Errorcode 809: Invalid superior status1 ID man. at TNR	212
17.1.220	Errorcode 810: Inv.super.stat.2-m.stat.n.avail.f.m.no.	212
17.1.221	Errorcode 811: Invalid superior status3-MST = ueb MST	213
17.1.222	Errorcode 812: Invalid superior satus4-reference chain	213
17.1.223	Errorcode 813: Ev. maint. blocked as lock deleted.....	213
17.1.224	Errorcode 814: Either yield or scrap.....	213
17.1.225	Errorcode 815: Logoff date/time already exists	214
17.1.226	Errorcode 816: Terminal has machines assigned	214
17.1.227	Errorcode 900: Unit is not available	214

17.1.228	Errorcode 901: Formula is not available.....	215
17.1.229	Errorcode 902: Formula still in tab. USRFFIELDDELEM	215
17.1.230	Errorcode 903: Formula still in tab. LSTCODES	215
17.1.231	Errorcode 904: Formula still in tab. EINHUMR	215
17.1.232	Errorcode 905: There is alr. standard sequence f.order	216
17.1.233	Errorcode 906: Standard sequence must not be delted	216
17.1.234	Errorcode 907: Act.can't be effect.after this seq.type	216
17.1.235	Errorcode 908: Waiting period charac. already assigned	217
17.1.236	Errorcode 909: Initial stat. has not been assigned yet.....	217
17.1.237	Errorcode 910: Category not correct.....	217
17.1.238	Errorcode 911: Processing code not available	217
17.1.239	Errorcode 912: Seq. change n. poss. due to ord. stat.	218
17.1.240	Errorcode 913: Seq. change only possible for alt. seq.	218
17.1.241	Errorcode 914: An OP of the sequence is alr. running	218
17.1.242	Errorcode 915: Branch OP is invalid	218
17.1.243	Errorcode 916: Return address is invalid	219
17.1.244	Errorcode 917: Location group from/to is invalid	219
17.1.245	Errorcode 918: Group is no capacity group.....	219
17.1.246	Errorcode 919: Sel. field type does not go with DB type.....	219
17.1.247	Errorcode 920: Error while init. planning component.....	220
17.1.248	Errorcode 921: ID is not in table USERFIELDDEF.....	220
17.1.249	Errorcode 922: Year model is still in transp. matrix	220
17.1.250	Errorcode 923: Cost center group <> cost center machine	221
17.1.251	Errorcode 924: Only one SI unit can be defined per type	221
17.1.252	Errorcode 925: Sequence not available	221
17.1.253	Errorcode 926: Sequence is still used by orders	221
17.1.254	Errorcode 927: Machine is in production.....	222
17.1.255	Errorcode 928: Machine is in production lock.....	222
17.1.256	Errorcode 929: An alternative sequence is alr. active	222
17.1.257	Errorcode 930: maximum number of counter is exceeded	223
17.1.258	Errorcode 931: allocation with same type not possible.....	223
17.1.259	Errorcode 932: Unknown list command	223
17.1.260	Errorcode 933: status text cannot be deleted.....	223
17.1.261	Errorcode 934: hierarchical status cannot be assigned.....	223
17.1.262	Errorcode 935: counter configuration not supported	224
17.1.263	Errorcode 936: Overlapping shifts.....	224

17.1.264	Errorcode 937: Overlapping breaks	224
17.1.265	Errorcode 938: Status must be config. -OP logged on-	225
17.1.266	Errorcode 939: MDE event for Shiftend not alterable	225
17.1.267	Errorcode 940: User name for single sign-on missing	225
17.1.268	Errorcode 941: Status is not valid (RESTYP/RES).....	226
17.1.269	Errorcode 942: Status is not valid (RESTYP/RESFAM)	226
17.1.270	Errorcode 943: Status is not available (RESTYP)	226
17.1.271	Errorcode 944: Status is not active	226
17.1.272	Errorcode 945: Status is already active.....	227
17.1.273	Errorcode 946: counter configuration not available	227
17.1.274	Errorcode 947: Machine/line group assignment exists	227
17.1.275	Errorcode 948: Copy mach/line grp. ass. MOD=Z not allow....	228
17.1.276	Errorcode 949: Error in Configuration: PZE controls BDE	228
17.1.277	Errorcode 950: Dissolving of campaign not possible	228
17.1.278	Errorcode 1000: Person must not log on operation	229
17.1.279	Errorcode 951: Machine/capacity group assignment exists.....	229
17.1.280	Errorcode 1010: Person must not log off operation	229
17.1.281	Errorcode 1019: P.must not log on sever.times in advance	230
17.1.282	Errorcode 1020: Person must not log on several times	230
17.1.283	Errorcode 1021: Person may only log on to OP ■■■.....	230
17.1.284	Errorcode 1022: Person must not report quantity to OP.....	231
17.1.285	Errorcode 1023: Person must not interrupt OP	231
17.1.286	Errorcode 1030: Person not available	231
17.1.287	Errorcode 1031: Person has already left the company.....	232
17.1.288	Errorcode 1032: Person is blocked	232
17.1.289	Errorcode 1033: Person has not yet joined the company.....	232
17.1.290	Errorcode 1040: No order is running on machine.....	233
17.1.291	Errorcode 1050: Person has already logged on	233
17.1.292	Errorcode 1060: Person is not logged on.....	233
17.1.293	Errorcode 1061: Nobody is logged on to machine.....	234
17.1.294	Errorcode 1070: Changing not possible	234
17.1.295	Errorcode 1090: Person must not change disturbance	234
17.1.296	Errorcode 1100: Person is already logged on to order	235
17.1.297	Errorcode 1101: Person is already logged on in advance	235
17.1.298	Errorcode 1102: It is not allowed logging off last pers.	235
17.1.299	Errorcode 1110: Person is not logged on to order	236

17.1.300	Errorcode 1114: Person must not log off all persons.....	236
17.1.301	Errorcode 1120: OP must not be finished	236
17.1.302	Errorcode 1122: Time stamp for logging on is invalid.....	237
17.1.303	Errorcode 1123: Period has alr. been posted for person	237
17.1.304	Errorcode 1124: Period has alr. been posted to for OP	237
17.1.305	Errorcode 1154: Standard time ■■■■ not defined	238
17.1.306	Errorcode 1158: Target quantity not reached/exceeded.....	238
17.1.307	Errorcode 1159: Inadmissible cost center	238
17.1.308	Errorcode 1160: Scrap quantity exceeds batch quantity	239
17.1.309	Errorcode 1163: Quantity not reached/exceeded	239
17.1.310	Errorcode 1230: Operations are still logged on	239
17.1.311	Errorcode 1240: Warning - overproduction OP!	239
17.1.312	Errorcode 1241: Logon not allowed overprod. of packages	240
17.1.313	Errorcode 1242: Warning - overproduction machine!	240
17.1.314	Errorcode 1243: Warning - overproduction Person!	241
17.1.315	Errorcode 1244: Posting not allowed: overproduction OP	241
17.1.316	Errorcode 1245: Below target quantity	241
17.1.317	Errorcode 1246: Target quantity exceeded	242
17.1.318	Errorcode 1247: Posting not allowed: underproduction OP	242
17.1.319	Errorcode 1248: Warning - underproduction machine!	242
17.1.320	Errorcode 1249: Warning - underproduction person!	243
17.1.321	Errorcode 1250: Warning - underproduction OP	243
17.1.322	Errorcode 1251: Logon not allowed underprod. of packages.....	244
17.1.323	Errorcode 1252: Target output not reached	244
17.1.324	Errorcode 1253: Target output exceeded.....	244
17.1.325	Errorcode 1260: Orig.OP of a split OP can't be logged on	245
17.1.326	Errorcode 1270: Ind.OP of collect.OP can't be logged on	245
17.1.327	Errorcode 1280: Operation is already available	245
17.1.328	Errorcode 1290: OP cannot be created.....	246
17.1.329	Errorcode 1295: EQPOOL/father object not available	246
17.1.330	Errorcode 1296: Object already exists	246
17.1.331	Errorcode 1297: Object not available	246
17.1.332	Errorcode 1300: An individual OP is still logged on.....	247
17.1.333	Errorcode 1310: A collective OP is still logged on.....	247
17.1.334	Errorcode 1320: Max. number of persons is logged on.....	247

17.1.335	Errorcode 1330: Clocking-in of person is missing	248
17.1.336	Errorcode 1340: No collective OP has been logged on.....	248
17.1.337	Errorcode 1350: COP cannot be interrupted as ind. OP.....	248
17.1.338	Errorcode 1360: Partial confirmat. not possible for COP	249
17.1.339	Errorcode 1370: OP has been logged on as COP.....	249
17.1.340	Errorcode 1380: Shop papers not printed	249
17.1.341	Errorcode 1390: Min. setup time has not been reached.....	250
17.1.342	Errorcode 1400: Invalid scrap reason	250
17.1.343	Errorcode 1401: Invalid deviation reason.....	250
17.1.344	Errorcode 1410: Person may only log on COP to 1 machine.....	251
17.1.345	Errorcode 1420: OP has alr. been logged on as Individ.OP	251
17.1.346	Errorcode 1430: Person logged on to individual OP.....	251
17.1.347	Errorcode 1440: Person logged on to collective OP	252
17.1.348	Errorcode 1450: Collective OP not allowed.....	252
17.1.349	Errorcode 1451: Collective OP not allowed without ref.....	253
17.1.350	Errorcode 1460: Collective OP has already been logged on ...	253
17.1.351	Errorcode 1472: Collect. OP n.possible at machin. center	253
17.1.352	Errorcode 1473: Collect. OP is logged on at other machin.....	253
17.1.353	Errorcode 1480: An indiv. OP has already been logged on.....	254
17.1.354	Errorcode 1490: An OC order has already been logged on.....	254
17.1.355	Errorcode 1491: A collective OP has alr. been logged on	255
17.1.356	Errorcode 1492: Not possible - OP has been logged on	255
17.1.357	Errorcode 1493: Not possible-OP does not have type GKM ...	255
17.1.358	Errorcode 1494: Not possible-OP does not have type GKP	256
17.1.359	Errorcode 1520: N.poss. to log pers. on/off to GWP/OCOP	256
17.1.360	Errorcode 1530: It's required to enter badge no. at GWP.....	256
17.1.361	Errorcode 1540: No status change possible at GWP	257
17.1.362	Errorcode 1541: Status not allowed for active OP.....	257
17.1.363	Errorcode 1542: Status only allowed for active OP	257
17.1.364	Errorcode 1543: Status n. allowed for type of active OP	258
17.1.365	Errorcode 1560: Logging off operation is not allowed	258
17.1.366	Errorcode 1561: Interrupting OP not allowed	258
17.1.367	Errorcode 1581: No person logged on with operator pos.1	259
17.1.368	Errorcode 1582: Allow. no. of pers.reached f. oper.pos	259
17.1.369	Errorcode 1585: The event has already been logged on.....	259

[illegible]

17.1.437	Errorcode 1676: Max. ■■ M/WP c.be.assign. to this term.	281
17.1.438	Errorcode 1677: Only aggr.,ma.,res.can be assigned to li.	282
17.1.439	Errorcode 1678: Max. ■■ aggr.c.be assigned to this line	282
17.1.440	Errorcode 1679: Assign.of aggr.to term.not deletable	282
17.1.441	Errorcode 1680: Invalid terminal number	282
17.1.442	Errorcode 1681: Only mach. with year model c.be assigned...	283
17.1.443	Errorcode 1682: Assignment not available	283
17.1.444	Errorcode 1683: Term.type can't be assigned to term. no.	283
17.1.445	Errorcode 1684: Machine is assigned to MDE terminal ■■■ ...	283
17.1.446	Errorcode 1685: Assignment cannot be deleted	284
17.1.447	Errorcode 1686: Terminal group is not available	284
17.1.448	Errorcode 1687: Access profile is not available	284
17.1.449	Errorcode 1688: ID card is not available	284
17.1.450	Errorcode 1689: Remuneration day type is not available	285
17.1.451	Errorcode 1690: Material buffer is not available	285
17.1.452	Errorcode 1692: Fct. not possible, no HYD-ALS license	285
17.1.453	Errorcode 1694: Mach.is assign.to input server ■■■	285
17.1.454	Errorcode 1695: Remuneration model is not available	286
17.1.455	Errorcode 1696: Working time model is not available	286
17.1.456	Errorcode 1697: Shift rythm model is not available	286
17.1.457	Errorcode 1698: No. of licenses exceeded:■■■■■■■■	287
17.1.458	Errorcode 1700: Personnel number not indicated	287
17.1.459	Errorcode 1701: Company number not indicated	287
17.1.460	Errorcode 1702: Area not indicated	287
17.1.461	Errorcode 1703: Invalid badge number ■■■■■■■■■■■■■■■■■■■■	288
17.1.462	Errorcode 1704: Invalid personnel number ■■■■■■■■■■	288
17.1.463	Errorcode 1705: Cost center not indicated	288
17.1.464	Errorcode 1706: Person is logged on to an order.....	288
17.1.465	Errorcode 1707: Log data are available for the person	289
17.1.466	Errorcode 1708: Date o.leaving lies bef.date of joining	289
17.1.467	Errorcode 1709: Supervisor ■■■■■■■■ ■■■■ not available	290
17.1.468	Errorcode 1710: Superior of ■■■■■■■■ ■■■■	290
17.1.469	Errorcode 1720: Wage type not available	290
17.1.470	Errorcode 1721: Wage type group not available	290
17.1.471	Errorcode 1722: Logon not available	291

17.1.472	Errorcode 1723: Data record has already been uploaded	291
17.1.473	Errorcode 1725: Invalid remuneration day type.....	291
17.1.474	Errorcode 1726: Invalid working time day type.....	291
17.1.475	Errorcode 1727: Invalid shift type.....	291
17.1.476	Errorcode 1728: Clearing date in future not allowed	292
17.1.477	Errorcode 1729: The data are administered by SAP	292
17.1.478	Errorcode 1731: Selection crit.or values wrong (■■■■■).....	292
17.1.479	Errorcode 1732: Sorting wrong (■■■■■)	293
17.1.480	Errorcode 1733: The data must not be changed	293
17.1.481	Errorcode 1734: Last data record not allowed.....	293
17.1.482	Errorcode 1735: Report file is not available.....	293
17.1.483	Errorcode 1736: Access blocked to settled data.	294
17.1.484	Errorcode 1737: Report alr.available in report config.	294
17.1.485	Errorcode 1738: Report alr. avail. as terminal report.....	294
17.1.486	Errorcode 1739: Data of monthly period partly deleted	295
17.1.487	Errorcode 1740: Period must not be deleted.....	295
17.1.488	Errorcode 1741: Absence is already allowed	295
17.1.489	Errorcode 1742: Either account balance or modification	295
17.1.490	Errorcode 1785: Person has not logged on.....	295
17.1.491	Errorcode 1788: Max.no.of OPs that c.be log.on reached.....	296
17.1.492	Errorcode 1796: Data record has alr. been processed.....	296
17.1.493	Errorcode 1800: Time zone is assigned to access profile	296
17.1.494	Errorcode 1801: Time zone is assigned to opening hours.....	297
17.1.495	Errorcode 1802: Time zone is assigned to except.author.....	297
17.1.496	Errorcode 1803: No authorization f.responsibility area.....	297
17.1.497	Errorcode 1804: Access group is assigned to access	297
17.1.498	Errorcode 1805: Access alr.avail. f. reader at terminal.....	297
17.1.499	Errorcode 1806: Active ID card already available.....	298
17.1.500	Errorcode 1807: Person has alr.activated normal IDcard.....	298
17.1.501	Errorcode 1808: IDcard is active for other pers. in PZE	298
17.1.502	Errorcode 1809: Validity date coincides	298
17.1.503	Errorcode 1810: Reader 1 is reserved for PZE terminal.....	299
17.1.504	Errorcode 1811: Access is not available	299
17.1.505	Errorcode 1812: Accesses of security gate at same term.	299
17.1.506	Errorcode 1813: Not authorized for all data records.....	299

[illegible]

17.1.542	Errorcode 1888: Insp.plan not found for insp.requirement.....	311
17.1.543	Errorcode 1889: IPL is active/insp. requirement found.....	311
17.1.544	Errorcode 1890: Gage is already in use.....	312
17.1.545	Errorcode 1891: Entry is already in use	312
17.1.546	Errorcode 1892: Insp.character.is not available for IPL	312
17.1.547	Errorcode 1893: Inspection plan has not been released	313
17.1.548	Errorcode 1894: Insp.requirement is already available.....	313
17.1.549	Errorcode 1895: Inspection requirement is not available.....	313
17.1.550	Errorcode 1896: Insp. order has already been canceled.....	314
17.1.551	Errorcode 1897: Insp. order has already been canceled.....	314
17.1.552	Errorcode 1898: Insp. order has already been canceled.....	314
17.1.553	Errorcode 1899: Insp. order has already been canceled.....	315
17.1.554	Errorcode 1900: Premium group invalid	315
17.1.555	Errorcode 1910: Time tick.from prev.month can't b.postp.	315
17.1.556	Errorcode 1911: Bonus reason not available	316
17.1.557	Errorcode 1912: Indicate person or premium group	316
17.1.558	Errorcode 1913: Premium area invalid	316
17.1.559	Errorcode 1914: Used in HR master data	317
17.1.560	Errorcode 1915: Used in PZE wage type booking.....	317
17.1.561	Errorcode 1916: Used in ADE log message.....	317
17.1.562	Errorcode 1917: Used in LLE results	317
17.1.563	Errorcode 1918: Used in LLE bonuses/deductions	318
17.1.564	Errorcode 1919: Used in premium groups.....	318
17.1.565	Errorcode 1920: Used in assignment of premium groups.....	318
17.1.566	Errorcode 1921: Used in assignment of premium area	319
17.1.567	Errorcode 1923: Not authorized for sequence/condition.....	319
17.1.568	Errorcode 1950: N.poss.to change OP logon t.staff logon.....	319
17.1.569	Errorcode 1951: N.poss.to change staff logon to OP logon.....	320
17.1.570	Errorcode 1952: End date less than start date	320
17.1.571	Errorcode 1954: N.poss. to change cancelation message	320
17.1.572	Errorcode 1955: Not possible to change original message	321
17.1.573	Errorcode 1956: Par.conf.n.alterable with curr.run.scen.....	321
17.1.574	Errorcode 1957: Record type not alterable.....	321
17.1.575	Errorcode 1958: Data for OP,MNR and period alr. exists.....	322
17.1.576	Errorcode 1970: OP is no split OP	322
17.1.577	Errorcode 1971: Min. no. of splits not reached.....	322

17.1.578	Errorcode 1984: Order has been technically completed.....	323
17.1.579	Errorcode 1985: Proport.targ. qty./partitioning incorr.....	323
17.1.580	Errorcode 1986: Operation cannot be deleted	323
17.1.581	Errorcode 1987: Operation cannot be changed	323
17.1.582	Errorcode 1989: Max.number of orders exceeded for prio	324
17.1.583	Errorcode 1990: Order header cannot be deleted	324
17.1.584	Errorcode 1991: Order header cannot be changed	324
17.1.585	Errorcode 1993: Error in formula calculation for times	325
17.1.586	Errorcode 1994: OP not subj.to comparison of targ.qty.....	325
17.1.587	Errorcode 1995: Operation has already been scheduled	325
17.1.588	Errorcode 1996: Batch job is already running	325
17.1.589	Errorcode 1997: Order type is not equal	326
17.1.590	Errorcode 1998: Order model not available.....	326
17.1.591	Errorcode 2000: An U/E record alr. exists in period	326
17.1.592	Errorcode 2001: Wrong sequence of OP logon.....	326
17.1.593	Errorcode 2002: Wrong scheduling sequence at machine	327
17.1.594	Errorcode 2003: Not possible to log OP on to group	327
17.1.595	Errorcode 2004: Status of preceding OP not allowed.....	328
17.1.596	Errorcode 2007: Production variant not found for OP.....	328
17.1.597	Errorcode 2011: Reserved batch has not been logged on	328
17.1.598	Errorcode 2012: Batch has been reserved f.another order.....	329
17.1.599	Errorcode 2013: Quantity is missing for an output batch.....	329
17.1.600	Errorcode 2020: Weight of roll has alr. been recorded	329
17.1.601	Errorcode 2021: Roll alr. assigned to pallet ■■■■■■■■■■	330
17.1.602	Errorcode 2022: Usage decision alr. available f.order.....	330
17.1.603	Errorcode 2023: Usage decision alr. available f. batch.....	330
17.1.604	Errorcode 2024: Usage decision is not valid	331
17.1.605	Errorcode 2025: Batch is still active	331
17.1.606	Errorcode 2026: Operation is still running	331
17.1.607	Errorcode 2027: Processing mode is invalid	331
17.1.608	Errorcode 2028: Roll has alr. been defined as scrap.....	332
17.1.609	Errorcode 2029: A quantity blancing must be done	332
17.1.610	Errorcode 2030: Carrier material has alr.been logged on.....	332
17.1.611	Errorcode 2031: Bill of material item for mat. invalid	333
17.1.612	Errorcode 2032: Unplanned material runs on machine	333
17.1.613	Errorcode 2034: Batch has alr.been reported as finished.....	333

17.1.614	Errorcode 2036: Batch has no quantity	333
17.1.615	Errorcode 2039: Machine is not available	334
17.1.616	Errorcode 2041: Batch has already been blocked.....	334
17.1.617	Errorcode 2043: Total cutting width is too large	334
17.1.618	Errorcode 2046: Batch has alr.been logged on i.adv.f.OP.....	334
17.1.619	Errorcode 2047: Batch has not been logged on i.adv.f.OP.....	335
17.1.620	Errorcode 2048: Input batch found without residual qty.....	335
17.1.621	Errorcode 2051: Scrap reason is not allowed.....	335
17.1.622	Errorcode 2069: Data record has not been changed.....	336
17.1.623	Errorcode 2400: Please state valid characteristic no.....	336
17.1.624	Errorcode 2401: Charact.assigned to at least one mach.....	336
17.1.625	Errorcode 2402: Characteristic used in at least on IPL	336
17.1.626	Errorcode 2403: Characteristic is not available	337
17.1.627	Errorcode 2404: Collect.is curr.active at meas.channel.....	337
17.1.628	Errorcode 2405: Max.no. of meas.chan.per mach.reached.....	337
17.1.629	Errorcode 2406: Coll.w.assignm.active at 1 mach.at least	337
17.1.630	Errorcode 2407: Select machine, article or tool no.!.....	338
17.1.631	Errorcode 2408: Please indicate valid inspect. plan no.	338
17.1.632	Errorcode 2409: Please indicate valid insp.plan version	338
17.1.633	Errorcode 2410: N.possible,insp.plan has been productive.....	339
17.1.634	Errorcode 2411: Invalid reference has been indicated	339
17.1.635	Errorcode 2412: Please state valid process intervent.no.....	339
17.1.636	Errorcode 2413: Process intervent.no.hasn't been stated	340
17.1.637	Errorcode 2415: Channel type not supported.....	340
17.1.638	Errorcode 2416: PDV Event not set	340
17.1.639	Errorcode 2417: Wrong channel data for anonym pparam.....	341
17.1.640	Errorcode 2418: Invalid channel number	341
17.1.641	Errorcode 2419: Invalid cycle time	341
17.1.642	Errorcode 2420: Invalid channel orientation	342
17.1.643	Errorcode 2421: Alert not supported	342
17.1.644	Errorcode 2422: Machine already assigned to terminal.....	342
17.1.645	Errorcode 2423: MachNo-TermNo-Chan-Combi already assign	343
17.1.646	Errorcode 2424: MachNo-TermNo-FKey-Combi already assign	343
17.1.647	Errorcode 2600: Logical system is not available!	343

17.1.648	Errorcode 2601: Logical system already exists!	344
17.1.649	Errorcode 2602: Configuration n.available f.log.system!	344
17.1.650	Errorcode 2603: Config. alr. exists for logical system.!.....	344
17.1.651	Errorcode 2604: Distribution model is not available!	344
17.1.652	Errorcode 2605: Distribution model already exists!	345
17.1.653	Errorcode 2606: Wrong MESTYP	345
17.1.654	Errorcode 2607: IDoc not found	345
17.1.655	Errorcode 2608: IDoc status not for processing	346
17.1.656	Errorcode 2609: No processible data found	346
17.1.657	Errorcode 2610: Wrong segment type	346
17.1.658	Errorcode 2611: Segment at wrong position in IDoc	346
17.1.659	Errorcode 2612: Error in initialization	346
17.1.660	Errorcode 2613: Order cannot be processed	346
17.1.661	Errorcode 2614: Error when connecting to sap system.....	347
17.1.662	Errorcode 2615: Incorrect reply from the SAP system	347
17.1.663	Errorcode 2700: There are dependencies (machine table)	347
17.1.664	Errorcode 2701: There are dependencies(hierarc.assignm.).....	347
17.1.665	Errorcode 2702: There are dependencies(transport table).....	348
17.1.666	Errorcode 2703: Hier.ID bigger than select.hier.buffer	348
17.1.667	Errorcode 2704: Hier.ID smaller than hier.buffer	348
17.1.668	Errorcode 2705: Invalid hierarchy	349
17.1.669	Errorcode 2707: Reference tab MAT_MATTYP/LOS_BESTAND.....	349
17.1.670	Errorcode 2708: String length not equal C_GEN_FIX/C_FIX	349
17.1.671	Errorcode 2709: Material type does not exist	350
17.1.672	Errorcode 2710: Mat.buffers of type F may be assigned	350
17.1.673	Errorcode 2712: Transp.unit occupied by current batch.....	350
17.1.674	Errorcode 2715: Wrong status	350
17.1.675	Errorcode 2716: Filling out the table(qty.,unit,status)	351
17.1.676	Errorcode 2717: Transport unit not available	351
17.1.677	Errorcode 2718: Material buffer not available.....	351
17.1.678	Errorcode 2719: Semi-finished material type n. available.....	352
17.1.679	Errorcode 2720: Material buffer not connected with PL.....	352
17.1.680	Errorcode 2721: Assignment not possible (recursion)	352

17.1.681	Errorcode 2722: Destination is still being used	352
17.1.682	Errorcode 2723: Max. field length exceeded	353
17.1.683	Errorcode 2724: Max.no.of decimal places exceeded	353
17.1.684	Errorcode 2725: Invalid indexing. Value range!.....	353
17.1.685	Errorcode 2726: Invalid input type	353
17.1.686	Errorcode 2727: Display position has alr. been defined	354
17.1.687	Errorcode 2728: Print position has alr. been defined.....	354
17.1.688	Errorcode 2729: Table does not exist	354
17.1.689	Errorcode 2730: There are still dependencies!.....	355
17.1.690	Errorcode 2733: Storage location is still being used.....	355
17.1.691	Errorcode 2734: The reason text is still being used!.....	355
17.1.692	Errorcode 2801: Order split not possible.....	355
17.1.693	Errorcode 2802: Order must not be a split order	356
17.1.694	Errorcode 2803: Order mustn't be order of a split order	356
17.1.695	Errorcode 2804: Only allowed for split order	356
17.1.696	Errorcode 2805: Quick order alphanumeric.after 1st digit.....	356
17.1.697	Errorcode 2807: Status n.alterable as sequence inactive.....	356
17.1.698	Errorcode 2808: Start date is after end date	357
17.1.699	Errorcode 2809: Order type n.alterable as order started	357
17.1.700	Errorcode 2810: Value batch management is different	357
17.1.701	Errorcode 2811: Order not allowed for collective OP	358
17.1.702	Errorcode 2812: Order already exists in archive	358
17.1.703	Errorcode 2813: Activity Code key not defined	358
17.1.704	Errorcode 2817: Order Type not available	359
17.1.705	Errorcode 2818: Categorise order type is not equal.....	359
17.1.706	Errorcode 2901: Is used as source in inspection plan	359
17.1.707	Errorcode 2902: Inspection order has not been found	360
17.1.708	Errorcode 2903: Indicated company not available.....	360
17.1.709	Errorcode 2904: Is used in specification list	360
17.1.710	Errorcode 2905: Mandatory insp.has not been carried out.....	361
17.1.711	Errorcode 2906: Calculat. character., no entry possible	361
17.1.712	Errorcode 2907: Measured value is invalid(not plausible)	361
17.1.713	Errorcode 2908: No Q-character. found for preced.roll	362
17.1.714	Errorcode 2909: Preceding order hasn't been completed	362
17.1.715	Errorcode 2910: Measured values handed down are faulty	362
17.1.716	Errorcode 2911: The distributor doesn't contain entries	363

17.1.717	Errorcode 2912: Specified measure not distinct.....	363
17.1.718	Errorcode 2913: The assessment catalog is active	363
17.1.719	Errorcode 2914: The assessment catalog is used.....	364
17.1.720	Errorcode 2915: The assessment has been completed	364
17.1.721	Errorcode 2916: The control plan has been released.....	364
17.1.722	Errorcode 2917: The control plan is active	365
17.1.723	Errorcode 2918: Gage is not allowed for mass output.....	365
17.1.724	Errorcode 2919: Stock is not available	365
17.1.725	Errorcode 2920: Department not available.....	366
17.1.726	Errorcode 2921: No.of NCU larger than sample size	366
17.1.727	Errorcode 2922: Invalid input type	366
17.1.728	Errorcode 2923: Order status does not allow an entry	366
17.1.729	Errorcode 2924: Character. status doesn't allow entry	367
17.1.730	Errorcode 2925: Measured value violates tolerance limit	367
17.1.731	Errorcode 2926: Characteristic has not been defined	367
17.1.732	Errorcode 2927: The gage has become due	367
17.1.733	Errorcode 2928: The sample number is invalid	367
17.1.734	Errorcode 2929: The sample number already exists	367
17.1.735	Errorcode 2930: A measured value with this ID exists	368
17.1.736	Errorcode 2931: Simulation OK	368
17.1.737	Errorcode 2932: Min. 1 sample has not been completed!	368
17.1.738	Errorcode 2933: This function not supported for input type!	368
17.1.739	Errorcode 2934: Maximum of samples reached!	369
17.1.740	Errorcode 2935: Maximum of samples for number reached! ...	369
17.1.741	Errorcode 2936: Inspection point(s) not finished!	369
17.1.742	Errorcode 2937: Inspection point(s) not finished for machine!.....	370
17.1.743	Errorcode 2938: Inspection scope incorrect!	370
17.1.744	Errorcode 2939: Inspection order not finished!.....	370
17.1.745	Errorcode 2940: Inspection not finished!.....	371
17.1.746	Errorcode 2941: Last Container already reached!.....	371
17.1.747	Errorcode 2942: Open measures exist!.....	371
17.1.748	Errorcode 2943: Invalid Input type must be "AUTOMAT"	371
17.1.749	Errorcode 2944: Wrong specification	371
17.1.750	Errorcode 2945: Characteristic, Changing not possible	372
17.1.751	Errorcode 2946: Prod. operation is still logged on.....	372

17.1.752	Errorcode 2947: Inspection point(s) already finished!	372
17.1.753	Errorcode 2948: Inspection order already finished!	372
17.1.754	Errorcode 2949: Inspection requirem. already finished!	373
17.1.755	Errorcode 2950: Gauge not useable (status)!	373
17.1.756	Errorcode 2951: Incorrect format of input data!	373
17.1.757	Errorcode 2952: No data found in tnt_table_repo!.....	374
17.1.758	Errorcode 2953: Column is_online is not N!	374
17.1.759	Errorcode 2954: TNT-table is locked by process!.....	374
17.1.760	Errorcode 2955: TNT-table,lock status is indeterminate!.....	374
17.1.761	Errorcode 2956: Entry was not found in tnt_headers!	375
17.1.762	Errorcode 2957: TNT-table was not created!	375
17.1.763	Errorcode 2958: Index of TNT-table was not created!.....	375
17.1.764	Errorcode 2959: Archiving file was not found!	376
17.1.765	Errorcode 2960: File transfer was failed!.....	376
17.1.766	Errorcode 2961: Reading file was failed!.....	376
17.1.767	Errorcode 2962: Reload flag was not updated!	377
17.1.768	Errorcode 2963: Param for calculation is missing!	377
17.1.769	Errorcode 2964: Error in formula calculation for test result.....	377
17.1.770	Errorcode 2965: Wrong acquisition workplace	378
17.1.771	Errorcode 2966: Missing last off inspection.....	378
17.1.772	Errorcode 3000: Transaction has already been opened.....	378
17.1.773	Errorcode 3001: No transaction has been opened	379
17.1.774	Errorcode 3002: DLG error in transaction -> ROLLBACK	379
17.1.775	Errorcode 3003: Exception: Bapicallexecute: no handler	379
17.1.776	Errorcode 3020: Account blocked, logon not possible.....	380
17.1.777	Errorcode 3021: Not possible. User is logged on	380
17.1.778	Errorcode 3022: Script file is not available.	380
17.1.779	Errorcode 3023: Script has already been released	380
17.1.780	Errorcode 3024: Syntax error in script file	381
17.1.781	Errorcode 3025: Runtime error in script file.....	381
17.1.782	Errorcode 3026: Pers at date avail co ■■■■ cc ■■■■■■■■■■.....	381
17.1.783	Errorcode 3027: Person ■■■■■■■■ badge overlap ■■■■■■■■.....	382
17.1.784	Errorcode 3028: Label type and alias already exists	382
17.1.785	Errorcode 3029: Label type is not available	382

17.1.786	Errorcode 3030: Label alias is not available	383
17.1.787	Errorcode 3031: The data must not be deleted	383
17.1.788	Errorcode 3100: Workflow active.Modification n.possible.....	383
17.1.789	Errorcode 3102: Configuration has not been indicated	384
17.1.790	Errorcode 3104: Event has not been indicated	384
17.1.791	Errorcode 3108: Sub event has not been indicated.....	384
17.1.792	Errorcode 3109: Workflow is used. Modificat. impossible.....	384
17.1.793	Errorcode 3200: Invalid or empty resource	385
17.1.794	Errorcode 3201: Resource not available	385
17.1.795	Errorcode 3202: Resource(w/o type)several times i.stock.....	385
17.1.796	Errorcode 3203: Resource list max. depth reached	386
17.1.797	Errorcode 3204: Resource already available	386
17.1.798	Errorcode 3205: Resource could not be created	386
17.1.799	Errorcode 3210: Invalid or empty resource status	387
17.1.800	Errorcode 3211: Resource status is not available	387
17.1.801	Errorcode 3212: Resource status is not allowed	387
17.1.802	Errorcode 3213: No release status available.....	387
17.1.803	Errorcode 3214: Resource type is not available	388
17.1.804	Errorcode 3215: Resource family is not available	388
17.1.805	Errorcode 3216: No status available for logging off res.....	388
17.1.806	Errorcode 3217: Product. status f.resource n.available.....	389
17.1.807	Errorcode 3218: Resource blocked.....	389
17.1.808	Errorcode 3219: Resource is no DNC resource	389
17.1.809	Errorcode 3220: Resource scheduled or blocked.....	390
17.1.810	Errorcode 3221: Machine has not been indicated	390
17.1.811	Errorcode 3222: DNC family has not been stated	390
17.1.812	Errorcode 3223: Machine and DNC family do not match.....	391
17.1.813	Errorcode 3224: Resource cannot be logged on.....	391
17.1.814	Errorcode 3225: Status does not allow processing	391
17.1.815	Errorcode 3226: Res.alr.log.on t.this mach.w.this order	392
17.1.816	Errorcode 3227: Res. has been logged on too many times.....	392
17.1.817	Errorcode 3228: resource <RES> has alr. been logged on	392
17.1.818	Errorcode 3229: Resource has not been logged on	393
17.1.819	Errorcode 3230: End date is smaller than current time	393
17.1.820	Errorcode 3231: Resource is active	393
17.1.821	Errorcode 3232: Resource is not active	393

17.1.822	Errorcode 3233: There are events for the resource.....	394
17.1.823	Errorcode 3235: Maintenance not in threshold range.....	394
17.1.824	Errorcode 3240: Resource type is not editable	394
17.1.825	Errorcode 3241: User field key not defined	394
17.1.826	Errorcode 3242: Resource type is currently being used	395
17.1.827	Errorcode 3243: Resource family is used	395
17.1.828	Errorcode 3244: If changed KENN must have prefix U:	395
17.1.829	Errorcode 3245: prod=F may only exist once per type/fam.	396
17.1.830	Errorcode 3246: No header record is available	396
17.1.831	Errorcode 3247: Resource status is in use.....	396
17.1.832	Errorcode 3248: Header record of resource is in use.....	397
17.1.833	Errorcode 3249: Copy of itself is not possible.	397
17.1.834	Errorcode 3250: The path is not available.....	397
17.1.835	Errorcode 3251: Invalid blocking reason	397
17.1.836	Errorcode 3252: Invalid measure	398
17.1.837	Errorcode 3253: Resource is still available in BOM.....	398
17.1.838	Errorcode 3254: Res.is still being used as component.....	398
17.1.839	Errorcode 3255: Invalid maintenance.....	399
17.1.840	Errorcode 3256: Maintenance condition is not allowed	399
17.1.841	Errorcode 3257: Resource measure has alr. been recorded ...	399
17.1.842	Errorcode 3259: Status assignments not configurable	400
17.1.843	Errorcode 3260: DNC file has already been assigned.....	400
17.1.844	Errorcode 3261: Resource is still i.maintenance calendar	400
17.1.845	Errorcode 3262: Maintenance n.possible for resource type	400
17.1.846	Errorcode 3263: Family status has become invalid	401
17.1.847	Errorcode 3264: Status alr. assigned for family/type	401
17.1.848	Errorcode 3265: Resource-ID is invalid!.....	401
17.1.849	Errorcode 3266: Master resource already exists.....	402
17.1.850	Errorcode 3267: Parent and child are master resources	402
17.1.851	Errorcode 3270: Max. no. of fast USRFLD reached	402
17.1.852	Errorcode 3271: N.possible, entry is still being used.....	402
17.1.853	Errorcode 3272: N.possible,year model is factory calend.....	403
17.1.854	Errorcode 3273: N.possible-processing SYSTEM entry.....	403
17.1.855	Errorcode 3274: Password must not contain user name.....	403
17.1.856	Errorcode 3275: Password contains insufficient letters	404
17.1.857	Errorcode 3276: Password contains insufficient numbers	404

17.1.858	Errorcode 3277: Passw.contains insuffic.spec.characters.....	404
17.1.859	Errorcode 3278: Password is altogether too short.....	405
17.1.860	Errorcode 3279: Password contains invalid characters.....	405
17.1.861	Errorcode 3280: Password violates password history	405
17.1.862	Errorcode 3281: Password history is not available	405
17.1.863	Errorcode 3282: Password has expired	406
17.1.864	Errorcode 3283: Password must be changed!	406
17.1.865	Errorcode 3284: Bill of material level is invalid	406
17.1.866	Errorcode 3285: Cutting plan not found for order	407
17.1.867	Errorcode 3286: Overall width of web distrib.too small.....	407
17.1.868	Errorcode 3287: Parent OP is already available	407
17.1.869	Errorcode 3288: Cutting plan is already active	407
17.1.870	Errorcode 3299: Material component not found for OP	407
17.1.871	Errorcode 3300: Assignment code must show the value	
NUM	408	
17.1.872	Errorcode 3301: No. is not within the defined range.....	408
17.1.873	Errorcode 3302: Number starts with wrong prefix	408
17.1.874	Errorcode 3303: Generat.type P does not generate a No.	409
17.1.875	Errorcode 3304: Active template must not be deleted	409
17.1.876	Errorcode 3400: Parameter InstID not indicated	409
17.1.877	Errorcode 3401: Installation path not created.....	410
17.1.878	Errorcode 3402: Media path not created.....	410
17.1.879	Errorcode 3403: Backup path could not be created	410
17.1.880	Errorcode 3404: Files have already been installed.....	410
17.1.881	Errorcode 3405: Log file could not be created.....	411
17.1.882	Errorcode 3406: Source could not be opened.....	411
17.1.883	Errorcode 3420: Do not delete or change stand. config.	411
17.1.884	Errorcode 3421: Do not delete standard configuration	412
17.1.885	Errorcode 3430: Invalid signature 1 or level 1	412
17.1.886	Errorcode 3431: Invalid signature 2 or level 2	412
17.1.887	Errorcode 3432: Invalid sig.1 and 2 or level 1 and 2	412
17.1.888	Errorcode 3433: Input for action necessary.....	413
17.1.889	Errorcode 3434: No dialog data extisting	413
17.1.890	Errorcode 3500: Invalid processing flag	413
17.1.891	Errorcode 3501: Invalid variant	413
17.1.892	Errorcode 3502: Invalid BAPI-POS	414

17.1.893	Errorcode 3503: Invalid field position	414
17.1.894	Errorcode 3504: Invalid formula position	414
17.1.895	Errorcode 3505: Invalid basic configuration	415
17.1.896	Errorcode 3506: Invalid segment configuration	415
17.1.897	Errorcode 3507: Invalid field configuration	415
17.1.898	Errorcode 3508: Invalid conversion function	415
17.1.899	Errorcode 3509: Acronym has already been assigned	416
17.1.900	Errorcode 3510: Invalid formula	416
17.1.901	Errorcode 3511: Invalid transaction flag	416
17.1.902	Errorcode 3512: Transact.not avail.or not yet processed	417
17.1.903	Errorcode 3513: Transaction archived or not available	417
17.1.904	Errorcode 3514: Initial download is not allowed.	417
17.1.905	Errorcode 3602: Main OP defined several times	418
17.1.906	Errorcode 3603: Cut number has been defined sev.times.....	418
17.1.907	Errorcode 3604: Sum of cut widths > overall width	418
17.1.908	Errorcode 3605: Active orders cannot be changed	418
17.1.909	Errorcode 3606: No header rec. available for cut layout.....	418
17.1.910	Errorcode 3608: Cutting plan alr.avail. for order.....	419
17.1.911	Errorcode 3612: Batch has alr.been packed in container	419
17.1.912	Errorcode 3613: Batch has already been deleted	419
17.1.913	Errorcode 3631: Material width of batch is too small	419
17.1.914	Errorcode 3636: Batch is blocked due to quality reasons.....	419
17.1.915	Errorcode 3638: Article not allowed for package	420
17.1.916	Errorcode 3639: Roll width not allowed for package	420
17.1.917	Errorcode 3640: Order not allowed for package.....	420
17.1.918	Errorcode 3645: The user password expires.....	420
17.1.919	Errorcode 3646: Signature(s) required	420
17.1.920	Errorcode 3647: Higher authorization level required	421
17.1.921	Errorcode 3648: Signature invalid	421
17.1.922	Errorcode 3649: Invalid error code.....	421
17.1.923	Errorcode 3650: Material availability exceeded	422
17.1.924	Errorcode 3653: The handling unit has assigned batches.....	422
17.1.925	Errorcode 3654: No batches have been assigned to HU.....	422
17.1.926	Errorcode 3655: Batch is not assigned to handling unit.....	422
17.1.927	Errorcode 3656: Quantity of batch has alr. been recorded	423
17.1.928	Errorcode 3657: Unplaned Material is not allowed	423

17.1.929	Errorcode 3658: Scrap quantity for batch not allowed	423
17.1.930	Errorcode 3659: There is no serial number for quantity.....	424
17.1.931	Errorcode 3660: Serial number is blocked	424
17.1.932	Errorcode 3661: Webservice communication error	424
17.1.933	Errorcode 3662: Material reservation is not planned	424
17.1.934	Errorcode 3663: Material for BOM cannot be logged on	425
17.1.935	Errorcode 3664: The working status not exist	425
17.1.936	Errorcode 3665: Material type n. available	425
17.1.937	Errorcode 3666: Input material consumed!	426
17.1.938	Errorcode 3667: Coilno. not assigned	426
17.1.939	Errorcode 3668: OP has no box quantity	426
17.1.940	Errorcode 3669: ATK double scan	427
17.1.941	Errorcode 3702: Operation not available.....	427
17.1.942	Errorcode 3704: Exclusion list contains password	427
17.1.943	Errorcode 3705: The password is not correct.....	428
17.1.944	Errorcode 3706: annotation too long	428
17.1.945	Errorcode 4000: PCC: Load Driver	428
17.1.946	Errorcode 4001: PCC: Channel not configured	428
17.1.947	Errorcode 4002: PCC: Channel Write Error	428
17.1.948	Errorcode 4003: PCC: Channel Read Error	429
17.1.949	Errorcode 4004: PCC: Channel not active	429
17.1.950	Errorcode 4005: PCC: Error event	429
17.1.951	Errorcode 4100: workplace Ressource cant be logged off	429
17.1.952	Errorcode 4101: Requirement Ressource in parts list	429
17.1.953	Errorcode 4102: assigned resource is invalid.....	430
17.1.954	Errorcode 4103: res. is not defined as req. resource.....	430
17.1.955	Errorcode 4104: invalid reference resource	430
17.1.956	Errorcode 4105: no free explicit ressource.....	431
17.1.957	Errorcode 4106: ressource has no explicit booking.....	431
17.1.958	Errorcode 4107: Requirement ressource cant be logged on ...	431
17.1.959	Errorcode 4108: Ressource already referenced.....	432
17.1.960	Errorcode 4109: Missing logons for req. ressource	432
17.1.961	Errorcode 4110: Resource is a req. resource assigned.....	432
17.1.962	Errorcode 4111: Invalid maintenance duration	432
17.1.963	Errorcode 4112: Invalid maintenance quantity	433
17.1.964	Errorcode 4113: No activ maintenance notification	433

17.1.965	Errorcode 4114: Could not create maintenance number.....	433
17.1.966	Errorcode 4115: Could not create a maintenance order.....	433
17.1.967	Errorcode 4116: IH number not available.....	433
17.1.968	Errorcode 4117: Cavity assignment to resource is invalid	434
17.1.969	Errorcode 4118: Status type is reserved for the system	434
17.1.970	Errorcode 4119: Status type does not exist.....	434
17.1.971	Errorcode 4120: Status text is invalid	435
17.1.972	Errorcode 4121: Combination RES/RESFAM is invalid.....	435
17.1.973	Errorcode 4122: Download is not possible	435
17.1.974	Errorcode 4123: Upload is not possible	435
17.1.975	Errorcode 4124: stroke booking is not possible.....	436
17.1.976	Errorcode 4200: data already reloaded.....	436
17.1.977	Errorcode 4201: data already reloaded.....	436
17.1.978	Errorcode 4202: cannot open reloadfile	436
17.1.979	Errorcode 4203: Error exporting file to customer dir.....	436
17.1.980	Errorcode 4204: Error reading metadata.....	437
17.1.981	Errorcode 7000: Resource is in use!.....	437
17.1.982	Errorcode 7003: The filename of the image is too long.	437
17.1.983	Errorcode 7004: Temporary users are not alterable.....	437
17.1.984	Errorcode 7005: Autologin user manually login forbidden	438
17.1.985	Errorcode 7007: Person has no qualification for OP	438
17.1.986	Errorcode 7008: Logged on person no qualification for OP	438
17.1.987	Errorcode 7009: Person no qualification for logged on OP.....	439
17.1.988	Errorcode 7010: Clearing without posting is not possible	439
17.1.989	Errorcode 7011: Change of Batch Number is not allowed.....	439
17.1.990	Errorcode 7012: Duplicate component not allowed.	439
17.1.991	Errorcode 7013: Carrier status not (2) EMPTY	440
17.1.992	Errorcode 7014: Original booking is canceled.....	440
17.1.993	Errorcode 7015: Reversal booking not editable.	440
17.1.994	Errorcode 7016: Booking is canceled and not editable.	441
17.1.995	Errorcode 7017: Debited bookings are not editable.	441
17.1.996	Errorcode 7018: Wrong workplace, no allocated time.	441
17.1.997	Errorcode 7019: Possibly teamwork!.....	442
17.1.998	Errorcode 7020: One/more previous AGs are not complete....	442
17.1.999	Errorcode 7021: AG already been registered in package.....	442
17.1.1000	Errorcode 7022: AG has wrong time type specification.....	442

17.1.1001	Errorcode 7023: No package registered on the machine.	442
17.1.1002	Errorcode 7024: Entry is enabled.....	443
17.1.1003	Errorcode 7025: Error by calculating remaining effort	443
17.1.1004	Errorcode 7026: Workflow could not be started.	443
17.1.1005	Errorcode 7027: Component not reserved.	443
17.1.1006	Errorcode 7028: Target qty. smaller than loaded. qty.....	443
17.1.1007	Errorcode 7029: No melting aggregate found	443
17.1.1008	Errorcode 7030: No melting operation found.....	444
17.1.1009	Errorcode 7031: No preceding operation found	444
17.1.1010	Errorcode 7032: Melting operation already assigned	444
17.1.1011	Errorcode 7033: Incorrect component type	444
17.1.1012	Errorcode 7034: Component is already available.....	444
17.1.1013	Errorcode 7035: article do not match	445
17.1.1014	Errorcode 7036: Material in output buffer not distinct	445
17.1.1015	Errorcode 7037: OP is not in status prepared	445
17.1.1016	Errorcode 7038: Batch not in material buffer.....	445
17.1.1017	Errorcode 7039: Resource not in material buffer.....	445
17.1.1018	Errorcode 7040: Invalid material buffer type.....	445
17.1.1019	Errorcode 7041: Batch transport status not allowed.....	446
17.1.1020	Errorcode 7042: Not allowed run through batch status	446
17.1.1021	Errorcode 7043: Work plan not found	446
17.1.1022	Errorcode 7044: Transportation order already assigned	446
17.1.1023	Errorcode 7045: Capacity order type not set.....	447
17.1.1024	Errorcode 7046: Kanban order type not set	447
17.1.1025	Errorcode 7047: Kanban resource status not configured	447
17.1.1026	Errorcode 7048: Kanban order is already available.....	447
17.1.1027	Errorcode 7049: Capacity order not available	447
17.1.1028	Errorcode 7050: Max. no. of kanban reached	448
17.1.1029	Errorcode 7051: Collective batch already running.....	448
17.1.1030	Errorcode 7052: Child batches have wrong status	448
17.1.1031	Errorcode 7053: Output batch change not allowed	448
17.1.1032	Errorcode 7054: Batch is no collective batch	448
17.1.1033	Errorcode 7055: Batch has no childs	448
17.1.1034	Errorcode 7056: Input file not available	449
17.1.1035	Errorcode 7060: File could not be saved at the dest.	449
17.1.1036	Errorcode 7061: Destination does not exist.....	449

17.1.1037	Errorcode 7062: Dir. could not be created at the dest.	449
17.1.1038	Errorcode 7063: File could not be renamed.	449
17.1.1039	Errorcode 7064: File could not be read on the HYDRA serv ...	450
17.1.1040	Errorcode 7065: Invalid combination of doc and link type	450
17.1.1041	Errorcode 7066: Access to the directory is not possible	450
17.1.1042	Errorcode 7067: For this record, no text is entered.	450
17.1.1043	Errorcode 7068: Documents entry does not exist.....	450
17.1.1044	Errorcode 7069: Collective not available	451
17.1.1045	Errorcode 7070: The Collective batch is not free	451
17.1.1046	Errorcode 7071: Not allowed batch status	451
17.1.1047	Errorcode 7072: serial number could not be created.....	451
17.1.1048	Errorcode 7073: serial number is required	451
17.1.1049	Errorcode 7074: serial component cannot be logged on	452
17.1.1050	Errorcode 7075: invalid classification	452
17.1.1051	Errorcode 7076: SNR does not match the input component ...	452
17.1.1052	Errorcode 7077: serial component cannot be logged off	453
17.1.1053	Errorcode 7078: The coll. batch has assigned batches.....	453
17.1.1054	Errorcode 7079: already a existing deleted RESSTA.....	453
17.1.1055	Errorcode 7080: set status deleted only if col. blocked	454
17.1.1056	Errorcode 7081: The TU is not reserved for running OP	454
17.1.1057	Errorcode 7082: The TU could not be logged on	454
17.1.1058	Errorcode 7083: Posting only at longest running OP.....	454
17.1.1059	Errorcode 7084: Op. already logged on at given workplace	455
17.1.1060	Errorcode 7085: Target partitioning is required	455
17.1.1061	Errorcode 7086: There are open escalations.	455
17.1.1062	Errorcode 7087: Material type do not match	456
17.1.1063	Errorcode 7088: Batch class must be yield	456
17.1.1064	Errorcode 7089: Missing quantity unit..	456
17.1.1065	Errorcode 7090: Missing mandatory parameter batch id	457
17.1.1066	Errorcode 7091: Missing mandatory parameter shift begin	457
17.1.1067	Errorcode 7092: Missing mandatory parameter shift end.....	457
17.1.1068	Errorcode 7093: Shift begin not possible	458
17.1.1069	Errorcode 7094: Shift end is not possible.....	458
17.1.1070	Errorcode 7095: Missing mandatory parameter batch class....	458
17.1.1071	Errorcode 7096: Remaining quantity is not allowed	459
17.1.1072	Errorcode 7097: No counter allowed for MPL type manuell	459

17.1.1073	Errorcode 7098: Only batch class yield is allowed	459
17.1.1074	Errorcode 7099: No Shift: No status change possible	460
17.1.1075	Errorcode 7100: Not a valid required resource.....	460
17.1.1076	Errorcode 7101: Not enough companay licenses avail.	460
17.1.1077	Errorcode 7102: Not enough companay licenses avail.	460
17.1.1078	Errorcode 7103: Not enough companay licenses avail.	461
17.1.1079	Errorcode 7104: Not enough company licenses avail.	461
17.1.1080	Errorcode 7105: License service not available	461
17.1.1081	Errorcode 7106: The batch quality status is invalid	462
17.1.1082	Errorcode 7107: A negative consumption is not allowed.	462
17.1.1083	Errorcode 7108: Batch already archived	462
17.1.1084	Errorcode 7109: The max. number of batches is exceeded	463
17.1.1085	Errorcode 7110: msl attributes are different	463
17.1.1086	Errorcode 7111: msl time is not defined	463
17.1.1087	Errorcode 7112: requested amount of data is too large	464
17.1.1088	Errorcode 7113: ReferenceAggr. already assigned.....	464
17.1.1089	Errorcode 7114: Passwords does not match.....	464
17.1.1090	Errorcode 7115: Error in password processing	464
17.1.1091	Errorcode 7116: Not enough company licenses avail.	465
17.1.1092	Errorcode 7120: Missing mandatory param. material buffer	465
17.1.1093	Errorcode 7121: Missing mandat. param. consumpt. quant. ...	465
17.1.1094	Errorcode 7122: Missing mandatory parameter material.....	466
17.1.1095	Errorcode 7123: Group is no capacity group.....	466
17.1.1096	Errorcode 7124: Validity date causes gap in versions.....	466
17.1.1097	Errorcode 7125: Incorrect length of batch number	466
17.1.1098	Errorcode 7126: Invalid machine number	467
17.1.1099	Errorcode 7127: Invalid character in machine number	467
17.1.1100	Errorcode 7128: Invalid character in resource.....	467
17.1.1101	Errorcode 7129: Output lot with quantity 0 not allowed.	467
17.1.1102	Errorcode 7130: Output lot with quantity 0 not allowed.	468
17.2	Local error messages at the terminal	468
17.2.1	Overview	468
17.2.2	Error when saving the machine label.....	468
17.2.3	Error when saving the machine status.....	468
17.2.4	Error 901	468
17.2.5	Error 902	468

17.2.6 Error 903	469
17.2.7 Error 904	469
17.2.8 Error 905	469
17.2.9 Error 906 (DOS terminals only).....	469
17.2.10 Error 907 (DOS terminals only).....	469
17.2.11 Error 908 (DOS terminals only).....	469
17.2.12 Error 909	469
17.2.13 Error 951	469
17.2.14 Error code 10001.....	470
17.2.15 Error code 10002.....	470
17.2.16 Error code 10003.....	470
17.2.17 Error code 10004.....	470
17.2.18 Error code 10005.....	470
17.2.19 Error code 10006.....	470
17.2.20 Error code 10007.....	471
17.2.21 Error code 10008.....	471
17.2.22 Error code 10009.....	471
17.2.23 Error code 10010.....	471
17.2.24 Error code 10011.....	471
17.2.25 Error code 10012.....	472
17.2.26 Error code 10013.....	472
17.2.27 Error code 10014.....	472
17.2.28 Error code 10015.....	472
17.2.29 Error code 10016.....	472
17.2.30 Error code 10017.....	472
17.2.31 Error code 10018.....	473
17.2.32 Error code 10019.....	473
17.2.33 Error code 10020.....	473
17.2.34 Error code 10021.....	473
17.2.35 Error code 10022.....	473
17.2.36 Error code 10023.....	474
17.2.37 Error code 18001.....	474
17.2.38 Error code 19001.....	474
17.2.39 Error code 20001.....	474
17.2.40 Error code 20002.....	474
17.2.41 Error code 20003.....	474

17.2.42 Error code 20004.....	475
17.2.43 Error code 20005.....	475
17.2.44 Error code 20006.....	475
17.2.45 Error code 20007.....	475
17.2.46 Error code 20008.....	475
17.2.47 Error code 20009.....	476
17.2.48 Error code 20010.....	476
17.2.49 Error code 20011.....	476
17.2.50 Error code 20012.....	476
17.2.51 Error code 20013.....	476
17.2.52 Error code 20014.....	476
17.2.53 Error code 20015.....	477
17.2.54 Error code 20016.....	477
17.2.55 Error code 20017.....	477
17.2.56 Error code 29801.....	477
17.2.57 Error code 30001.....	477
17.2.58 Error code 30002.....	478
17.2.59 Error code 30003.....	478
17.2.60 Error code 30004.....	478
17.2.61 Error code 30005.....	478
17.2.62 Error code 39801.....	478
17.2.63 Error code 39802.....	478
17.2.64 Error code 60001.....	479
17.2.65 Error code 60002.....	479
17.2.66 Error code 60003.....	479
17.2.67 Error code 60004.....	479
17.2.68 Error code 60005.....	479
17.2.69 Error code 60006.....	480
17.2.70 Error code 60007.....	480
17.2.71 Error code 60008.....	480
17.2.72 Error code 60009.....	480
17.2.73 Error code 60010.....	480
17.2.74 Error code 60011.....	480
17.2.75 Error code 60012.....	481
17.2.76 Error code 70001.....	481
17.2.77 Error code 70002.....	481

17.2.78 Error code 70003.....	481
17.2.79 Error code 70004.....	481
17.2.80 Error code 70005.....	482
17.2.81 Error code 70006.....	482
17.2.82 Error code 70007.....	482
17.2.83 Error code 70008.....	482
17.2.84 Error code 70009.....	482
17.2.85 Error code 70010.....	482
17.2.86 Error code 70011.....	483
17.2.87 Error code 70012.....	483
17.2.88 Error code 70013.....	483
17.2.89 Error code 70014.....	483
17.2.90 Error code 70015.....	483
17.2.91 Error code 70016.....	484
17.2.92 Error code 70017.....	484
17.2.93 Error code 70018.....	484
17.2.94 Error code 70019.....	484
17.2.95 Error code 70020.....	484
17.2.96 Error code 70021.....	484
17.2.97 Error code 81001.....	485
17.2.98 Error code 81002.....	485
17.2.99 Error code 81003.....	485
17.2.100 Error code 81004.....	485
17.2.101 Error code 81005.....	485
17.2.102 Error code 81006.....	486
17.2.103 Error code 81007.....	486
17.2.104 Error code 81008.....	486
17.2.105 Error code 81009.....	486
17.2.106 Error code 81010.....	486
17.2.107 Error code 81011.....	486
17.2.108 Error code 81012.....	487
17.2.109 Error code 81013.....	487
17.2.110 Error code 81014.....	487
17.2.111 Error code 81015.....	487
17.2.112 Error code 81016.....	487
17.2.113 Error code 81017.....	488

17.2.114	Error code 82001	488
17.2.115	Error code 82002	488
17.2.116	Error code 82003	488
17.2.117	Error code 82004	488
17.2.118	Error code 82005	488

1 MES Weaver 4.0pe - Overview

Purpose

MES Weaver 4.0 is the basic system for the HYDRA application.

The basic system offers the following interfaces:

- Interface to a relational database system
- Interface for the business logic
- Interface for the client applications
- Special interfaces for applications, like for example the PDM "Production Data Manager" interface

Implementation considerations

The HYDRA basic system is the general basic integral part of any HYDRA installation.

Integration

-

Features

- Supports the databases listed in the compatibility list
- Supports the operating systems listed in the compatibility list
- HYDRA data pool for configuration, master and movement data
- Basis for communicating with systems offered by manufacturers
- Comprehensive authorization concept: Login, user administration, function and cost center authorizations as well as responsibility areas, user profiles and password policies
- Terminal configuration
- Administrative functions:
 - Job administration
 - Interface communication
 - Administration tools for the HYDRA client
 - Download functions for program updates belonging to HYDRA consoles and -terminals
- System check lists

- Other functions:
 - Plausibility checks for actual entered data
 - Supports user exits/ customer exits
 - Basis for data storage/ archiving
 - Ability to log modifications to configurations (history)

2 MES Weaver 4.0_{pe} - Technical Overview

Introduction

The MES Weaver 4.0_{pe} supports the following features:

- Integration of the Manufacturing Platform 1.1 (MIP)
- Control access to functions and data
- Complete Unicode support of the HYDRA database and the HYDRA business logic
- Full support of East Asian languages on the Windows terminal (both labels and master and transaction data)
- Multilingual display of user data (master data) on Windows terminal and on MES Operation Center

Integration of the Manufacturing Platform 1.1 (MIP)

As of HYDRA 8 MES Weaver 4.0_{pe}, HYDRA is operated on the Manufacturing Integration Platform (MIP).

The MIP provides basic services like:

- Persisting of data
- User administration

HYDRA 8 MES Weaver 4.0_{pe} connects HYDRA 8 with these basic services.

Apart from the MES system, you can also use mApps (manufacturing apps) of the platform if HYDRA 8 is operated with the MIP. In this case, you can even integrate your own solutions as mApps. MES Weaver 4.0_{pe} introduces you to the world of platforms.

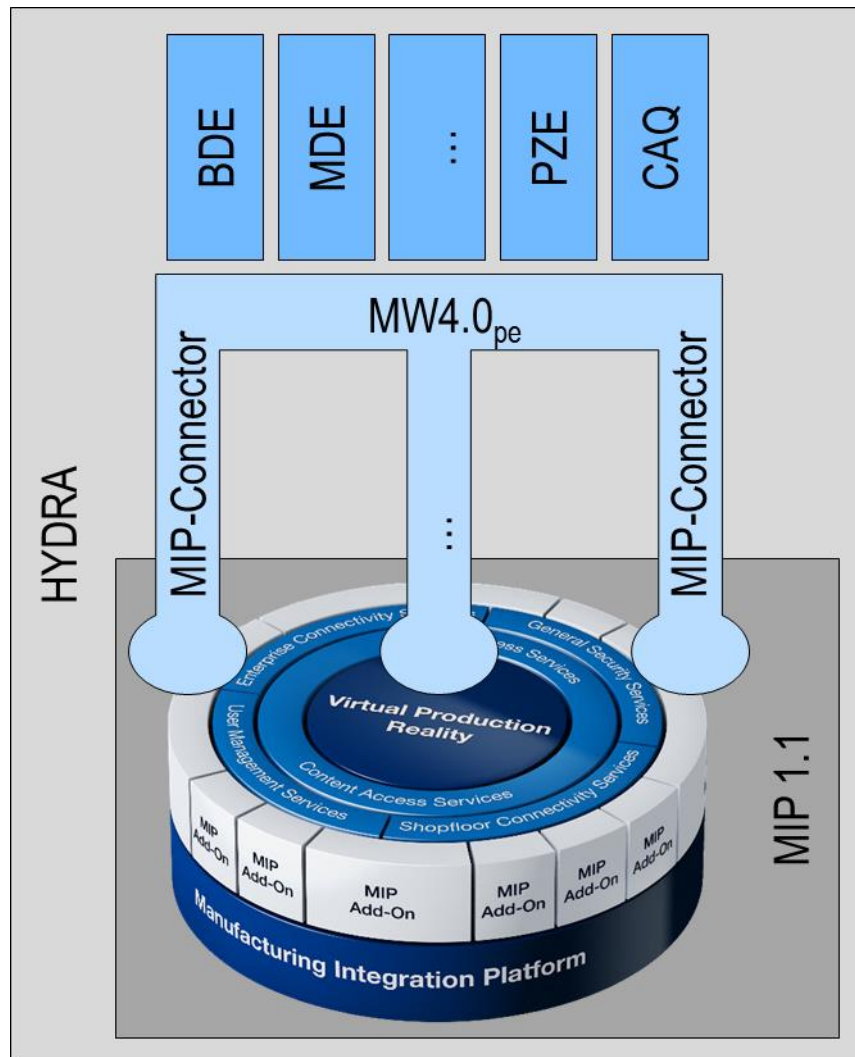


Figure 1: Integration MIP

The MIP product documentation provides further information on the MIP.

Control access to functions and data

A detailed control of access to functions and data with MES Weaver 4.0_{pe} is described in the following procedure [Role and authorization concept](#).

Unicode support

Unicode is an international standard that defines a long-term digital code for every meaningful character or text element in all known writing and script systems.

MES Weaver 4.0_{pe} supports on the server side (database and business logic) the use of Unicode, so that texts can be processed in different languages and stored in the HYDRA database.

The following fonts support UNICODE and hence the database and business logic of MES Weaver 4.0pe:

00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F	
20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F	
30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F	
40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F	
50	51	52	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F	
60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F	
70	71	72	73	74	75	76	77	78	79	7A	7B	7C	7D	7E	7F	
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F	
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F	
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF	
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF	
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF	
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF	
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF	
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF	

Latin scripts and symbols

Linguistic scripts

Other European scripts

African scripts

Middle Eastern and Southwest Asian scripts

Central Asian scripts

South Asian scripts

Southeast Asian scripts

East Asian scripts

Unified CJK Han

American scripts

Symbols

Diacritics

UTF-16 surrogates and private use

Miscellaneous characters

Unallocated code points

Full support of East Asian languages on the Windows terminal.

- The Windows terminal offers the complete support of the East Asian languages, both for **labels and master and transaction data**.
- The installed Windows operating system for the Windows terminal must provide the specific character set to display the labels as well as the master and transaction data.

Multi-lingual display of user data (master data) on the terminal and on the MES Operation Center.

- In addition to the native language of database contents, with MES Weaver 4.0_{pe} you can manage multilingual names of master data (e.g. machine names, status texts ...).
- The **terminal** requests the texts for the language used to configure the terminal. This makes it possible not only to operate a terminal on a German system, e.g. in England, with an English-language interface, but also to display the important names from the database in English.
- Just as is the case for the terminal, these multilingual texts may also be displayed **and edited** using the MES Operation Center.
- The number of supported languages is unlimited, which means all languages supported by HYDRA 8 MES Weaver 4.0_{pe} can be configured.
- There are no restrictions on the languages that can be displayed for UNICODE-compatible clients.
- The Windows terminal can also display East Asian languages. (*1)
- Multi-lingual master data can be edited using the System Text Configurator (STC). This means that a simple translation is possible.

(*1) Since English is a language without umlauts and all character sets display the Latin alphabet, English is available for all language configurations.

Note on the HYDRA server

All files are read or saved in UTF-8 format unless otherwise specified. Files or data displayed on the clients are converted to the client's character set. Since the clients can only display certain character sets, Unicode characters that have no equivalent in the client's character set are displayed with a question mark.

Please note the following:

- All files are stored on the server in a UTF-8 format. We do recommend to use a UTF-8 capable editor.
- If you wish to operate the SAP-FILE interface in a different way from UTF-8 in the national code page 1252, 1250, etc., you can do this by using the parameter /CP={Codepage}, e.g. /CP=CP-1252.
- File names and directory names should only contain letters and numbers of the Latin alphabet (no special characters, letters, and umlauts) on the server and client. You can find further information below:

-

Notes on the PCC

The PCC doesn't support Unicode but the national code pages. These can be both single-byte code pages (SBCS, e.g. Western Europe, Eastern Europe or Cyrillic) and multibyte code pages (MBCS, e.g. Chinese, Japanese or Korean).

Note the following restrictions for the PCC:

- The interface between PCC in the direction of the machine like the ones below, **doesn't** support national code pages:
 - PCC-ADP
 - PCC incl. driver

The data contents on this level are limited to the ASCII characters from 32dec to 127dec, essentially the characters like:

```
!"#$%&'()*+,-./0123456789:;<=>?  
@ABCDEFGHIJKLMNOPQRSTUVWXYZ[\]^  
`abcdefghijklmnopqrstuvwxyz{|}~
```


3 Maintenance Manager 2.0

Overview

The Maintenance Manager is a web based maintenance tool to manage HYDRA systems.

You use this tool to edit server and client components.

3.1 Purpose

Open the web front end browser in order to use the Maintenance Manager.

The address for the web front end is `http://ServerName:Port/` (e.g. `http://hydra:18080/` if the server is *hydra* and the standard port *18080* is used for the first system. Then port *18081*, ... for further systems).

3.2 Login

You have to log in to use the Maintenance Manager. Password for the login is:

Mosbach74821

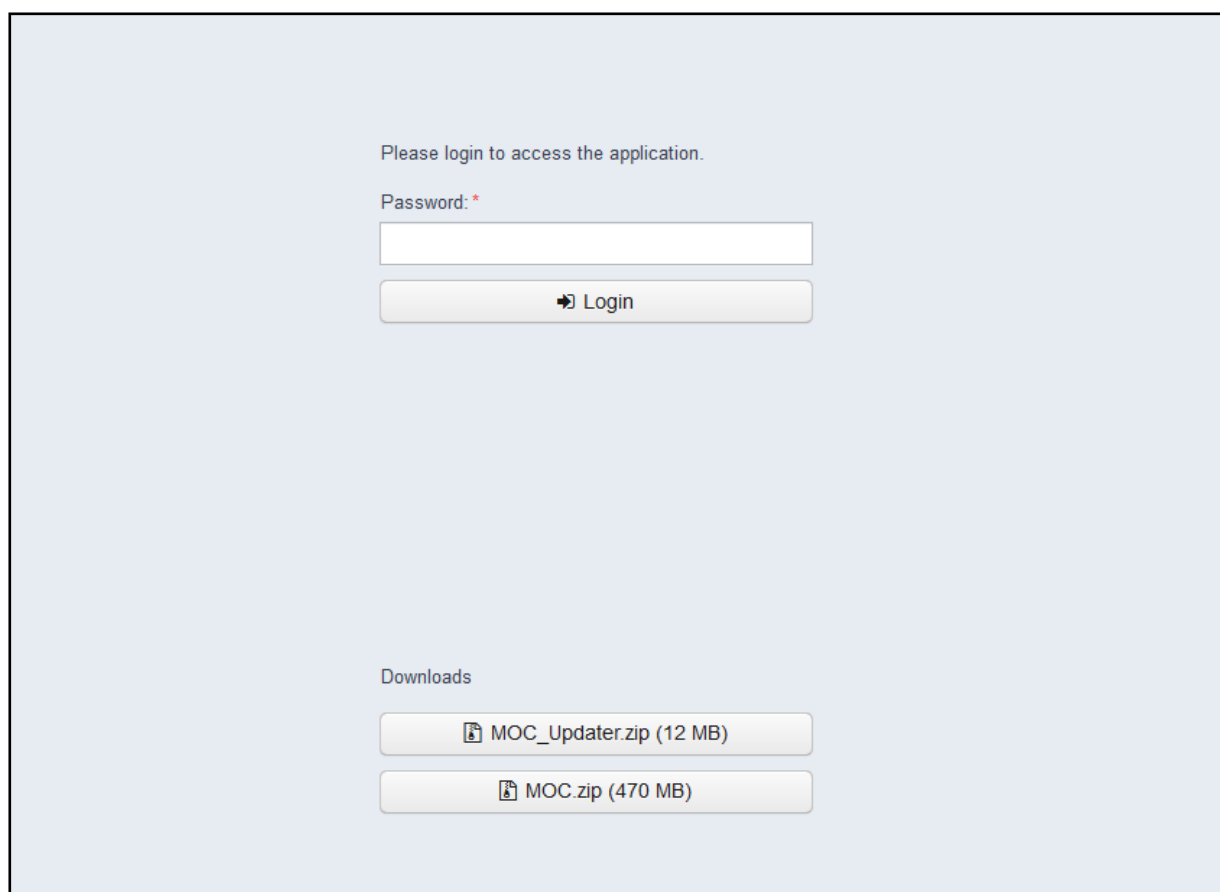


Figure 2: Login Maintenance Manager

After the login, the start page of the Maintenance Manager opens.



Figure 3 Main Page Maintenance Manager

3.3 Configuration

Menu item: Settings

Prior to use, you can configure the Maintenance Manager and adjust the manager to the conditions of the HYDRA system. The user can neglect the above if you use the relevant installation service.

However, the user must edit the following values in tab *System*:

Value	Description
WSP host	Host name of the WSP server
WSP port	Port of the WSP server
Tomcat path	Installation directory of the Tomcat
Tomcat version	Tomcat Version (compatible with 6 or 8)
Java version	Java Version (compatible with 5 or 8)

Optionally, you can define a directory that is read at regular intervals and that automatically reads update packages that have not yet been installed. For example, you can use a network share to update and/or install several systems with the same update packages.

Click the **Save** button to save the configuration.

Figure 4 System configuration

The tab *MOC settings* includes the settings to configure the MOC Updater. Use these settings to configure the process and input fields of the MOC Updater GUI. You can also specify whether users are allowed to change the fields in the MOC Updater GUI.

Figure 5: Configuration master server

Value	Description
Master host	Standard value of the host name of the master server that the

	MOC Updater uses during setup. Standard value: Identical with the host name of the Maintenance Manager. If several systems are available and only one master server is configured, this master server must be entered.
Master port	Standard value of the port of the master server that is used in the GUI of the MOC Updater during setup. Standard value: Identical with the port of the Maintenance Manager.
MOC root directory	Standard value of the target directory of the MOC installation that is used in the GUI of the MOC Updater during setup. Standard value: "C:\Program Files (x86)\MPDV\MOC"
Lock MOC root	The lock specifies if the user can change the GUI of the MOC Updater. Standard value: disabled
Path to ZIP archive	Standard value of the file path to the ZIP archive of the MOC installation that is used in the GUI of the MOC Updater during setup. Standard value: not specified
Lock ZIP path	The lock specifies if the user can change the path to the ZIP archive in the GUI of the MOC Updater. Standard value: disabled
Default setup source is zip	Activates the <i>ZIP archive</i> as standard value for the installation source in the GUI of the MOC Updater. Standard value: "Maintenance Manager"
Lock default setup source	The lock specifies if the user can change the value for the installation source in the GUI of the MOC Updater. Standard value: disabled
Days to keep backups	Specifies the duration (in days) of how long to keep the backups generated during update in the client. Standard value: 30

Shortcuts only for current user	This activates that the systems selects by default <i>only the currently logged on user</i>, when generating MOC links in the GUI of the MOC Updater. Standard value: "All users of this PC".
---------------------------------	---

Click *Rescan* to release the saved settings so that the MOC Updater can distribute and use these settings.

If you make changes to the *MOC* subdirectory of the *Runtime* directory, then you also have to click the *Rescan* button. This process is necessary for the MOC Updater to find and install the changes when searching for updates.

Click the *Save* button to save the configuration.

The *Logbook* tab provides information about the last deployments.

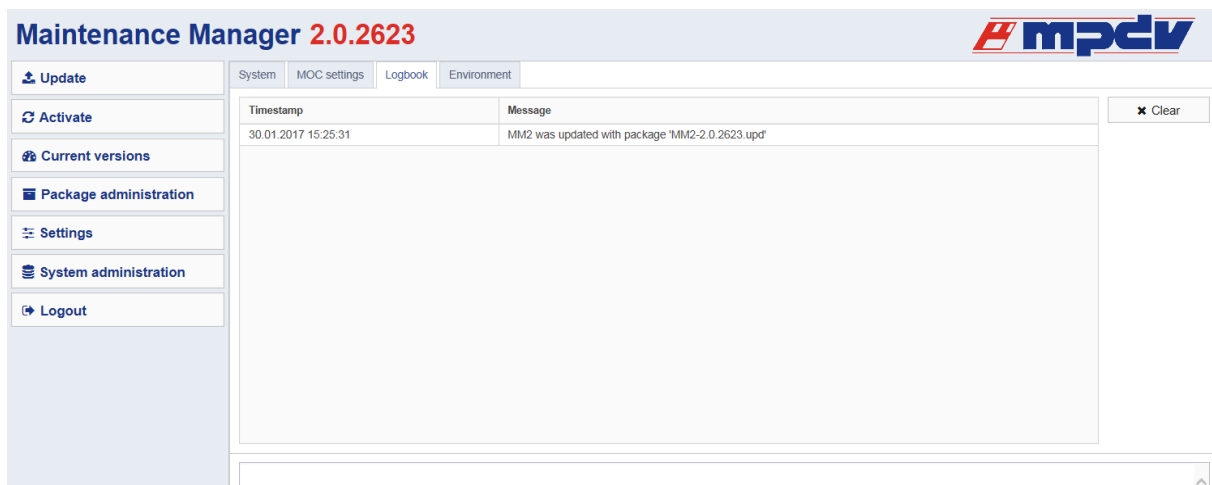


Figure 6: Information on the last installations.

The *Environment* tab shows the current environment variables.

Maintenance Manager 2.0.2623

Update

Activate

Current versions

Package administration

Settings

System administration

Logout

SystemMOC settingsLogbookEnvironment

Environment variables	Value
PROCESSOR_LEVEL	6
FP_NO_HOST_CHECK	NO
ALLUSERSPROFILE	C:\ProgramData
PROCESSOR_ARCHITECTURE	AMD64
PSModulePath	C:\Windows\system32\WindowsPowerShell\1.0\Modules\
SystemDrive	C:
vmArguments	-Xmx512m -Xms256m
=E:	E:\Hydra2\MM2
=ExitCode	00000000
HYLIB	d:\hylib8
USERNAME	SCC7\$
ProgramFiles(x86)	C:\Program Files (x86)
HYENTW	q\
PATHEXT	.COM;.EXE;.BAT;.CMD;.VBS;.VBE;.JS;.JSE;.WSF;.WSH;.MSC
SHELLOPTS	igncr
bootLogFile	/log/bootloog.txt
UNIXMACHINE	WINNT

Figure 7: Display of system settings

3.4 Package Deployment

3.4.1 General

Use the Maintenance Manager to install update packages for the HYDRA system. Such an update package may contain content for the client (MOC), the server, web services (JAVA) and updates for the Maintenance Manager itself.

Such an Update Package contains different types of packages.

- Client Updates for MOC
- Java Updates for web services
- Server Update for non-web service components of the server
- Maintenance Manager → Update of the Maintenance Manager

The different internal packages are installed for update according to their type.

3.4.2 Internal Package Types

3.4.2.1 Java

The Java software is located in the Tomcat "Web archive". This file has the extension **.war**. Web applications usually require further files (configurations, user exits, ...). These files are located in a subdirectory (e.g. MOC) that is specified by the environment variable JHYDRADIR.

In order to keep the update packages small, it is not always the complete web application that is exchanged but only the modified components.

3.4.2.2 Server

The server packages are the packages that have already been used with HYDRA 7. The packages are forwarded to the BAPI HYDRA.INSTALL which then manages the packages.

3.4.2.3 Client

The client software is managed and supplied for each domain. To execute the software in the client, a different structure is required.

For this reason the Maintenance Manager uses a split structure:

Updates	These are the individual update packages (containing one or several domains) installed in the Maintenance Manager. MaintenanceManager\upd\MOC
Runtime	This is the runtime version that the client requires to execute it. MaintenanceManager\rt\MOC

3.4.3 Deployment

Menu item: Update

The screen to deploy update packages contains only a button to select a file. The user must select the required update package. The button "Deploy package" installs the package in the Maintenance Manager. You can automatically activate the package if you select *Auto activate after deployment*. This option is selected by default.

IMPORTANT:

The function *Overwrite newer versions* is only available for Java components of the update package. Only use this function after consultation with MPDV.

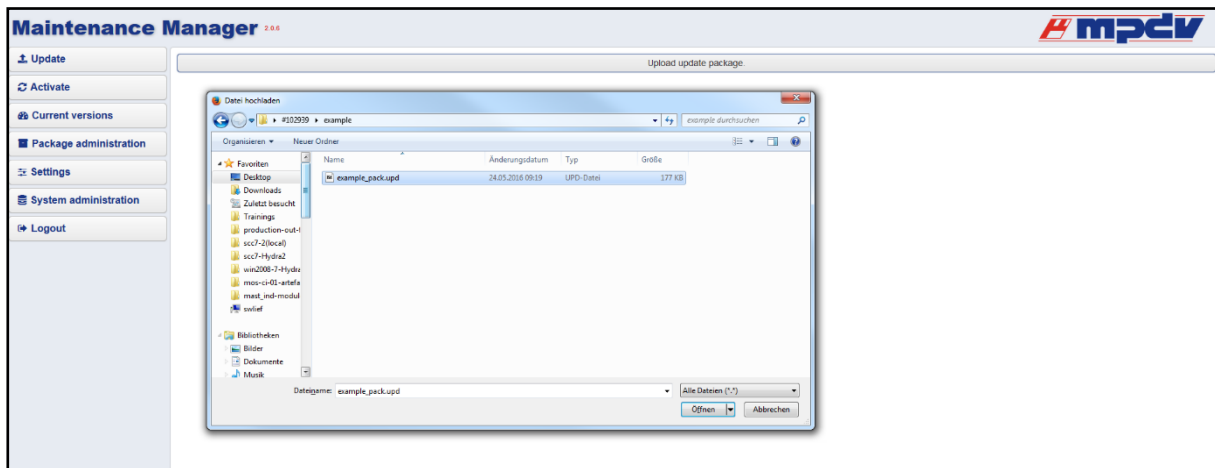


Figure 8: Selection of update package

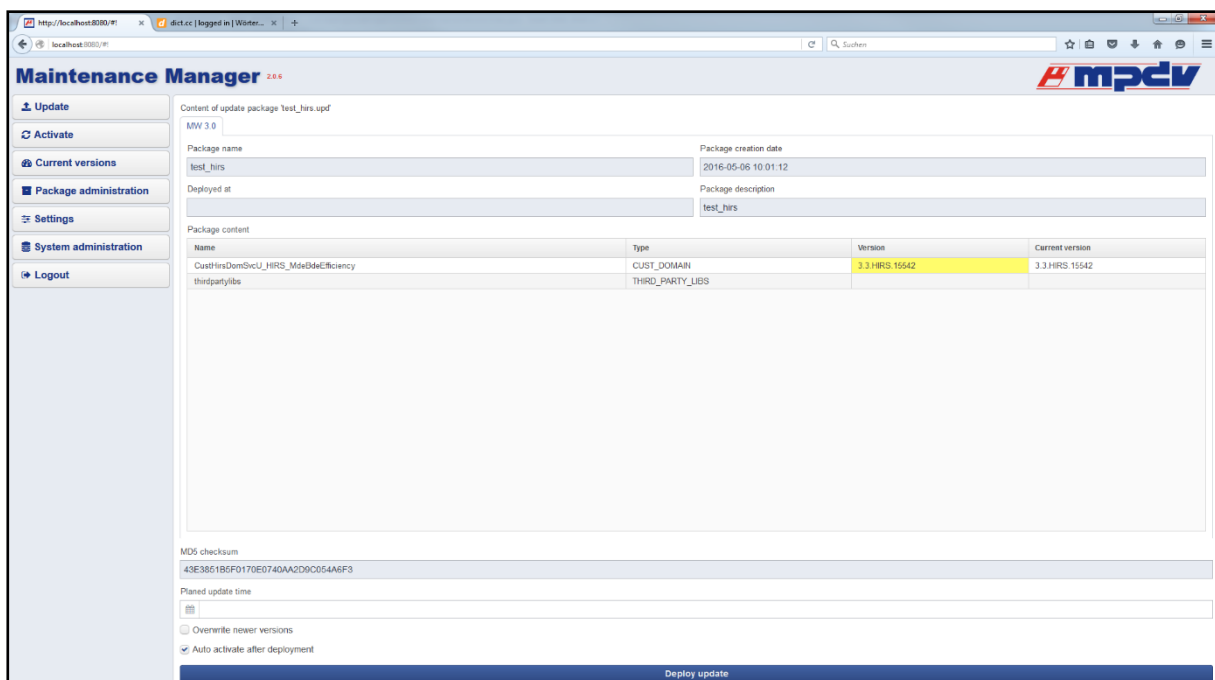


Figure 9: Deployment

During installation of update packages, the column *Version* of the included internal packages may be highlighted in color. If the column is highlighted in yellow, then the update package has the same version. If the column is highlighted in red, the shown version is older than the version of the already installed update package. In this case, the button *Deploy update* is blocked until the user selects *Overwrite newer versions*.

Maintenance Manager 2.0.7

Content of update package "PEP_0.upd"

MW 3.0

Package name: PEP_0

Package creation date: 2016-05-18 05:49:17

Deployed at:

Package description: PEP_0

Name	Type	Version	Current version
DumSrcSystem	DOMAIN	0.0 STD: 19343	0.0 STD: 19344
DumSrcPersonnelWorkplaceAssignment	DOMAIN	0.0 STD: 19394	0.0 STD: 19395
thirdpartylibs	THIRD_PARTY_LIBS		

Error: update Package contains older versions.

MDS checksum: 1B0A0733D7EDFD532BFF6B4998E0411E

Planned update time:

☐ Overwrite newer versions

☒ Auto activate after deployment

Deploy update

Figure 10: Installing older update packages

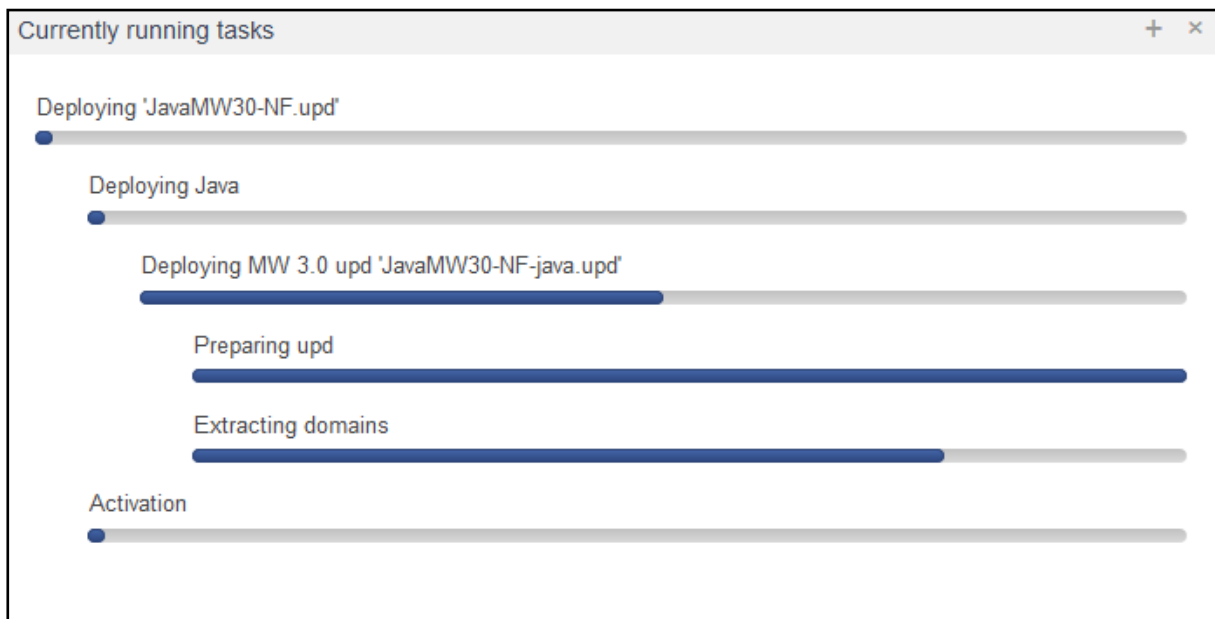


Figure 11: Progress during installation

3.4.4 Finishing an update

If you want to perform an update automatically at a specific point in time, select the required point in time for the update in the field *Planned update time* and confirm by clicking *Deploy update*.

Package administration

Settings

System administration

Logout

Calendar: März 2017

Name	Version	Current version
ArchiveReloadManager	1.1.STD.52176	
AssessmentManagement	1.1.STD.51266	1.1.STD.51266
BOBatch	2.14.STD.52461	2.14.STD.51476
BOOrder	1.9.STD.52869	
BOPerson	1.13.STD.51280	1.13.STD.51280
CAQCharts	2.9.STD.51014	2.9.STD.51014
ControlChart	1.8.STD.52645	
Escalation	1.5.STD.52577	
EvaluationAssessmentCriterion	1.1.STD.51185	1.1.STD.51185

MD5 checksum
9C07E1130379B16CEE7F4913759F3202

Planned update time
17.03.17 10:34

☐ This UPD contains domains with older versions! Older versions will be skipped! Check to accept overwriting newer version with older one

☒ Auto activate after deployment

Deploy update

Figure 12: Scheduling of an update

The menu item *Update* shows the planned update time. Cancel the planned update using the function *Cancel planned update*.

Status

Update

Activate

Current versions

Package administration

Settings

System administration

Logout

Planned update time for '2017-03-15_HYDRA8_SP10_MaintenancePack_903-Linux.upd'

17.03.17 10:34

Cancel planned update


Figure 13: Cancelling an update

Open the log of the update using the menu item *Settings/Logbook* to check if the update has been performed successfully.

You can only schedule one update at a time. If you must install several updates simultaneously, you must combine all packages in one.

3.4.5 Automatic installation of updates

You can install updates automatically. Define a directory in the network where the Maintenance Manager checks every 5 minutes if new packages are available that are not yet installed. If a new package is found, it is immediately installed. The update is automatically activated.

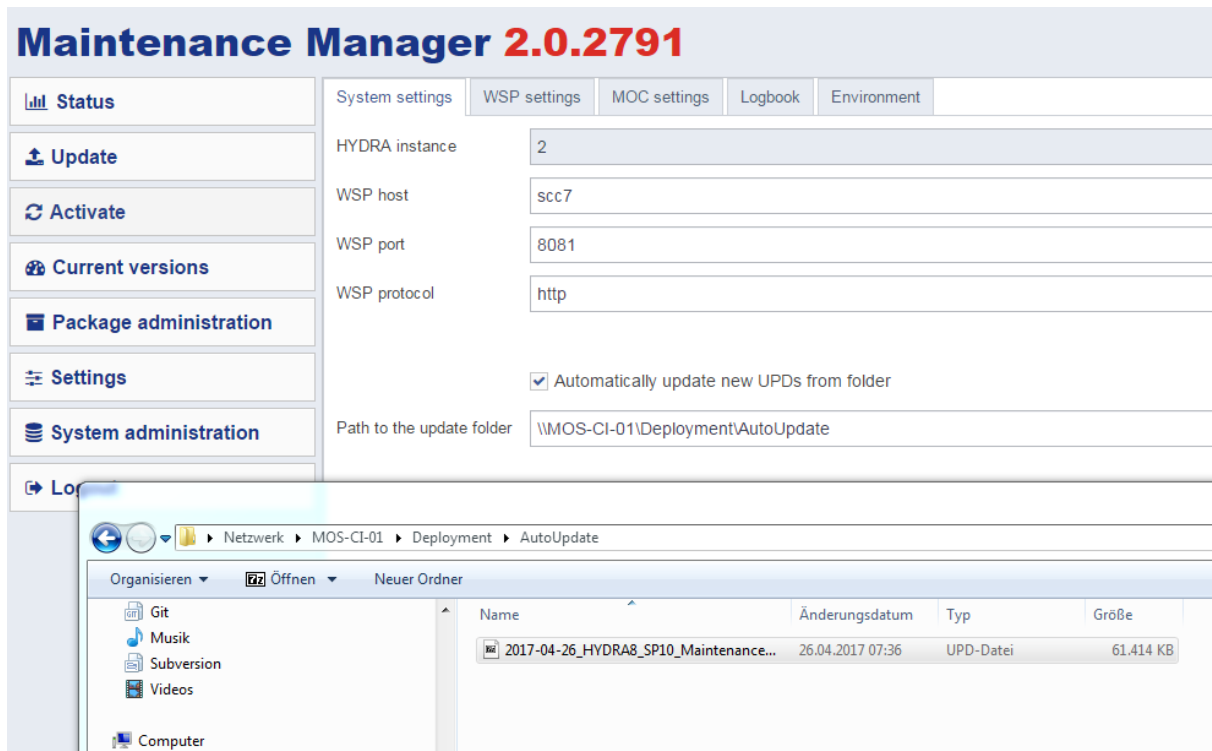

If several new UPDs are available in the directory, the packages are installed one by one. The oldest file is installed first.

3.5 Deployment

3.5.1 Administration of update packages

Menu item: Package administration

Tab: Server/Client

The process is the same for the deployment of client update packages and for Java update packages. If there are differences, then they are mentioned separately.

All updates installed in the Maintenance Manager are listed in the administration of update packages.

Whether or not an update package has been deployed to the runtime structure can be found in the content of the column *Deployed at*. If the update package has been deployed, then date and time of the update is shown in the column. If the update package has not been deployed to the runtime structure or has previously been undeployed, then the column remains empty. But the update package remains in the Maintenance Manager until it is finally deleted.

If the user selects an update package, detailed information is available for the package.

Depending on whether or not you have deployed an update package, the function *Deploy* or *Undeploy* is available. The deployment of an update package loads the contents into the local runtime structure. During the deployment, all files are saved that are overwritten by the content of the update package to enable an undeployment of the update package.

If the package that you want to deploy contains older versions than the runtime, the system queries if you want to deploy older versions nor not. **(Only carry out a deployment of older versions after consultation with MPDV!)** In case of a client undeployment, the versions are not checked as it might be required in some cases to change a component with an older version.

The undeployment removes the components of the update package from the runtime structure and replaces the components with the backup of the previously loaded update package.

You can only undeploy the last deployed update package because components of a newer update package might be overwritten during backup of the update package being currently undeployed.

Maintenance Manager 2.0.2623

WSP packages | MOC packages

Order	Package name	Deployed at
10	Cancel	2016-12-19 14:39:49
11	Cancel_1	2016-12-20 09:38:05
12	Cancel_3	2016-12-20 10:13:54
13	Cancel_5	2016-12-20 14:21:31
14	2016-12-20_JAE_FctMapping_Java_Core_Cust-java	2016-12-20 16:29:02
15	2016-12-22-TBA	2016-12-22 10:23:51
16	2016-12-22-201611026_POST_CUST-20161102_001-productionreporting-java	2016-12-22 15:55:02
17	2016-12-23_2_CleanupTicketVerification	2016-12-23 10:42:19
18	2016-12-28-Keyfigure-TBA	2016-12-28 08:27:00
19	2016-12-13_BOResource_Cust-java	2016-12-28 10:07:41
20	2016-12-21-201609194_STOR_ERW_CUST_EUROPA_001-productionreporting_Cust-java	2016-12-28 10:07:42
21	2017-01-03-#106869-resource-java	2017-01-03 10:13:54
22	2017-01-27-#107454-emg-archiving-java	2017-01-27 13:29:07
23	2017-01-27-#107464-operation-java	2017-01-27 14:44:42

Buttons: Delete, Undeploy, Deploy, Create UPD, Download UPD

Package details for 2017-01-27-#107464-operation-java:

- Package name: 2017-01-27-#107464-operation-java
- Package creation date: 2017-01-27 13:43:50
- Deployed at: 2017-01-27 14:44:42
- Package description: fixed filter for ordertype in material requirement list

Package content:

Name	Type	Version
DomSvcOperation	DOMAIN	1.28.STD.22143
thirdpartylibs	THIRD_PARTY_LIBS	

Figure 14: Undeployment of WSP Packages

Maintenance Manager 2.0.2623

WSP packages MOC packages

Order	Package name	Deployed at	
1	MW30-client	2016-12-14 09:58:03	Delete
2	2016-12-20_ResourceConfiguration_Client_Apps_1.14.51538-client	2016-12-20 16:29:06	Undeploy
3	2016-12-20_BOResource_Client_Apps_1.14.51536-client	2016-12-20 16:29:10	Deploy
4	2016-12-23_#106849-client	2016-12-23 11:49:42	Create UPD
5	2016-12-13_GraphicMachinery_Cust-client	2016-12-28 10:07:45	Download UPD
6	2016-12-27_STOR_U_STOR_PerformanceProfile_Client_Apps_1.0.51638_Cust-client	2016-12-28 10:07:49	
7	2016-12-27_STOR_STOR_Resources_Client_Apps_1.0.51633_Cust-client	2016-12-28 10:07:54	
8	2016-12-27_STOR_RPPProductionReporting_Client_Apps_1.0.51618_Cust-client	2016-12-28 10:07:58	
9	2016-12-27_STOR_U_STOR_PerformanceReport_Client_Apps_1.0.51621_Cust-client	2016-12-28 10:08:01	
10	2017-01-10_#106576-client	2017-01-10 15:11:46	
11	2017-01-24_#107032-client	2017-01-27 08:20:21	

Figure 15: Undeployment of MOC Packages

After undeployment, you can completely delete the update package. That deletes the backup of the update package. If the user has undeployed the update package, then the button *Delete* can be selected. Via *Delete* the update package is completely removed from the system.

Maintenance Manager 2.0.6

Server Client

Order	Package name	Deployed at	
1	JavaMW30-NF-java	2016-05-25 08:16:15	Delete
2	test_hirs		Undeploy

Package name: test_hirs Package creation date: 2016-05-06 10:01:12

Deployed at: Package description: test_hirs

Package content

Name	Type	Version
CustHirsDomSvcU_HIRS_MdeBdeEfficiency	CUST_DOMAIN	3.3.HIRS.15542
thirdpartylibs	THIRD_PARTY_LIBS	

Figure 16: Delete server update packages

Maintenance Manager 2.0.6

Server Client

Order	Package name	Deployed at	
1	2016-04-27_201602239_FLEX_CUST-20160217_001_NL_Cust-client		Delete Undeploy

Package name: 2016-04-27_201602239_FLEX_CUST-20160217_001_NL_Cust-client

Package creation date: 2016-04-27 07:30:08

Deployed at:

Package description: FLEX_ForemansChecklist_Client_Apps_1.2.45958

Package content

Name	Version
ForemansChecklist	1.2.FLEX.45958

Figure17: Delete client update packages

3.5.2 Creating update packages

You can combine and download update packages that have already been installed. For example, you can then install the packages in another system.

Select the update packages and click the function *Create UPD*. Use the function *Download UPD* to download the generated update package.

Generate separately the update package for the web service provider (WSP) and the update package for the MOC. To copy a system, you must generate a WSP package and an MOC package, both including all update packages, and install them all in the new system.

3.5.3 Activating the software status

Menu item: Activate

During the activation of the local runtime structure, all libraries are gathered into one web application. This application is activated in the Tomcat (if the application is already available, the old one is removed and replaced with the new one).

Then the files are automatically activated in JHYDRADIR.

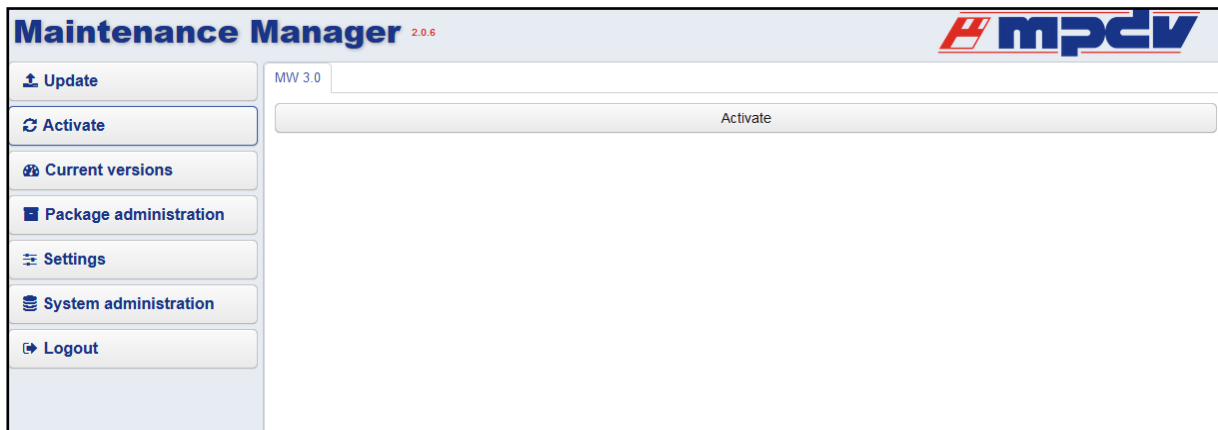


Figure 18: Activation of the software status

Use the button *Activate*.

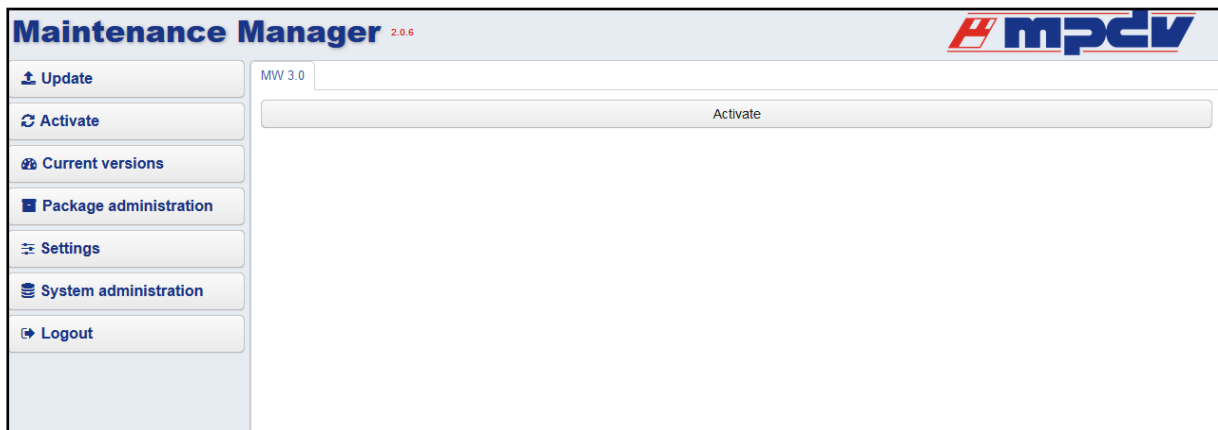


Figure 19: Activation update packages

The activation takes approx. 3-5 minutes and is then confirmed.

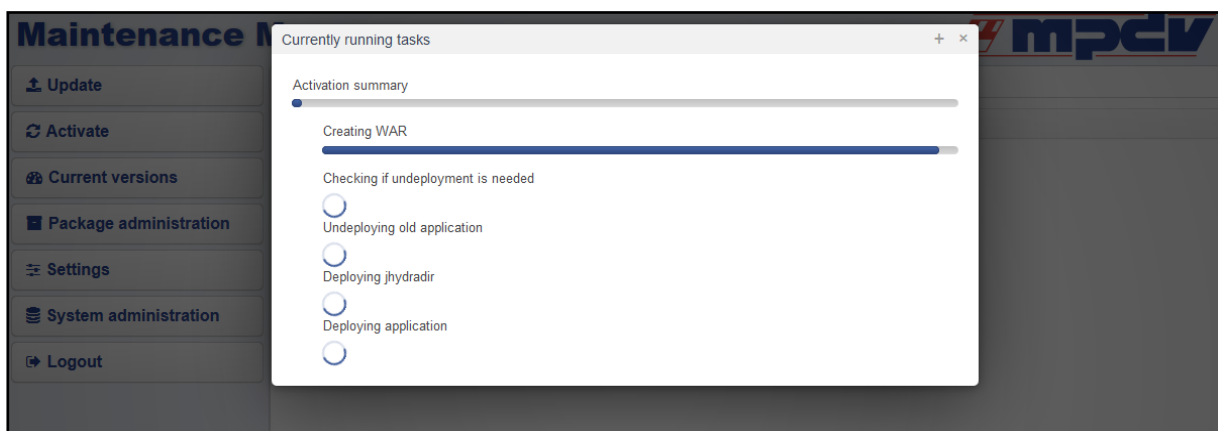


Figure 20: Progress during update

When using Tomcat 6, the activation might be interrupted if the server is overloaded due to an increased number of activation processes. In this case, an error message occurs. Any other activations are only available after a restart.

3.6 Other functions

3.6.1 Request version of the Java components

Menu item: **Current versions** → **WSP versions**

The version request provides the following data:

- Component name
- Component title
- Component version
- Supplier (vendor) of the component
- Modified on (date of component change)

Maintenance Manager 2.0.2623						mpdv	
Update Activate Current versions Package administration Settings System administration Logout	WSP versions		MOC versions				
	File name	Title	Version	Vendor	Change date		
	commons-email-1.4.jar	Apache Commons Email	1.4	The Apache Software Foundation			
	MpdvCagHistogram.jar	CagHistogram	1.3.STD.15439	MPDV Mikrolab GmbH	06/03/2015 01:30 PM		
	MpdvCommonContractsPort.jar	CommonContractsPort	1.4.STD.21287	MPDV Mikrolab GmbH	11/11/2016 02:43 PM		
	MpdvCommonDigMapperPort.jar	CommonDigMapperPort	1.0.STD.19225	MPDV Mikrolab GmbH	05/09/2016 02:19 PM		
	MpdvCommonLoggerCorePort.jar	CommonLoggerCorePort	1.0.STD.13322	MPDV Mikrolab GmbH	11/14/2014 10:00 AM		
	MpdvCommonPdvUtilPort.jar	CommonPdvUtilPort	1.0.STD.17404	MPDV Mikrolab GmbH	11/12/2015 10:28 AM		
	MpdvCommonResultTransformerPort.jar	CommonResultTransformerPort	1.3.STD.19226	MPDV Mikrolab GmbH	05/09/2016 02:19 PM		
	MpdvCommonRhinoLib.jar	CommonRhinoLib	1.0.STD.15287	MPDV Mikrolab GmbH	05/13/2015 11:32 AM		
	MpdvCommonServiceDomainParser.jar	CommonServiceDomainParser	1.2.STD.15224	MPDV Mikrolab GmbH	05/13/2015 10:19 AM		
	MpdvCommonSqlGeneratorPort.jar	CommonSqlGeneratorPort	1.2.STD.15227	MPDV Mikrolab GmbH	05/13/2015 10:20 AM		
	MpdvCommonSqlSelectServiceInterpreter2Port.jar	CommonSqlSelectServiceInterpreter2Port	1.4.STD.19227	MPDV Mikrolab GmbH	05/09/2016 02:19 PM		
	MpdvCommonTntPort.jar	CommonTntPort	1.5.STD.21251	MPDV Mikrolab GmbH	11/09/2016 04:38 PM		
	MpdvCommonTransformationTypeManagerPort.jar	CommonTransformationTypeManagerPort	1.4.STD.17786	MPDV Mikrolab GmbH	12/03/2015 02:24 PM		
	MpdvCommonUtilPort.jar	CommonUtilPort	1.5.STD.17387	MPDV Mikrolab GmbH	11/12/2015 10:23 AM		
	MpdvCommonWorkflowCore.jar	CommonWorkflowCore	1.1.STD.15231	MPDV Mikrolab GmbH	05/13/2015 10:20 AM		
	commons-collections-3.2.1.jar	Commons Collections	3.2.1	The Apache Software Foundation			
	commons-compress-1.4.jar	Commons Compress	1.4	The Apache Software Foundation			
	commons-net-ftp-2.0.jar	Commons Net	2.0	The Apache Software Foundation			
	MpdvCustJaeDomCoreFctMapping.jar	CustJaeDomCoreFctMapping	1.0.JAE.21745	MPDV Mikrolab GmbH	12/20/2016 04:40 PM		
	MpdvCustSbauDomSvcEfficiencyReport.jar	CustSbauDomSvcEfficiencyReport	1.0.SBAU.21709	MPDV Mikrolab GmbH	12/15/2016 11:11 AM		
	MpdvCustStorDomSvcBOResource.jar	CustStorDomSvcBOResource	1.0.STOR.21696	MPDV Mikrolab GmbH	12/13/2016 01:34 PM		
	MpdvCustStorDomSvcProductionReporting.jar	CustStorDomSvcProductionReporting	1.0.STOR.21778	MPDV Mikrolab GmbH	12/21/2016 05:03 PM		
	MpdvDomCoreBusinessService.jar	DomCoreBusinessService	1.47.STD.22121	MPDV Mikrolab GmbH	01/27/2017 11:17 AM		
	MpdvDomCoreCagHistogram.jar	DomCoreCagHistogram	MOC-MW30.svn-r	MPDV Mikrolab GmbH	08/15/2011 10:35 AM		


Figure 21: Version information WSP

A comparison of versions provides the same data for the versions in the runtime structure and for active versions.

3.6.2 Request version of the client components

The version request provides the following data:

- Component name
- Component title

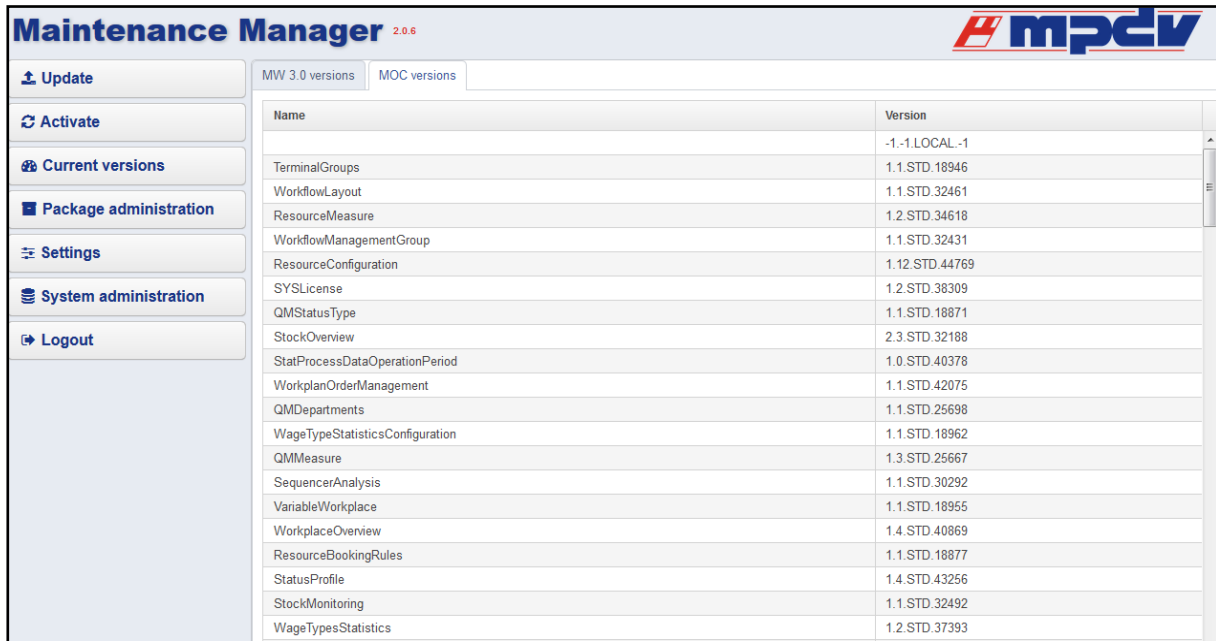


Name	Version
	-1.-1.LOCAL -1
TerminalGroups	1.1.STD.18946
WorkflowLayout	1.1.STD.32461
ResourceMeasure	1.2.STD.34618
WorkflowManagementGroup	1.1.STD.32431
ResourceConfiguration	1.12.STD.44769
SYSLicense	1.2.STD.38309
QMStatusType	1.1.STD.18871
StockOverview	2.3.STD.32188
StatProcessDataOperationPeriod	1.0.STD.40378
WorkplanOrderManagement	1.1.STD.42075
QMDepartments	1.1.STD.25698
WageTypeStatisticsConfiguration	1.1.STD.18962
QMMeasure	1.3.STD.25667
SequencerAnalysis	1.1.STD.30292
VariableWorkplace	1.1.STD.18955
WorkplaceOverview	1.4.STD.40869
ResourceBookingRules	1.1.STD.18877
StatusProfile	1.4.STD.43256
StockMonitoring	1.1.STD.32492
WageTypesStatistics	1.2.STD.37393

Figure 22: Version information MOC

3.6.3 Administration

Menu item: System administration → Path configuration

The menu point *System Administration* contains functions to maintain HYDRA paths and to manage logged users. This area of the application requires access data of a HYDRA user.

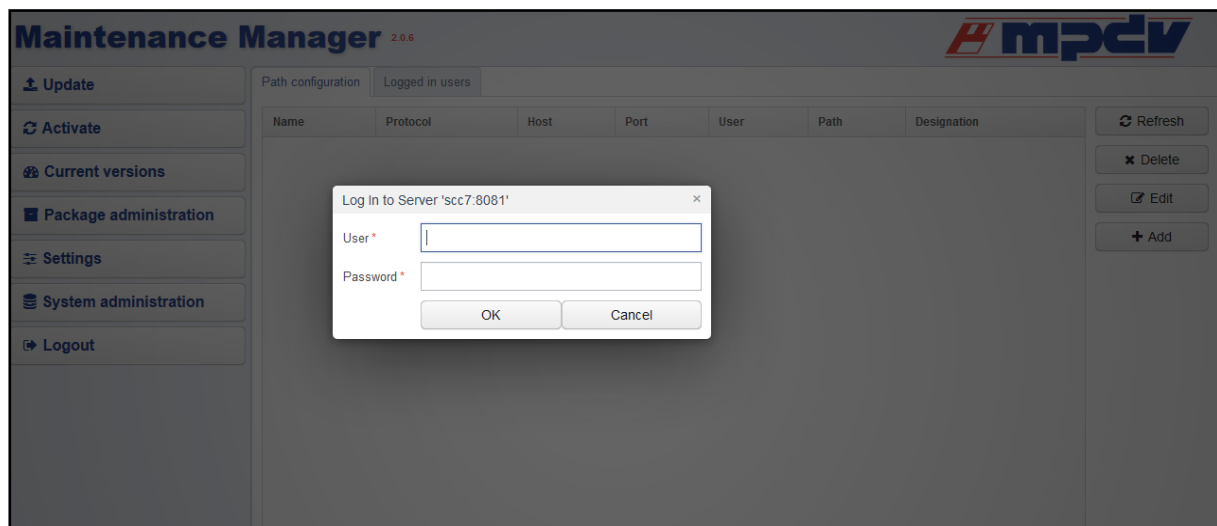

3.6.3.1 Editing HYDRA paths

Use the *Path configuration* of the Maintenance Manager to view, create, edit, delete, and copy HYDRA paths. In the path configuration of the Maintenance Manager, you can edit the same fields as in the HYDRA path configuration. The *HYDRA Documentation* can be used to describe the values.

Menu item: **System administration** → **Path configuration**

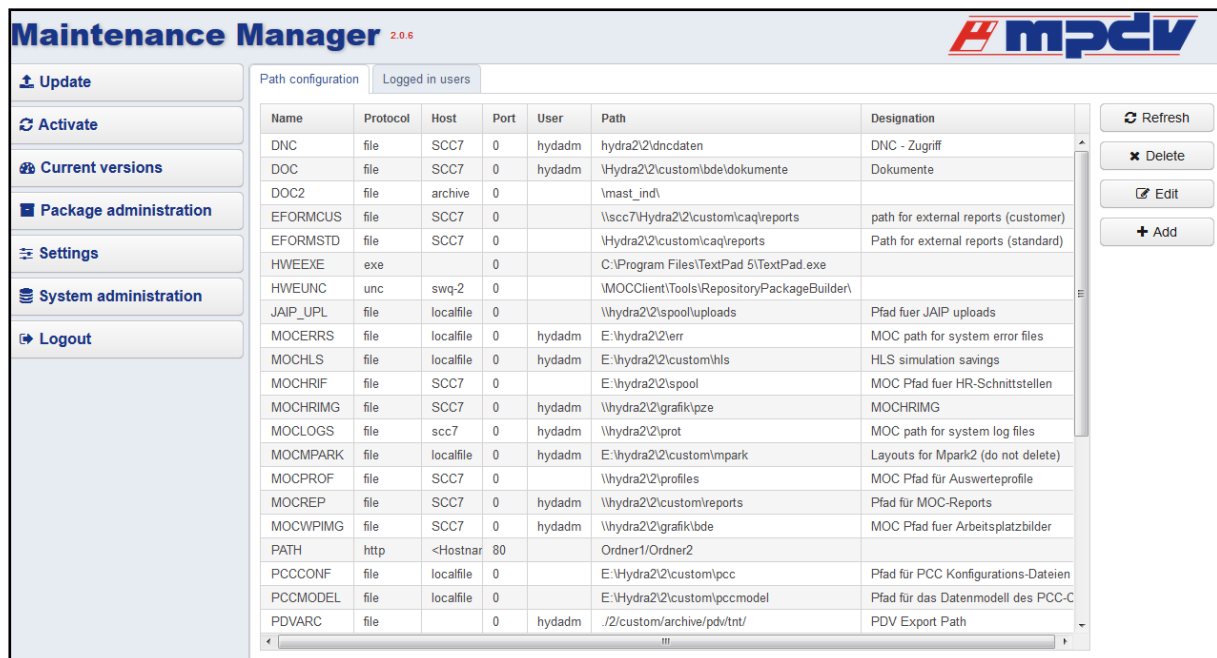


Figure 23: Maintenance of HYDRA paths

3.6.3.2 Administration of logged in users

Menu item: **System administration** → **Logged in users**

Open the administration of logged in users to lock other users in the current Maintenance Manager.

Login by	Device ID	Last active	Login time	Session ID
12345	MH-WS-04	2016-05-25 09:18:52	2016-05-25 08:44:59	b290c7c7-700a-4834-9f2e-9eabd6590e39
12345	MM2	2016-05-25 09:23:17	2016-05-25 09:23:17	3181efa3-61e6-4933-a78d-b6c1dc10e4a1
12345	SIE-NB-04	2016-05-25 09:18:52	2016-05-25 06:41:23	aaec06af-6720-4a7d-bb71-39318d142c6d
12345	TTH-NB-01	2016-05-25 09:21:37	2016-05-25 09:21:37	b159d03d-0fe4-4ace-b63e-eddbfec10007
12345	SFR-NB-01	2016-05-25 09:18:52	2016-05-25 09:06:34	cf00fde5-1fde-44d1-87af-9835be24b817

Figure 24: Administration of logged in users

Click *Logout* to log off the selected users. You can select multiple users (CTRL + mouse click).

Logout all logs off all users logged in.

A confirmation prompt is displayed for both functions.

Logged in users

Cancel the selected sessions?

Yes No

Figure 25 Confirmation prompt

4 Multilingual Database Contents

Overview

This document describes how the multilingual display of user data (master data) is processed.

- In addition to the native language of database contents, multilingual designations of master data (e.g. machine designations, status texts, ...) can be managed in MW 3.0.
- The **terminal** requests the texts in the language that is configured for the terminal. This makes it possible not only to operate a terminal on a German system, e.g. in England, with an English-language GUI, but also to display the important names from the database in English.
- Just as is the case for the terminal, these multilingual texts may also be displayed **and edited** using the MES Operation Center.
- It is possible to activate up to 8 languages at the same time which are supported by HYDRA-MW 3.0.
- There are no restrictions as regards the languages that can be displayed for clients that are compatible with Unicode.
- The Windows terminal can also display East Asian languages. (*1)
- Multi-lingual master data can be edited using the System Text Configurator (STC). This means that a simple translation is possible.
- HYDRA partially also delivers initial data that include texts in the native column. These texts have to be translated by way of STC.

(*1) Since English is a language without umlauts and all character sets display the Latin alphabet, English is available for all language configurations.

Available languages

At the moment MESWeaver 3.0 supports the languages listed in the following paragraph for which the "multilingual database contents" functions can also be provided:

- German
- English

- Dutch
- French
- Danish
- Czech
- Spanish
- Portuguese
- Bulgarian
- Polish
- Slovenian
- Hungarian
- Slovak
- Romanian
- Chinese,Simplified
- Italian
- Russian
- Serbian,Cyrillic
- Swedish
- Norwegian
- Croatian
- Japanese
- Korean

Activation

The multilingual database content functions are generally available (short: MDBI). The languages concerned that are to support the MDBI function have to be prepared and activated explicitly by MPDV Implementing.

Functions

In addition to the native language of database contents, MW 3.0 allows for multilingual designations of master data (e.g. machine designations, status texts, ...) to be managed. These multilingual master data may be administered and translated via the system text configurator (STC). If the required language is prepared (configured, activated and translated) for MDBI access to language-specific master data is activated and represented when the clients are started (or when languages are switched at the console).

Administration table

Active and inactive MDBI languages are managed in the **hyd_languages** table. Here, the required configurations are defined.

Only MPDV Implementation is responsible for managing the languages (activation/deactivation).

Schema

Field name	Type	Size	Description
language_id	smallint	-	Unique language index e.g. 6 for Czech
language_iso	char	2	Language key according to ISO code 639 e.g. "cs" for Czech
language_ui	char	10	Language of the user interface e.g. "cs-CZ" for Czech
language_cp	char	6	Windows codepage of the language e.g. 1250 for Eastern European
language_ml	char	80	Multilingual language designation (English), e.g. "Czech" for Czech
language_name	char	80	Language-specific designation in the character set of the respective language e.g. "Česky" for Czech
active	char	1	Y ... activated N ... deactivated (by default) → "This field is configured by MPDV during implementation/customization and must not be changed manually."
sbcs	char	1	Single Byte Character Set Y/N
language_def	smallint	-	Language index of the default language

Index:

create unique index ix_langid on hyd_languages (language_id);

Default configuration

The following MDBI configuration is created when the HYDRA database is being built:

ID	ISO	CP	ML	ACTIVE	SBCS	DEF
01	de	1252	German	N	Y	00
02	en	1252	English	N	Y	00
03	nl	1252	Dutch	N	Y	02
04	fr	1252	French	N	Y	02
05	da	1252	Danish	N	Y	02
06	cs	1250	Czech	N	Y	02
07	es	1252	Spanish	N	Y	02
08	pt	1252	Portuguese	N	Y	02
09	bg	1250	Bulgarian	N	Y	02
10	pl	1250	Polish	N	Y	02
11	sl	1250	Slovenian	N	Y	02
12	hu	1250	Hungarian	N	Y	02
13	sk	1250	Slovak	N	Y	02
14	ro	1250	Romanian	N	Y	02
15	zh	936	Chinese, Simplified	N	N	02
17	it	1252	Italian	N	Y	02
18	ru	1251	Russian	N	Y	02
19	sr	1251	Serbian, Cyrillic	N	Y	02
20	sv	1252	swedish	N	Y	02
21	no	1252	Norwegian	N	Y	02
22	hr	1250	Croatian	N	Y	02
23	ja	932	Japanese	N	N	02
24	ko	949	Korean	N	N	02

MPDV changes this configuration during the implementation process according to the customer's requirements..

Implementing of MDBI functions

MPDV activates the steps required to support MDBI functions during implementing.

→Overview of multilingual columns

The following table shows the supported table columns for which MDBI functions are available:

Implementation	Comment
HR Multilingual configuration of account designations	Accounts are displayed in the corresponding language (terminal info, time sheet, account lists)
HR Multilingual configuration of the designation of remuneration day types	Designations are displayed in the corresponding language (time sheet, personnel scheduling)

HR Multilingual configuration of the designation of absence reasons	Designations are displayed in the corresponding language (display of latest clockings at the terminal, absence reason list)	
PEP Multilingual configuration of qualification designations	Designations are displayed in the corresponding language (HYDRA-PEP on user interface, personnel schedule is displayed on the terminal):	
HYD Designation of units	• Configuration of units • No other dialogs in which the designation is displayed (only the abbreviation is displayed)	
MDE Workplace configuration: Designation, comment	• Workplace configuration • Designations are displayed on the console ○	
MDE Designation of machine status texts	• Configuration • The designation is displayed in the corresponding language ○ Machine overview ○ Machine overview: combo box ○ Order overview ○ Machine status log ○ Event maintenance ○ Status/Status classes/RPA ○ Status/Status classes/RPA: Combobox ○ • Terminal display	
MDE Designation of status classes	• Configuration • The designation is displayed in the corresponding language	

	○ Machine overview ○ Order overview ○ Machine status log ○ Maintenance of postings ○ Event maintenance ○ Downtimes of one/several machines	
BDE Designation of resource performance accounts	• Multilingual configuration of account designations and abbreviations • The designation is displayed in the corresponding language ○ MDE: Status/Status classes/RPA: all tabs ○ MDE: Status/status classes/RPA: RPA profile (column heading) ○ ADE: versatile dialogs (column headings)	
BDE Designation of order status texts	• Multilingual configuration of the designation of order status texts • The designation is displayed in the corresponding language ○ ADE: versatile combo boxes (e.g. order overview, schedule violations, ...) ○ ADE: Order overview: list ○ ADE: Order information ○ ADE: Change status ○ ADE: AVG	
BDE: Designation of reason texts	• Multilingual configuration of reason text designations (deviation reasons, scrap reasons, problem quantity reason, rework reason) • The designation is displayed in the corresponding language	

	○ Scrap statistic based on orders/machines ○ Article statistics ○ Maintenance of postings ○ Event maintenance • Terminal display	
BDE Order type designation	• Multilingual configuration of order type designations • Designations are displayed in the corresponding language in HYDRA-ADE (e.g. order overview, schedule violations)	
WRM Resource type	• Multilingual configuration of resource type descriptions • Designations are displayed in the corresponding language (resource status, resource information, maintenance of resource documents, resource history) • Terminal display	
WRM Resource families	• Multilingual configuration of resource family descriptions • Displayed in versatile evaluations/reports on the console • Terminal display	
WRM Measures	• Multilingual configuration of designations of measures, descriptions and comments • Displayed in versatile evaluations/reports on the console • Entry function of measures on the console • Terminal display	

WRM Designation of status assignment	• Multilingual configuration of the designation of status assignments • Display of the designation in the respective language (resource status, maintenance of resource documents) • Terminal display	
WRM Maintenances	• Multilingual configuration of maintenance designations as well as comments • Display in versatile evaluations on the console, among other things, the machine history, resource history, maintenance	
MPL Material types	• Multilingual configuration of the designation • Displayed in versatile evaluations/reports on the console	
MPL/WRM Material buffers/storage locations	• Multilingual configuration of material buffer designations • Displayed in versatile evaluations/reports on the console • Terminal display	
MPL Transport units	• Multilingual configuration of the designations of transport units	
MPL Material type designation	• Multilingual configuration of material type designations • Designations are displayed in the corresponding language (batch data overview, batch data maintenance)	
MPL Designation of material attributes	• Multilingual configuration of material attribute designations • Designations are displayed in the corresponding language (batch	

	data overview, batch data maintenance)	
CAQ Short designation of statuses	• Displayed in many HYDRA-CAQ search dialogs	
CAQ Detailed designation of HYDRA-CAQ statuses	• Displayed in many master data catalogs • Displayed in nearly all dialogs in the "areas" menu item • Display in evaluations/reports	
CAQ Short designation of the area	• Short designation of HYDRA-CAQ areas	
CAQ Detailed designation of the area	• Display in the terminal configuration of the CAQ tab • Display in inspection planning • Inspection requirements/calibration • In all evaluations/reports	
Detailed designations of HYDRA-CAQ status types	• Initial sample inspection	
CAQ Designation of forms	• Displayed in master data, forms • Displayed in all dialogs from which forms can be printed	
CAQ Form descriptions	• Displayed in master data, forms • Displayed in all dialogs from which forms can be printed	
CAQ Dynamic modification norm	• Display in dynamic modification norms • Inspection plans (WEP) • Characteristics (WEP) • Inspection orders (WEP)	
CAQ Designation of inspection severity definition	• Displayed in master data, inspection severity definition	

	• Inspection plans (WEP) • Characteristics (WEP) • Inspection orders (WEP)	
CAQ Designation of inspection severity	• Displayed in entries of inspection severity definitions • Inspection plans (WEP) • Characteristics (WEP) • Inspection orders (WEP)	
CAQ Designation of transitional definitions	• Displayed in master data, transitional definitions • Inspection plans (WEP) • Characteristics (WEP) • Inspection orders (WEP)	
CAQ Characteristic designation	• Displayed in master data catalog of characteristics • Inspection plan characteristics • Inspection order characteristics • PLP characteristics • EMU characteristics • Complaint details of characteristics	
CAQ Characteristic location	• Displayed in master data catalog of characteristics • Inspection plan characteristics • Inspection order characteristics • PLP characteristics • EMU characteristics • Complaint details of characteristics • Terminal	

CAQ Gage designation	• Displayed in gage master data, gage management • Characteristics • Terminal	
CAQ Designation of inspection station	• Displayed in characteristics	
CAQ Article designation	• Displayed in master data articles • Inspection plans • Inspection requirements • Complaint details	
CAQ Defect designation	• Displayed in master data defect catalogs	
CAQ Designation of measures	• Displayed in master data, measures • Evaluation of measures • Complaint header • Complaint details	
CAQ Measure text	• Master data of measures	
CAQ Document designation	• Master data characteristics • Inspection plan header • Inspection requirement header • Inspection plan characteristics • Inspection order characteristics • Test equipment management • Complaint header and details	
CAQ Document entries	•	
CAQ Documents	•	

CAQ Cost type designation	• Displayed in master data, cost types • Complaint header • Complaint details	
CAQ MDI channel designation	• Displayed in master data, MDI configuration	
CAQ Workflow Element designation	• Displayed in master data, workflow • Complaint header workflow • Complaint detail workflow	
CAQ Workflow Measure text	• Workflow element (master data, complaint detail, complaint header)	
CAQ Designation of analysis selection catalog	• Displayed in master data, analysis selection catalog • Displayed in characteristics	
CAQ Evaluation catalog, designation of the entry	• Supplier evaluation and • master data evaluation catalog	
CAQ Designation of evaluation groups	• Supplier evaluation and • master data evaluation catalog	
CAQ Designation of evaluation elements	• Displayed in evaluation catalogs - -> entries	
CAQ Evaluation catalog number	• Displayed in evaluation catalogs	
CAQ Designation of evaluation classes	• Displayed in evaluation catalogs - -> classes	
CAQ Designation of certificate characteristics	• Displayed in inspection plan --> certificates	
CAQ	• Displayed in master data	

Designation of distributor		
CAQ Designation of companies	• Displayed in master data, company • Inspection requirements • Test equipment management • When the responsible parties are assigned. • External persons	
CAQ Company's country of residence	• Displayed in master data, company catalog	
CAQ Designation of department	• Displayed in master data, department • When the responsible parties are assigned. • External persons	
CAQ Party in charge name 1	• Displayed in all dialogs where parties in charge may be selected	
CAQ Party in charge name 2	• Displayed in all dialogs where parties in charge may be selected	
CAQ Party in charge name 3	• Displayed in all dialogs where parties in charge may be selected	
CAQ Designation of units	• Currently not displayed •	
MOC Administration		
MDE Resource status types	• Displayed in the resource status type dialog (MOC)	
MDE Resource status texts	• Displayed in resource status texts dialog (MOC)	
MDE Production levels	• Configuration • The designation is displayed in the corresponding language	

SYS Enhanced object configuration	• Configuration • The designation is displayed in the corresponding language	
MDE Machine counter	• Configuration (MOC) • The designation is displayed in the corresponding language (MOC)	
PDV Event designation	• Configuration (MOC) • The designation is displayed in the corresponding language (MOC)	
CAQ QM catalog	• Configuration (console) • The designation is displayed in the corresponding language (CTAIP)	

Translation of database texts for MDBI

Initial database texts are translated by way of the “System Text Configurator” tool.

This tool makes it possible to translate a specified amount of database texts manually and in a semi-automated way using data from the HYDRA dictionary.

The tool is stored in the following directory on the HYDRA server:

UNIX: <HYDRADIR>/admtools/systemtextconfigurator

Windows: <HYDRA>\admtools\systemtextconfigurator

MpdvStc.jar

The documentation dealing with the tool can be found in the following directory:

UNIX: <HYDRADIR>/admtools/systemtextconfigurator/help

Windows: <HYDRA>\admtools\systemtextconfigurator\help

Before the STC tool is used, it has to be configured according to the documentation (e.g. DB-Connection).

Annex

- A Internal description of the HYD-MDBI function**
- B Initialization of new columns**
- C Further creation/checking of MDBI columns**
- D Disabling of MDBI languages**

5 Password of the HYDRA Database

Overview

HYDRA uses a separate database user and database password to access the corresponding database system. The database user "hydadm" is created along with a default password if it is a HYDRA standard installation.

This document describes how the database password can be changed on the database level and how HYDRA is informed about the password in encrypted manner.

The database password is transferred to the HYDRA console in an encrypted form; this prevents the database password from being read in an uncoded manner on the server or the client.

References to other documentation

Changing the HYDRA DB user password

Notes



Oracle and SQL server have a **separate user administration**. Consequently, the database user hydadm is not identical to the HYDRA administrator (hydadm).

Password change

The password of the HYDRA DB user "hydadm" can be changed as follows:

1. Exit HYDRA using the HYDRA Manager
2. Change the password as follows:

→ **ORACLE**

The database user is not identical to the HYDRA administrator (hydadm).

Start sqlplus and log in as user hydadm.

d:\hydra> **sqlplus**

Enter password and upon request, enter the old and the new password incl. confirmation (Syntax PASSW[ORD] [username]):

SQL> **password**

Changes the password for HYDADM

Old password: *****

New password: *****

Enter the new password once more: *****

SQL> **exit**

→ **SQL Server**

Start the SQL Server Enterprise Manager. Choose the server from the left-hand side. Select "security" and click the "user name". In the detail area right click the user name to be changed and then select "properties". Enter a new password within the "password" field of the "general" tab and confirm the password.

3. Start an MS-DOS prompt and go to the HYDRA installation directory.

4. Now change the configuration as follows:

→ **Windows**

Enter the following entries that assign the new password (HYDBPW) to the user (HYDBUSER) hydadm in the "environment" section of hymap.cfg.

...

[Environment]

...

HYDBUSER=hydadm

HYDBPW={ new password}

...

Install the modified hymap.cfg file, in this context, the password of the **Windows user hydadm** is to be specified.

Please note: The Windows user is not identical to the Oracle user!

d:\hydra> **ntinst -if hymap.cfg**

→ **UNIX**

Enter the following rows in hy_env.scr:

export HYDBUSER=hydadm

export HYDBPW={ New password}

5. Check the database connection via the "projekt" program. The program should output "HYDRA" or the set project. In the event of an error, a database error including the corresponding "sqlcode" occurs. Check the values entered in the configuration in cases of error and repeat step 4.

→  **Windows**

d:\hydra> **projekt.exe**

→  **UNIX**


/usr/hydra> **projekt.out**

6. Start HYDRA using the Hydra-Manager.

Generate encoded database password

The database password (HYDBPW) is defined in an encoded form on the HYDRA server.

The tool "DB-Password-Generator" generates an encrypted password for the specified user and the entered password (that has a maximum of ten characters).

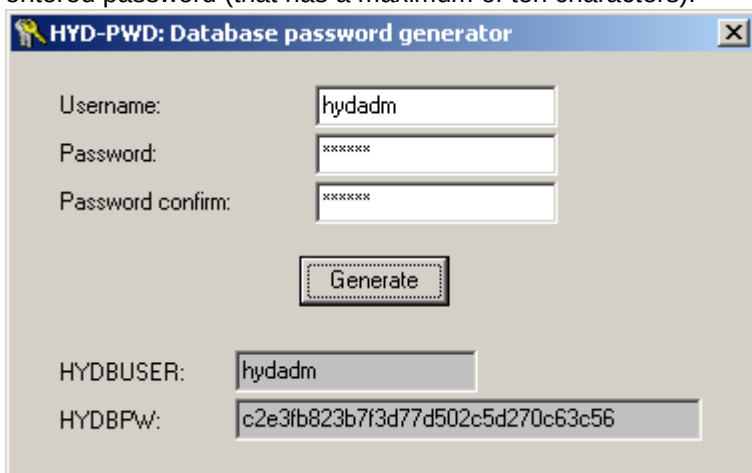

This generated password (32 characters long) is to be entered as the new password and tested as described in section 2.2.

The "**hyd_pwd.exe**" program is provided in the following directory on the HYDRA server:

<HYDRADIR>/admttools/hyd_pwd

For installation purposes, copy the directory on a Windows PC and run the program "**hyd_pwd.exe**".

Other database users and passwords

Irrespective of HYDRA, different database users are created by the respective database system. The sections that follow describe these database users and their relation to HYDRA and MPDV Support.

ORACLE database

INTERNAL user

Used by MPDV:

MPDV uses this user to create the ORACLE instance.

MPDV Support uses this user to view the database.

Password can be changed:

YES

Password is changed by:

MPDV

MPDV Support has to be informed about the modification and the new password.

DBSNMP user

Used by MPDV:

MPDV does not use this user

Password can be changed:

YES

Password is changed by:

MPDV

Please note:

This user should not be deleted as it might be used by ORACLE Support.

OUTLN user

Used by MPDV:

MPDV does not use this user

Password can be changed:

YES

Password is changed by:

MPDV

Please note:

This user should not be deleted as it might be used by ORACLE Support.

SYS user

Used by MPDV:

MPDV Support uses this user to view the database.

Password can be changed:

YES

Password is changed by:

MPDV

MPDV Support has to be informed about the modification and the new password.

SYSTEM user

Used by MPDV:

MPDV Support uses this user to view the database.

Password can be changed:

YES

Password is changed by:

MPDV

MPDV Support has to be informed about the modification and the new password.

Microsoft SQL Server database

sa user

Used by MPDV:

MPDV uses this user to create the database instance and database.

MPDV Support uses thsi user to view the database.

The database user "sa" is created along with a default password if it is a HYDRA standard installation.

Password can be changed:

YES

Password is changed by:

MPDV

MPDV Support has to be informed about the modification and the new password.

hydadm user

Used by MPDV:

MPDV Support uses this user to view the database.

Password can be changed:

YES

Password is changed by:

MPDV

MPDV Support has to be informed about the modification and the new password.

6 Time-Controlled Host Interfacing

Usage

You use the time-controlled host interfacing in order to transfer files from other systems (e.g. ERP systems) to the HYDRA server on a cyclical basis (time-controlled) or in order to transfer files from the HYDRA server to other systems using HYDRA Scheduler.

The different interface files are each processed, or rather made available, on the HYDRA server by the HYDRA MLE file port interface.

Here, the system supports the following transmission type and operating system combinations:

		HYDRA server	
		Linux	Windows
External system	UNIX	FTP, NFS	FTP
	Windows	FTP	FTP, UNC
	Other (e.g. AS/400)	FTP	FTP

Requirement

To use the time-controlled host interfacing, the requirements listed below must be met:

Transfer protocol

In order to exchange data with an external system, it must be possible to access it via **FTP** (Port 21). If both systems run on identical operating systems, alternately you can also make use of the following solutions:

UNIX⇔UNIX: Specify the path on the mounted **NFS** share (Network File System)

Windows⇔Windows Specify **UNC** path (Universal Naming Convention) on a network share

Access authorization for NFS connections

The external system's NFS share must be installed on the HYDRA server.

HYDRA (user "**hydadm**") requires **read and write access rights** to the installed directory in order to be able to rename, copy and delete files there.

Access authorization for UNC connections

HYDRA (user "**hydadm**") requires **read and write access rights** to the network share in order to be able to rename, copy and delete files there.


To test the access rights to the network share via the specified UNC path, log onto the HYDRA server as user "**hydadm**" and enter the following command in a Windows command prompt:

```
"dir \\ServerName\FreigabeName"
```

The content of the network share "ShareName" must be displayed without any errors.

User account of the "HYDRA<n> Scheduler" service

Exchanging data by specifying a path for a Windows - Windows connection requires that the "HYDRA<n> Scheduler" service is run as the user "hyadm".

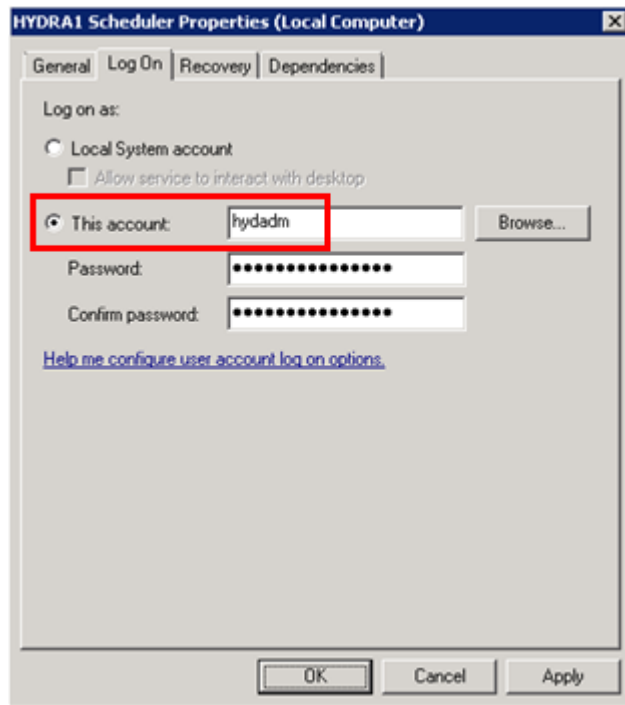

The user "hyadm" on the HYDRA server must be able to access the shares on the external system, which requires that he has the relevant access rights.

FTP command needed for an FTP connection

"open", "login": USER, PASS

"binary": TYPE I (only "ASCII" is possible on AS/400)

"rename": RNFR, RNT0

"ls": LIST

"delete": DELE

"put": STOR

"get": RETR

"cd": CWD

"close": QUIT

"r(emote)help": HELP

"quote time": (AS/400: increase inactivity timeout)




FTP interfacing causes problems on various HP-UX systems if the clear text name of the PPS server is being used. At this time, the problem can only be avoided by using the IP address .




The FTP server version 1.7.212.1 on HP-UX 10.20.x is faulty and therefore cannot be used.

The currently available and tested version for this platform is 1.7.212.5.

Data exchange process - external system → HYDRA

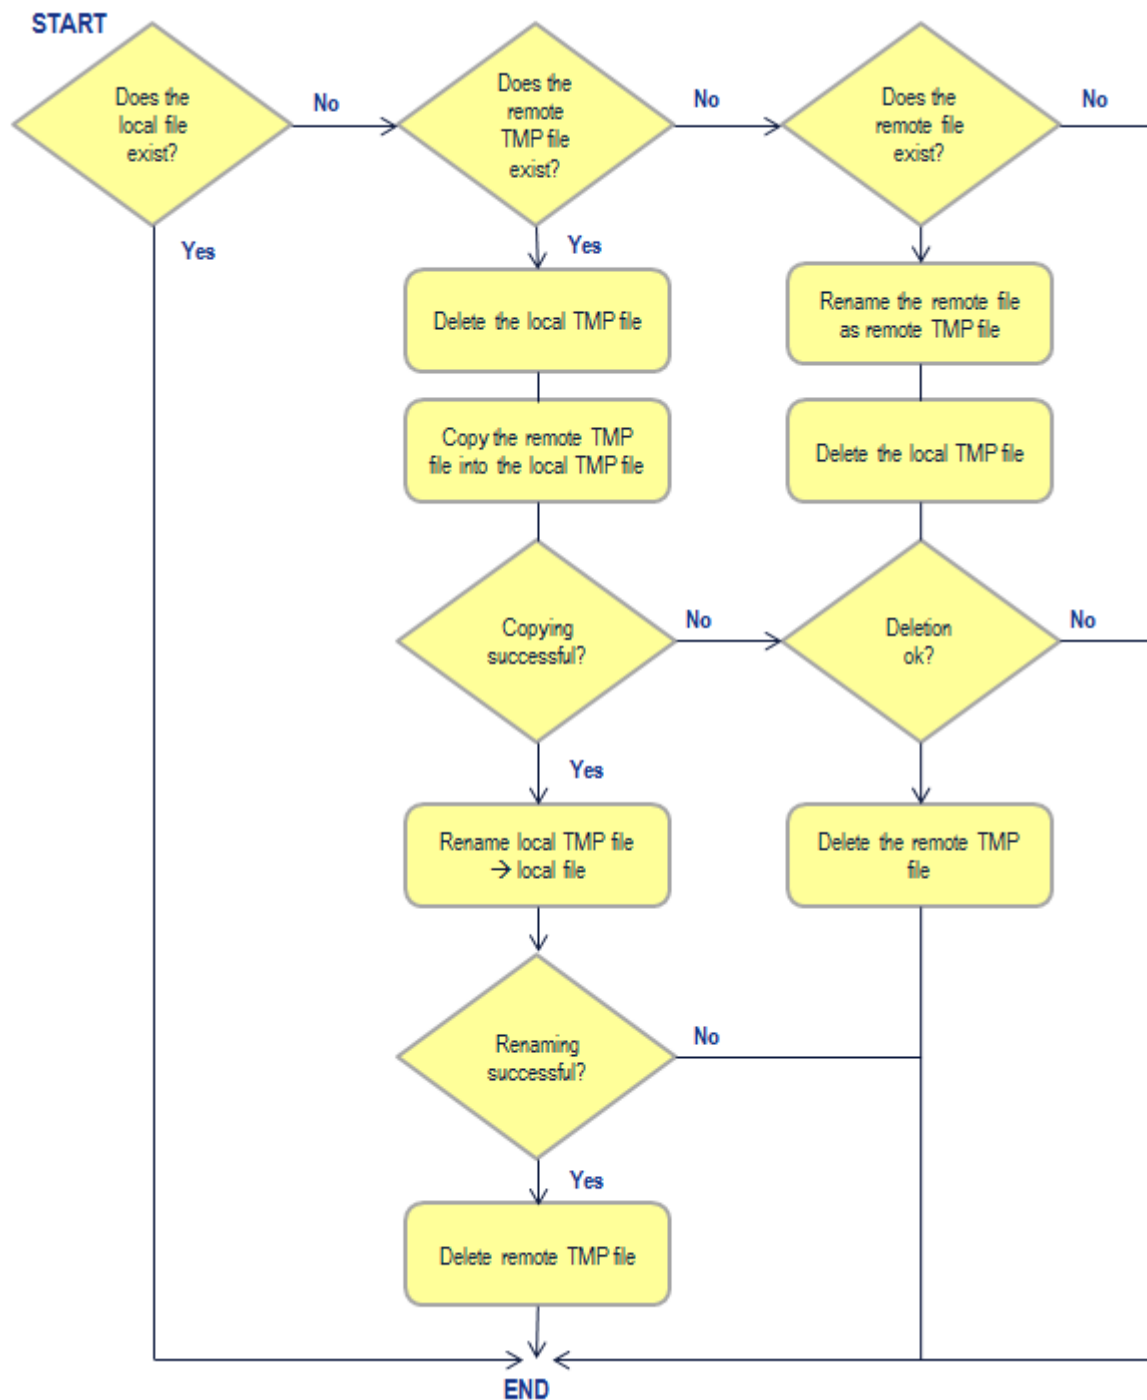

Data exchange process - HYDRA → external system

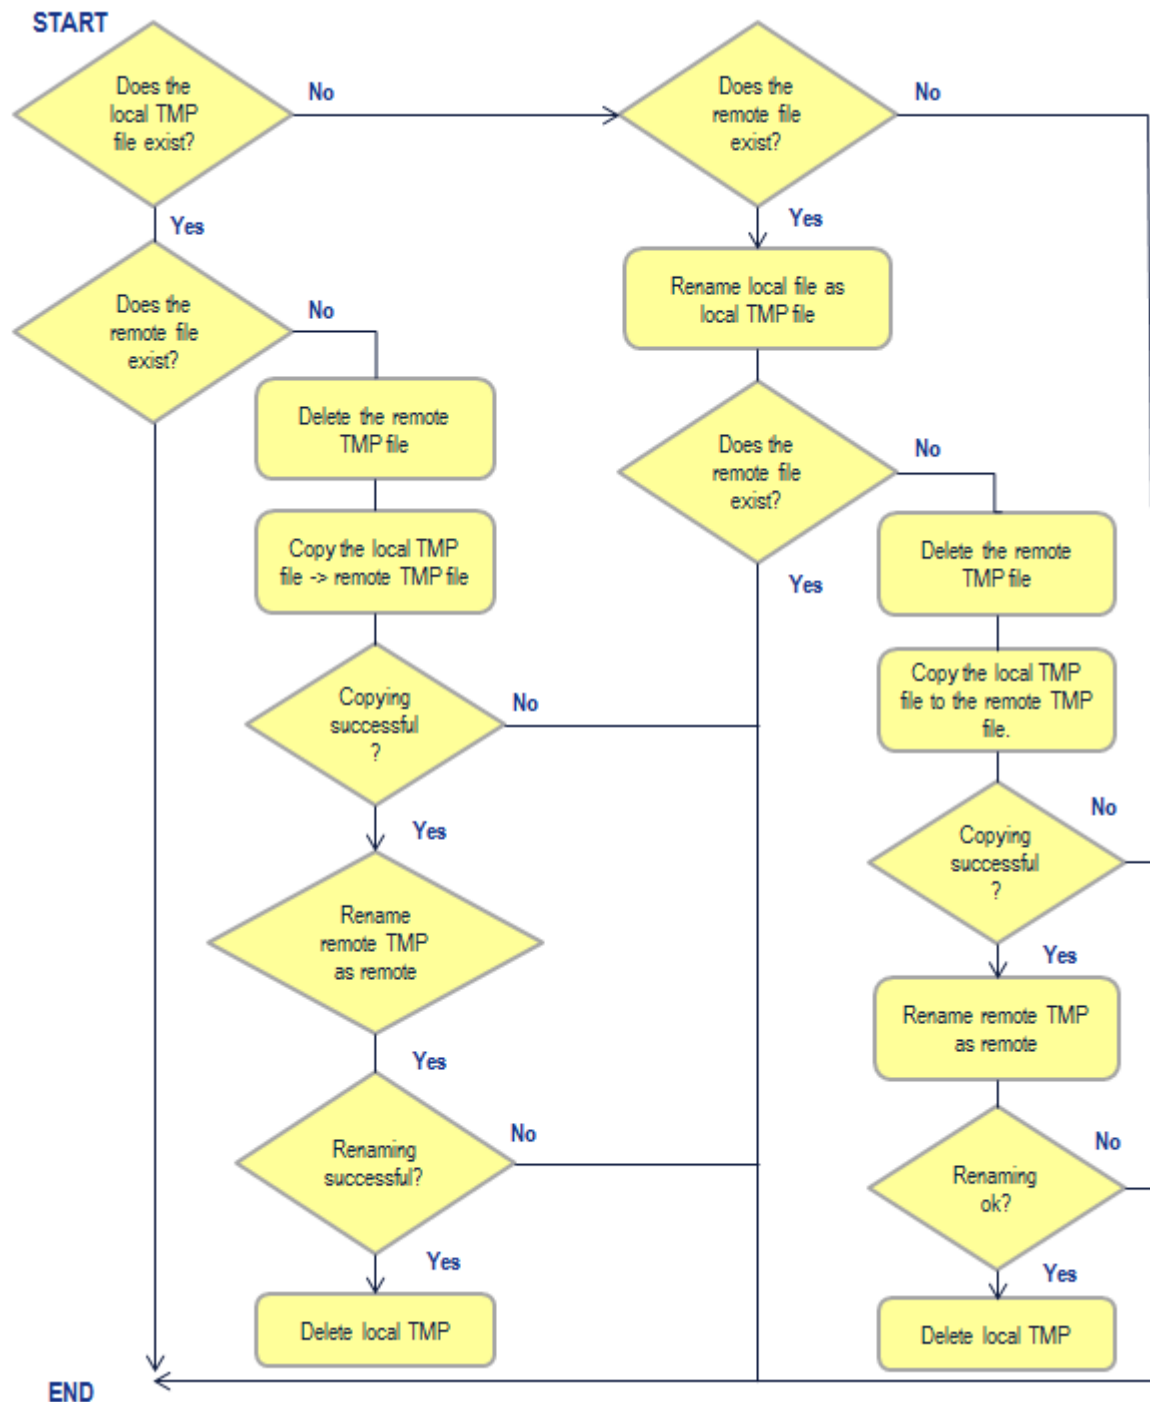

Available program parameters

Parameter	Use/ possible entries	only for FTP	Optional for FTP	Optional
-----------	-----------------------	--------------	------------------	----------

Parameter	Use/ possible entries	only for FTP	Optional for FTP	Optional
MOD=PUT GET	Defines the direction of communication PUT HYDRA → external system GET External system → HYDRA			
HOST=	Host name of the external system	X		
USER=	User name used to log on	X		
PWD=	User's password	X		
REMOTE=	File name on the external system			
REMOTEMASK=	Alternately, the remote system file that is defined via the REMOTE parameter can be created so that it is formatted as specified in the REMOTEMASK parameter. The following options are available for formatting.			
LOCAL=	File name on the HYDRA system			
LOCALMASK=	Alternately, the local file that is defined via the LOCAL parameter can be created so that it is formatted as specified in the LOCALMASK parameter. The following options are available for formatting.			
TMP=	File name of the temporary file (both for the remote as well as for the local server) If the external system runs on an AS/400 operating system, this parameter must be specified.		X	

Parameter	Use/ possible entries	only for FTP	Optional for FTP	Optional
FTPMOD=B A	FTP transfer mode B Binary (default) A ASCII If the external system runs on an AS/400 operating system, "A" must be used.		X	
CMD=	Shell script on the local server that starts in "GET" mode after the file transfer in "PUT" mode before the file transfer . If the CMD specification contains spaces, the CMD must be enclosed within quotation marks! Example: CMD="sh.exe hy6adrck.scr"			X
ALARM=	Time out Communication is interrupted after the defined time (in seconds) (only in Windows) .			

Configuration – Ext. System (Windows) → HYDRA (Windows) via UNC

Edit entries for the HYDRA input batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=GET

Parameter name	Value
	LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="//server/freigabe/pfad/dateiname"
Comment:	Data supply ERP → HYDRA
Interval	5

Configuration – Ext. System (UNIX) → HYDRA (Linux) via NFS

Edit entries for the HYDRA input batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=GET LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="//server/freigabe/pfad/dateiname"
Comment:	Data supply ERP → HYDRA
Interval	5

Configuration – Ext. System (UNIX) → HYDRA (Linux) via FTP

Edit entries for the HYDRA input batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV

Parameter name	Value
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=GET HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="/pfad/dateiname"
Comment:	Data supply ERP → HYDRA
Interval	5

Configuration – Ext. System (AS/400) → HYDRA (Windows) via FTP

Edit entries for the HYDRA input batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=GET HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="/pfad/dateiname" FTPMODE=A TMP=tmp_hy72pps.dat
Comment:	Data supply ERP → HYDRA
Interval	5



The temporary intermediate file must not have the extension .tmp, otherwise the datasets will be abbreviated!



If AS/400 is configured to use periods in file names, only "members" of a file are deleted during deletions via FTP, not the entire file. For this reason, in order for a process flow to run correctly, you will need to coordinate additional file handling measures with MPDV.

Configuration – Ext. System (Linux) → HYDRA (Windows) via FTP

Edit entries for the HYDRA inbound processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=GET HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="/pfad/dateiname"
Comment:	Data supply ERP → HYDRA
Interval	5

Configuration – Ext. System (AS/400) → HYDRA (Linux) via FTP

Edit entries for the HYDRA input batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV

Parameter name	Value
License key	SIS-MWV
Command (Windows):	<pre>./hyd_zhk.scr MOD=GET HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72PPS.dat REMOTE="/pfad/dateiname" FTPMODE=A TMP=tmp_hy72pps.dat</pre>
Comment:	Data supply ERP → HYDRA
Interval	5



The temporary intermediate file must not have the extension .tmp, otherwise the datasets will be abbreviated!



If AS/400 is configured to use periods in file names, only "members" of a file are deleted during deletions via FTP, not the entire file. For this reason, in order for a process flow to run correctly, you will need to coordinate additional file handling measures with MPDV.

Configuration – HYDRA (Windows) → Ext. System (Windows) via UNC

Edit entries for the HYDRA output batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	<pre>sh.exe ./hyd_zhk.scr MOD=PUT LOCAL=./inf_int/interf/HY72ADRCK_TT.dat</pre>

Parameter name	Value
	REMOTE="\\\\\\\\\\\\server\\\\freigabe\\\\pfad/dateiname"
Comment:	Data supply HYDRA → ERP
Interval	5

Configuration –HYDRA (Linux) → Ext. System (UNIX) via NFS

Edit entries for the HYDRA output batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	./hyd_zhk.scr MOD=PUT LOCAL=./inf_int/interf/HY72ADRCK_TT.dat REMOTE="\\\\\\\\\\\\server\\\\freigabe\\\\pfad/dateiname"
Comment:	Data supply HYDRA → ERP
Interval	5

Configuration –HYDRA (Linux) → Ext. System (UNIX) via FTP

Edit entries for the HYDRA output batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	./hyd_zhk.scr MOD=PUT

Parameter name	Value
	HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72ADRCK_TT.dat REMOTE="/pfad/dateiname"
Comment:	Data supply HYDRA → ERP
Interval	5

Configuration –HYDRA (Windows) → Ext. System (AS/400) via FTP

Edit entries for the HYDRA output batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=PUT HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72ADRCK_TT.dat REMOTE="/pfad/dateiname" FTPMODE=A TMP=tmp_HY72ADRCK_TT.dat
Comment:	Data supply HYDRA → ERP
Interval	5



The temporary intermediate file must not have the extension .tmp, otherwise the datasets will be abbreviated!



If AS/400 is configured to use periods in file names, only "members" of a file are deleted during deletions via FTP, not the entire file. For this reason, in order for a process flow to run correctly, you will need to coordinate additional file handling measures with MPDV.

Configuration –HYDRA (Windows) → Ext. System (Linux) via FTP

Edit entries for HYDRA outbound processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV
License key	SIS-MWV
Command (Windows):	sh.exe ./hyd_zhk.scr MOD=PUT HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72ADRCK_TT.dat REMOTE="/pfad/dateiname"
Comment:	Data supply HYDRA → ERP
Interval	5

Configuration – HYDRA (Linux) → Ext. System (AS/400) via FTP

Edit entries for the HYDRA output batch processing in [HYDRA Scheduler](#) (using the EIS-ERP interface as an example):

Parameter name	Value
Product key	SIS-MWV

Parameter name	Value
License key	SIS-MWV
Command (Windows):	./hyd_zhk.scr MOD=PUT HOST=<server> USER=<ftpuser> PWD=<ftppasswd> LOCAL=./inf_int/interf/HY72ADRCK_TT.dat REMOTE="/pfad/dateiname" FTPMODE=A TMP=tmp_HY72ADRCK_TT.dat
Comment:	Data supply HYDRA → ERP
Interval	5



The temporary intermediate file must not have the extension .tmp, otherwise the datasets will be abbreviated!



If AS/400 is configured to use periods in file names, only "members" of a file are deleted during deletions via FTP, not the entire file. For this reason, in order for a process flow to run correctly, you will need to coordinate additional file handling measures with MPDV.

Options for REMOTEMASK/ LOCALMASK

Format Code	Meaning
%a	Abbreviated weekday name
%A	Full weekday name
%b	Abbreviated name of a month
%B	Full name of a month
%c	Date and time display matching local settings
%d	Day of the month as a decimal number (01 - 31)
%H	Hour in a 24-hour format (00 - 23)
%I	Hour in a 12-hour format (01 - 12)
%j	Day of the year as a decimal number (001 - 366)
%m	Month as a decimal number (01 - 12)
%M	Minute as a decimal number (00 - 59)
%p	Display of A.M. or P.M. for the 12-hour format
%S	Second as a decimal number (00 - 59)

Format Code	Meaning
%U	Week of the year as a decimal number, whereas Sunday is the first day of the week (00 - 53)
%w	Weekday as a decimal no. (0 - 6; Sunday is 0)
%W	Week of the year as a decimal number, whereas Monday is the first day of the week (00 - 53)
%x	Date display for local settings
%X	Time display for local settings
%y	Year not including century as a decimal number (00 - 99)
%Y	Year including century as a decimal number
%Z, %Z	Time zone name or abbreviation; no output if time zone is unknown
%%	Percentage

The # flag may prefix any formatting code. In that case, the meaning of the format code is changed as follows.

The # flag may prefix any formatting code. In that case, the meaning of the format code is changed as follows.

Format Code	Meaning
%%a, %%A, %%b, %%B, %%p, %%X, %%z, %%Z, %%%	# flag is ignored.
%%c	Long date and time display matching local settings For example: "Tuesday, March 14, 1995, 12.41: 29".
%%x	Long date display matching local settings For example: "Tuesday, March 14, 1995".
%%d, %%H, %%I, %%j, %%m, %%M, %%S, %%U, %%w, %%W, %%y, %%Y	Remove leading zeros (if any).

7 MLE Communication

Purpose

You use the MES Link Enabling (MLE) communication to exchange data between the MES and other systems, e.g. ERP or warehouse management systems. MES Link Enabling provides a framework that can be used by the applications (application interfaces).

Integration

The MLE framework is used by many application interfaces.

Basics

HYDRA provides the *MES Link Enabling communication*, in the following referred to as *MLE*, for the communication with ERP systems in general and SAP R/3 or ECC in particular.

MLE is a program environment enabling the data transfer with external systems. For this purpose, we use:

- file servers and file clients for the data exchange on file level and
- RFC servers and RFC clients for the data exchange with SAP

The MLE inbound dispatcher for HYDRA inbound processing is used in any case, irrespective of the external system data is exchanged with.

IDoc (Intermediate Document)

Use IDocs (intermediate documents) to exchange data:

- within an ERP system
- between several ERP systems or
- between ERP systems and third-party systems.

IDocs are containers to exchange data between systems. IDocs may be flat or have multi-level hierarchies. IDocs use data segments to summarize data in logical units. IDocs combine data contents of the same nature and structure. Therefore, you can transfer several of these “clusters” within one file. Although each IDoc corresponds to a defined data type/structure, the format does not depend on the content or type of content.

In general, IDocs consist of a control record, multiple data segments and the status record. There is exactly one control record for each IDoc. The control record includes all pieces of information required for sending and processing the IDoc. This information includes, for example:

- the message type
- the IDoc type
- the sending and receiving (logical) system. The control record is like an envelope stating address details.

The data segments of the IDoc include the data. Each segment consists of preliminary information specifying the data structure. The payload (user data) itself is stored in a uniform, unstructured field. Segments can also be structured in hierarchies.

Different processing steps are executed while an IDoc is being processed. Another status record is added for each step. You can use these records to keep track of the processing steps and their results.

RFC technology

The Remote Function Call (RFC) constitutes the basis for the data exchange between SAP R/3 or ECC and subsystems. The *remote function call* allows you to call SAP functions remotely from other systems. The *transactional Remote Function Call* (tRFC) is an upgrade of this technology.

The *transactional RFC* provides independence of other systems. The basis for this procedure is the dispatching system's obligation (RFC client) to call the receiving system over and over again, provided that communication could not be established or in case of an interruption. However, this only repeats until the transaction has been transferred successfully.

A worldwide unique transaction number (TID) is allocated for each transaction in order to guarantee consistent data retention even if communication is interrupted.

MLE RFC server

An RFC server logs on to an SAP gateway and waits for data. When data arrives, the server receives and stores the data in a database or file. Then, the server waits for data again.

There are different modes to log on an RFC server to an SAP gateway. The *Registering Mode* is used for mySAP communication. In this case, the RFC server registers its functions at the SAP gateway. Therefore, these functions can be called in the SAP environment.

Different older communication models use other modes which, however, are not relevant to HYDRA.

The MLE-ALE server (hyalesrv.exe) takes over the RFC server functions, when it comes to the HYDRA MLE communication.

MLE RFC client

An RFC client transfers data from HYDRA to SAP R/3 or ECC. To do so, the RFC client logs on to an SAP system and calls a specific function module. This can be a synchronous or asynchronous call.

The MLE-RFC client takes over the outbound communication with R/3. The data segments created in HYDRA are transferred to the respective target system according to distribution specifications.

An upload to R/3 can be triggered in two ways.

- Triggered by an upload request from R/3:

In this case, the RFC client has to be entered as processing program for the upload request in the distribution model. The segment names of the upload IDoc must be entered as its parameters.

- Cyclical upload

You can use the HYDRA Scheduler if you want the upload to be triggered by HYDRA.


MLE file server

Besides the data exchange via remote function call, data can also be exchanged using file transfer. In this case, the file server monitors a specific directory to identify new files and transfers these new files to HYDRA. The file client, in turn, converts HYDRA uploads into files and archives them also in a specified directory.

The files have to be named like the message types defined in the HYDRA MLE distribution model. HYDRA inbound processing may be controlled by the file extension. The following file extensions are possible:

- "APP" Creating/modifying data
- "UPD" Replacing the data existing in HYDRA by the newly transferred data (initial download).
- "DEL" Deleting data
- "DAT" The extension is used for all other files. The message function "DAT" is not transferred to the IDoc control record.

If files assigned to the names of the distribution model and the above-mentioned extensions are found, these files are copied to the working directory. This working directory is also specified in the configuration of the HYDRA MLE file server. The system then transfers the data records existing in this working directory to the inbound tables of the HYDRA MLE interface.

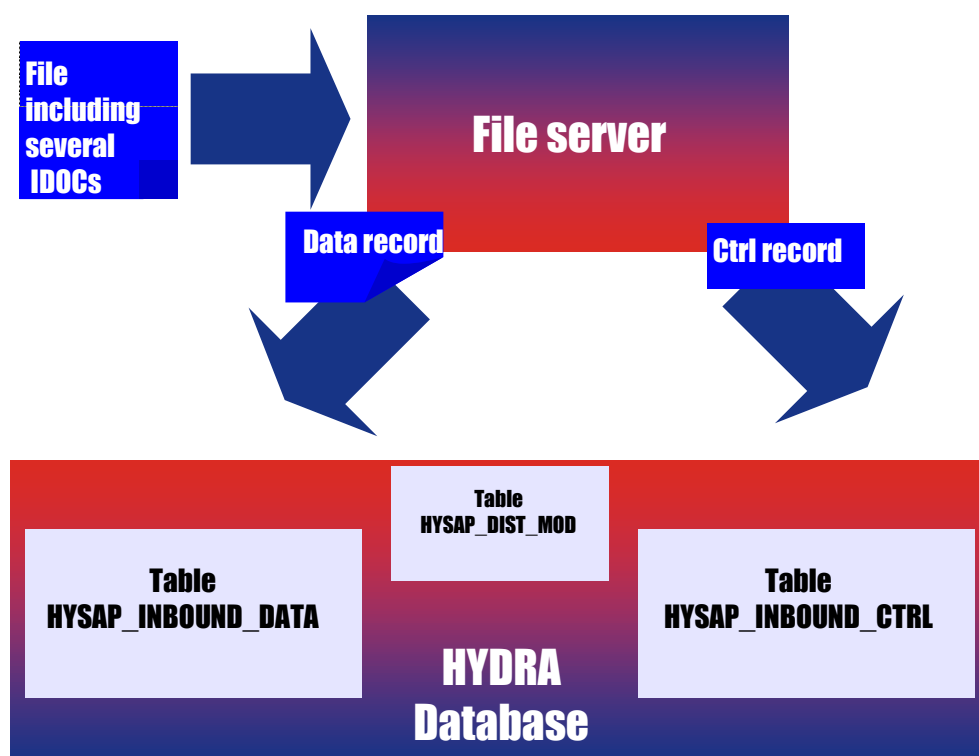

MLE file client

HYDRA provides data (e.g. confirmations/uploads of operations) in the interface. According to the respective segment type, HYDRA files the data as such segments.

This data is no longer interpreted for the actual communication layer. These segments are summarized in IDocs and provided with connection details through the configuration of outbound processing. A file client then makes these segments available in a specified directory where they can be processed by the ERP system.

The HYDRA MLE file client performs outbound processing on the basis of ASCII files. If a logical system created as file interface is assigned to a message type, the data is archived in a file in a specific directory. This directory is specified by the configuration of the HYDRA MLE file client.

HYDRA controls the upload or writing of the files into the specified directory at regular intervals.

MLE inbound dispatcher

The HYDRA MLE Inbound Dispatcher organizes inbound processing in HYDRA.

The *HYDRA MLE Inbound Dispatcher*:

- monitors inbound transactions;
- uses the message type (from the MLE distribution model) to identify the corresponding processing routine (program) to transfer data to HYDRA;
- starts this processing routine. Inbound transactions are processed according to the sequence specified by the ERP system. Consequently, a transaction can only be processed, once the previous transaction has been completed.

The following diagram shows the processing steps of the dispatcher when processing inbound transactions:



The system generates log and error files for the data transferred to HYDRA.

Logical systems

Each system landscape consisting of test and production system(s), is represented as logical system in HYDRA. HYDRA's configuration for inbound and outbound processing refers to this logical system.

Please note for SAP R/3 or ECC:

Third-party systems must be configured as logical system with a unique name in R/3 and/or ECC in order for SAP R/3 and/or ECC to be able to communicate with these external systems.

This name is used as the "address" for sending IDocs. In return, the R/3 or ECC system is also configured as logical system.

Procedure for transferring data to HYDRA

An ERP interface program generates the data with the defined data structures and stores this data in a transfer file. This file can then be transferred to HYDRA.

These transfer files are to be provided in the HYDRA subdirectory `./inf_int/interf` (standard system). You can find this directory in the HYDRA directory or in case of multiple system environments in the relevant system directory.

You have to implement a handshake logic to transfer the files between the ERP system and HYDRA. This logic prevents any data losses by "overwriting" transfer files.

Note the following in order to ensure reliable processing:

The file to be provided by the ERP system must not exist under the documented name until HYDRA releases it for transfer and processing.

When transferring the file from the source system to the HYDRA server, you have to use another name for the transfer file (a name **other than** the documented name). Rename the file and use the specified file name, once it has been transferred. To rename the file:

- Use the REN command for Windows systems
- Use the mv command for UNIX/LINUX. The file extensions ".APP", ".UPD", ".DEL" and ".DAT" are reserved for HYDRA. The ".TRF" extension is recommended.

If the transfer directory already includes a file, the system has to wait until HYDRA has taken over this file before transferring a new file.

If the ERP system creates the file directly on the HYDRA server, you have to ensure that the file does not exist under the documented name when it is created, written or appended. However, MPDV does not recommend this procedure in general.

To prevent the file size from growing endlessly, the ERP system should interrupt the write process at 50 Mbyte and wait for the file server to collect the data. A new file can be written, once the file server has removed the file. This is especially important for the initial download.

The file port processes the data included in the interface directory as follows:

When starting the service / process (hyalesrv.exe/out), the system identifies the message types to be integrated and sorts them according to the defined priority.

The priority is digital ("0" = no priority / "1" high priority) and can be defined in the HYDRA distribution model.

In the interface directory a HYDRA process searches for the files as follows within one message type:

1. DEL / del
2. APP / app
3. UPD / upd
4. DAT / dat

Procedure for transferring data from HYDRA

An ERP interface program prepares the data structures of the files transferred by HYDRA.

You have to implement a handshake logic to transfer the files between the ERP and HYDRA. This logic prevents any data losses by "overwriting" transfer files.

These transfer files are provided in the HYDRA subdirectory ./inf_int/interf (standard system). You can find this directory in the HYDRA directory or in case of multiple system environments in the relevant system directory.

Use the following processing method to safely process the files:

- Rename the upload file using:
 - the REN command with NT and
 - the mv command with UNIX.
- Transfer the renamed upload file to the ERP environment.

Notes

- You must NOT use a copy command in this step.

- As long as HYDRA is processing the file, the file does **not** exist under the specified name. This ensures that the higher-level system can only access the file, once HYDRA has finished processing (secure handshake).
- The file extensions ".APP", ".UPD", ".DEL" and ".DAT" are reserved for HYDRA. The ".TRF" extension is recommended.

Automated interfacing

MPDV recommends using a gateway including corresponding control software to allow for the HYDRA server and the customer's server to be connected automatically. This gateway controls the data exchange between the two systems in both directions. As an alternative, you can use any other procedure that ensures a secure file transfer, in particular the connection of both systems using a network file system.

Notes on the file format/codepage

The following conventions apply for the codepage/character set:

MES-Weaver 3.0

Each data record included in the file has to be completed by 'CR' (U+000D) and 'LF' (U+000A) for Windows and 'LF' (U+000A) for Unix.

HYDRA expects the file to be in the UTF-8 format and HYDRA also uses this format for uploads. On request, you can also transfer files in the file format that was used until MW 2.0.

8 Logical Systems

Overview

HYDRA menu	System administration → MES Link Enabling (MLE) → Logical systems
FEDRA menu	System administration → MES Link Enabling (MLE) → Logical systems
Transaction code	logsys.*
Function authorization	logsys.*

Purpose

You use logical systems to create external systems for the exchange of data with the MES and to define how communication is performed. You must configure the inbound/outbound communication for the relevant communication method.

Define a logical system for each connected (ERP) system. A logical system is an ERP system to communicate with. There are three complete connection configurations (roles) for each logical system. Exactly one of these roles is active at a time. The following systems are distinguished: test system, integration system and productive system. Later it may be switched from one system to the other by changing buttons in the configuration. Thus, you can easily switch to the productive system on the due date.

By default, the logical system is called "SAP" for an RFC connection with SAP R/3.



The logical system for a file interface (HY72PPS) is called "FP" by default and is created by default, when HYDRA is installed for the first time.



You can define further logical systems if the communication is supposed to be set up with several different systems. Note: You must start the respective MLE servers. These servers have respectively to be set as service/process.

Integration

For the maintenance of the [Distribution model](#), you assign the used inbound and outbound messages to the created logical systems.

Editing functions

Insert / Edit / Delete

You use the editing functions for the logical system.

You can only specify the communication mode when you create a new logical system.

If you edit a logical system, you can change the active role or deactivate the logical system.

Inbound/outbound configuration

You can use the inbound/outbound configuration to make the settings for the program type (inbound/outbound processing) and the respective role. The respective settings depend on the communication mode.

Testing the connection

In case of an RFC connection, the stored data can be checked and a test connection can be established. No payload is transferred here.

Field descriptions

Logical system

Store a unique name of the partner system in this field.

Description

A description of the partner system is defined in this field.

Active role

For each logical system, you can define three records including technical connection parameters. These records are described as roles (test, integration and productive). One of the three roles is active for each logical system.

Thus, a simple and uncomplicated change-over is guaranteed during a "go-live".

Communication mode

The communication mode specifies how the connection to the partner system is set up.

- "RFC connection" - if the communication is set up with SAP via RFC.
- "File interface" - if the data is exchanged via file transfer.
- "Web service communication" - if the communication is set up using web services.
- For customer-specific variants, you can use the specialized communication modes "PDM connection" and "USER connection".

How to proceed

For each communication mode and program type, you must edit specific parameters. The documents below describe how to proceed:

Communication mode	Document
RFC connection	Configuration of RFC Connections

File interface	Configuration of File Interfaces
PDM connection	Configuration of PDM Connections
USER connection	Configuration of a USER connection
Web Service communication	Configuration of the Web Service Communication



The communication mode "Web service communication" is available as of SP16 based on MW40_{pe}.

9 Distribution Model

HYDRA menu	System administration → MES Link Enabling (MLE) → Distribution model
FEDRA menu	System administration → MES Link Enabling (MLE) → Distribution model
Transaction code	dispmo
Function authorization	dispmo.*

Purpose

You use the distribution model as follows:

- You specify the processing of data-in in the system
- You specify the [\(logical\) system](#) that is used to upload data-out.

Integration

The message type is the key field for the INBOUND. For each message type, the responsible process is specified in the distribution model. On receipt of an IDoc, the processing is identified using the message type. The dispatcher then calls this processing.

For the OUTBOUND, the segment name is the key field. In case of an upload, the data segments of a configured segment name are bundled to an IDoc. The enriched communication attributes are then passed to the PPS system.

Requirements

You have edited the [logical systems](#) that you use to exchange data.

Field descriptions

Message type

Inbound:

The message type is used to identify the data passed in the data package. The message type therefore controls the inbound processing in the system.

Outbound:

The message type is not a key field for the outbound processing.

However, the message type is required for inbound processing in SAP R/3. It identifies the processing type of incoming data. Information on the message type can be found in the SAP distribution model (SAP transaction BD64), the SAP partner profile (SAP transaction WE20) or the respective SAP documentation (e.g. for HR-PDC or PP-PDC).

If a system of type *file interface* is defined as logical system (file port), the message type is used for the file name of the file generated by the file client. The file extension is stored in the configuration of the logical system.

Message code

The message code is used to further specify the message type. The information if such a message code is used can be found e.g. in the SAP partner profile (SAP transaction WE20).

For systems of type *file interface* (file port): not relevant.

Message function

Just like the message code, the message function specifies the message type. The information if a message function is required can be found in the SAP partner profile (SAP transaction WE20).

For systems of type *file interface* (file port): not relevant.

IDoc type

The IDoc type is used to define the structure of the IDoc data record, i.e. it specifies the segment types that are included in the IDoc. Details on the IDoc type can be found in the SAP distribution model (SAP transaction BD64), the SAP partner profile (SAP transaction WE20) or in the respective SAP documentation (e.g. HR-PDC or PP-PDC).

For systems of type *file interface* (file port): the IDoc type is equal to the message type.

Priority

The priority specifies if message types take priority in the processing. You can use the option fields to prioritize the current message type.

Command

In this line, enter the command (program name) that integrates data in the MLE data model.

Command parameter

If parameters must be passed to the requested program, define these parameters here.

Description

This field includes a plaintext description of the current configuration.

Log. target systemInbound:

The entry in this field identifies the partner system that passes the data.

Outbound:

The entry in this field identifies the PPS system the data is passed to.

Retention period (in days)

The retention period specifies how long data is saved. After the specified time, the data is deleted. The time is specified in days.

The data is internally moved to an archive table at an earlier point in time. The data is still available. You can access this data, if you enable the parameter "Consider long-term data" in the applications "[Inbound transactions](#)" and "[Outbound transactions](#)".

For details on the MLE archiving, refer to the documentation of the [MLE Archiving](#).

Segment name 1

The segment name 1 is the actual key field. Based on this entry, data is selected from the OUTBOUND structure and bundled to an IDoc. If an IDoc includes several segments, these segments are structured hierarchically.

Segment name 2

With logical systems, you can use segment name 2 for the communication type "file". Segment name 2 specifies the file name of the file created in the outbound (including file extension).

The file name specified here is integrated in the MLE outbound processing as follows:

- **Work directory**
<file name entered including extension>.<extension according to configuration of the [logical system](#)>
- **Interf directory**
<file name entered including extension>

Segment name 3 - 10

Currently not used.

Toolbar

Inbound configuration – Insert/Copy/Edit

The dialog provides the required input fields to create or edit a data record for an inbound configuration.

Outbound configuration – Insert/Copy/Edit

The dialog provides the required input fields to create or edit a data record for an outbound configuration.



The activation of the buttons *Copy* and *Edit* depends on the value in field *Data flow*:

- I (Inbound) → *Copy / Edit* of inbound configurations is activated
- O (Outbound) → *Copy / Edit* of outbound configurations is activated

10 Status Monitor MLE Communication

Summary

HYDRA menu	System administration → MES Link Enabling (MLE) → Status monitor MLE communication
FEDRA menu	System administration → MES Link Enabling (MLE) → Status monitor MLE communication
Transaction code	stamo
Function authorization	stamo

Utilization

You use the status monitor to get an overview over the processes/programs that run constantly or cyclically as a part of MES Link Enabling (MLE). The application enables fast diagnoses on the process status and the protocols of these processes can be accessed easily.

Integration

The status monitor represents the statuses and further information on the involved processes. The type of implementation specifies whether or not the process is included in the list.

Field Description

Status

Status of the process. The following statuses are possible:

RUN The process has been closed successfully Der.
IDL The process is currently running.
STOP

Application

Technical designation of the application

Logical system

Reference to the logical system for which the process was/is executed.

Role

Active role of the logical system with which the process was started the last time.

Designation

Designation of the application

Program

Technical name of the process/program (without file extension)

Program version

Program version

Program date

Date when the program was created

Last run

Last execution of the process

Log file and log file size / Error file and error file size / Data file and data file size

File name and file size in the categories "protocol", "error" and "data"

Number of data records

Number of data records included in the transaction of the last run

Number of edited data records

Number of data records included in the transaction that have been processed successfully the last time

Number erroneous data records

Number of erroneous data records included in the transaction the last time

Number of unknown data records

Number of data records included in the transaction that were unknown during processing of the last run

Message

Text output of the process

Segment

Processed segment



This table is to be used for the documentation of notes (template).



This table is to be used for the documentation of warnings (template).

Toolbar



Log

Shows the protocol generated by the respective application.



Error file

Shows the error log generated by the respective application.



Data file

Shows the data file that is generated optionally by the respective application.

11 Inbound Transactions

Overview

HYDRA menu	System administration → MES Link Enabling (MLE) → Inbound transactions
FEDRA menu	System administration → MES Link Enabling (MLE) → Inbound transactions
Transaction code	intr
Function authorization	intr intr.reset (reset transactions)

Purpose

Inbound transactions provide an overview of the data provided from other systems as well as the result of the inbound processing that follows. The application allows for detailed data to be displayed or new posting processes to be triggered.

Integration

The function allows for data transferred from other systems to be accessed. Other system might be:

- PPS/ERP systems
- Warehouse/material management systems
- Quality management systems

Field Descriptions

Field Descriptions – Inbound Transactions

Transaction number

Unique number that is generated while communicating with the external system.

Status

The status represents the result of the last processing step. The used status are visualized as follows:

Description in the application	Color	Meaning / usage
NEW	Yellow	The record has been provided initially. Further processing still have to take place.

Description in the application	Color	Meaning / usage
TODO	Yellow	It has been tried already, to post the record. This attempt has not been successful (for a certain reason) – the record is available to new posting attempt.
REACTIVATED	Orange	A record posted already has been marked for an additional posting attempt.
IN PROCESS	Grey	The record is posted currently.
UNKNOWN	Blue	There is no valid posting routine for the record.
DONE ERROR	Red	The record could not be posted successfully.
DONE	Green	The record could be posted successfully.

IDoc type

IDoc type of the transaction (whether or not the field is filled out, depends on the communication type).

No. of data records

Number of data records included in the transaction

No. of edited DR (data records)

Number of successfully processed data records included in the transaction

No. of unknown data records

Number of unknown data records included in the transaction

No. of erroneous data records

Number of faulty data records included in the transaction (wrong processing)

Time of reception

Date and time when the system received the transaction

Editing time

Date and time when the transaction was edited in the system

IDoc number

IDoc number of transactions (whether or not the field is filled out depends on the communication type).

Message type

Message type of the transaction

Message function

Message function of the transaction

SAP sending port

SAP sending port – only relevant if the communication with SAP is performed via IDoc

SAP sending partner type

SAP sending partner type – only relevant if the communication with SAP is performed via IDocs

SAP sending partner number

SAP sending partner number – only relevant if the communication with SAP is performed via IDocs

Receiver port

Receiver port – only relevant if the communication with SAP is performed via IDocs

Receiver partner type

Receiver partner type – only relevant if the communication with SAP is performed via IDocs

Receiver partner number

Receiver partner number – only relevant if the communication with SAP is performed via IDocs

Reference

Unique database key

Duration

Duration of system processing

Number of attempts

Number of processing attempts

Field Descriptions – Log Table**Application**

Application involved in the processing and editing of the transaction

Log. System

Logical system

Role

Role of the logical system

Designation

Designation of the application

Transaction number

Transaction number that has been processed

Status

Status of processing

Reference

Unique database key

Program

Technical name of the application

Program version

Program version of the application

Program date

Program date of the application

Log file name / log file size

Name and size of the log file

Error file name/error file size

Name and size of the error file

Data file name/data file size

Name and size of the data file

No. of data records

Number of data records included in the transaction

No. of edited data records

Number of successfully processed data records included in the transaction

No. of unknown data records

Number of unknown data records included in the transaction

No. of faulty data records

Number of faulty data records included in the transaction (wrong processing)

Text number

Currently not used

Posting

Currently not used

Created on

Point in time when the entry was created

Toolbar**Reset transaction**

The “reset transaction” button allows for a transaction that has already been processed to be processed again. But this is only possible if the transaction has not yet been archived.

**Data segments**

Data segments may be displayed for a transaction. The system tries to display included application data in relation to individual fields within the data record.

**Log**

Displays the log generated by the respective application.

**Error file**

Displays the error log generated by the respective application.

**Data file**

Displays the data file that is optionally generated by the respective application.

12 Outbound Transactions

Overview

HYDRA menu	System Administration → MES Link Enabling (MLE) → Outbound transactions
FEDRA menu	System Administration → MES Link Enabling (MLE) → Outbound transactions
Transaction code	outtr
Function authorization	outtr

Purpose

Outbound transactions provide an overview of the data provided to other systems as well as the result of the outbound processing that follows. The application allows for detailed data to be displayed or new posting processes to be triggered.

Integration

The function allows for data transferred to other systems to be accessed. Other system might be:

- PPS/ERP systems
- Warehouse/material management systems
- Quality management systems

Field Descriptions

Field Descriptions – Outbound Transactions

Transaction number

Unique number that is generated while communicating with the external system.

Status

The status represents the result of the last processing step. The used status are visualized as follows:

Description in the application	Color	Meaning / usage
NEW	Yellow	The record has been provided initially. Further processing still have to take place.
TODO	Yellow	It has been tried already, to

Description in the application	Color	Meaning / usage
		post the record. This attempt has not been successful (for a certain reason) – the record is available to new posting attempt.
REACTIVATED	Orange	A record posted already has been marked for an additional posting attempt.
IN PROCESS	Grey	The record is posted currently.
UNKNOWN	Blue	There is no valid posting routine for the record.
DONE ERROR	Red	The record could not be posted successfully.
DONE	Green	The record could be posted successfully.

IDoc type

IDoc type of the transactions (whether or not the field is filled out, depends on the communication type).

No. of data records

Number of data records included in the transaction

No. of edited DR (data records)

Number of successfully processed data records included in the transaction

No. of unknown data records

Number of unknown data records included in the transaction

No. of erroneous data records

Number of faulty data records included in the transaction (wrong processing)

Time of reception

Date and time when the system received the transaction

Editing time

Date and time when the transaction was edited in the system

IDoc number

IDoc number of transactions (whether or not the field is filled out depends on the communication type).

Message type

Message type of the transaction

Message function

Message function of the transaction

SAP sending port

SAP sending port – only relevant if the communication with SAP is performed via IDoc

SAP sending partner type

SAP sending partner type – only relevant if the communication with SAP is performed via IDocs

SAP sending partner number

SAP sending partner number – only relevant if the communication with SAP is performed via IDocs

Receiver port

Receiver port – only relevant if the communication with SAP is performed via IDocs

Receiver partner type

Receiver partner type – only relevant if the communication with SAP is performed via IDocs

Receiver partner number

Receiver partner number – only relevant if the communication with SAP is performed via IDocs

Reference

Unique database key

Duration

Duration of system processing

Number of attempts

Number of processing attempts

Field Descriptions – Log Table**Application**

Application involved in the processing and editing of the transaction

Log. System

Logical system

Role

Role of the logical system

Designation

Designation of the application

Transaction number

Transaction number that has been processed

Status

Status of processing

Reference

Unique database key

Program

Technical name of the application

Program version

Program version of the application

Program date

Program date of the application

Log file name / log file size

Name and size of the log file

Error file name/error file size

Name and size of the error file

Data file name/data file size

Name and size of the data file

No. of data records

Number of data records included in the transaction

No. of edited data records

Number of successfully processed data records included in the transaction

No. of unknown data records

Number of unknown data records included in the transaction

No. of faulty data records

Number of faulty data records included in the transaction (wrong processing)

Text number

Currently not used

Posting

Currently not used

Created on

Point in time when the entry was created

Toolbar**Reset transaction**

Use the “reset transaction” button to process a transaction that has already been processed. This is only possible if the transaction has not yet been archived.

During reactivation, the control record of the transaction is set to the status REACTIVATED. The data records included in the transaction are set to status TODO. Once the data records are transferred and are then included in another transaction, there is no connection between the control record of the original transaction and these data records – you cannot show data records for the original control record any more.

**Data segments**

Data segments may be displayed for a transaction. The system tries to display included application data in relation to individual fields within the data record.

**Log**

Displays the log generated by the respective application.

**Error file**

Displays the error log generated by the respective application.

**Data file**

Displays the data file that is optionally generated by the respective application.

13 MLE Archiving

Overview

MLE archiving is divided into two essential steps:

- In the first step data is transferred from online tables to archive tables. The affected time range can be configured by a program parameter.
- In the second step data is deleted from archive tables. The affected time range can directly be specified via the application.

Moving data to archive tables

Moving data from online tables to archive tables is controlled via the program parameter of the archiving program `hysaparc.exe/out`. If no parameter is specified as supplied with the standard system, all data will be moved from MLE inbound and outbound transactions to archive tables. But the following must apply:

The editing data is less than or equal to the current date minus the program parameter set for archiving.

Proceed as described below to change the default setting (2 days):

- If Windows is used:
MLE tables are archived by starting the script `hyarc.scr` in the HYDRA directory (`HYDRADIR`). This script controls various archiving processes. By default, the script includes the following entry:

```
hysaparc.exe /TL=TRL_ALL /KEEPDAYS_UNKNOWN=60
```

Add the below-mentioned program parameter including the required value to this entry. Using this example, data is transferred to archive tables after 14 days:

```
hysaparc.exe /TL=TRL_ALL /KEEPDAYS_UNKNOWN=60 /ARC_DAYS=14
```

- If Linux is used:
MLE tables are archived by starting the script `hyarc.scr` in the HYDRA directory (HYDRADIR). This script controls various archiving processes. By default, the script includes the following entry:

```
hysaparc.out /TL=TRL_ALL /KEEPDAYS_UNKNOWN=60
```

Add the below-mentioned program parameter including the required value to this entry. Using this example, data is transferred to archive tables after 14 days:

```
hysaparc.out /TL=TRL_ALL /KEEPDAYS_UNKNOWN=60 /ARC_DAYS=14
```

Deleting data from archive tables

The retention period defined for each message type in the MLE distribution model specifies when archive tables are cleared.

The stated retention period starts with the point in time of editing a transaction.



If the period for moving data from online tables to archive tables is increased to 14 days (see example), the retention period should also be 14 days at least. Otherwise, data will immediately be deleted from archive tables.

14 Parallel Dispatchers in Inbound Processing

Purpose

A parallel MLE inbound processing is required if you need several parallel logical processing channels because of a high data volume.

In a second step, the message types are assigned to these logical processing channels.

How to proceed – Windows

Proceed as described in this section if your server runs the operating system Windows.

The dispatcher processes of the inbound processing are operated as Windows services in Windows. To implement the parallel processing, you must change entries of existing Windows services and install new Windows services.

Changing existing services

Use the Windows tool regedit.exe to change existing services. Call the tool via the command line or the Windows Run dialog. The dispatcher services are stored in the registry with the following paths:

MW 3.x	<i>HKEY_LOCAL_MACHINE → SOFTWARE → Wow6432Node → MPDV → HYDRA <system number> → Setup → HYDRA<system number> MLE Inbound Dispatcher <number of dispatcher></i>
MW 4.0pe	<i>HKEY_LOCAL_MACHINE → SOFTWARE → MPDV → Hydra <system number> → Setup → MIP <system number> ECS Inbound Dispatcher 0</i>

Extend the existing entry of the *HYDRA<system number> MLE Inbound Dispatcher 0* by the following entry (right-click → New → Expandable String Value):

Parameter name	Value
Name	ServiceNr
Type	Expandable String Value (REG_EXPAND_SZ)
Content	0

Installation of additional dispatcher services

The installation of additional services is based on a configuration file and an installation program that transfers the information of the configuration file to the Windows registry.

Open the configuration file in path HYDRADIR <system>\hymap.cfg (MW 3.x) or <system>\mipmapmw4m1.cfg (MW 4.0pe). The file includes examples of further dispatcher services, which have already been commented out. The entries for the dispatchers are at the end of the file:

MW 3.x	1\hymap.cfg	<pre># [HYDRA1 MLE-Inbound-Dispatcher 1] # program=%HYDRADIR%\hysap_dp.exe # Sleeptime=long,60 # Index=string,1 # Protokoll=string,ON # REDOCount=long,5 # Tracelevel=string,TRL ALL # ServiceNr=string,1 # #ProtokollFile=string,%HYDRADIR%\1\err\hysap_dp.pro # #ErrorFile=string,%HYDRADIR%\1\err\hysap_dp.err</pre>
MW 4.0pe	1\mipmapmw4m1.cfg	<pre># [MIP1 ECS Inbound Dispatcher 1] # program=%HYDRADIR%\hysap_dp.exe # Sleeptime=long,60 # Index=string,1 # Protokoll=string,ON # REDOCount=long,5 # Tracelevel=string,TRL ALL # ServiceNr=string,1 # #ProtokollFile=string,%HYDRADIR%\1\err\hysap_dp.pro # #ErrorFile=string,%HYDRADIR%\1\err\hysap_dp.err</pre>

To activate the entries for a later installation, delete the single hashtags ("#") and the blanks behind. If the parameters are still not available in the template, add the parameters following the example above. Assign values to the parameters according to your requirements.

Parameter name	Value
Index	Consecutive number for the logical processing channels. This number is assigned to the message types of the inbound in a further step.
ServiceNr	Consecutive number to separate the created protocols of the processes. Recommendation: Set this value to the value of the "index" parameter.

Repeat this process for all dispatcher services required. If you create new entries by copying existing entries, be careful to change the number in the service name (e.g. HYDRA1 MLE Inbound Dispatcher 1).

The changed configuration is activated as follows (here: instance 1 of a HYDRA multi-system):

1. Close HYDRA
Close HYDRA Manager
2. Call a command prompt on the HYDRA server for the relevant system. Make sure the HYDRA environment variables are set und that they are entered in the HYDRA directory.
3. Install the entries of the changed files `<system>\hymap.cfg` or `<system>\mipmapmw4m1.cfg` for the new service(s) via the installation tool from the command line with the following call:

MW 3.x	<code>ntinst -i -f 1\hymap.cfg</code>
MW 4.0pe	<code>ntinst -i -f 1\mipmapmw4m1.cfg</code>

4. Restart HYDRA.
5. Go to the Windows service administration and check whether the installation was successful. If the communication data is parameterized in the [logical systems](#), the services are automatically started by the *HYDRA<system number> Server Agent* service or the *MIP<system number> Server Agent*.

Assignment of message types to dispatcher services

Make the assignments as described in section [How to proceed – irrespective of OS](#).

How to proceed – Linux

Proceed as described in this section if your server runs the operating system Linux.

The dispatcher processes of the inbound processing are operated as processes in Windows. To implement the parallel processing, you must change entries of existing processes and configure new processes.

Changing existing entries

Change existing entries in the file `hymap.dat`.

Open the configuration file in path HYDRADIR <system number>/hymap.dat or <system>/mipmapmw4m1.dat. The file includes examples for further dispatcher processes, which are commented out, and the entry for the activated dispatcher process. The examples are at the end of the file:

MW 3.x	1/hymap.dat	<pre> ;### MLE-Inbound-Dispatcher (replaces SAP scheduler) ; HYDRA MLE-Inbound-Dispatcher 0 hysap_dp.out -E./1/err/hysap_dp.0.err /TL=TRL_ALL /SLEEP=60 /SERVICE_NR=0 /PROT=ON /REDO=5:9999:0:0:0:HYDRA1 MLE-INBOUND-Dispatcher 0 ; HYDRA MLE-Inbound-Dispatcher 1 ; hysap_dp.out -E./1/err/hysap_dp.1.err /TL=TRL ALL /SLEEP=60 /INDEX=1 /SERVICE_NR=1 /PROT=ON /REDO=5:9999:0:0:0:HYDRA1 MLE-INBOUND-Dispatcher 1 ; HYDRA MLE-Inbound-Dispatcher 2 ; hysap_dp.out -E./1/err/hysap_dp.2.err /TL=TRL ALL /SLEEP=60 /INDEX=2 /SERVICE_NR=2 /PROT=ON /REDO=5:9999:0:0:0:HYDRA1 MLE-INBOUND-Dispatcher 2 </pre>
MW 4.0pe	1/mipmapmw4m1.dat	<pre> ;### MLE-Inbound-Dispatcher (replaces SAP scheduler) ; MIP ECS Inbound Dispatcher 0 hysap_dp.out -E./1/err/hysap_dp.0.err /TL=TRL_ALL /SLEEP=60 /SERVICE_NR=0 /PROT=ON /REDO=5:9999:0:0:0:MIP1 ECS Inbound Dispatcher 0 ; MIP ECS Inbound Dispatcher 1 ; hysap_dp.out -E./1/err/hysap_dp.1.err /TL=TRL ALL /SLEEP=60 /INDEX=1 /SERVICE_NR=1 /PROT=ON /REDO=5:9999:0:0:0:MIP1 ECS Inbound Dispatcher 1 ; MIP ECS Inbound Dispatcher 2 ; hysap_dp.out -E./1/err/hysap_dp.2.err /TL=TRL ALL /SLEEP=60 /INDEX=2 /SERVICE_NR=2 /PROT=ON /REDO=5:9999:0:0:0:MIP1 ECS Inbound Dispatcher 2 </pre>

If the additional parameter `/SERVICE_NR=0` is missing for the active entry (line without leading semicolon ";"), then add it as described:

```
hysap_dp.out -E./1/err/hysap_dp.0.err /TL=TRL ALL /SLEEP=60 /SERVICE_NR=0 /PROT=ON
/REDO=5:9999:0:0:0:HYDRA1 MLE-INBOUND-Dispatcher 0
```

Configuration of additional dispatcher processes

Change existing entries in the file *hymap.dat* (MW3.x) or *mipmapmw4m1.dat* (MW4.0pe).

Open the configuration file in path HYDRADIR <system number>/hymap.dat (MW 3.x) or <system>/mipmapmw4m1.dat (MW4.0pe). The file includes examples of further dispatcher processes, which are already inactive. The examples are at the end of the file.

To activate an entry, delete the single semicolon (";") and the blanks behind. Make sure that the parameter `/SERVICE_NR` is available for all entries and assign values to the parameters according to your requirements:

Parameter name	Value
/SERVICE_NR=	Consecutive number to separate the created protocols of the processes.

Example of an activated and extended entry:

```
hysap_dp.out -E./1/err/hysap_dp.1.err /TL=TRL_ALL /SLEEP=60 /INDEX=1 /PROT=ON /REDO=5
/SERVICE-NR=1:9999:0:0:0:HYDRA1 MLE-INBOUND-Dispatcher 1
```

Repeat this process for all dispatcher processes required. If you create new entries by copying existing entries, be careful to change the number in the process name (e.g. HYDRA1 MLE Inbound Dispatcher **1**) and the number in the error log (e.g. hysap_dp.**5**.err).

Restart HYDRA.

Assignment of message types to dispatcher services

Make the assignments as described in section [How to proceed – irrespective of OS](#).

How to proceed – irrespective of OS

Proceed as described in this section irrespective of the operating system used for the server.

Assignment of inbound message types to dispatcher services

You can assign an index (and therefore a processing dispatcher) to each message type in the [distribution model](#). The index is currently assigned directly via the database.

The table *hysap_dist_mod* is the database table, which is relevant for the distribution model. In this table, the *Index* specified for the dispatcher is assigned to the message type using the field *DM_PARAM1[1,1]*:

```
update hysap dist mod set dm param1 = '<Index des Dispatchers>' where dm sap mestyp =
'<message type>';
```

All message types WITHOUT assignment are processed using the "HYDRAN MLE-Inbound-Dispatcher 0" or the "MIP1 ECS Inbound Dispatcher 0".

15 Log book

Overview

HYDRA menu	System administration → Logging → Log book
FEDRA menu	System administration → Logging → Log book
Transaction code	lbook
Function authorization	For master entries: logbook.hdins logbook.hdupd logbook.hddel For detail entries: logbook.dtins logbook.dtupd logbook.dtdel

Purpose

This application allows for changes to the system to be maintained and managed in a log book integrated in the system.

The application provides master entries that may include specific administration data. As many detail entries as required can be assigned to a master entry. The system assigns an ascending, unique number to each master entry, which does not have to be consecutive¹.

In addition to administrative data, a long text may be stored to each detail entry. The application also provides a search function to search for these long texts. Each detail entry is aware of the reference to the corresponding master entry. For each detail entry the system attributes an ascending and unique number across all generated detail entries.

Selection criteria / field descriptions – master entries

The following selection criteria referring to a master entry are available:

Master – entry created from / until

Date of creating the master entry

Reason

Reason for the modification / activity

¹ The reference of the HYINFO database table is used as distinct number. As this database table is also used for other data, numbering of master entries of the log book might be incomplete.

Process owner

Person responsible for the process and/or ordering party (customer, internal, ...)

Reference

Reference to purchase orders / minutes / support cases, etc.

Person responsible

Who made the changes

Master reference

Distinct identification of a master entry assigned by the system.

Title / short text

Title / short text

Selection criteria / field descriptions - detail entries

The following selection criteria referring to a detail entry are available:

Detail - entry created from / until

Date of creating the detail entry

Reference to log

Reference to purchase orders / minutes / support cases, etc.

Product (e.g. BDE, MPL, ...)

In which products have the settings been changed?

Object (e.g. machine, ...)

Which objects have been changed?

Search term

Recorded notes can be browsed by entering a search term.

An additional check has been implemented in the search service making sure the search function stays efficient. The number of resulting data records is checked taking the transferred selection parameters into account. If they exceed 5000 the search is rejected issuing an error message.

Please note that the search is not case-sensitive. This means it does not differentiate between upper and lower case. The character "*" (asterisk - U+002A) can be used as placeholder/wildcard character.

All detail entries containing the search term in question and the master entries belonging to these detail entries are displayed as the result of the search.

16 Checks for Business Parameter Containers (BSCs)

Overview

Checking the number of managed personnel master records (BSC-NPE)

The Business Parameter Container "BSC-NCE" specifies the maximum number of managed personnel master records.

The system checks the number of active persons at the current point in time. A person is considered active if the following requirements are fulfilled:

- The current date is within the dates of beginning of validity and end of validity.
- The person has joined but not yet left the company on the current date.
- The person has not been locked for PZE.

The check is performed for all editing activities where an active and current version of the HR master data is generated.

- When creating new, active HR master data versions
- When changing the HR master data version valid today if it changes from inactive to active.

The check is performed for manual editing activities, e.g. on the MOC and during an interface run of all HR master data interfaces.



Because the system only checks the HR master data versions valid today, it is possible that too many versions are created that are valid in future. When the time is reached that these HR master data versions become valid, no new versions can be created. If the HR master data interface DNPERSO from SAP-HCM is used, then the surplus HR master data is deactivated.

If the HR master data interface DNPERSO of SAP-HCM is used, the following special feature is active:



It may occur that in an identical interface run a number of persons is added and a number of "old" ones is deleted or deactivated. Therefore, for the duration of the interface run, "new" and "old" persons are activated, as the persons who should be deleted or deactivated can only be identified at the end of the interface run. Thus a violation of the maximum number of licensed persons can occur in the short-term and some of the "new" persons can be rejected. However, the "new" persons are transferred during the next interface run when all "old" ones have been deactivated.

Checking the number of managed machines, aggregates or workplaces (BSC-NMW)

The Business Parameter Container "BSC-NMW" specifies the maximum number of managed machines, aggregates or workplaces.

To identify the current number in the system, all unlocked machines are used.

Checking the number of machines with a DNC connection (Distributed Numerical Control) (BSC-NDM)

The Business Parameter Container "BSC-NDM" specifies the maximum number of managed machines with a DNC connection (Distributed Numerical Control).

The check is performed when you create and copy an "assignment DNC family to machine".

To identify the current number in the system, the total number of unlocked machines with an assignment "DNC family to machine" is used.

Checking the number of logical channels to collect process values (tags) (BSC-NPT)

The Business Parameter Container "BSC-NPT" specifies the maximum number of logical channels used to collect process values (tags).

To identify the current number in the system, all created logical channels are used.

17 Errorcodes and Returncodes

17.1 Overview

The following section describes the meaning of error messages appearing at the terminal or the MOC due to certain user actions. Error messages can have complex causes that are considered in detail in the following. Possible solutions for the respective problems are indicated for each error. The customer-specific error messages ranging from 5000 to 6999 are described in the customer documentation

17.1.1 Errorcode 10: Order not available

Shortform:

Order not available

Description:

Order not available

Problem:

An operation that does not exist within the HYDRA dataset. is attempted to be logged on.

solution:

Please check whether the entered number is correct. At the MOC within the order overview it can be checked whether an operation is available within HYDRA or not.

17.1.2 Errorcode 11: Order number ■■.. not allowed

Shortform:

Ord. no. not allowed

Description:

The order number is not allowed.

Problem:

Certain order numbers such as "GK.." or "GKM..." are reserved for the waiting time processing and must not be logged on manually. The system processes this order automatically.

Depending on the customer, the order number "PG..." might be reserved for bundle operations.

solution:

Please use order numbers from another number range.

17.1.3 Errorcode 20: Order is already running

Shortform:

Order runs

Description:

Order is already running

Problem:

An operation that is already active is attempted to be logged on.

solution:

An operation can only be logged on once to a workplace. Via the sequencing list within the dialog "Log OP on" all operations, which are within the pool for this workplace, can be selected. Here the user can choose another operation.

If an operation that is already running is supposed to be logged on to another workplace at the same time this can be enabled by setting the multiple flag within the stock data of the operation.

17.1.4 Errorcode 30: Order has been finished

Shortform:

Order is finished

Description:

Order has been finished

Problem:

An operation, which has already been finished, is attempted to be logged on.

solution:

Operations that have already been finished cannot be logged on anymore. Via the client function "reactivate" an operation, which has already been finished, can be reactivated in order that it is possible to log the operation on again.

Before using the "reactivate" function please check possible consequences within the guiding PPS system:

17.1.5 Errorcode 31: Order has been interrupted

Shortform:

Order is interrupted

Description:

Order has been interrupted

Problem:

An operation, which has already been interrupted, is attempted to be logged on.

solution:

Within the dialog "interrupt OP" the operation running at the machine can be selected via the selection list of the operation.

The current status of machine and operation can be checked in different dialogs such as order overview order progress or operation report at the MOC (see manual of MOC)

17.1.6 Errorcode 32: Invalid OP status change

Shortform:

Invalid OP status

Description:

The change of the OP status is not valid

Problem:

The change of the OP status is not valid

solution:

Please choose a valid OP status

17.1.7 Errorcode 40: 1 order can only be logged on to mach.

Shortform:

Only 1 ord. possible

Description:

One order can only be logged on to this machine.

Problem:

A second operation is attempted to be logged on to the workplace although, according to configuration, only one operation is allowed.

solution:

1. Finish/interrupt the currently running operation before logging on another operation.
2. Check the configuration of the workplace (menu ADE: master data > machine/workplace configuration > machines/workplaces). The setting "several orders allowed" can be activated there.

17.1.8 Errorcode 41: 1 order can only be logged on to stat.

Shortform:

Only 1 ord. possible

Description:

One order can only be logged on to this station.

Problem:

One operation may only be logged on to this station.

solution:

When it comes to station-related postings only one operation may be logged on to the station.

Please interrupt/finish the active operation at first in order to be able to log the new operation on.

17.1.9 Errorcode 42: Opt. finish oper. when target qua. reach

Shortform:

Opt.target qty. 1 op

Description:

One order can only be logged on to this machine (Option "Terminate OP when reaching target quantity")

Problem:

On this machine is the option 'Terminate OP when reaching target quantity' active. It is only allowed to log on one operation.

solution:

1. Finish/interrupt the currently running operation before logging on another operation.
2. Check the configuration of the workplace / processing codes / order types

17.1.10 Errorcode 50: Order status is not available

Shortform:

Order status error

Description:

Order status is not available

Problem:

The order or operation cannot be created as no initial status is defined for the order type under which it is supposed to be created.

solution:

Please contact MPDV Support.

17.1.11 Errorcode 51: Old order - logon not possible

Shortform:

Old ord-not possible

Description:

Old order - logon impossible.

Problem:

OP cannot be logged on due to deviation from the planned deadline

solution:

OP can only be logged on between earliest and latest start

17.1.12 Errorcode 52: Order header status not available

Shortform:

O. head. stat. error

Description:

Order header status is not available.

17.1.13 Errorcode 60: OP cannot be logged on several times

Shortform:

OP alr. logged on

Description:

Operation cannot be logged on several times.

Problem:

The operation has already been logged on and may only be logged on to one machine.

solution:

If the operation is to be logged on to several machines the multiple flag has to be set for this operation. This can be made within the menu item "edit operations" at the MOC. If the operation must not be logged on several times the operation has to be interrupted at first before a new logon can be carried out.

17.1.14 Errorcode 70: Order is already running on this mach.

Shortform:

Ord. runs on machine

Description:

Order is already running at this machine

Problem:

An operation, which has already been logged on to this machine, was attempted to be logged on.

solution:

Please choose another operation or another function depending on the required functionality.

17.1.15 Errorcode 73: The operation is still blocked by MLE

Shortform:

OP is blocked by MLE

Description:

The operation is still blocked by MLE Interface

Problem:

A blocked OP was attempted to be logged on.

solution:

The MLE interface locks the OP that is currently being changed in the current transaction. The operation can be logged on as soon as the current transaction has been completed.

17.1.16 Errorcode 74: OP is deleted logically

Shortform:

OP is deleted

Description:

The OP has been deleted logically.

Problem:

see error code 78

solution:

see error code 78

17.1.17 Errorcode 75: Order cannot be recorded

Shortform:

Order cannot be rec.

Description:

Order cannot be recorded

Problem:

see error code 78

solution:

see error code 78

17.1.18 Errorcode 76: Order is blocked

Shortform:

Order blocked

Description:

Order has been blocked

Problem:

see error code 78

solution:

see error code 78

17.1.19 Errorcode 77: Order cannot be logged on

Shortform:

O. cant be logged on

Description:

Order cannot be logged on.

Problem:

see error code 78

solution:

see error code 78

17.1.20 Errorcode 78: OP cannot be logged on

Shortform:

OP cant be logged on

Description:

OP cannot be logged on

Problem:

The problem that an operation cannot be logged on might have different reasons. In particular, this can also depend on a customer-specific configuration.

Possible causes are:

1. It is a capacity order (order type "capacity order")
2. It is a waiting period order (order type "GKP" or "GKM")
3. The order or operation has already been finished.
4. The "recordable" flag has not been set at the operation.
5. The operation has been blocked. To check this, go to the order information to the "administration" tab of the operation. Has the "blocked" flag been set to "J"?
6. The order type has been configured as "not enterable".
7. The processing code defined on the operation has been configured as "not enterable".
8. The status of the order or the operation has been configured as "cannot be logged on".
9. The operation has a status that has not yet been "prepared". Then the status of the predecessor operation can be the reason that the operation cannot be logged on.
10. The order or operation is logical deleted.

solution:

Please check at first whether the "recordable" flag has been set at the operation. The indicator can be found within the operation tab "processing".

Please check afterwards whether the "blocked" flag has been set in the "administration" tab. If this is the case, you can unlock this via the respective function (button) in the order overview or order information.

Check (e.g. via the order information) whether one of the above-mentioned order types have been assigned to the order.

Please check the current status of the order as well as the status of the operation.

17.1.21 Errorcode 79: Invalid order status

Shortform:

Invalid order status

Description:

Invalid order status

Problem:

The logon carried out is not allowed for the current status of the order.

solution:

Choose an operation of a valid operation that can be logged on.

17.1.22 Errorcode 80: Invalid OP status

Shortform:

Invalid OP status

Description:

OP status not defined

Problem:

The logon carried out is not allowed for the current status of the OP.

solution:

Please choose a logon that is allowed for the current status of the OP, e.g. logging an OP on is allowed for prepared or interrupted OPS but not for OPs that are already running or that have already been finished.

17.1.23 Errorcode 81: The status cannot be assigned manually

Shortform:

Status only autmat.

Description:

The status cannot be assigned manually.

Problem:

The assigned status is only intended for automatic assignments within the system.

solution:

Please choose a machine status that might be assigned manually or set the option "manual assignment" for this machine status at the MOC within the menu item status assignment.(of machines/workplace)

17.1.24 Errorcode 82: Status change not allowed

Shortform:

Stat. chan. n. allow

Description:

It is not allowed to change the status.

Problem:

At the moment it is not allowed to change the machine status.

solution:

When an operation is logged on the status must not be changed.

17.1.25 Errorcode 83: Status not allowed for this order type

Shortform:

Stat. inv. for type

Description:

Status is not allowed for this order type.

Problem:

An operation, whose order type (e.g. PPS OP or overhead cost OP) does not allow the selected machine status, is active at the machine.

solution:

When defining the machine status it can be determined for which order type this status is allowed.
Select an admissible status for the operations that are currently logged on to the machine.

17.1.26 Errorcode 84: Invalid machine status

Shortform:

Invalid status

Description:

Invalid machine status

Problem:

A status that does not exist within the list of disturbances was attempted to be assigned to the machine.

solution:

Please select a status that has been defined for the machine. All machine statuses are defined separately for each machine within the menu item status assignment (of machines/workplace) at MOC

17.1.27 Errorcode 85: The operation is still blocked

Shortform:

OP is blocked

Description:

The operation is still blocked

Problem:

A blocked OP was attempted to be logged on.

solution:

Blocked OPs have at first to be released via a HYDRA planning function. Then a logon can be carried out.

17.1.28 Errorcode 86: Target quantity change not allowed

Shortform:

Change not allowed

Description:

It is not allowed to change the target quantity.

Problem:

The reporting person is not authorized to change the target quantity.

solution:

Please check the authorization within the HR master data.

17.1.29 Errorcode 87: The OP is prepared

Shortform:

OP is prepared

Description:

Operation has been prepared.

Problem:

Function not possible for this OP, because the OP is prepared

17.1.30 Errorcode 89: The OP is not active

Shortform:

OP is not active

Description:

The registered operation is contained in an inactive order sequence

Problem:

The registered operation is contained in an inactive order sequence.

solution:

Log an operation of an active sequence on.

17.1.31 Errorcode 90: Machine ■■■■■■■■ not available

Shortform:

No machine label

Description:

Machine is not available

Problem:

During this action it was detected that the assignment to the machine is missing.

solution:

Please check whether the registered machine is available in HYDRA. When logging an operation on without entering a machine it has to be checked whether a valid machine number has been entered for this operation.

17.1.32 Errorcode 91: Machine is no machining center

Shortform:

No machining center

Description:

Machine is no machining center

Problem:

Activating/resetting an operation at a machine is only possible at a machining center.

solution:

Please check at the MOC configuration of machines/WP whether this machine is a processing center.

17.1.33 Errorcode 94: Machine group ■■■■■■■■ not available

Shortform:

No machine group

Description:

Machine group is not available.

Problem:

The entered machine group is not known as a capacity group within the system

solution:

Check the entered machine group and create it, if necessary as a capacity group Check the HYDRA basic settings if the settings are set correctly to identify the HYDRA machine group for the transfer from SAP.

17.1.34 Errorcode 95: Posting outside synchronization!

Shortform:

Post. outside sync.

Description:

The time of the posting differs too much from the current posting status of the machine!

Problem:

The time of the posting differs too much from the current posting status of the machine!

solution:

Wait until the machine has synchronized its messages and try again later. If the message at a later time is not possible again, please contact the administrator of the Hydra.

17.1.35 Errorcode 100: It's not possible to logon to this mach.

Shortform:

Not possible

Description:

Logon to this machine impossible.

Problem:

This operation must not be logged on to this workplace as the operation has not been planned for this workplace.

solution:

If the plausibility check "check of specification in backlog of orders" is activated for the order type of the machine/workplace an operation may only be logged on to the planned workplace.
Please check at the MOC whether the operation has been planned for the registered workplace.

17.1.36 Errorcode 101: No data available!

Shortform:

No data!

Description:

No data available!

Problem:

General error message appearing when the selected data (tables or files) are not available.

solution:

Depending on the action, different reasons are possible.
Please contact MPDV-Support.

17.1.37 Errorcode 102: Unknown dialog ■■■■■■■■■■■■■■■■■■■■■■

■■■■■

Shortform:

Unknown dialog

Description:

Kernel does not support the used BAPI.

Problem:

A dialog that is not known within the system tries to send data to the server, which is rejected.

solution:

Please contact MPDV-Support.

17.1.38 Errorcode 103: Unknown event ■■■■ ■■■■■■■■■■■■■■■■■■■■

Shortform:

unknown event

Description:

Kernel does not know the event.

Problem:

An invalid posting appeared when processing the dialog data and their dissolution in single events.

solution:

Internal error, please contact MPDV-Support.

17.1.39 Errorcode 104: Unknown command

Shortform:

Unknown command

Problem:

Unknown command when transferring data from the terminal to the server.

solution:

Internal error, please contact MPDV-Support.

17.1.40 Errorcode 105: Parameters are missing

Shortform:

Parameters missing

Description:

Relevant parameters are missing

Problem:

When transferring dialog data it was detected that parameters are missing.

solution:

Please contact MPDV-Support..

17.1.41 Errorcode 106: Invalid date ■■■■■■■■■■

Shortform:

Invalid date

Description:

An invalid date has been stated.

Problem:

When checking dialog data for plausibility it is detected that the date stamp is too old or invalid.

solution:

Please contact MPDV-Support.

17.1.42 Errorcode 107: Incorrect order type

Shortform:

Incorrect type

Description:

Inadmissible order type.

Problem:

It is detected that the order type of the respective operation is not allowed.

solution:

Please check the order type at the MOC in the menu item "edit orders"

17.1.43 Errorcode 108: Material staging!

Shortform:

Material!

Description:

Material staging!

Problem:

The first operation of a line production is used for material staging and therefore it must not be finished without produced yield.

solution:

Register the produced yield since the operation may only be logged on when the yield is greater than 0.

17.1.44 Errorcode 109: Logon/off of OP has alr. been confirmed

Shortform:

OP confirmed

Description:

The logon of the operation has already been uploaded.

Problem:

When recording a correction it was detected that the data record has already been uploaded.

solution:

A correction within HYDRA is not possible anymore. Please correct the data within the guiding system.

17.1.45 Errorcode 110: Invalid time stamp ■■■■■■

Shortform:

Invalid time stamp

Description:

Invalid time

Problem:

When checking the posting for plausibility it is detected that the time stamp is invalid.

solution:

Please contact MPDV-Support.

17.1.46 Errorcode 111: Area functions are not active

Shortform:

Area funct. inactive

Description:

Area functions are not active.

Problem:

The user posts onto a machine that is not assigned to the terminal.

solution:

The area function of the terminals enable postings to machines that are not assigned to a terminal.
Via a button within the terminal configuration this function can be activated or switched off.

17.1.47 Errorcode 112: Logon not intended at this workplace.

Shortform:

Not possible

Description:

A logon to this workplace is not intended.

Problem:

This operation must not be logged on to this machine as the operation has not been planned for this machine or machine group.

solution:

If the plausibility check for machine groups has been activated within the order type an operation may only be logged on to its planned machine or an alternative machine of the respective machine group.

Please check at the MOC whether the order has been planned for the registered machine or machine group.

17.1.48 Errorcode 113: Logon n. possible at this mach./category

Shortform:

Not possible

Description:

Logon to this machine/category impossible.

Problem:

This operation must not be logged on to the machine as the operation has not been planned for this machine or machine category.

solution:

If the plausibility check for machine categories is active within the order type an operation may only be logged on to its planned machine or to an alternative machine of the respective machine category.

Please check at the MOC whether the order has been planned for the registered machine or machine category.

17.1.49 Errorcode 114: No premium group assigned

Shortform:

Prem. grp. not def.

Description:

No premium group assigned.

Problem:

This machine has been set for group piecework within the HYDRA-LLE configuration. In this case, the machine has to be assigned to an existing premium group within HYDRA-LLE or the operator has to indicate a valid premium group when logging the order on. The assignment of premium groups is missing and/or the worker did not enter a premium group.

solution:

Correct the machine configuration within HYDRA-ADE/MDE or the assignment of premium groups within HYDRA-LLE in order that the operators state correct premium groups at the terminal.

17.1.50 Errorcode 115: Invalid premium group

Shortform:

Prem. grp. invalid

Description:

Invalid premium group

Problem:

This machine has been set for group piecework within the HYDRA-LLE configuration. In this case, the machine has to be assigned to an existing premium group within HYDRA-LLE or the operator has to indicate a valid premium group when logging the order on. The premium group assigned or entered by the worker does not exist.

solution:

Correct the assignment of premium groups within HYDRA-LLE or make sure that the operators enter the correct premium groups at the terminal.

17.1.51 Errorcode 116: Another premium group already assigned

Shortform:

Pr.grp.alr. assigned

Description:

Another premium group has already been assigned.

Problem:

An order, which has already been logged on to another premium group, is attempted to be logged on to a workplace for group piecework.

solution:

At a workplace an order can only run for one single premium group at the same time as otherwise a unique assignment to the personal processing is not possible. Process the order at two different workplaces or for the same premium group.

17.1.52 Errorcode 117: Status production is not available

Shortform:

St. product.n.avail.

Description:

The production status is not available for this machine.

Problem:

No operation can be logged on to this machine as the production status is missing.

solution:

Please configure the producion status for this machine at the MOC

17.1.53 Errorcode 118: The machine is blocked

Shortform:

Machine blocked

Description:

The machine has been blocked.

Problem:

Persons or operations cannot be logged on to this machine as the machine has been blocked.

solution:

Reset the blocking indicator of the machine within the machine configuration at the MOC or log on to a released machine.

17.1.54 Errorcode 119: Overlap quantity exceeded

Shortform:

Overlap quantity!

Description:

Overlap quantity has been exceeded.

Problem:

The quantity registered for the operation (sum of yield and scrap) exceeds the yield that has so far been registered for the predecessor operation.

solution:

Check the registered quantity and the quantity that has already been produced for the operation compared to the yield of the predecessor operation.

17.1.55 Errorcode 130: Invalid serial number ■■■■■■■■■■■■■■■■■■■■**Shortform:**

Invalid serial no.

Description:

Invalid serial number

Problem:

The entered serial number is invalid

solution:

Please enter a valid serial number

**17.1.56 Errorcode 131: Serial number ■■■■■■■■■■■■■■■■■■■■
assigned****Shortform:**

Serial no. assigned

Description:

Serial number has been assigned.

Problem:

The entered serial number has already been assigned

solution:

Please enter a free serial number

17.1.57 Errorcode 132: Predecessor send-ahead qty. n.y. reached**Shortform:**

Send-ahead quantity!

Description:

The predecessor send-ahead quantity has not yet been reached.

Problem:

The OP may only be logged on when the preceding OP has reached its send-ahead quantity.

solution:

Please check actual quantity and send-ahead quantity of preceding OP.

17.1.58 Errorcode 134: Too many lines; therefore only one item.

Shortform:

List canceled!

Description:

List cancelled!

Problem:

The DNC ressource list has too much entries

Lösung:

17.1.59 Errorcode 144: No data have been changed!

Shortform:

No data change

Description:

No data have been changed.

Problem:

Data have not been changed during data maintenance.

solution:

It is only possible to recalculate if data have been changed.

17.1.60 Errorcode 145: Process offline

Shortform:

Process offline

Description:

No Connection to Hydra process(es)

Problem:

The connection to processes of the Hydra server is lost

17.1.64 Errorcode 410: Error when opening/writing the file.

Shortform:

File name invalid

Description:

Error when opening/writing the file.

Problem:

Error when opening/writing the file.

solution:

State a valid file

17.1.65 Errorcode 411: Status text is not available

Shortform:

Status text n. avail

Description:

Status text is not available

Problem:

Status text is not available.

solution:

Use a valid status text or insert a new one

17.1.66 Errorcode 412: Can only be set man.if prod_kenn empty

Shortform:

Man. set. n. allowed

Description:

Can only be set manually if prod_kenn is empty

17.1.67 Errorcode 413: Production characteristic not distinct

Shortform:

Prod_Kenn n.distinct

Description:

Production indicator not unique.

Problem:

Production indicator must be unique per order type.

solution:

Use an other production indicator.

17.1.68 Errorcode 414: Indicated group does not exist

Shortform:

Group not available.

Description:

Indicated group does not exist

Problem:

Indicated group does not exist.

solution:

Use an exisiting group or insert a new one.

17.1.69 Errorcode 415: RESTYP does not fit in single type grp.

Shortform:

Grp. is single type

Description:

RESTYP does not fit in single type group.

Problem:

The stated RESTYP does not fit in the exisiting single type group.

solution:

Use an RESTYP which fit in single type group or define the group as not single typed.

17.1.70 Errorcode 416: Function group is not available

Shortform:

Fct. group. n. avail

Description:

Function group is not available

Problem:

Function group is not available.

solution:

Use an existing function group or insert a new .

17.1.71 Errorcode 417: Event that is not defined

Shortform:

Event n. available

Description:

Undefined event

17.1.72 Errorcode 418: Please enter message

Shortform:

Enter message

Description:

Please enter message.

Problem:

There was no message entered

solution:

You must enter a message in the corresponding field

17.1.73 Errorcode 419: Please read message at first

Shortform:

Read message first

Description:

Only messages that have been read can be closed or forwarded.

17.1.74 Errorcode 420: Wrong or missing recipient type

Shortform:

Recipient type wrong

Description:

Wrong or missing recipient type

Problem:

There was no or wrong recipient type entered

solution:

Enter a existing recipient type

17.1.75 Errorcode 421: Please enter solution

Shortform:

Enter solution

Description:

Please enter a solution

Problem:

There was no solution notice entered

solution:

You must enter a solution notice in the corresponding field

17.1.76 Errorcode 422: Communication error with escalation man.

Shortform:

Communication error

Description:

A communication error with escalation manager has occurred.

solution:

Please contact MPDV Support.

17.1.77 Errorcode 424: Error in User-Bapi (see protocol)

Shortform:

Error in Bapi

Description:

<ERR.TXT>

Problem:

An Error has occurred in a custom specific extension or in an extension build with Hydra Applications.

solution:

For more information, please look in customer documentation or ask your Hydra Applications Developers

17.1.78 Errorcode 425: Responsibility profile not available

Shortform:

Resp. prof. n. avail

Description:

The responsibility profile is not available.

Problem:

The choosen responsibility profile is not available.

solution:

Select an existing responsibility profile or create a new one

17.1.79 Errorcode 426: Group still in use (group assignment)

Shortform:

Group still in use

Description:

Group is still being used.

Problem:

The group can not be deleted, because it is used in the group assignment

solution:

Delete the corresponding entry in group assignment before you delete the group

17.1.80 Errorcode 427: Function profile is not available

Shortform:

Fct.profile n.avail.

Description:

The function profile is not available.

17.1.81 Errorcode 428: Message is already closed

Shortform:

Message closed

Description:

The message is already closed

Problem:

The message could not be closed because it is already closed

solution:

It's not necessary to close this message

17.1.82 Errorcode 429: Circular reference detected

Shortform:

Circular reference

Description:

A circular reference has been detected.

Problem:

A circular reference has been detected.

solution:

Resolve configuration in a way that avoids circular references.

17.1.83 Errorcode 430: Function requires development license

Shortform:

DEF/0 missing dev.lic

Description:

The desired function requires a development license.

Problem:

To execute the desired function, you need a development license.

solution:

A development license is required for the required action, or the change must be requested as Customizing.

17.1.84 Errorcode 431: DEF/0: Requires development license

Shortform:

DEF/0 missing dev.lic

Description:

Default dialogs for user 0 may only be edited with developer license.

Problem:

Default dialogs for user 0 may only be edited with developer license.

solution:

A development license is required for the required action, or the change must be requested as Customizing.

17.1.85 Errorcode 432: Data requires development license

Shortform:

Data requ. dev.lic

Description:

The entered data requires a development license.

Problem:

In order to save the entered data, you need a development license.

solution:

The entered data requires a development license. For example, when copying a dynamic dialog, it is not possible to change the dialog itself and create new dialogs without a development license.

However, you can copy existing dialogs to other terminals or terminal groups.

17.1.86 Errorcode 500: Order is not logged on

Shortform:

Not logged on

Description:

The order is not logged on

Problem:

When logging off/confirming/interrupting the operation it is detected that the registered operation does not run at this machine. Therefore, it is impossible to partially confirm/interrupt/finish the OP or to change the output batch for this operation at this machine.

If the container management option is active this error message shows that it is only possible to create containers if the first operation of the order is running.

solution:

Please check the entered operation and machine number. The order overview function of the MOC provides an overview of operations that are logged on to machines.

When it comes to the container management the first operation of the order has to be logged on to be able to create new containers.

17.1.87 Errorcode 501: The container does not belong to order

Shortform:

Wrong container OP

Description:

The container does not belong to the order

Problem:

In case of transport postings the container may only be logged on within one order and not to other orders.

solution:

Please check, e.g. in the container list at the terminal which operation the container is currently logged on to. The container can only be transferred to the subsequent operation.

17.1.88 Errorcode 502: Wrong sequence of containers

Shortform:

Wrong sequence

Description:

Wrong sequence of containers

Problem:

The container may only be transferred to the subsequent operation within the production order.

solution:

See error code 501

17.1.89 Errorcode 503: Log container on only to 1st OP

Shortform:

Only to 1st OP

Description:

Container may only be created at the first operation.

Problem:

With a transport posting it is attempted to create a container, although the first operation of the production order is inactive.

solution:

Please log the first operation on before entering new containers.

17.1.90 Errorcode 504: Container still active on preceding OP

Shortform:

N. y. all containers

Description:

The container is still active at predecessor operation.

Problem:

For the container management an operation may only be finished when all containers are transferred to the subsequent operation.

solution:

Transfer all containers to the next operation in order to be able to finish the operation. An overview of all containers and their current position can be requested via the container list at the terminal.

17.1.91 Errorcode 505: The 1st OP has not yet been finished

Shortform:

1st OP still active

Description:

The first operation has not yet been finished.

Problem:

In the container management an operation may only be finished when the first operation of the production order has already been finished.

solution:

At first finish the first operation of the production order before finishing the subsequent operations.

17.1.92 Errorcode 510: Person is not authorized!

Shortform:

Not authorized

Description:

Person is not authorized!

Problem:

Person is not authorized to do this action.

solution:

Please check the person's authorizations at the MOC

17.1.93 Errorcode 520: Creating not allowed

Shortform:

Creating not allowed

Description:

Creating is not allowed.

Problem:

A bundle OP may only be logged on to especially configured machines.

solution:

Please check the machine configuration whether the option "order bundling" is active.

17.1.94 Errorcode 522: Station-related logons/offers not allowed

Shortform:

Stations not allowed

Description:

Station-related postings are not allowed.

Problem:

Station-related postings may only be carried out at especially configured machines.

solution:

Check the machine configuration whether the option "station-related messages" is active.

17.1.95 Errorcode 523: Station is already occupied

Shortform:

Station occupied

Description:

Station has already been occupied.

Problem:

There was an attempt to log more than one operation on to a station.

solution:

One operation may only be logged on to the station. Interrupt the active operation at first in order to be able to log the new operation on.

17.1.96 Errorcode 524: OP must not be deleted

Shortform:

Deleting not allowed

Description:

Operation must not be deleted.

Problem:

It is attempted to cancel a production operation, which is not allowed in this situation.

solution:

Production operations (that are not labeled with "Z") must not be canceled.

17.1.97 Errorcode 526: Order has not been confirmed

Shortform:

OP is not confirmed

Description:

Operation has not yet been confirmed!

17.1.98 Errorcode 600: Invalid mode ■■ of plausibility check

Shortform:

Invalid mode

Description:

Invalid mode of the plausibility check

Problem:

Internal error

solution:

Please contact MPDV-Support.

17.1.99 Errorcode 601: There are no events for the plaus. check

Description:

There are no events for the plausibility check.

Problem:

Internal error

solution:

Please contact MPDV-Support.

17.1.100 Errorcode 602: Invalid date/time [■■■■■■■■■■■■■■■■■■■■] in event [■■■■■■■■■■]

Description:

Invalid date and/or time within the event

Problem:

Within the data maintained by you an invalid date or invalid time was found.

solution:

Please double-check the altered data.

17.1.101 Errorcode 603: Unknown event [■■■■■■■■■■] in plaus. check

Description:

Unknown event in the plausibility check

Problem:

Internal error

solution:

Please contact MPDV-Support.

17.1.102 Errorcode 604: Database error when creating a temporary table

Description:

Database error when creating a temporary table

Problem:

Internal error

solution:

Please contact MPDV-Support.

17.1.103 Errorcode 605: The logoff of person ■■■■■■■■■■ is missing at machine ■■■■■■■■■■

Description:

A person has not been logged off at a machine.

Problem:

When recalculating the maintained data it came out that this person has not been logged off.

solution:

HYDRA is only able to recalculate consistent data. Every time a person is logged on they also have to be logged off. Please check the data altered by you accordingly.

17.1.104 Errorcode 606: The logoff of OP ■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■

Description:

The logoff of an operation is missing at a machine

Problem:

When recalculating the maintained data it came out that this operation has not been interrupted/logged off.

solution:

HYDRA is only able to recalculate consistent data. Every time an operation is logged on it has also to be interrupted/logged off. Please check the data altered by you accordingly.

17.1.105 Errorcode 607: The logoff of batch ■■■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■

Description:

The logoff of a batch is missing at a machine

Problem:

When recalculating the maintained data it came out that this batch has not been logged off.

solution:

HYDRA is only able to recalculate consistent data. Every time a batch is logged on it has also to be logged off. Please check the data altered by you accordingly.

17.1.106 Errorcode 608: The logoff of input batch ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■

Description:

The logoff of an input batch is missing at a machine.

Problem:

When recalculating the maintained data it came out that this input batch has not been logged off.

solution:

HYDRA is only able to recalculate consistent data. Every time an input batch is logged on it has also to be logged off. Please check the data altered by you accordingly.

17.1.107 Errorcode 609: The logoff of output batch ■■■■■■■■■■■■■■■■■■■■ is missing at machine ■■■■■■■■■■

Description:

The logoff of an output batch is missing at a machine.

Problem:

When recalculating the maintained data it came out that this output batch has not been logged off.

solution:

HYDRA is only able to recalculate consistent data. Every time an output batch is logged on it has also to be logged off. Please check the data altered by you accordingly.

17.1.108 Errorcode 610: Invalid event [■■■■■■■■■■] in the data maintenance

Description:

Invalid event in data maintenance

Problem:

Internal error

solution:

Please contact MPDV-Support.

17.1.109 Errorcode 611: Confirmations active-recalculation blocked at the moment!

Description:

The recalculation is blocked at the moment because the confirmations are active

Problem:

The recalculation is blocked at the moment because the confirmations are active

solution:

Please redo the recalculation at a later point in time.

17.1.110 Errorcode 612: Cost center is invalid

Description:

The cost center is invalid

Problem:

The cost center is invalid

solution:

Please enter a valid cost center

17.1.111 Errorcode 613: Cost center is blocked

Description:

The cost center is blocked

Problem:

The cost center is blocked

solution:

Please enter a valid cost center

17.1.112 Errorcode 619: Pallet not available.

Shortform:

Pallet not available

Description:

Pallet not available.

Problem:

The pallet is not available (dialog=PAL_WIEG)

solution:

enter the correct pallet number

17.1.113 Errorcode 629: 20 OPs can only be logged on simultan.

Shortform:

Too many par. OPs

Description:

20 OPs can only be logged on at the same time.

Problem:

You try to run more than 20 OPs at the same time

solution:

Log off one OP before starting a new one.

17.1.114 Errorcode 630: A negative consumption is not allowed.

Shortform:

Negative consumption

Description:

A negative consumption is inadmissible.

Problem:

the quantity of the batch is less than the sum of splitting quantity

solution:

-

17.1.115 Errorcode 700: Day model is not available

Shortform:

Model not available

Description:

The day model is not available.

Problem:

The day model is not available. Only existing models may be assigned.

solution:

Please enter a valid day model.

17.1.116 Errorcode 701: Day model already exists

Shortform:

Model alr. exists

Description:

The day type already exists.

Problem:

The day type already exists

solution:

Please enter a free day model

17.1.117 Errorcode 702: Day model is used within year model

Shortform:

Model is used

Description:

The day type is used within a year model

Problem:

The day model cannot be deleted as it is assigned to a year model.

solution:

Please remove the day model from the year model. The day model can then be deleted.

17.1.118 Errorcode 703: Day model is used today

Shortform:

Model is used

Description:

The day model is used today.

Problem:

The day model cannot be deleted as it is being used today.

solution:

Please check the assignment of the day model to year models. A model can only be deleted if it is no longer in use.

17.1.119 Errorcode 704: Status is available in MDE protocol

Shortform:

Status is used

Description:

The status is available within the machine data collection log.

Problem:

The status is available within the machine data collection log, e.g. in HYDRA-MDE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the machine's log data for this status are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.120 Errorcode 705: Status is available in ADE protocol

Shortform:

Status is used

Description:

The status is available within the order data collection log

Problem:

The status is available within the order data collection log, e.g. in HYDRA-ADE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the order log data with this status are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.121 Errorcode 706: Status is active at the machine

Shortform:

Status is active

Description:

The status is active at the machine.

Problem:

The machine status cannot be deleted as it is currently used by a machine.

solution:

An active machine status cannot be deleted. Please contact MPDV Support for further assistance.

17.1.122 Errorcode 707: Machine has not been indicated

Shortform:

Machine is missing

Description:

Machine has not been stated.

Problem:

The machine has not been stated.

solution:

Please check your input

17.1.123 Errorcode 708: Machine status has not been indicated

Shortform:

Status is missing

Description:

Machine status has not been stated.

Problem:

The machine status has not been stated.

solution:

Please check your input

17.1.124 Errorcode 709: Target machine has not been indicated

Shortform:

Targ.machine missing

Description:

Target machine has not been stated.

Problem:

The target machine has not been stated.

solution:

Please check your input

17.1.125 Errorcode 710: Target status has not been stated

Shortform:

Target stat. missing

Description:

Target status has not been indicated.

Problem:

The target status has not been stated.

solution:

Please check your input

17.1.126 Errorcode 711: Processing mode has not been stated

Shortform:

Mode is missing

Description:

Processing mode has not been indicated.

Problem:

The processing mode has not been indicated..

solution:

Please check your input

17.1.127 Errorcode 712: Processing mode is invalid

Shortform:

Invalid mode

Description:

Processing mode is invalid.

Problem:

The processing mode is invalid.

solution:

Please check your input

17.1.128 Errorcode 713: Machine status is not available

Shortform:

Status not available

Description:

Machine status is not available.

Problem:

The selected machine status is not available.

solution:

Please select an available machine status

17.1.129 Errorcode 714: Machine status is already available

Shortform:

Status alr.available

Description:

Machine status is already available.

Problem:

The machine status is already available.

solution:

Please enter a machine status that is not yet available.

17.1.130 Errorcode 715: Production characteristic is missing

Shortform:

P. char. is missing

Description:

Production characteristic is missing.

Problem:

The production characteristic is missing.

solution:

Please select a production characteristic.

17.1.131 Errorcode 716: Product. character. already assigned

Shortform:

P. char. alr. avail.

Description:

Production characteristic has already been assigned.

Problem:

The production characteristic has already been assigned.

solution:

Please select another production characteristic.

17.1.132 Errorcode 717: RPA is not available

Shortform:

RPA not available

Description:

RPA is not available.

Problem:

RPA is not available.

solution:

Please select a RPA.

17.1.133 Errorcode 718: Status text is not available

Shortform:

Text not available

Description:

Status text is not available

Problem:

The status text is not available. It has to be created within the configuration of status texts.

solution:

Please create the status text at first or choose a status text that is already available.

17.1.134 Errorcode 719: Disturbance class is not available

Shortform:

Dist. class n. avail

Description:

Disturbance class is not available.

Problem:

The disturbance class is not available. It has to be created within the configuration of disturbance classes.

solution:

Please create the disturbance class at first or choose a disturbance class that is already available.

17.1.135 Errorcode 720: Machine is no line

Shortform:

That is no line

Description:

Machine is no line.

Problem:

The "status transfer to aggregates" option is only allowed for machines of the "line" type.

solution:

Please check the configuration of the machine

17.1.136 Errorcode 721: Year model is assigned to a machine

Shortform:

Model is used

Description:

Year model has been assigned to a machine.

Problem:

The year model cannot be deleted as it is still assigned to a machine.

solution:

Please remove the year model at first from the machine configuration.

17.1.137 Errorcode 722: Year model is assigned to a person

Shortform:

Model is used

Description:

Year model has been assigned to a person.

Problem:

The year model cannot be deleted as it is still assigned to a person

solution:

Please remove the HYDRA-BDE year model at first from the HR master data.

17.1.138 Errorcode 723: Year model has not been indicated

Shortform:

Year model missing

Description:

Year model has not been stated.

Problem:

The year model has not been stated.

solution:

Please enter a valid year model

17.1.139 Errorcode 724: Year has not been stated

Shortform:

Year is missing

Description:

The year has not been indicated.

Problem:

The year has not been indicated.

solution:

Please enter a valid year.

17.1.140 Errorcode 725: Target year model has not been stated

Shortform:

Year model missing

Description:

Target year model has not been stated.

Problem:

The target year model has not been stated.

solution:

Please enter a target year model.

17.1.141 Errorcode 726: Target year has not been stated

Shortform:

Target year missing

Description:

Target year has not been stated.

Problem:

The target year has not been stated.

solution:

Please enter a target year.

17.1.142 Errorcode 727: Year model is not available

Shortform:

Model n. available

Description:

Year model is not available.

Problem:

The year model profile is not available.

solution:

Select an existing year model or create a new one

17.1.143 Errorcode 728: Year model already exists

Shortform:

Model alr. available

Description:

Year model already exists.

Problem:

This year model already exists.

solution:

Please enter a free day model

17.1.144 Errorcode 729: Reference has not been stated

Shortform:

Reference is missing

Description:

The reference has not been indicated.

Problem:

The reference has not been indicated.

solution:

Internal error, please contact MPDV-Support.

17.1.145 Errorcode 730: Date has not been stated

Shortform:

Date is missing

Description:

Date has not been stated.

Problem:

The date has not been stated.

solution:

Internal error, please contact MPDV-Support.

17.1.146 Errorcode 731: Holiday is not available

Shortform:

Holiday n. available

Description:

Public holiday is not available.

Problem:

The public holiday is not available.

solution:

Select an existing public holiday or create a new one

17.1.147 Errorcode 732: Holiday already exists

Shortform:

Holiday alr. avail.

Description:

Public holiday already exists.

Problem:

The public holiday already exists.

solution:

Please enter a free public holiday or create a new one

17.1.148 Errorcode 733: Status text is assigned to a machine

Shortform:

Text is used

Description:

Status text has been assigned to a machine.

Problem:

The status text cannot be deleted as it is assigned to a machine.

solution:

Please remove the status text at first from all machine statuses. The status text may then be deleted.

17.1.149 Errorcode 734: Status text no. has not been stated

Shortform:

Text no. is missing

Description:

Status text number has not been indicated.

Problem:

The status text number has not been indicated.

solution:

Please enter a valid status text number

17.1.150 Errorcode 735: Status text is not available

Shortform:

Text not available

Description:

Status text is not available.

Problem:

The status text is not available.

solution:

Select an existing status text

17.1.151 Errorcode 736: Status text already exists

Shortform:

Text alr. available

Description:

Status text already exists.

Problem:

The status text already exists.

solution:

Please enter a free status text

17.1.152 Errorcode 737: Machine is available in MDE protocol

Shortform:

Machine is used

Description:

Machine is available within the machine data collection log.

Problem:

There are still log data for the machine, e.g. in HYDRA-MDE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the machine log data are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.153 Errorcode 738: Machine is available in ADE protocol

Shortform:

Machine is used

Description:

Machine is available within the order data collection log.

Problem:

There are still log data for the machine, e.g. in HYDRA-ADE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the machine log data are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.154 Errorcode 739: Machine is available in LZV protocol

Shortform:

Machine is used

Description:

Machine is available within the LZV log

Problem:

There are still log data for the machine, e.g. in HYDRA-MDE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the machine log data are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.155 Errorcode 740: An OP is still logged on to machine

Shortform:

Machine is active

Description:

An OP is still being logged on to the machine.

Problem:

An OP is still being logged on to the machine.

solution:

Please finish all active logons to the machine.

17.1.156 Errorcode 741: Person is still logged on to machine

Shortform:

Machine is active

Description:

A person is still being logged on to the machine.

Problem:

A person is still being logged on to the machine.

solution:

Please finish all active logons to the machine.

17.1.157 Errorcode 742: Batch is still logged on to machine

Shortform:

Machine is active

Description:

A batch is still being logged on to the machine.

Problem:

An batch is still being logged on to the machine.

solution:

Please finish all active logons to the machine.

17.1.158 Errorcode 743: The machine is assigned to a line

Shortform:

Machine is active

Description:

The machine has been assigned to a line.

Problem:

The machine has been assigned to a line.

solution:

Please remove the machine from the line assignment.

17.1.159 Errorcode 744: Machine is assigned to a terminal

Shortform:

Machine is active

Description:

The machine has been assigned to a terminal.

Problem:

The machine has been assigned to a terminal.

solution:

Please remove the machine from the terminal assignment.

17.1.160 Errorcode 745: Machine already exists

Shortform:

Machine alr. avail.

Description:

Machine already exists.

Problem:

The machine already exists.

solution:

Please enter a free machine

17.1.161 Errorcode 746: Terminal no. has not been stated

Shortform:

Terminal no. missing

Description:

Terminal number has not been stated.

Problem:

The terminal number has not been stated.

solution:

Please select an existing terminal number

17.1.162 Errorcode 747: Position has not been stated

Shortform:

Position is missing

Description:

Position has not been stated.

Problem:

The position has not been stated.

solution:

Please enter a valid position

17.1.163 Errorcode 748: Disturbance class no. already exists

Shortform:

Dist. cl. alr. avail

Description:

Disturbance class number already exists.

Problem:

The disturbance class number already exists.

solution:

Please enter a free disturbance class number

17.1.164 Errorcode 749: Disturbance class abbrev. alr. exists

Shortform:

Dist. cl. alr. avail

Description:

Disturbance class abbreviation already exists.

Problem:

The disturbance class abbreviation already exists.

solution:

Please enter a free disturbance class abbreviation

17.1.165 Errorcode 750: Disturb. class is assigned to a status

Shortform:

Disturb. cl. is used

Description:

Status class has been assigned to a status.

Problem:

The status class cannot be deleted as it is still assigned to a machine status.

solution:

Please remove the status class from the machine status.

17.1.166 Errorcode 751: Wage/premium indicator not available

Shortform:

Indicator not avail.

Description:

Wage/premium indicator not available.

Problem:

The stated wage/premium indicator is not available.

solution:

Please state an existing wage/premium indicator.

17.1.167 Errorcode 752: Wage/premium indicator alr. available**Shortform:**

Indicator alr. avail

Description:

Wage/premium indicator already exists.

Problem:

A wage/premium indicator that already exists is attempted to be logged on.

solution:

Please state a new wage/premium indicator.

17.1.168 Errorcode 753: Wage/premium indicat. has been recorded**Shortform:**

Indicator is used

Description:

Wage/premium indicator has been recorded.

Problem:

A wage/premium indicator that has already been used in bookings or postings is attempted to be edited. This one cannot be edited.

solution:

Please wait with the editing until the bookings and postings concerned are out-dated and will be deleted from or archived in the HYDRA system.

17.1.169 Errorcode 754: Operator position not available**Shortform:**

Operat. pos.n.avail.

Description:

Operator position not available.

Problem:

The indicated operator position is not available.

solution:

Choose a valid operator position.

17.1.170 Errorcode 755: Operator position already available

Shortform:

Oper. pos.alr.avail.

Description:

Operator position already exists.

Problem:

The operator position is already available.

solution:

Please choose a new operator position.

17.1.171 Errorcode 756: Operator position has been recorded

Shortform:

Oper. pos. is used

Description:

Operator position has been recorded.

Problem:

An operator position that has already been used in bookings and postings is attempted to be edited. This one cannot be edited.

solution:

Please wait with the editing till the bookings and postings concerned are out-dated and will be deleted from or archived in the HYDRA system.

17.1.172 Errorcode 757: Deviation reason not available

Shortform:

Dev. reas. n. avail.

Description:

Deviation reason not available.

Problem:

The deviation reason not available.

solution:

Please select an existing deviation reason or create a new one

17.1.173 Errorcode 758: Deviation reason already available

Shortform:

Dev. reas.alr.avail.

Description:

Deviation reason already exists

Problem:

The deviation reason already exists

solution:

Please enter a free deviation reason

17.1.174 Errorcode 759: Deviation reason has been recorded

Shortform:

Dev. reason is used

Description:

Deviation reason has been recorded.

Problem:

There are still log data for the deviation reason, e.g. in HYDRA-ADE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the log data are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.175 Errorcode 760: Process parameter not available

Shortform:

Process par.n.avail.

Description:

Process parameter is not available.

Problem:

The process parameter is not available.

solution:

Select an existing process parameter or create a new one

17.1.176 Errorcode 761: Process parameter already available

Shortform:

Process p.alr.avail.

Description:

Process parameter already exist.

Problem:

The process parameter already exist.

solution:

Please enter a free process parameter

17.1.177 Errorcode 762: Scrap reason not available

Shortform:

Scrap reas. n.avail.

Description:

Scrap reason not available.

Problem:

The scrap reason not available.

solution:

Please select an existing scrap reason or create a new one

17.1.178 Errorcode 763: Scrap reasons are already available

Shortform:

Scrap r. alr. avail.

Description:

Scrap reason already exists.

Problem:

The scrap reason already exists.

solution:

Please enter a free scrap reason

17.1.179 Errorcode 764: Terminal is already available

Shortform:

Terminal alr. avail.

Description:

Terminal already exists.

Problem:

The terminal already exists.

solution:

Please enter a free terminal number

17.1.180 Errorcode 765: Maintenance instruction not available

Shortform:

Maintenance n.avail.

Description:

Maintenance instruction not available

17.1.181 Errorcode 766: Maintenance instruct. is alr. available

Shortform:

Mainten. alr. avail.

Description:

Maintenance instruction already exists.

17.1.182 Errorcode 767: Order no. has not been indicated

Shortform:

Order no. is missing

Description:

Order number has not been stated.

17.1.183 Errorcode 768: Tool family has not been indicated

Shortform:

Tool fam. is missing

Description:

Tool family has not been stated.

Problem:

Tool family has not been stated.

solution:

Please enter a valid tool family

17.1.184 Errorcode 769: Tool family is not available

Shortform:

Tool fam. n. avail.

Description:

Tool family not available.

Problem:

Tool family is not available.

solution:

Please enter a valid tool family

17.1.185 Errorcode 770: Tool family is already available

Shortform:

Tool fam. alr.avail.

Description:

Tool family already available.

Problem:

Tool family already available.

solution:

Please enter a not existing tool family

17.1.186 Errorcode 771: Target tool family has not been stated

Shortform:

Targ.tool fam. miss.

Description:

Target tool family has not been stated.

Problem:

Target tool family has not been stated in copy function

solution:

Please enter a target tool family

17.1.187 Errorcode 772: Tool reason no. has not been stated

Shortform:

Tool reas. missing

Description:

Tool reason number has not been stated.

Problem:

Tool reason number has not been stated.

solution:

Please enter a tool reason number

17.1.188 Errorcode 773: Tool reason no. is not available

Shortform:

Tool reas. n. avail.

Description:

Tool reason number is not available.

Problem:

Tool reason number is not available.

solution:

Please enter an existing tool reason number

17.1.189 Errorcode 774: Tool reason no. is already available

Shortform:

Tool r. alr. avail.

Description:

Tool reason number already available.

Problem:

Tool reason number already available.

solution:

Please enter a not existing tool reason number

17.1.190 Errorcode 775: Target tool reason no. not indicated

Shortform:

Targ. tool r.missing

Description:

Target tool reason no. not been stated.

Problem:

Target tool reason no. not been stated.

solution:

Please enter a target tool reason

17.1.191 Errorcode 776: Tool no. has not been indicated**Shortform:**

Tool no. is missing

Description:

Tool number has not been stated.

Problem:

Tool number has not been stated.

solution:

Please enter a tool number

17.1.192 Errorcode 777: Target tool no. has not been indicated**Shortform:**

T. tool no. missing

Description:

Target tool number has not been stated.

Problem:

Target tool number has not been stated.

solution:

Please enter a target tool number

17.1.193 Errorcode 778: Tool number is already available**Shortform:**

Tool alr. available

Description:

Tool number already available.

Problem:

Tool number already available.

solution:

Please enter a not existing tool number

17.1.194 Errorcode 779: Tool number is not available

Shortform:

Tool not available

Description:

Tool number not available.

Problem:

Tool number not available.

solution:

Please enter an existing tool number

17.1.195 Errorcode 780: Blocking reason/measure not available

Shortform:

Block.r/meas.n.avail

Description:

Blocking reason/measure not available.

Problem:

Blocking reason/measure not available.

solution:

Please enter a valid blocking reason/measure

17.1.196 Errorcode 783: Invalid status change

Shortform:

Inv. status change

Description:

Invalid status change. The process has been cancelled.

17.1.197 Errorcode 784: Day model is used within year model

Shortform:

Model is used

Description:

Day model is used within year model.

17.1.198 Errorcode 785: Year model is assigned to a machine

Shortform:

Model is used

Description:

Year model has been assigned to a machine.

17.1.199 Errorcode 786: Order no.corresponds to result.order no.

Shortform:

Ord.no.=resul.ord.no

Description:

The order corresponds to the target order.

17.1.200 Errorcode 787: Max. no. of chainings reached

Shortform:

Max. no. of chain.

Description:

Maximum number of concatenations reached.

17.1.201 Errorcode 788: All orders have been commissioned

Shortform:

All ANR commissioned

Description:

All orders have been picked.

17.1.202 Errorcode 789: Invalid material

Shortform:

Invalid material

Description:

Invalid material.

17.1.203 Errorcode 790: Chaining qty. greater than OP targ. qty.

Shortform:

Chain. qty.too large

Description:

Chaining quantity greater than target quantity of OP

17.1.204 Errorcode 791: A running batch must not be changed

Shortform:

Batch is running

Description:

A running batch must not be changed or deleted.

Problem:

A running batch must not be changed or deleted.

solution:

Please log the batch off first, before you change or delete it.

17.1.205 Errorcode 792: Event maintenance is blocked

Shortform:

Event maint. blocked

Description:

Data are currently being blocked by user <USER>.

Problem:

Data are currently being blocked by user <USER> and can not be changed at the moment

solution:

Please wait until the user <USER> has finished his work or delete the lock entry in locked Datasets
if the user is not active

17.1.206 Errorcode 793: Event maint. blocked due to recalculat.

Shortform:

Ev. maint. rec. bl.

Description:

Data are currently being blocked by the recalucation (batchjob) by the current user.

Problem:

Data are currently being blocked by the recalucation (batchjob) by the current user.

solution:

Please wait until the recalculation is finished

17.1.207 Errorcode 794: Invalid machine for this action

Shortform:

Invalid machine

Description:

Invalid machine for this action.

Problem:

It is an invalid machine for this action.

solution:

Please use a valid machine.

17.1.208 Errorcode 795: Short-time dist. alr. assigned f. mach.

Shortform:

ST dist. alr. avail.

Description:

Short-time disturbance for machine has already been assigned.

17.1.209 Errorcode 796: Status is available in MDE protocol-LT

Shortform:

Status is used

Description:

Status is available within the long-term machine data collection log.

Problem:

The status is available within the long-term machine data collection log.

solution:

The status can only be deleted when it is no longer available within the long-term machine data collection log.

17.1.210 Errorcode 797: Confirmations are active at the moment

Shortform:

Confirmations active

Description:

Uploads are currently active, changes impossible.

Problem:

Uploads are currently active, changes of bookings are not possible.

solution:

Please wait until upload is completed

17.1.211 Errorcode 798: Posted time too small for reposting

Shortform:

Posted t. too small

Description:

The posted time is too little for the transfer posting.

Problem:

Please enter a greater duration for the transfer posting.

17.1.212 Errorcode 799: Month-end closing has alr. been done

Shortform:

Month-end cl. done

Description:

The month-end closing has already been done.

Problem:

The data record to be edited lies within a month which a month-end closing has already been done for. Therefore, it cannot be edited anymore.

solution:

Possibly another HYDRA user is authorized to edit months that have already been completed.

Please contact your supervisor. If you cannot achieve anything please contact MPDV-Support.

17.1.213 Errorcode 800: Order technically completed in SAP

Shortform:

Techn. completed SAP

Description:

The order has already been completed technically within SAP.

solution:

The order cannot be edited.

17.1.214 Errorcode 801: Storage could not be requested

Shortform:

No free storage

Description:

Sufficient storage could not be requested for this operation.

solution:

Please contact MPDV Support.

17.1.215 Errorcode 802: Status alr. assigned when shift free

Shortform:

Status alr. assigned

Description:

Status has already been assigned when there is no shift.

solution:

Please decide another status when there is no shift.

17.1.216 Errorcode 803: Reposting leads to problem when compar.

Shortform:

Problem repost. comp

Description:

Transfer posting leads to problem at next PZE-ADE comparison.

solution:

Please decide on whether the reposting is anyway to be carried out.

17.1.217 Errorcode 806: No appropriate U or E record available

Shortform:

No U or E record

Description:

No valid U- or E-booking found for this dataset.

17.1.218 Errorcode 808: MDE event not alterable as OP is running

Shortform:

Ev. maint. cur. scen

Description:

Machine status must not be changed/deleted as the corresponding order still runs.

Problem:

Machine status must not be changed/deleted as the corresponding order which is affected by the machine status still runs.

solution:

Please wait until end of shift to change data,
because for MDE machines the operation will be shortly interrupted at end of shift
or interrupt the operation manually

17.1.219 Errorcode 809: Invalid superior status1 ID man. at TNR

Shortform:

Invalid super. MST1

Description:

Invalid superior machine status - the indicator <hierarchy level> is not set within the superior status!

Problem:

Invalid superior machine status - the indicator <hierarchy level> is not set within the superior status!

solution:

Set the indicator for <hierarchy level> in the superior status.

17.1.220 Errorcode 810: Inv.super.stat.2-m.stat.n.avail.f.m.no.

Shortform:

Inv.super.mach.stat.

Description:

Invalid superior machine status - the status is not available for the selected machine!

Problem:

Invalid superior machine status - the status is not available for the selected machine!

solution:

Please select an existing status.

17.1.221 Errorcode 811: Invalid superior status3-MST = ueb MST

Shortform:

Invalid super. MST3

Description:

Invalid superior machine status - superior status = inferior status

Problem:

Invalid superior machine status - superior status = inferior status

solution:

Please choose a status that is superior to this status.

17.1.222 Errorcode 812: Invalid superior satus4-reference chain

Shortform:

Invalid super. MST4

Description:

Invalid superior machine status - superior status refers to inferior status at the end of the hierarchy!

Problem:

Invalid superior machine status - superior status refers to inferior status at the end of the hierarchy!

solution:

Choose a status that is superior to this status.

17.1.223 Errorcode 813: Ev. maint. blocked as lock deleted

Shortform:

Event maint. no lock

Description:

Data are not locked anymore.

Problem:

Lock was deleted by an HYDRA administrator and changing / recalculating of the actually shown data is not possible

solution:

Please select the data again, so the lock will be created newly

17.1.224 Errorcode 814: Either yield or scrap

Shortform:

Yield or scrap

Description:

Scrap or yield can be maintained!

solution:

Please change the always batched dataset.

17.1.225 Errorcode 815: Logoff date/time already exists

Shortform:

Logoff date exists

Description:

Logoff date/time has already been assigned.

solution:

Please change the always batched dataset(Logoff date/time).

17.1.226 Errorcode 816: Terminal has machines assigned

Shortform:

Terminal has mach.

Description:

The terminal has still machines assigned

Problem:

The terminal has still machines assigned

solution:

Please delete the machine assignments first

17.1.227 Errorcode 900: Unit is not available

Shortform:

Unit not available

Description:

Unit is not available

Problem:

Unit is not available.

solution:

Enter a valid unit or define a new one.

17.1.228 Errorcode 901: Formula is not available

Shortform:

Formula not avail.

Description:

Formula is not available.

Problem:

Formula is not available.

solution:

Enter a valid formula or define a new one.

17.1.229 Errorcode 902: Formula still in tab. USRFFIELDDELEM

Shortform:

Formula still in use

Description:

Formula is still being used within the user fields.

Problem:

Formula is still being used within the user fields.

solution:

Delete the dependencies to this formula in the user fields first.

17.1.230 Errorcode 903: Formula still in tab. LSTCODES

Shortform:

Formula still in use

Description:

Formula is still being used within the service codes

Problem:

Formula is still being used within the service codes.

solution:

Delete the dependencies to this formula in the service codes first.

17.1.231 Errorcode 904: Formula still in tab. EINHUMR

Shortform:

Formula still in use

Description:

Formula is still being used in the unit conversion

Problem:

Formula is still being used in the unit conversion

solution:

Delete the dependencies to this formula in the unit conversion first.

17.1.232 Errorcode 905: There is alr. standard sequence f.order

Shortform:

Stand.seq. alr.avail

Description:

There is already a standard sequence for this order.

Problem:

There is already a standard sequence for this order.

solution:

Only one standard sequence per order is allowed. Insert a parallel or an alternative sequence instead.

17.1.233 Errorcode 906: Standard sequence must not be delted

Shortform:

St.seq. n. deletable

Description:

Standard sequence must not be deleted.

Problem:

Standard sequence must not be deleted.

solution:

Standard sequence must not be deleted.

17.1.234 Errorcode 907: Act.can't be effect.after this seq.type

Shortform:

Inv. seq.type f.act.

Description:

Action cannot be carried out after this sequence category.

Problem:

The stated sequence category is not be supported.

solution:

Choose a supported sequence category.

17.1.235 Errorcode 908: Waiting period charac. already assigned

Shortform:

Wait.per.ch.assigned

Description:

Waiting period characteristic has already been assigned.

17.1.236 Errorcode 909: Initial stat. has not been assigned yet

Shortform:

Init. stat. n. ass.

Description:

Initial status has still not been assigned.

Problem:

Initial status has still not been assigned for this order type.

solution:

Define a initial status for this order type..

17.1.237 Errorcode 910: Category not correct

Shortform:

Category n. correct

Description:

Order Category incorrect.

17.1.238 Errorcode 911: Processing code not available

Shortform:

Proc. code n. avail.

Description:

Processing code not available.

Problem:

Processing code not available.

solution:

Please select an existing processing code

17.1.239 Errorcode 912: Seq. change n. poss. due to ord. stat.**Shortform:**

Seq. change n. poss.

Description:

Sequence change impossible due to order status.

17.1.240 Errorcode 913: Seq. change only possible for alt. seq.**Shortform:**

Seq. change n. poss.

Description:

Sequence change only possible for alternative sequences.

Problem:

Sequence change only possible for alternative sequences
(the selected sequence is not an alternative sequences)

solution:

-

17.1.241 Errorcode 914: An OP of the sequence is alr. running**Shortform:**

Seq. change n. poss.

Description:

One OP of the sequence already runs.

Problem:

Sequence change only possible if no operation of the sequence is started.
All operations of the sequence must be in the state V,S or Y

solution:

-

17.1.242 Errorcode 915: Branch OP is invalid**Shortform:**

Invalid branch OP

Description:

Branch OP is invalid.

17.1.243 Errorcode 916: Return address is invalid**Shortform:**

Invalid return OP

Description:

Return address is invalid.

17.1.244 Errorcode 917: Location group from/to is invalid**Shortform:**

Locat. grp. invalid

Description:

Location group from/to is invalid.

Problem:

You have entered an invalid location group.

solution:

Choose a valid location group or create the required location group in the group configuration

17.1.245 Errorcode 918: Group is no capacity group**Shortform:**

No capacity group

Description:

Group is not a capacity group.

Problem:

A resource of type MGRP has to be a capacity group

17.1.246 Errorcode 919: Sel. field type does not go with DB type**Shortform:**

Incompatible DB type

Description:

The field <USRFLDELEM.KENN> cannot be created for the index <USRFLDELEM.IDX> as this one is of the database type <USRFLDELEM.DBTYP>.

Problem:

The user field does not support the selected fieldtype

solution:

Choose a different user field to save data in the chosen field type

17.1.247 Errorcode 920: Error while init. planning component

Shortform:

Error init. plan. c.

Description:

The planning component cannot be initialized

solution:

Please contact MPDV Support.

17.1.248 Errorcode 921: ID is not in table USERFIELDDEF

Shortform:

ID not defined

Description:

The ID USERFIELDDEF is not available in the table.

Problem:

The field type of the specified field identifier is not configured

solution:

Choose a suitable field identifier or create a new field type in the field type definition

17.1.249 Errorcode 922: Year model is still in transp. matrix

Shortform:

Year model in use

Description:

Year model is still available within transport matrix.

Problem:

The year model can not be deleted, because it is still used in the transport matrix

solution:

Delete the entry in the transport matrix before you delete the year model

17.1.250 Errorcode 923: Cost center group <> cost center machine

Shortform:

Grp.CCR <> Mnr.CCR

Description:

The cost center of the machine has to correspond to the cost center of the group.

Problem:

A cost center, which does not correspond to the cost center of the group, is assigned to the machine.

solution:

The cost center of the machine has to correspond to the cost center of the group MDE -> master data -> machine/workplace configuration -> group.

17.1.251 Errorcode 924: Only one SI unit can be defined per type

Shortform:

SI unit assigned

Description:

One SI unit can be defined per type only.

17.1.252 Errorcode 925: Sequence not available

Shortform:

Seq. not available

Description:

Sequence not available.

Problem:

Sequence not available.

solution:

Please enter a valid sequence

17.1.253 Errorcode 926: Sequence is still used by orders

Shortform:

Seq. still in use

Description:

Sequence is still being used by orders.

Problem:

Sequence can not be deleted because there are operations existing in this sequence

solution:

Delete all operations of the sequence before deleting the sequence.

17.1.254 Errorcode 927: Machine is in production

Shortform:

Mach. in production

Description:

Machine is in production.

Problem:

The machine is in production. Therefore, it is impossible to switch to the production lock.

solution:

Changing to the production lock is only possible in case of a malfunction.

17.1.255 Errorcode 928: Machine is in production lock

Shortform:

Mach. in prod. lock

Description:

Machine is in production lock.

Problem:

The machine is within production lock.

Therefore, it is impossible to switch to the production status.

solution:

At the shop floor data collection terminal the production lock at the machine can be deactivated via the button "production lock" or by setting a status without production lock.

17.1.256 Errorcode 929: An alternative sequence is alr. active

Shortform:

Alt. seq. alr.active

Description:

An alternative sequence is already active.

Problem:

Only one alternative sequence can be active for an order.
Activating of the sequence can be failed
because in the sequence already a 2. alternative sequence is active

solution:

-

17.1.257 Errorcode 930: maximum number of counter is exceeded

Shortform:

max. num. of counters

17.1.258 Errorcode 931: allocation with same type not possible

Shortform:

allocation n. possib

Description:

Allocation with same type is not possible

17.1.259 Errorcode 932: Unknown list command

Shortform:

Unknown list command

Description:

Unknown list command

17.1.260 Errorcode 933: status text cannot be deleted

Shortform:

statustext not delet

Description:

status text cannot be deleted

17.1.261 Errorcode 934: hierarchical status cannot be assigned

Shortform:

hiera.stat. no assig

Description:

A hierarchical status cannot be assigned

Problem:

You try to assign a hierarchical status. This is not allowed.

solution:

Choose a other status

17.1.262 Errorcode 935: counter configuration not supported

Shortform:

ctr conf not support

Description:

counter configuration is not supported

Problem:

The full counter configuration is only supported for terminals CT-8xx and CT-76x.

solution:

See the specific counter configuration documentation

17.1.263 Errorcode 936: Overlapping shifts

Shortform:

Overlapping shifts

Description:

Overlapping shifts

Problem:

A shift begins earlier than previous shift ends.

solution:

Please change the shift starting and/or end point

17.1.264 Errorcode 937: Overlapping breaks

Shortform:

Overlapping breaks

Description:

Overlapping breaks

Problem:

A break within a shift begins earlier than previous break ends.

solution:

Please change the break starting and/or end point

17.1.265 Errorcode 938: Status must be config. -OP logged on-**Shortform:**

Status not possible

Description:

Chooosen status must be configured in the statusconfiguration as "Operation must be logged on"

Problem:

Chooosen status which should be configured as allowed with ordertyp must be configured in the statusconfiguration as "Operation must be logged on"

solution:

Please change the statusconfiguration for the chossen status to "Operation must be logged on"

17.1.266 Errorcode 939: MDE event for Shiftend not alterable**Shortform:**

Ev. maint. shift end

Description:

Machine status for end of shift must not be changed/deleted.

Problem:

Machine status must not be changed/deleted if it is an shift end event

solution:

Please change event if nessesary in the Event Maintanance table

17.1.267 Errorcode 940: User name for single sign-on missing**Shortform:**

User name missing

Description:

The user name for single sign-on must be specified if single sign is enabled on for this user.

Problem:

Single sign-on was enabled for the user, but a username for single sign-on was not specified

solution:

Specify the user name for single sign-on.

17.1.268 Errorcode 941: Status is not valid (RESTYP/RES)

Shortform:

Status is not valid

Description:

Status is not valid (RESTYP/RES)

Problem:

The stated status is not available and a resource-specified status exists.

solution:

Send the correct status or configure the status

17.1.269 Errorcode 942: Status is not valid (RESTYP/RESFAM)

Shortform:

Status is not valid

Description:

Status is not valid (RESTYP/RESFAM)

Problem:

The stated status is not available and a resource-family-specified status exists.

solution:

Send the correct status or configure the status

17.1.270 Errorcode 943: Status is not available (RESTYP)

Shortform:

Status not available

Description:

Status is not available

Problem:

The stated status is not available.

solution:

Send the correct status or configure the status

17.1.271 Errorcode 944: Status is not active

Shortform:

Status is not active

Description:

Status is not active

Problem:

The stated Status is not active.

solution:

Send the correct status

17.1.272 Errorcode 945: Status is already active

Shortform:

Status is active

Description:

Status is already active

Problem:

The stated Status is already active.

solution:

Send the correct status

17.1.273 Errorcode 946: counter configuration not available

Shortform:

ctr conf not availab

Description:

Counter configuration is not available

Problem:

There is no configuration for the specified counter.

solution:

Change the counter configuration.

17.1.274 Errorcode 947: Machine/line group assignment exists

Shortform:

line group assignm.

Description:

Machine/line group assignment exists

Problem:

Machine/line group assignment already available.

solution:

The assignment of the machine to a line group already exists.

17.1.275 Errorcode 948: Copy mach/line grp. ass. MOD=Z not allow

Shortform:

Cpy ma/linegrp MOD=Z

Description:

Copy Machine/line group assignment with mode Z

Problem:

It is not allowed to copy a machine/line group including its assignments because a machine could not assigned to more than one line group

solution:

Check the machine/line group assignment.

17.1.276 Errorcode 949: Error in Configuration: PZE controls BDE

Shortform:

Error in Config.

Description:

Error in Configuration: PZE controls BDE

Problem:

The configuration 'PZE controls BDE' is set to option 'K' (waiting period) or 'A' (auto log on) gesetzt. This assumnes, that the option 'waiting period processing' ist also set.

solution:

Check the stated settings.

17.1.277 Errorcode 950: Dissolving of campaign not possible

Shortform:

No campaign dissolv.

Description:

Dissolving of campaign not possible

Problem:

The current campaign cannot be dissolved.

solution:

Check the operations status.

17.1.278 Errorcode 1000: Person must not log on operation

Shortform:

P.must not log on OP

Description:

Person is not allowed to log the operation on.

Problem:

The person is not authorized to log this operation on.

solution:

The person's ADE authorization level has to be higher than or equal as the authorization level of the operation in order to be able to interrupt/log on/of or to partially confirm an operation. The person's ADE authorization level is maintained at the client under HR master data, the authorization level of the operation is specified by the PPS system and can be checked at the client via "edit operations".

17.1.279 Errorcode 951: Machine/capacity group assignment exists

Shortform:

capa group assignm.

Description:

Machine/capacity assignment exists

Problem:

The Machine/capacity group assignment is already available.

solution:

Please check the machine capacity group assignment.

17.1.280 Errorcode 1010: Person must not log off operation

Shortform:

P.must n. log off OP

Description:

Person is not allowed to log the operation off.

Problem:

The person is authorized to log this operation off.

solution:

See error code 1000

17.1.281 Errorcode 1019: P.must not log on sever.times in advance

Shortform:

P.alr.logged i. adv.

Description:

Person is not allowed to log on in advance several times.

Problem:

A person tries to log on in advance although he/she has already logged on in advance to another machine.

solution:

This person has to cancel the existing advance logon before he/shel will be able to log on again.
HYDRA also supports the multiple (advance) logon of a person. This option can be activated per person at the client via HR master data.

17.1.282 Errorcode 1020: Person must not log on several times

Shortform:

P. alr. logged on

Description:

Person is not allowed to log on several times

Problem:

A person tries to log on, although he/she has already logged on to another machine.

solution:

This person has to log off at first, before he/she is allowed to log on again.
HYDRA also supports the multiple logon of a person. This option can be activated per person at the client via HR master data

17.1.283 Errorcode 1021: Person may only log on to OP ■■■

Shortform:

P.alr.logged to OP

Description:

Person is only allowed to log on to a maximum number of OPs.

Problem:

A person tries to log on, although he/she has already reached the maximum admissible number of logons.

solution:

This person has to log off at first before he/she will be able to log on again.

HYDRA supports a maximum number of logons when a person logs on several times. This number can be configured for each person at the client HR master data

17.1.284 Errorcode 1022: Person must not report quantity to OP

Shortform:

P.must n. report qty

Description:

Person is not allowed to post the quantity onto the OP.

Problem:

A person tries to do a partial confirmation for a running OP although he/she is not authorized to do this.

solution:

See error code 1000.

17.1.285 Errorcode 1023: Person must not interrupt OP

Shortform:

P.must n.interr. OP

Description:

Person is not allowed to interrupt the OP.

Problem:

The person is authorized to interrupt this operation.

solution:

See error code 1000

17.1.286 Errorcode 1030: Person not available

Shortform:

Person not available

Description:

Person is not available.

Problem:

The entered person does not exist within the HYDRA HR master data

solution:

At the client please check via HR master data whether there is a person with this personnel badge number.

17.1.287 Errorcode 1031: Person has already left the company

Shortform:

Person has left

Description:

Person has already left the company.

Problem:

The indicated person is kept as "has already left the company" in the HR master data and thus has no longer any authorizations.

solution:

Please check the person's leaving date at the PZE client under HR master data

17.1.288 Errorcode 1032: Person is blocked

Shortform:

Person blocked

Description:

Person has been blocked.

Problem:

The person has been blocked and therefore he/she must not post anything.

solution:

Please check the person's blocking indicator at the PZE client under HR master.data

17.1.289 Errorcode 1033: Person has not yet joined the company

Shortform:

p. not joined comp.

Description:

Person has not yet joined the company

17.1.290 Errorcode 1040: No order is running on machine

Shortform:

Log on order

Description:

No order runs on the machine.

Problem:

A person tries to log on to a machine to which no operation has been logged on.

solution:

At first an operation has to be logged on to the machine not till then a person is able to log on.

17.1.291 Errorcode 1050: Person has already logged on

Shortform:

P. logged on already

Description:

Person has already logged on

Problem:

A person tries to log on, although he/she has already logged on to this machine.

solution:

A person can only log on once to a machine. Please check, whether the logon should be carried out at another machine.

17.1.292 Errorcode 1060: Person is not logged on

Shortform:

P. not logged on

Description:

Person has not logged on

Problem:

A person tries to log off, although he/she has not logged on to this machine.

solution:

Please check, e.g. with the terminal function "a person's OPs" whether and where the person is actually logged on.

17.1.293 Errorcode 1061: Nobody is logged on to machine

Shortform:

Nobody logged on

Description:

Nobody is logged on to the machine.

Problem:

Customer-specific function: When logging an operation on it came out that nobody has logged on, although it is required in this case.

solution:

A person has to log on at first.

17.1.294 Errorcode 1070: Changing not possible

Shortform:

Changing n. possible

Description:

Changing is impossible.

Problem:

A person tries to change target cycle or partitioning, although he/she is not authorized to do this.

solution:

Please check the authorization within the HR master data.

17.1.295 Errorcode 1090: Person must not change disturbance

Shortform:

P.must n.change dist

Description:

Person must not change disturbance.

Problem:

A person tries to change the status of the machine, although he/she is not authorized to do this.

solution:

Please check the MDE authorization within the HR master data. A person is only allowed to assign the status if their authorization level is greater than or equal to the level of the assigned status. The status authorizations are defined at the client within the menu item status assignment.(of machines/workplace). If necessary, the person has to be logged on to change the status of the machine. Please also check the authorization within the HR master data.

17.1.296 Errorcode 1100: Person is already logged on to order

Shortform:

P.alr.logged on OP

Description:

Person has already logged on to the order.

Problem:

A person tries to log on, although he/she has already logged on to this order.

solution:

A person can only log on once to an order. Please check, whether the logon should be carried out at another order.

17.1.297 Errorcode 1101: Person is already logged on in advance

Shortform:

P.alr.logged i.adv.

Description:

Person has already logged on in advance

Problem:

The person that tries to log on has already logged on to this machine in advance and therefore must not log on again.

solution:

As of a configurable time prior to the beginning of the shift a person is not logged on to the current shift but as advance logon to the next shift. This advance logon time can be configured per terminal.

The personnel is automatically logged on at the beginning of the shift.

17.1.298 Errorcode 1102: It is not allowed logging off last pers.

Shortform:

Last person!

Description:

It is not allowed to log the last person off.

Problem:

It is not allowed to log the last person off.

solution:

Another person has to log on first, before this person may log off.

17.1.299 Errorcode 1110: Person is not logged on to order

Shortform:

P.n.logged on to OP

Description:

Person has not logged on to the order.

Problem:

The person could not carry out the posting as he/she is not logged on to the operation and machine.

solution:

When it comes to postings onto group workplaces or overhead cost operations an operation may only be confirmed partially/interrupted/logged off by the person who is logged on to the operation. Via the info functions at the terminal or MOC it can be checked which person is logged on to the operation. In addition to this processing it can be configured within the HYDRA HR master data that the reporting person has always to be logged on.

17.1.300 Errorcode 1114: Person must not log off all persons

Shortform:

Logoff all p.n.poss.

Description:

The person is not allowed to log all people off.

Problem:

The person is not allowed to log all people off

solution:

You can permit the person to log all people off in the HR master data

17.1.301 Errorcode 1120: OP must not be finished

Shortform:

Finish. OP not poss.

Description:

An overhead cost order cannot be finished.

Problem:

It is attempted to log an operation off, although it is about an overhead cost order.

solution:

Please check the setting of the order type at the MOC.

17.1.302 Errorcode 1122: Time stamp for logging on is invalid

Shortform:

L.off n.pos.bef.L.on

Description:

The time stap for logging on is invalid.

Problem:

The logon time stamp is invalid as the logon has to be prior to the logoff.

solution:

Please correct the logon time stamp accordingly.

17.1.303 Errorcode 1123: Period has alr. been posted for person

Shortform:

Pers. alr. posted.

Description:

Period has already been posted for person.

Problem:

The period of time has already been posted for this person. Therefore, it cannot be entered once more.

solution:

Please correct the period accordingly or enter the data for another person.

17.1.304 Errorcode 1124: Period has alr. been posted to for OP

Shortform:

OP already posted

Description:

Period has already been posted for OP.

Problem:

The period of time has already been posted for this OP. Therefore, it cannot be entered once more.

solution:

Please correct the period accordingly or enter the data for another OP.

17.1.305 Errorcode 1154: Standard time ■■■■ not defined

Shortform:

Standard time n.def.

Description:

Standard time has not been defined.

Problem:

Customer-specific check when interrupting/logging an operation off. It was detected that the default time has not been defined.

solution:

Please check whether the standard times have been defined in the specified table for this machine.

17.1.306 Errorcode 1158: Target quantity not reached/exceeded

Shortform:

Inadmissible yield

Description:

Target quantity not reached.

Problem:

Customer-specific check when partially confirm/logging an operation off. It was detected that the target quantity and the target quantity number do not correspond to the specifications of the machines.

solution:

Please check the target quantity in the operation-related specifications.

17.1.307 Errorcode 1159: Inadmissible cost center

Shortform:

Inadm. cost center

Description:

Invalid cost center

Problem:

Customer-specific check when interrupting, partially confirming or logging an operation off. The scrap-causing cost center does not exist as cost center of the machine.

solution:

Please check whether the entered cost center when logging on/off with the cost center of a machine corresponds to the one within machines/WP.

17.1.308 Errorcode 1160: Scrap quantity exceeds batch quantity

Shortform:

Inadmiss. scrap qty.

Description:

Scrap quantity exceeds batch quantity

Problem:

The scrap quantity exceeds batch quantity

solution:

Please check your input

17.1.309 Errorcode 1163: Quantity not reached/exceeded

Shortform:

Inadmissible quant.

Description:

Quantity inadmissible.

Problem:

Check when posting the quantity (batch quantity, residual quantity) of a batch.

17.1.310 Errorcode 1230: Operations are still logged on

Shortform:

OP still logged on

Description:

Operations are still logged on

Problem:

Operations are still logged on

solution:

Please log of operations first

17.1.311 Errorcode 1240: Warning - overproduction OP!

Shortform:

Overproduction OP

Description:

Posting not allowed due to overproduction

Problem:

During the posting overproduction was detected for the operation according to the target quantity check at the OP.

solution:

Verify the check defined at the operation for overdelivery.

Enter a quantity that lies within the limits defined for the order or contact your system administrator and have the quantities or limits of the order adjusted.

17.1.312 Errorcode 1241: Logon not allowed overprod. of packages

Shortform:

Overproduct.of pack.

Description:

Posting not allowed due to overproduction of packages

Problem:

When logging packages on it is defined customer-specifically that the amount of packages exceeds the default target quantity.

solution:

The target quantity check can be activated/deactivated with respect to the personnel. The target quantity of packages is transferred via the HYDRA Info interface (record type AD) from the guiding system to HYDRA.

17.1.313 Errorcode 1242: Warning - overproduction machine!

Shortform:

Overprod. machine

Description:

Posting not allowed due to overproduction at machine

Problem:

During the posting overproduction was detected for the workplace/machine according to the target quantity check at the machine.

solution:

Verify the check defined at the workplace for overdelivery. (customer-specific).

Enter a quantity that lies within the limits defined at the workplace or contact your administrator and have the limits at the workplace adjusted.

17.1.314 Errorcode 1243: Warning - overproduction Person!

Shortform:

Overproduct. person

Description:

Posting not allowed due to overproduction for person

Problem:

During the posting overproduction was detected for the person according to the target quantity check at the person.

solution:

Verify the check defined at the HR master data for overdelivery.

Enter a quantity that lies within the limits defined for your person or contact your administrator and have the limits of your HR master data adjusted.

17.1.315 Errorcode 1244: Posting not allowed: overproduction OP

Shortform:

Overproduction OP

Description:

Posting not allowed due to overproduction

Problem:

During the posting overproduction was detected for the operation according to the target quantity check at the OP.

solution:

Verify the check defined at the operation for overdelivery.

Enter a quantity that lies within the limits defined for the order or contact your system administrator and have the quantities or limits of the order adjusted.

17.1.316 Errorcode 1245: Below target quantity

Shortform:

Below target qty.

Description:

The actual quantity does not reach the default target quantity.

Problem:

Customer-specifically, it is found out during posting that the actual quantity falls short of the default target quantity.

solution:

Enter a quantity with which the target quantity is reached.

17.1.317 Errorcode 1246: Target quantity exceeded

Shortform:

Target qty. exceeded

Description:

The actual quantity exceeds the default target quantity.

Problem:

Customer-specifically, it is found out during posting that the actual quantity exceeds the default target quantity.

solution:

Enter a quantity with which the target quantity is reached.

17.1.318 Errorcode 1247: Posting not allowed: underproduction OP

Shortform:

Underproduction OP

Description:

Posting not allowed due to underproduction

Problem:

During posting it is detected that there is underproduction for the operation according to the target quantity check at the OP.

solution:

Verify the check defined for the operation for underdelivery.

Enter a quantity that lies within the limits defined in the order or contact your administrator and have the quantities or limits within the order adjusted.

17.1.319 Errorcode 1248: Warning - underproduction machine!

Shortform:

Underprod. machine

Description:

Posting not allowed due to underproduction at the machine

Problem:

During posting underproduction /underdelivery is detected for the workplace/ machine according to the target quantity check at the machine.

solution:

Verify the check defined for the workplace for underproduction (customer-specific)

Enter a quantity that lies within the limits defined at the workplace or contact your administrator and have the limits at the operation adjusted.

17.1.320 Errorcode 1249: Warning - underproduction person!

Shortform:

Underprod. person

Description:

Posting not allowed due to underproduction at person

Problem:

During posting underproductin is detected for the person according to the person's target quantity check.

solution:

Verify the check defined in the HR master data for underdelivery.

Enter a quantity that lies within the limits defined for your person or contact your administrator and have the limits at your HR master data adjusted.

17.1.321 Errorcode 1250: Warning - underproduction OP

Shortform:

Underproduction OP

Description:

Posting not allowed due to underproduction

Problem:

During posting it is detected that there is underproduction for the operation according to the target quantity check at the OP.

solution:

Verify the check defined for the operation for underdelivery.

Enter a quantity that lies within the limits defined in the order or contact your administrator and have the quantities or limits within the order adjusted.

17.1.322 Errorcode 1251: Logon not allowed underprod. of packages

Shortform:

Underprod. of pack.

Description:

Posting not allowed due to underproduction of packages.

Problem:

Customer-specifically it is detected when posting packages that the amount of packages does not reach the default target quantity.

solution:

The target quantity check can be activated/deactivated with respect to the personnel. The target quantity of packages is transferred via the HYDRA Info interface (record type AD) from the guiding system to HYDRA.

17.1.323 Errorcode 1252: Target output not reached

Shortform:

Targ. outp. n.reach.

Description:

The target activity has not been reached.

Problem:

During posting it is detected that the target output has not been reached.

solution:

Check the target output defined at the operation and the indication in per cent on the underdelivery at the activity code

Enter an output that lies within the limits defined within the activity code or contact your administrator and have the target activity or the limits within the activity code or order adjusted.

17.1.324 Errorcode 1253: Target output exceeded

Shortform:

Target outp. exceed.

Description:

Target output has been exceeded.

Problem:

During posting it is detected that the target output has been exceeded.

solution:

Check the target output defined at the operation and the indication in per cent on the overdelivery at the activity code.

Enter an output that lies within the limits defined in the activity code or contact your administrator and have the target output or limits within the activity code or order adjusted.

17.1.325 Errorcode 1260: Orig.OP of a split OP can't be logged on

Shortform:

Orig.OP cant be log.

Description:

The original operation of a split operation cannot be logged on.

Problem:

A master operation (original), which was split before and therefore cannot be logged on again, was attempted to be logged on.

solution:

Instead of the master operation, the individual operations have to be logged on. If necessary the split operation can be regrouped again.

17.1.326 Errorcode 1270: Ind.OP of collect.OP can't be logged on

Shortform:

COP can't be log. on

Description:

An individual operation of a collective operation cannot be logged on.

Problem:

An operation, which is part of a collective operation and therefore can only be logged on via this one, was attempted to be logged on.

solution:

Instead of the individual operation the collective operation has to be logged on. If necessary, the collective operation can be cancelled again.

17.1.327 Errorcode 1280: Operation is already available

Shortform:

OP alr. available

Description:

Operation is already available.

Problem:

The operation is already available.

solution:

Enter a free operation number.

17.1.328 Errorcode 1290: OP cannot be created

Shortform:

Error creating OP

Description:

The operation cannot be created.

Problem:

The operation cannot be created as no operation number has been indicated or the indicated operation number has already been assigned.

solution:

Enter a free operation number.

17.1.329 Errorcode 1295: EQPOOL/father object not available

Shortform:

EQPOOL-Obj. n. avail

Description:

EQPOOL/Father object not available.

17.1.330 Errorcode 1296: Object already exists

Shortform:

Obj. already exists

Description:

Object already available.

17.1.331 Errorcode 1297: Object not available

Shortform:

Object not available

Description:

Object not available

17.1.332 Errorcode 1300: An individual OP is still logged on

Shortform:

Ind.OP still log.on

Description:

An individual operation is still logged on

Problem:

It is impossible to log a collective operation on since an individual operation is still logged on.

solution:

Please finish the individual operation at first.

17.1.333 Errorcode 1310: A collective OP is still logged on

Shortform:

COP still logged on

Description:

A collective operation is still logged on.

Problem:

It is impossible to log a individual operation on since an collective operation is still logged on.

solution:

Please finish the collective operation at first.

17.1.334 Errorcode 1320: Max. number of persons is logged on

Shortform:

max.no.pers.loggd on

Description:

The maximum number of people is logged on

Problem:

A person tries to log on to an operation, although the planned maximum number of people has already logged on.

solution:

An operator ratio is specified per operation. If the number of registered persons reaches this value a person has at first to log off before another person is able to log on again.

This plausibility check can be activated/deactivated for the entire HYDRA system. If this check is not required please contact MPDV Support.

17.1.335 Errorcode 1330: Clocking-in of person is missing

Shortform:

P.clocks in is miss.

Description:

The person's clocking-in is missing.

Problem:

The reporting person has not yet clocked-in via HYDRA-PZE.

solution:

People are only allowed to post within HYDRA-BDE provided that they are present. Therefore, the person has at first to clock-in.

This plausibility check can be activated/deactivated for the entire HYDRA system. If this check is not required please contact MPDV Support.

17.1.336 Errorcode 1340: No collective OP has been logged on

Shortform:

No COP logged on

Description:

No collective operation has been logged on.

Problem:

The operator tried to post a collective operation with the functions interrupt COP or log COP off, although no collective operation has been logged on.

solution:

By means of the info functions at the terminal or the MOC the operator can check whether he/she is logged on and to which operation.

17.1.337 Errorcode 1350: COP cannot be interrupted as ind. OP

Shortform:

N. poss. for ind.OP

Description:

Collective operation cannot be interrupted as individual operation.

Problem:

The operator tried to post a collective operation with the functions interrupt OP or log OP off.

solution:

Collective operations have to be posted with the functions interrupt COP or log COP off. (please also see the terminal manual, collective operations)

17.1.338 Errorcode 1360: Partial confirmat. not possible for COP

Shortform:

N. poss. for COP

Description:

Partial confirmations are not possible for collective operations.

Problem:

A partial confirmation is attempted to be carried out for a collective operation.

solution:

Partial confirmations are not allowed for COPs.

17.1.339 Errorcode 1370: OP has been logged on as COP

Shortform:

OP logged on as COP

Description:

The operation has been logged on as collective operation.

Problem:

The operator tries to log an operation on that has already been logged on as collective operation.

solution:

An operation that is part of a collective operation cannot be logged on several times.
Not until the collective operation has been interrupted the operation can be logged on again.

17.1.340 Errorcode 1380: Shop papers not printed

Shortform:

Shoppapers n.printed

Description:

Shop papers have not been printed.

Problem:

An operation whose shop papers have not yet been printed is attempted to be logged on.

solution:

At first print the shop papers before you log the operation on. This plausibility check can be activated/deactivated for the entire HYDRA system. If this check is not required please contact MPDV support.

17.1.341 Errorcode 1390: Min. setup time has not been reached

Shortform:

Min.setup time

Description:

Minimum setup time has not been reached.

Problem:

The posting cannot be carried out as the minimum setup time has not yet been reached.

solution:

Please wait until the minimum setup time has been reached and redo the booking.

17.1.342 Errorcode 1400: Invalid scrap reason

Shortform:

Invalid reason

Description:

Invalid scrap reason

Problem:

An invalid scrap reason has been recorded during posting.

solution:

All scrap reasons have to be defined at the MOC.

17.1.343 Errorcode 1401: Invalid deviation reason

Shortform:

Invalid reason

Description:

Invalid reason for deviation

Problem:

An invalid reason for deviation has been recorded during posting.

solution:

All reasons for deviation have to be defined at the MOC.

17.1.344 Errorcode 1410: Person may only log on COP to 1 machine

Shortform:

COP only to 1 mach.

Description:

Person may only log collective operation on to one machine.

Problem:

Person may only log collective operation on to one machine.

solution:

The person has to complete the active collective operation first, before the person may log a new collective operation on.

17.1.345 Errorcode 1420: OP has alr. been logged on as Individ.OP

Shortform:

OP log. on as ind.OP

Description:

Operation has already been logged on as individual operation.

Problem:

The operator tries to log an operation on that has already been registered as collective operation.

solution:

An individual operation that has already been logged on cannot additionally be logged on as collective operation.

Not until the individual operation has been interrupted this one can be logged on as part of a collective operation.

17.1.346 Errorcode 1430: Person logged on to individual OP

Shortform:

P.loggd on to ind.OP

Description:

Person is logged on to individual operation.

Problem:

The operator tries to log off with COP functions, although he/she is logged on to an individual operation.

solution:

By means of the info functions at the terminal or MOC the operators can check whether they are logged on or not and to which operation.

By means of the function log person off the operators can log off, by using the interrupt/log operation off function they can log off with the operation.

17.1.347 Errorcode 1440: Person logged on to collective OP

Shortform:

P. logged on to COP

Description:

Person is logged on to collective operation.

Problem:

The operator tries to log off with the log person off function, although he/she is logged on to a collective operation.

solution:

A collective operation can only be interrupted/logged off by using the interrupt/log COP off functions.

17.1.348 Errorcode 1450: Collective OP not allowed

Shortform:

COP not allowed

Description:

Collective operation is not allowed.

Problem:

A collective operation cannot be logged on to this machine.

solution:

Please check whether

- the function ADE-SAG is licensed
- the option "processing of collective operations at the terminal" has been activated within the HYDRA basic settings.
- the collective operations parameter is active within the terminal configuration for BDE.

17.1.349 Errorcode 1451: Collective OP not allowed without ref.

Shortform:

COP not allowed

17.1.350 Errorcode 1460: Collective OP has already been logged on

Shortform:

COP alr. logged on

Description:

Collective operation has already been logged on.

Problem:

The operator tries to log on. Since only COPs are active at the machine the person cannot be logged on.

solution:

When it comes to the logon of COPs the registering person is automatically logged on along with the COP and therefore, the person has not to log on separately (see operation of terminal manual).

17.1.351 Errorcode 1472: Collect. OP n.possible at machin. center

Shortform:

COP n.allow.machcent

Description:

Collective operation is impossible at machining center.

Problem:

The collective operation cannot be logged on to this machine as it is a machining center.

solution:

COP functions cannot be used at the machining center.

17.1.352 Errorcode 1473: Collect. OP is logged on at other machin

Shortform:

COP n.allow.machine

Problem:

The collective operation cannot be logged on to this machine as it is already logged on another machine

solution:

Operations of a collective OP may only be logged on within one machine.

17.1.353 Errorcode 1480: An indiv. OP has already been logged on

Shortform:

Ind.OP alr.logged on

Description:

An individual operation has already been logged on.

Problem:

The operator tries to log an overhead cost operation on, although a production operation is still active at this machine.

solution:

It is not allowed to log overhead cost operations and production operations on to a machine at the same time. Interrupt the production operation at first to be able to log the overhead cost operation on afterwards.

17.1.354 Errorcode 1490: An OC order has already been logged on

Shortform:

OC OP alr. logged on

Description:

An overhead cost order has already been logged on.

Problem:

The operator tries to log a production operation on, although an overhead cost operation is still active at this machine.

solution:

It is not allowed to log an overhead cost operation and a production operation on to a machine at the same time. Interrupt the overhead cost operation at first in order to be able to log the production operation on afterwards.

17.1.355 Errorcode 1491: A collective OP has alr. been logged on

Shortform:

COP alr. logged on

Description:

A collective OP has already been logged on.

Problem:

The operation cannot be logged on to this machine as a machine-specific collective operation is already active.

solution:

Only a machine-specific collective operation may be logged on to a machine.

17.1.356 Errorcode 1492: Not possible - OP has been logged on

Shortform:

n.poss.OP is running

Description:

Impossible - the OP has been logged on.

Problem:

A change in the waiting time processing "person" can not be made if a waiting period operation "person" runs.

solution:

Change the settings, when no waiting period operations "person" logged on

17.1.357 Errorcode 1493: Not possible-OP does not have type GKM

Shortform:

N.poss.OPtype n.GKM

Description:

Impossible - the OP is no overhead cost order for machines.

Problem:

The OP is not an overhead cost order for machines. Therefore, an assignment is not allowed.

solution:

Assign an OP of the GKM type.

17.1.358 Errorcode 1494: Not possible-OP does not have type GKP

Shortform:

N.poss.OPtype n. GKP

Description:

Impossible - the OP is no overhead cost order for people.

Problem:

The OP is not an overhead cost order for people. Therefore, an assignment is not allowed.

solution:

Assign an OP of the type GKP.

17.1.359 Errorcode 1520: N.poss. to log pers. on/off to GWP/OCOP

Shortform:

N.poss. log p.on/off

Description:

It is not possible to log persons on/off to group workplaces/overhead cost operations.

Problem:

The operator tries to log on/off to a group workplace or an overhead cost operation, although this is not allowed.

solution:

Only combined registrations of operations and staff are supported at group workplaces or in case of postings to overhead cost operations.

The logon can be made via the log OP on function and by using the interrupt OP or log OP off function they can be interrupted or logged off.

17.1.360 Errorcode 1530: It's required to enter badge no. at GWP

Shortform:

N.poss.log on to WP

Description:

It is required to enter the badge number at group workplaces.

Problem:

A posting onto a group workplace has been performed without entering the personnel badge number.

solution:

It is mandatory to enter the personnel badge number in the dialog when it comes to postings onto a group workplace. Check the settings of the terminal concerning the dialog configuration.

17.1.361 Errorcode 1540: No status change possible at GWP

Shortform:

No stat. change poss

Description:

It is impossible to change the status at group workplaces.

Problem:

A status has been changed at a group workplace.

solution:

Statuses cannot be changed at group workplaces as only the status production is recorded here.

17.1.362 Errorcode 1541: Status not allowed for active OP

Shortform:

Stat. not possible

Description:

Status is not allowed in case of active OPs.

Problem:

A status was attempted to be logged on that may only be logged on when at this point in time NO operation is logged on to the machine.

solution:

Another status has to be chosen as the status in use is assigned to "machine-related downtime reason" in its configuration.

17.1.363 Errorcode 1542: Status only allowed for active OP

Shortform:

Stat. not possible

Description:

Status is only allowed in case of active OPs

Problem:

A status was attempted to be logged on that may only be logged on when at this point in time an operation is logged on to the machine.

solution:

Another status has to be chosen as the status in use is assigned to "order-related downtime reason" in its configuration.

17.1.364 Errorcode 1543: Status n. allowed for type of active OP

Shortform:

Stat. not possible

Description:

Status is not allowed for order type of running OP.

Problem:

A status was attempted to be logged on that is not configured for the order type of the actual running operation (Configuration -machinestatus for ordertype-)

solution:

Another status has to be chosen as the status in use is not configured in the configuration - machinestatus for ordertype-

17.1.365 Errorcode 1560: Logging off operation is not allowed

Shortform:

Log OP off n.allowed

Description:

It is not allowed to log the operation off.

Problem:

The operator tries to log an operation (e.g. overhead cost operation) off, which cannot be finished

solution:

Overhead cost operations cannot be finished. If necessary, use another order type (see configuration management manual in operation-specific configuration).

17.1.366 Errorcode 1561: Interrupting OP not allowed

Shortform:

Interr.OP n. allowed

Description:

It is not allowed to interrupt the operation.

Problem:

The operator tries to interrupt an operation, which cannot be interrupted

solution:

Please check the setting of the order type. If necessary, the operation may only be logged off.

17.1.367 Errorcode 1581: No person logged on with operator pos.1

Shortform:

Oper.pos1 n.loggd on

Description:

Nobody with operator position 1 is logged on.

Problem:

Nobody with operator position 1 is logged on.

solution:

A person with operator position 1 has to log on at first.

17.1.368 Errorcode 1582: Allow. no. of pers.reached f. oper.pos

Shortform:

No.pers.op.pos reach

Description:

No more persons than indicated may log on to one operator position.

Problem:

No more persons than indicated may log on to one operator position.

solution:

The person has to log on to another operator position or other persons have to log off from the operator position.

17.1.369 Errorcode 1585: The event has already been logged on

Shortform:

Double logon

Description:

The event has already been logged on.

Problem:

The event has already been logged on.

solution:

Internal error, please contact MPDV-Support.

17.1.370 Errorcode 1590: OP can't be logged on due to pred. stat.

Shortform:

Pred.stat.n.log on

Description:

Predecessor has a status that does not allow to log the successor on.

Problem:

The operator tries to log an operation on, although the predecessor operation has a status that does not allow to log the successor on.

solution:

The specified production sequence has not been observed. The flag "successor can be logged on" has to be set at the status of the previous operation of the order in order that the following operation can be logged on.

This plausibility check can be defined within the configuration of the operation status of HYDRA. If this check is not required please contact MPDV Support.

17.1.371 Errorcode 1591: OP can't be logged on due to preced.stat.

Shortform:

Preced.stat.n.log on

Description:

The predecessor operation has not yet been finished.

Problem:

The operator tries to log an operation off, although the predecessor operation has a status that does not allow to log the successor on.

solution:

The specified production sequence has not been observed. The flag "successor can be logged off" has to be configured at the status of the previous operation of the order in order that the following operation can be logged off.

This plausibility check can be defined within the configuration of the operation status in HYDRA. If this check is not required please contact MPDV-Support.

17.1.372 Errorcode 1592: Preced. OP is prepared in order network

Shortform:

Error preced. status

Description:

Predecessor operation within order network is prepared.

Problem:

The operator tries to log an operation on, although the predecessor operation is still prepared within the order network.

solution:

The specified production sequence has not been observed. The status of all predecessor operations has to be running, interrupted or finished within the order network in order that the following operation can be logged on.

This plausibility check can be activated/deactivated for the entire HYDRA system. If this check is not required please contact MPDV Support.

17.1.373 Errorcode 1593: Batch status not allowed

Shortform:

Batch.sta.n.allowed

Description:

Batch status not allowed to this operation

Problem:

When logging an input batch on it is detected that this batch is not free and thus must not be logged on.

solution:

Check the batch and transport status at the MOC in the batch data maintenance. Only batches with the status "free" may be logged on to the machine as input batches.

17.1.374 Errorcode 1594: The batch status is invalid

Shortform:

Batch status invalid

Description:

The batch status is invalid.

Problem:

The batch status is invalid.

solution:

Please book another batch with a valid status.

17.1.375 Errorcode 1596: Invalid transport unit

Shortform:

Invalid TPU

Description:

Invalid transport unit.

Problem:

The selected transport unit is invalid.

solution:

Please select a transport unit

17.1.376 Errorcode 1600: A capacity OP cannot be logged on

Shortform:

Cap.OP not possible

Description:

A capacity operation cannot be logged on.

Problem:

A capacity operation was tried to be logged on, although this is not allowed.

solution:

Capacity operations only serve as placeholders for planning and cannot be logged on. If necessary, use another order type or log the correct operation on.

17.1.377 Errorcode 1601: Tool is active

Shortform:

Tool active

Description:

Tool is active.

Problem:

With an activated tool management a tool or an order with tool was tried to be logged on to the machine, although the tool is already active.

solution:

Please contact MPDV Support.

17.1.378 Errorcode 1602: Tool is blocked

Shortform:

Tool blocked

Description:

Tool is blocked

Problem:

With an activated tool management a tool or an order with tool was tried to be logged on to the machine, although the tool is blocked.

solution:

Please contact MPDV-Support.

17.1.379 Errorcode 1603: Tool is not available

Shortform:

Tool n. available

Description:

Tool is not available.

Problem:

With an activated tool management a tool or an order with tool was tried to be logged on to the machine, although the tool is not available within the dataset.

solution:

Please contact MPDV Support.

17.1.380 Errorcode 1604: Setup acceptance not allowed

Shortform:

Setup accept.n.allow

Description:

Setup acceptance not allowed.

Problem:

A batch was attempted to be generated, although this one is already available.

solution:

Use a free batch number.

17.1.381 Errorcode 1606: The customer batch is already available

Shortform:

Custom.bat.alr.avail

Description:

The customer batch is already available.

Problem:

During the customer-specific collection of customer batches it was detected that these batches have already been recorded.

solution:

Record a customer batch that is not yet known in HYDRA.

17.1.382 Errorcode 1607: Missing license



Shortform:

Missing license

Description:

A license that is required for this function is not available.

Problem:

A license that is required for this function is not available.

solution:

Please contact MPDV in order to purchase a license

17.1.383 Errorcode 1609: Invalid quantity unit

Shortform:

Invalid qty unit

Description:

Invalid quantity unit.

Problem:

The selected quantity unit is invalid.

solution:

Please select a valid quantity unit.

17.1.384 Errorcode 1611: General database error

Shortform:

General DB error

Description:

General database error.

Problem:

General database error.

solution:

Internal error, please contact MPDV-Support.

17.1.385 Errorcode 1612: Batch/lot not available

Shortform:

Batch not available

Description:

Batch is not available.

Problem:

A batch was attempted to be logged on or off, although this one is not available within the dataset.

solution:

Please check whether the batch number was entered correctly when logging on. Via a basic setting of HYDRA the creation of unknown batches can be activated.

17.1.386 Errorcode 1613: Batch/lot has already been logged on

Shortform:

Batch alr. logged on

Description:

Batch has already been logged on.

Problem:

A batch change was attempted to be performed for a batch that has already been logged on.

solution:

Log a free batch on.

17.1.387 Errorcode 1614: Batch management not configured

Shortform:

Batch man.n.config.

Description:

Batch management has not been configured.

Problem:

Batch management has not been configured at the terminal.

solution:

Check the HYDRA basic settings and the terminal configuraiton regarding the settings of the batch management.

17.1.388 Errorcode 1615: Person must not change batch

Shortform:

P.mustn't change bat

Description:

Person must not change the batch

Problem:

When changing the batches it is detected that the person is not sufficiently authorized.

solution:

Check the person's authorizations at the MOC

17.1.389 Errorcode 1617: No piece rate OP

Shortform:

No piece rate

Description:

No piecework operation.

Problem:

The stated order/operation is not a piecework operation.

solution:

Piecework operations may only be entered here. They can be recognized by the piecework wage type.

17.1.390 Errorcode 1620: Batch has already been finished

Shortform:

Batch finished

Description:

Batch has already been finished.

Problem:

A batch is attempted to be logged on, although this one has already been finished.

solution:

Log a free batch on.

17.1.391 Errorcode 1622: Posting not possible

Shortform:

Posting n. possible

Description:

Posting impossible.

Problem:

The posting is impossible.

solution:

Internal error, please contact MPDV-Support.

17.1.392 Errorcode 1624: Quantities have not yet been posted

Shortform:

No quantity posted

Description:

Quantities have not yet been posted.

Problem:

It is impossible to change the batch as quantities have not yet been posted onto the batch to be logged off.

solution:

A customer-specific plausibility check prevents an empty batch from being logged off. You should produce the required quantity at first.

17.1.393 Errorcode 1625: Only one batch possible

Shortform:

Only 1 batch poss.

Description:

Only one batch possible.

Problem:

It is attempted to log more than one batch on.

solution:

The current batch has at first to be logged off before a new batch can be logged on. Use the batch change button for this purpose.

17.1.394 Errorcode 1626: Invalid indicator**Shortform:**

Invalid indicator

Description:

Invalid indicator.

Problem:

The stated employee characteristic is invalid.

solution:

The employee characteristics "1", "2" and "3" are allowed. Only a person with a HYDRA-ADE authorization > 1 may log on first.

17.1.395 Errorcode 1627: Invalid destination**Shortform:**

Invalid destination

Description:

Invalid destination

Problem:

When logging the batch on or reposting it an invalid destination was entered.

solution:

Check the master data of the material buffers/destinations at the MOC

17.1.396 Errorcode 1628: Batch/lot has not been logged on**Shortform:**

Batch not logged on

Description:

Batch has not been logged on.

Problem:

The operator tries to log a batch off, although this batch is not logged on.

Problem:

When logging a batch on or reposting it, it is detected that this batch has exceeded the expiry date.

solution:

Check the expiry date of the batch in the batch data maintenance.

17.1.400 Errorcode 1632: At least one input batch is missing

Shortform:

Input batch missing

Description:

At least one input batch is missing.

Problem:

When logging the operation on it is detected that at least one planned input material has not yet been assigned to an input batch.

solution:

Log an input batch on for the input materials that have not yet been assigned. The list of planned input materials can be displayed at the terminal.

17.1.401 Errorcode 1633: Material cannot be logged on

Shortform:

Mat.can't be log. on

Description:

Material cannot be logged on.

Problem:

A batch has already been logged on for an input material or the maximum number of batches that can be logged on for the material has been reached.

solution:

Log the batch that is already active for the material off or check the configuration of the machine with respect to multiple logon of batches.

17.1.402 Errorcode 1634: Material is not planned

Shortform:

Mat. n. planned

Description:

Material has not been planned.

Problem:

When logging a batch on it is detected that the material is not planned within the material list of the operation.

solution:

Check the material list in your guiding system or log another batch on.

17.1.403 Errorcode 1635: The batch contains another material

Shortform:

Mat. not in batch

Description:

The batch contains another material.

Problem:

When logging a batch on it is detected that the batch does not contain the material for which it is logged on.

solution:

Log another batch on or check the material of the batch in the batch data maintenance

17.1.404 Errorcode 1636: Output batch already available

Shortform:

Output batch avail.

Description:

Output batch already available.

Problem:

When logging a batch on it is detected that this output batch is already available.

solution:

If it is possible log another batch on. In case the batch number is generated automatically at the terminal please contact MPDV Support.

17.1.405 Errorcode 1637: Operator position not defined

Shortform:

Operator pos.n.def.

Description:

The operator position has not been defined.

Problem:

When a person logs on it is detected that the respective operator position has not been defined for the machine.

solution:

Check the operator position defined for this machine at the MOC.

17.1.406 Errorcode 1638: Output batch not logged on

Shortform:

Outp.batch n.log.on

Description:

Output batch has not been logged on.

Problem:

When logging a batch off it is detected that this output batch is not available within the dataset.

solution:

Please check via the batch data maintenance which output batch has been logged on for this machine and operation.

17.1.407 Errorcode 1639: Output batch is missing

Shortform:

Output batch missing

Description:

Output batch is missing.

Problem:

When logging a batch on or when logging an operation on that is subject to batch management requirement it is detected that the output batch is missing.

solution:

Check within the machine configuration whether the batch management option has been activated.

17.1.408 Errorcode 1641: This OP is not subj.to batch management

Shortform:

CHV n. active f. OP

Description:

This operation is not subject to batch management requirement.

Problem:

The operation is not subject to batch management requirement.

solution:

Check operation.

17.1.409 Errorcode 1642: Wage grp./premium indicator not defined

Shortform:

Wage grp/prem.n.def.

Description:

Wage group/premium indicator have not been defined.

Problem:

When a person logs on it is detected that the respective wage group/premium indicator has not been defined for the machine.

solution:

Check the wage groups/premium indicators defined for this machine.

17.1.410 Errorcode 1643: The max. number of batches is exceeded

Shortform:

Max. no. of batches

Description:

The maximum number of batches has been exceeded.

Problem:

The maximum number of batches running simultaneously has been exceeded. At most 30 batches, which are active at the same time, may be logged on per order.

solution:

At most 30 batches, which are active at the same time, may be logged on per order.

17.1.411 Errorcode 1646: The run through batch is not free

Shortform:

Runthr. bat.n.free

Description:

The run-through batch is not free.

Problem:

The run-through batch that is logged on is not free.

solution:

Check the batch and transport status in the batch data maintenance at the client. Only batches with the status "free" may be logged on to the machine.

17.1.412 Errorcode 1651: Valid batch alr.available f.r-thr.batch

Shortform:

Valid rthr.bat.avail

Description:

A valid batch is already available for the run-through batch.

Problem:

When logging batches on it is detected that this run-through batch is already available.

solution:

There may be only one valid batch for a run-through batch in HYDRA. Please contact MPDV Support.

17.1.413 Errorcode 1652: This batch is no scrap batch

Shortform:

No scrap batch

Description:

This batch is not a scrap batch.

Problem:

When booking a scrap batch in it is detected that the batch has not been labeled as scrap batch.

solution:

Only scrap batches can be posted via this function. Scrap batches are identified by the batch class "A" (see MPL manual, batch data maintenance).

17.1.414 Errorcode 1653: This r-thr.batch has not been logged on

Shortform:

Rthr.bat.n.logged on

Description:

This run-through batch has not been logged on.

Problem:

When logging a batch on it is detected that this batch does not exist within the dataset.

solution:

Please check via the batch data maintenance which batch is logged on for this machine and operation.

17.1.415 Errorcode 1654: Rthr.batch has already been processed

Shortform:

Rthr.bat.alr.process

Description:

The run-through batch has already been processed.

Problem:

The batch has already been logged on to another production step.

solution:

Please check via the batch data maintenance which batch is logged on for this machine and operation.

17.1.416 Errorcode 1655: DLGFILE cannot be opened

Shortform:

Error in DLGFILE

Description:

Read error: DLGFILE cannot be opened.

Problem:

When dialog data were processed the respective files could not be opened.

solution:

Please contact MPDV Support.

17.1.417 Errorcode 1656: RETFILE cannot be written

Shortform:

Error in RETFILE

Description:

Write error: RETFILE cannot be written

Problem:

When dialog data were processed respective files could not be written.

solution:

Please contact MPDV Support.

17.1.418 Errorcode 1657: No cost center authorization

Shortform:

No cost center

Description:

No cost center authorization.

Problem:

You do not have a cost center authorization for this activity.

solution:

Check the users cost center authorizations.

17.1.419 Errorcode 1658: No cost center authorization for group

Shortform:

No cost cent.f.group

Description:

No cost center authorization for the group.

Problem:

You do not have a cost center authorization for the machine group.

solution:

Check the users cost center authorizations.

17.1.420 Errorcode 1659: Parameters are missing for changing

Shortform:

Para.missing change

Description:

Parameters are missing for changing.

Problem:

Not all necessary parameters are indicated for being able to change.

solution:

Check the transferred parameters for completeness.

17.1.421 Errorcode 1660: Invalid user

Shortform:

Invalid user

Description:

Invalid user.

Problem:

The stated user is invalid.

solution:

Use a valid user.

17.1.422 Errorcode 1661: Missing parameter

[illegible]

Shortform:

Missing parameter

Description:

A value that is relevant for the processing is missing.

Problem:

When processing dialog data a missing parameter was detected.

solution:

Please contact MPDV Support.

17.1.423 Errorcode 1662: Invalid parameter

[illegible]

Shortform:

Invalid parameter

Description:

A value that is relevant for processing is invalid.

Problem:

When processing dialog data an invalid parameter was detected.

solution:

Please contact MPDV Support.

17.1.424 Errorcode 1663: Person avail.comp. ■■■■ CCR.

■■■■■■■■■■

Shortform:

Person alr. avail.

Description:

Personnel number has already been assigned.

Problem:

It is attempted to create a person that already exists.

solution:

Enter a new personnel number. Via the details of the error message you are able to recognize which company and cost center the person is assigned to.

17.1.425 Errorcode 1664: ID card alr.avail. for person ■■■■■■

Shortform:

ID card alr. avail.

Description:

The badge number has already been allocated.

Problem:

The indicated badge number has already been allocated.

solution:

Choose a new badge number.

17.1.426 Errorcode 1665: Editor or password invalid

Shortform:

Editor/passw.invalid

Description:

User and/or password are invalid.

Problem:

Entered login information is invalid

solution:

Login with valid login information or contact the Hydra administrator

17.1.427 Errorcode 1666: Object has been blocked

Shortform:

Object blocked

Description:

The data record is currently blocked by the user <BEARB>.

Problem:

This is a general error message. A data record, which is currently edited by another user, is attempted to be edited.

solution:

Please wait till the other user has finished processing.

17.1.428 Errorcode 1667: No. of licenses exceeded:■■■■■■■■■

Shortform:

License error (no.)

Description:

The number of licenses <LIC.PROKEY> is exceeded. All <LIC.MAXANZ> licenses are being used. Not until the user is logged off the licenses are re-released. Please contact your HYDRA administrator.

Problem:

The number of licenses is exceeded

solution:

Please contact MPDV in order to purchase further licenses

17.1.429 Errorcode 1668: Terminal is not available

Shortform:

Terminal n.available

Description:

Terminal is not available.

Problem:

A terminal with the specified terminal number does not exist

solution:

Check your input

17.1.430 Errorcode 1669: Data are already available

Shortform:

Data alr. available

Description:

Data are already available.

Problem:

Data with the same key fields are already available. You may not see the data due to lack of permission.

solution:

Check your input

17.1.431 Errorcode 1670: Value too long/large for the field

Shortform:

Value is too large

Description:

Value too long/large in an input field.

Problem:

The transferred value is too long.

solution:

Please contact MPDV Support.

17.1.432 Errorcode 1671: Error in license data

Shortform:

Error in licen.data

Description:

Error within the license data.

Problem:

The license data are faulty or do not fit to your system

solution:

Please contact MPDV Support.

17.1.433 Errorcode 1672: Assignment already available

Shortform:

Assignm.alr.avail.

Description:

Assignment already available.

Problem:

The assignment of the machine to a terminal or a line already exists.

17.1.434 Errorcode 1673: Aggr. can't be assigned to terminals

Shortform:

Aggr.n.be assigned

Description:

Aggregates cannot be assigned to terminals. Aggregates are assigned automatically

Problem:

Aggregates cannot be assigned to terminals. Aggregates of a line are assigned automatically, when the line is assigned to the terminal.

17.1.435 Errorcode 1674: GWP's can't be assigned to terminals

Shortform:

GWP n.be assigned

Description:

Group workplaces cannot be assigned to MDE terminals.

17.1.436 Errorcode 1675: Max. ■■ lines c.be ass.to this terminal

Shortform:

Line n.be assigned

Description:

The maximum number of lines that can be assigned to this terminal has been reached.

17.1.437 Errorcode 1676: Max. ■■ M/WP c.be.assign. to this term.

Shortform:

Mach/WP n.be assign.

Description:

The maximum number of machines/workplaces that can be assigned to this terminal has been reached.

17.1.438 Errorcode 1677: Only agg.,ma.,res.can be assigned to li.

Shortform:

Only aggr.c.b.assig.

Description:

Only aggregates can be assigned to lines.

Problem:

A machine can only be assigned to a line, if this machine is configured as type "aggregate" in the machine configuration

solution:

Configure, if necessary, the machine as an aggregate

17.1.439 Errorcode 1678: Max. ■■ aggr.c.be assigned to this line

Shortform:

Aggr.n.be assigned

Description:

The maximum number of aggregates that can be assigned to this line has been reached.

17.1.440 Errorcode 1679: Assign.of aggr.to term.not deletable

Shortform:

Aggr.not deletable

Description:

The assignments of aggregates to a terminal cannot be deleted.

Problem:

The assignments of aggregates to a terminal cannot be deleted. The assignments of aggregates to a line are deleted automatically, when the assignment of the line will be deleted

17.1.441 Errorcode 1680: Invalid terminal number

Shortform:

Invalid terminal no.

Description:

Invalid terminal number has been entered.

Problem:

You have enterd an invalid terminal number

solution:

Enter a valid terminal number greater than 0

17.1.442 Errorcode 1681: Only mach. with year model c.be assigned

Shortform:

Mach.w/o ymod.n.ass.

Description:

Only machines with year model can be assigned to a terminal.

17.1.443 Errorcode 1682: Assignment not available

Shortform:

Assignm.n.available

Description:

Assignment is not available.

Problem:

The assignment, which you wish to maintain, is not available

solution:

Choose a valid assignment

17.1.444 Errorcode 1683: Term.type can't be assigned to term. no.

Shortform:

Terminal type inval.

Description:

The indicated terminal number is not valid for the stated terminal type.

17.1.445 Errorcode 1684: Machine is assigned to MDE terminal

■■■

Shortform:

Assign.alr.avail.MDE

Description:

The terminal <TNR> has already been configured as MDE terminal for the machine <MNR>.

Problem:

The machine is already assigned to a MDE terminal

solution:

Delete the existing assignment, if you want to assign the machine to another MDE terminal

17.1.446 Errorcode 1685: Assignment cannot be deleted

Shortform:

Assignm.n.deletable

Description:

Assignment cannot be deleted.

Problem:

At the terminal, only temporary assignments of a machine to a terminal can be deleted. At the MOC, only permanent assignments of a machine to a terminal can be deleted.

17.1.447 Errorcode 1686: Terminal group is not available

Shortform:

Term. grp. n.avail.

Description:

The terminal group is not available.

17.1.448 Errorcode 1687: Access profile is not available

Shortform:

Access prof.n.avail.

Description:

The access profile is not available.

17.1.449 Errorcode 1688: ID card is not available

Shortform:

ID card n.available

Description:

The badge is not available.

17.1.450 Errorcode 1689: Remuneration day type is not available

Shortform:

Remunerat. n.avail.

Description:

The remuneration day type is not available.

17.1.451 Errorcode 1690: Material buffer is not available

Shortform:

Mat.buffer n.avail.

Description:

The material buffer is not available.

Problem:

The material buffer of the machine is not available.

solution:

Check material buffer of the machine.

17.1.452 Errorcode 1692: Fct. not possible, no HYD-ALS license

Shortform:

No HYD-ALS license

Description:

Function can only be executed with the HYD-ALS license for "interfacing Arburg Leitsystem".

Problem:

Function can only be executed with the HYD-ALS license, which is needed for the interface to Arburg Leitsystem.

solution:

Please contact MPDV in order to purchase a license

17.1.453 Errorcode 1694: Mach.is assign.to input server ■■■

Shortform:

Assignm.alr.avail.

Description:

Machine has already been assigned to a shop floor server.

Problem:

The machine has already been assigned to a shop floor server.

solution:

The machine cannot be assigned to a second shop floor server.

17.1.454 Errorcode 1695: Remuneration model is not available**Shortform:**

Remunerat.not avail.

Description:

The remuneration model is not available.

Problem:

The remuneration model is not available.

solution:

Create the remuneration model or choose an existing model number

17.1.455 Errorcode 1696: Working time model is not available**Shortform:**

Work.t. mod.n.avail.

Description:

The working time model is not available.

Problem:

The working time model is not available.

solution:

Create the working time model or choose an existing model number

17.1.456 Errorcode 1697: Shift rythm model is not available**Shortform:**

Shift rythm n.avail.

Description:

The shift rythm model is not available.

Problem:

The shift rythm model is not available.

solution:

Create the shift rythm model or choose an existing model number

17.1.457 Errorcode 1698: No. of licenses exceeded:■■■■■■■■■

Shortform:

License error (no.)

Description:

The number of licenses <LIC.PROKEY> is exceeded. All <LIC.MAXANZ> licenses are being used.
Please contact your HYDRA administrator.

17.1.458 Errorcode 1700: Personnel number not indicated

Shortform:

Person n. indicated

Description:

No personnel number entered.

Problem:

No personnel number entered.

solution:

Enter personnel number.

17.1.459 Errorcode 1701: Company number not indicated

Shortform:

Company n. indicated

Description:

No company entered.

Problem:

No company entered.

solution:

Company entered.

17.1.460 Errorcode 1702: Area not indicated

Shortform:

Area not indicated

Description:

No area entered.

Problem:

No area entered.

solution:

Area entered.

17.1.461 Errorcode 1703: Invalid badge number

■■■■■■■■■■

Shortform:

Invalid badge no.

Description:

Indicated badge number is invalid.

Problem:

The indicated badge number is invalid or not available.

solution:

Please enter a valid badge number.

17.1.462 Errorcode 1704: Invalid personnel number

■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■

Shortform:

Invalid pers. number

Description:

Indicated personnel number is invalid.

17.1.463 Errorcode 1705: Cost center not indicated

Shortform:

Cost cent.n.indicat.

Description:

No cost center entered.

Problem:

No cost center entered.

solution:

Please enter a valid cost center.

17.1.464 Errorcode 1706: Person is logged on to an order

Shortform:

Person is logged on

Description:

Person is logged on to an order.

Problem:

The person is currently logged on to an order. The required action cannot be carried out in this case.

solution:

Log the person off from all orders and machines and repeat the action.

17.1.465 Errorcode 1707: Log data are available for the person

Shortform:

Data avail.for pers.

Description:

Log data are available for the person

Problem:

There are still log data for the person, e.g. in HYDRA-ADE. They cannot be displayed correctly anymore, provided that the required action is carried out.

solution:

The required action can only be carried out when the person's log data are completely deleted from the system. Normally, this is done by the automatic deletion of data after a set term. This term has to be awaited.

17.1.466 Errorcode 1708: Date o.leaving lies bef.date of joining

Shortform:

Leaving bef.joining

Description:

Date of leaving lies before date of joining.

Problem:

The entered date of leaving lies before date of joining.

solution:

Please enter a valid date of leaving.

17.1.467 Errorcode 1709: Supervisor ■■■■■■■■ ■■■■ not available

Shortform:

Supervisor n.avail.

Description:

Supervisor not available.

Problem:

The entered supervisor is not available.

solution:

Please enter a valid supervisor.

17.1.468 Errorcode 1710: Superior of ■■■■■■■■ ■■■■

Shortform:

Pers. is superior

Description:

Person is supervisor.

Problem:

The person is a supervisor therefore the required action cannot be executed.

solution:

Please assure that the required person is nowhere entered as supervisor.

17.1.469 Errorcode 1720: Wage type not available

Shortform:

Wage type n. avail.

Description:

Wage type is not available.

17.1.470 Errorcode 1721: Wage type group not available

Shortform:

W.type grp.n.avail.

Description:

Wage type group is not available.

17.1.471 Errorcode 1722: Logon not available

Shortform:

Logon not available

Description:

Posting is not available.

17.1.472 Errorcode 1723: Data record has already been uploaded

Shortform:

Already uploaded

Description:

Data record has already been uploaded and thus it cannot be changed anymore.

17.1.473 Errorcode 1725: Invalid remuneration day type

Shortform:

Invalid remuneration

Description:

Invalid remuneration day type

solution:

Enter a valid remuneration day type.

17.1.474 Errorcode 1726: Invalid working time day type

Shortform:

Inv.work.t.day type

Description:

Invalid working time day type.

solution:

Enter a valid working time day type.

17.1.475 Errorcode 1727: Invalid shift type

Shortform:

Invalid shift type

Description:

Invalid shift type.

solution:

Enter a valid shift type.

17.1.476 Errorcode 1728: Clearing date in future not allowed

Shortform:

Inval. clearing date

Description:

The clearing date must not lie ahead.

solution:

Enter today's date or a date of the past as clearing date.

17.1.477 Errorcode 1729: The data are administered by SAP

Shortform:

Data administ.by SAP

Description:

The data are managed by SAP.

Problem:

These data are managed by SAP as guiding system and cannot be edited.

solution:

The data cannot be edited.

17.1.478 Errorcode 1731: Selection crit.or values wrong (■■■■■)

Shortform:

SQL is faulty

Description:

Faulty SQL instruction.

Problem:

The stated SQL fragment is erroneous or the selection criteria are invalid.

solution:

Correct the SQL fragment taking the database error number into account and enter valid values for the selection criteria.

17.1.479 Errorcode 1732: Sorting wrong (■■■■■)

Shortform:

Sorting faulty

Description:

Sorting faulty.

Problem:

The entered SQL fragment with the sort sequence contains an error.

solution:

Correct the SQL fragment taking the database error number into account.

17.1.480 Errorcode 1733: The data must not be changed

Shortform:

Data n.be changed

Description:

Data cannot be changed.

Problem:

These data have been marked unchangeable by the system. This may have different reasons.

solution:

The required action cannot be executed.

17.1.481 Errorcode 1734: Last data record not allowed

Shortform:

Last DR not allowed

Description:

Last data record is not allowed.

Problem:

The last data record cannot be deleted as it has to be kept as template.

solution:

Copy the data record at first before it can be deleted.

17.1.482 Errorcode 1735: Report file is not available

Shortform:

Report not avail.

Description:

Report file is not available.

Problem:

The report file is not available.

17.1.483 Errorcode 1736: Access blocked to settled data.

Shortform:

Access blocked

Description:

The access to data that have already been settled is blocked. You are not authorized to change these data.

17.1.484 Errorcode 1737: Report alr.available in report config.

Shortform:

Report config.avail.

Description:

Report is already available in the report configuration.

Problem:

The report is already available in the report configuration.

solution:

Choose another report.

17.1.485 Errorcode 1738: Report alr. avail. as terminal report

Shortform:

Terminal rep. avail.

Description:

Report is already available as terminal report.

Problem:

The report is already available as terminal report.

solution:

Choose an other report name.

17.1.486 Errorcode 1739: Data of monthly period partly deleted

Shortform:

Access blocked

Description:

The data for the respective monthly period are partially or completely deleted. Therefore, changes must not be made anymore for this monthly period.

17.1.487 Errorcode 1740: Period must not be deleted

Shortform:

Period not deleted

Description:

Evaluation periods for the current and the previous years must not be deleted because of affected persons.

17.1.488 Errorcode 1741: Absence is already allowed

Shortform:

Absence allowed

Description:

The application for this absence couldn't be withdrawn because the absence has already been allowed.

17.1.489 Errorcode 1742: Either account balance or modification

Shortform:

balance or modific.

Description:

Either account balance or account modification can be given.

solution:

Fill only one input field.

17.1.490 Errorcode 1785: Person has not logged on

Shortform:

Person not logged on

Description:

Person has not logged on.

Problem:

Person has not logged on.

solution:

Customer-specifically, a person has to log on at first before he/she may carry out an action. Repeat the person's login.

17.1.491 Errorcode 1788: Max.no.of OPs that c.be log.on reached

Shortform:

max. OPs reached

Description:

The maximum number of operations that can be logged on has been reached.

Problem:

The maximum number of running operations has been reached at this machine .

solution:

Customer-specifically, log an operation off at first before a new operation can be logged on.

17.1.492 Errorcode 1796: Data record has alr. been processed

Shortform:

Double data record

Description:

The data record has already been processed successfully.

Problem:

The message was not processed, because the previously sent identically message has been processed.

17.1.493 Errorcode 1800: Time zone is assigned to access profile

Shortform:

Time zone assigned

Description:

The time zone cannot be deleted as it is assigned to access profiles.

17.1.494 Errorcode 1801: Time zone is assigned to opening hours

Shortform:

Time zone assigned

Description:

The time zone cannot be deleted because it is assigned to opening hours.

17.1.495 Errorcode 1802: Time zone is assigned to except.author.

Shortform:

Time zone is assign.

Description:

The time zone cannot be deleted as it is assigned to exceptional authorizations.

17.1.496 Errorcode 1803: No authorization f.responsibility area

Shortform:

No resp.area author.

Description:

You are not authorized for this responsibility area.

17.1.497 Errorcode 1804: Access group is assigned to access

Shortform:

Access grp. assigned

Description:

The access group cannot be deleted as at least one entry of this access group has been assigned.

17.1.498 Errorcode 1805: Access alr.avail. f. reader at terminal

Shortform:

Read.avail.at term.

Description:

An access has already been defined for the reader at this terminal.

solution:

Please assign a free reader number.

17.1.499 Errorcode 1806: Active ID card already available

Shortform:

Active ID card avail

Description:

An active badge is already available.

Problem:

There can be only one badge active with the entered ID

17.1.500 Errorcode 1807: Person has alr.activated normal IDcard

Shortform:

IDcard avail.f.pers.

Description:

Person already uses a normal badge.

Problem:

An active badge has already been assigned to the person

17.1.501 Errorcode 1808: IDcard is active for other pers. in PZE

Shortform:

ID card avail.in PZE

Description:

The badge is used by another person within HYDRA-PZE.

Problem:

The badge is already assigned to another person

solution:

Choose an other badge

17.1.502 Errorcode 1809: Validity date coincides

Shortform:

Coincidence of dates

Description:

There is a date conflict.

Problem:

The specified validity period overlaps with existing validity periods

solution:

Verify the validity period

17.1.503 Errorcode 1810: Reader 1 is reserved for PZE terminal

Shortform:

Reader 1 for PZE res

Description:

An access or a terminal must not be assigned to reader 1 at a PZE terminal.

solution:

Change the operation mode of the terminal to ZZG or use a reader number that is greater than 1 for the access/the terminal.

17.1.504 Errorcode 1811: Access is not available

Shortform:

Access n.available

Description:

Access is not available.

17.1.505 Errorcode 1812: Accesses of security gate at same term.

Shortform:

Sec.gate at a term.

Description:

The entries of a security gate have to be connected to the same terminal.

solution:

Change the configuration accordingly in order that all accesses of a security gate are connected to the same terminal.

17.1.506 Errorcode 1813: Not authorized for all data records

Shortform:

Part. authorized

Description:

You are only authorized for part of the data.

17.1.507 Errorcode 1814: Sync. PNR->KNR



Shortform:

Sync. PNR->KNR

Description:

Error occurred when synchronizing HR master data with ID cards.

Problem:

For certain activities within the HR master data the modified data are transferred to HYDRA-ZKS badges. In this connection, a technical error occurred.

solution:

Please contact MPDV Support.

17.1.508 Errorcode 1815: Reader is already used at this terminal

Shortform:

Reader already used

Description:

The specified reader has already been used for another terminal at this masterterminal.

solution:

Please assign a free reader number.

17.1.509 Errorcode 1850: Resulting order has invalid number

Shortform:

Resulting OP invalid

Description:

Target order has invalid number.

Problem:

The Target order has invalid number.

solution:

Check target order number.

17.1.510 Errorcode 1851: Order header not available

Shortform:

OP header not avail.

Description:

Order header is not available.

Problem:

Operations were attempted to be created, changed or deleted for an order (header), which is not known in HYDRA.

solution:

Please create the order header.

17.1.511 Errorcode 1852: Tool data have not been saved

Shortform:

Tool data n. created

Description:

Tool data have not been saved.

Problem:

-

solution:

-

17.1.512 Errorcode 1854: OP has not been saved

Shortform:

OP data n. created

Description:

OP has not been saved.

17.1.513 Errorcode 1855: Target data record is alr. available

Shortform:

Targ.data alr.avail.

Description:

Target data record is already available.

Problem:

The Target data record is already available.

solution:

-

17.1.514 Errorcode 1859: OP must not be a split master

Shortform:

Split master impos.

Description:

This operation is a so-called "split master" i.e. an operation that has been split into single operations.

problem:

Possible causes are:

1. It was tried to carry out a shop floor data collection posting for a split master. However, the single split operations have to be posted.
2. It was attempted to split a split master again. But this is not allowed.

solution:

In the first case please post the single split operations.

17.1.515 Errorcode 1860: OP must not be an OP of a split OP

Shortform:

No split OP possible

Description:

The OP is an OP of a split OP.

Problem:

Possible causes are:

1. It was tried to delete an operation which is member of a split operation
2. It was tried to add a member of a split operation to a collective operation

solution:

-

17.1.516 Errorcode 1861: OP must not be a collective OP

Shortform:

No collect. OP poss.

Description:

The OP must not be a collective OP.

Problem:

Possible causes are:

1. It was tried to delete an operation which is member of a split operation
2. It was tried to add a member of a split operation to a collective operation
3. It was tried to add a split master to a collective operation

solution:

-

17.1.517 Errorcode 1862: OP must not be an OP of a collective OP

Shortform:

No collect. OP poss.

Description:

The OP is an OP of a collective operation.

Problem:

Possible causes are:

1. It was tried to add a collective operation to a collective operation
2. It was tried to split a collective operation

solution:

-

17.1.518 Errorcode 1864: Collective OP does not exist

Shortform:

Collect. OP n.avail.

Description:

The collective operation does not exist.

Problem:

The collective operation does not exist.

solution:

Please enter an existing collective operation

17.1.519 Errorcode 1865: Stated COP is no collective OP

Shortform:

OP no collective OP

Description:

The OP is not a collective operation.

Problem:

An operation should be added to an collective operation but the collective operation is no collective operation

solution:

Please enter an existing collective operation

17.1.520 Errorcode 1866: Stated OP is no OP of collective OP

Shortform:

OP no OP of COP

Description:

The OP is not an OP of the collective operation.

Problem:

The OP which should be removed from the collective operation is no member of the collective operation

solution:

-

17.1.521 Errorcode 1867: OP must not be split

Shortform:

OP mustn't be split

Description:

The OP must not be split.

Problem:

The OP can not be split because it is configured as not splitable.

solution:

-

17.1.522 Errorcode 1868: Max. number of splits of OP exceeded

Shortform:

No.of splits>Max. OP

Description:

The number of splits has been exceeded.

Problem:

The number of splits has exceeded the maximum number of splits configured in the operation

solution:

-

17.1.523 Errorcode 1869: Max. number of splits exceeded

Shortform:

No.of splits>Maximum

Description:

The maximum number of splits has been exceeded.

Problem:

The maximum number of splits has exceeded the length configured in the HYDRA Setup
e.g. Splittlength = 1 in HYDRA Setup means maximum 9 splits

solution:

-

17.1.524 Errorcode 1870: Inspection plan is already available

Shortform:

IPL alr. available

Description:

The inspection plan already exists.

Problem:

-

solution:

-

17.1.525 Errorcode 1871: Status is not available

Shortform:

Status invalid

Description:

Status is not available.

Problem:

A selection is invalid for inspection plans, inspection plan characteristics or within the characteristics catalog.

solution:

Check all selection boxes for valid values.

17.1.526 Errorcode 1872: Article is not available

Shortform:

Article invalid

Description:

Article is not available.

Problem:

The entered article or article group is invalid.

solution:

Correct the article number or the drawing issue number or enter a new article into the master data.

17.1.527 Errorcode 1873: Customer is not available

Shortform:

Customer invalid

Description:

Customer/supplier is not available.

Problem:

The entered customer or the customer group is invalid.

solution:

Correct the customer number or enter a new customer into the master data.

17.1.528 Errorcode 1874: Inspection plan is already active

Shortform:

IPL alr. active

Description:

Inspection plan is already active.

Problem:

You try to change inspection plan data or data of inspection plan characteristics. The affected inspection plan has already been activated.

solution:

Provided that the inspection plan has not been used by an inspection request already you can make the changes after having deactivated the inspection plan and having canceled its release. In case that an inspection request has already been created on the basis of this inspection plan you can copy the inspection plan and can change this copy. By releasing and activating this copy afterwards the changes become effective for all subsequent inspection requests.

17.1.529 Errorcode 1875: Inspection plan has alr. been released**Shortform:**

IPL already released

Description:

Inspection plan has already been released.

Problem:

You try to change inspection plan data or data of inspection plan characteristics The affected inspection plan has already been released.

solution:

You can make the changes after having canceled the release of the inspection plan.
As an alternative, you can copy the inspection plan and can change this copy.

17.1.530 Errorcode 1876: Inspect.characteristic is not available**Shortform:**

Characteristic inval

Description:

Inspection characteristic is not available.

Problem:

The entered material is invalid.

solution:

Correct the characteristic number or enter a new characteristic into the master data.

17.1.531 Errorcode 1877: Inspection station is not available**Shortform:**

Inspect.stat.invalid

Description:

Inspection station is not available.

Problem:

The entered inspection station or the entered group of inspection stations is invalid.

solution:

Correct the inspection station number or enter an new inspection station into the master data.

17.1.532 Errorcode 1878: Gage is not available

Shortform:

Gage invalid

Description:

Gage is not available.

Problem:

The entered gage or the entered gage group is invalid.

solution:

Correct the gage number or enter a new gage into the master data.

17.1.533 Errorcode 1879: Inspection group is not available

Shortform:

Inspect.group inval.

Description:

Inspection group is not available.

Problem:

The entered inspection group is invalid.

solution:

Correct the gage group or enter a new gage group into the master data.

17.1.534 Errorcode 1880: Test unit is not defined

Shortform:

Test unit invalid

Description:

Test unit is not available.

Problem:

The entered unit is invalid.

solution:

Correct the unit or enter a new unit into the master data.

17.1.535 Errorcode 1881: Tool number is not available

Shortform:

Tool no. invalid

Description:

Tool number is not available.

Problem:

The entered tool is invalid.

solution:

Correct the tool number or enter a new tool into the master data.

17.1.536 Errorcode 1882: Area is not available

Shortform:

Area invalid

Description:

Area is not available.

Problem:

The selected area is invalid.

solution:

Correct the area or enter a new area into the system administration.

17.1.537 Errorcode 1883: Supplier is not available

Shortform:

Supplier invalid

Description:

Supplier is not available.

Problem:

The entered supplier or supplier group is invalid.

solution:

Correct the supplier number or enter a new supplier into the master data.

17.1.538 Errorcode 1884: Canceled inspection order is available

Shortform:

Insp. order canceled

Description:

There is a canceled inspection order.

Problem:

You are trying to finish an inspection requirement that contains canceled inspection orders.

solution:

Please complete the corresponding, canceled inspection orders before finishing the inspection requirement.

As an alternative, HYDRA can be configured via a CAQ system option (1003) in order that it will be possible to complete inspection requirements in spite of canceled inspection orders.

17.1.539 Errorcode 1885: Insp.plan not found for insp.requirement

Shortform:

Insp.plan not found

Description:

Inspection plan has not been found for inspection requirement.

Problem:

This error message only applies to the gage management.

You tried to create a new calibration or maintenance, which no active inspection plan is available for.

solution:

Create or activate an inspection plan in accordance with the specifications of the assigned inspection plan. If a wrong inspection plan is assigned to the calibration/maintenance please correct the assignment.

17.1.540 Errorcode 1886: Serial determination failed

Shortform:

Error serial determ.

Description:

Determination of serial has failed.

Problem:

General error message that appears when an error occurs while generating a unique number.

solution:

Depending on the action different reasons are possible.

Please contact MPDV Support.

17.1.541 Errorcode 1887: Insp. order has already been canceled

Shortform:

Insp. order canceled

Description:

Inspection order has already been canceled.

Problem:

You are trying to finish an inspection order that has been canceled or that has a status which prevents a completion.

solution:

Please re-release the inspection order if its status admits it. Otherwise, (erroneous status or skip lot) a completion is impossible.

17.1.542 Errorcode 1888: Insp.plan not found for insp.requirement

Shortform:

IPL not found

Description:

Inspection plan has not been found for inspection requirement.

Problem:

1. You are trying to create an inspection requirement which no inspection plan is available for.
2. You are trying to edit measured values, measures, errors or similar for an inspection order.

solution:

1. Please arrange for a valid inspection plan for inspection requirement data.
2. The corresponding inspection requirement data or inspection order data have been deleted or have already been archived. Please contact MPDV Support.

17.1.543 Errorcode 1889: IPL is active/insp. requirement found

Shortform:

IPL is active

Description:

Inspection plan is active - inspection requirement found.

Problem:

You are trying to change inspection plan data. The affected inspection plan has already been activated.

solution:

Provided that the inspection plan has not yet been used by an inspection request you can make the changes after having deactivated the inspection plan and having canceled its release. In case that an inspection request has already been created on the basis of this inspection plan you can copy the inspection plan and can change this copy. By releasing and activating this copy afterwards the changes become effective for all subsequent inspection requests.

17.1.544 Errorcode 1890: Gage is already in use

Shortform:

Gage in use

Description:

Gage is already being used

Problem:

You are trying to delete a gage which has already been assigned to characteristics.

solution:

Please delete all data which refer to the gage to be deleted. Alternatively, you can just set the archive flag of the gage. This flag identifies the gage as not in use anymore.

17.1.545 Errorcode 1891: Entry is already in use

Shortform:

Entry is alr. in use

Description:

Entry is already being used.

Problem:

You are trying to delete a master data entry, which has already been assigned to other HYDRA data.

solution:

Please delete all data that refer to the entry to be deleted. Alternatively, you can just set the archive flag of the entry. This flag identifies the entry as not in use any longer.

17.1.546 Errorcode 1892: Insp.character.is not available for IPL

Shortform:

Character. n.avail.

Description:

Inspection characteristic is not available for the inspection plan.

Problem:

You are trying to activate an inspection plan without characteristics.

solution:

Assign characteristics to the inspection plan before activating it.

17.1.547 Errorcode 1893: Inspection plan has not been released

Shortform:

IPL not released

Description:

Inspection plan has not been released.

Problem:

You are trying to activate an inspection plan that has not been released.

solution:

Please release the inspection plan before activating it.

17.1.548 Errorcode 1894: Insp.requirement is already available

Shortform:

Insp.requ.alr.avail.

Description:

Inspection requirement is already available.

Problem:

You are trying to change inspection plan data or data of inspection plan characteristics. The affected inspection plan has already been used for an inspection requirement.

solution:

You can copy the inspection plan and change this copy. By releasing and activating this copy afterwards the changes become effective for all subsequent inspection requirements. It is impossible to delete inspection plans that are already being used.

17.1.549 Errorcode 1895: Inspection requirement is not available

Shortform:

Insp.requir.n.avail.

Description:

Inspection requirement is not available.

Problem:

You are trying to edit measured values, measures, errors or similar for an inspection order.

solution:

The corresponding inspection requirement data have been deleted or have already been archived.
Please contact MPDV Support.

17.1.550 Errorcode 1896: Insp. order has already been canceled**Shortform:**

Insp. order canceled

Description:

Inspection order has already been canceled.

Problem:

You are trying to finish an inspection order that has been canceled or that has a status which prevents a completion.

solution:

Please re-release the inspection order if its status admits it. Otherwise, (erroneous status or skip lot) a completion is impossible.

17.1.551 Errorcode 1897: Insp. order has already been canceled**Shortform:**

Insp. order canceled

Description:

Inspection order has already been canceled.

Problem:

You are trying to finish an inspection order that has been canceled or that has a status which prevents a completion.

solution:

Please re-release the inspection order if its status admits it. Otherwise, (erroneous status or skip lot) a completion is impossible.

17.1.552 Errorcode 1898: Insp. order has already been canceled**Shortform:**

Insp. order canceled

Description:

Inspection order has already been canceled.

Problem:

You are trying to finish an inspection order that has been canceled or that has a status which prevents a completion.

solution:

Please re-release the inspection order if its status admits it. Otherwise, (erroneous status or skip lot) a completion is impossible.

17.1.553 Errorcode 1899: Insp. order has already been canceled

Shortform:

Insp. order canceled

Description:

Inspection order has already been canceled.

Problem:

You are trying to finish an inspection order that has been canceled or that has a status which prevents a completion.

solution:

Please re-release the inspection order if its status admits it. Otherwise, (erroneous status or skip lot) a completion is impossible.

17.1.554 Errorcode 1900: Premium group invalid

Shortform:

Premium group inval.

Description:

Premium group is invalid.

Problem:

The stated premium group does not exist or is invalid at the point in time indicated.

solution:

Choose a valid premium group or correct the master data of the premium groups.

17.1.555 Errorcode 1910: Time tick.from prev.month can't b.postp.

Shortform:

T.ticket prev.month

Description:

Time ticket from previous month cannot be postponed.

Problem:

A time ticket from the previous month cannot be postponed.

solution:

17.1.556 Errorcode 1911: Bonus reason not available

Shortform:

Bonus reas.n.avail.

Description:

There is no bonus reason.

Problem:

The bonus reason is not available.

solution:

Choose a valid bonus reason.

17.1.557 Errorcode 1912: Indicate person or premium group

Shortform:

Ind.PNR or prem.grp.

Description:

State person or premium group.

Problem:

Either a person or a premium group has to be entered.

solution:

17.1.558 Errorcode 1913: Premium area invalid

Shortform:

Premium area inval.

Description:

Premium area is invalid.

Problem:

The premium area is not available or invalid.

solution:

Enter an existing and valid premium area.

17.1.559 Errorcode 1914: Used in HR master data

Shortform:

Used for person

Description:

Used within HR master data.

Problem:

The action cannot be carried out as the data are still being used within the HR master data.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.560 Errorcode 1915: Used in PZE wage type booking

Shortform:

Used in PZE booking

Description:

Used within the HYDRA-PZE wage type booking.

Problem:

The action cannot be carried out as the data are still being used within the HYDRA-PZE wage type bookings.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.561 Errorcode 1916: Used in ADE log message

Shortform:

Used in ADE log mess

Description:

Used within HYDRA-ADE log message.

Problem:

The action cannot be carried out as the data are still being used within the HYDRA-ADE postings.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.562 Errorcode 1917: Used in LLE results

Shortform:

Used in LLE

Description:

Used within HYDRA-LLE results.

Problem:

The action cannot be carried out as the data are still being used in results of the incentive wage determination.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.563 Errorcode 1918: Used in LLE bonuses/deductions

Shortform:

Used for bonus

Description:

Used in HYDRA-LLE bonuses/deductions.

Problem:

The action cannot be carried out as the data are still being used in bonuses/deductions.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.564 Errorcode 1919: Used in premium groups

Shortform:

Used in premium grp.

Description:

Used in premium groups.

Problem:

The action cannot be carried out as the data are still being used in premium groups.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.565 Errorcode 1920: Used in assignment of premium groups

Shortform:

Used i.LEISTGRPZUORD

Description:

Used when assigning premium groups.

Problem:

The action cannot be carried out as the data are still being used for the assignment of premium groups.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.566 Errorcode 1921: Used in assignment of premium area

Shortform:

Used i.LEISTBERZUORD

Description:

Used when assigning premium areas.

Problem:

The action cannot be carried out as the data are still being used for the assignment of premium areas.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.567 Errorcode 1923: Not authorized for sequence/condition

Shortform:

Not authorized

Description:

Not authorized for this sequence or condition.

Problem:

The user is not authorized to use this sequence or condition.

solution:

Use a valid sequence or condition. See documentation or online help.

17.1.568 Errorcode 1950: N.poss.to change OP logon t.staff logon

Shortform:

A to B rec.n.allowed

Description:

It is impossible to change an order posting into a personnel posting.

Problem:

It is impossible to change an order posting (U/E/H record) into a personnel posting (B record).

solution:

Create the new booking via copying the order posting

17.1.569 Errorcode 1951: N.poss.to change staff logon to OP logon

Shortform:

B to A rec.n.allowed

Description:

It is impossible to change a personnel posting into an order posting

Problem:

It is impossible to change a personnel posting (B record) into an order posting (U/E/H record)

solution:

Create the new booking via copying the personal posting

17.1.570 Errorcode 1952: End date less than start date

Shortform:

End date invalid

Description:

Logoff time is less than logon time.

Problem:

The Logoff time defined in the booking is less than logon time in the booking

solution:

Plaese change the booking so that the logon time ist less or equal the logoff time

17.1.571 Errorcode 1954: N.poss. to change cancelation message

Shortform:

Cancel.n.be.changed

Description:

It is impossible to change cancelation message.

Problem:

It is impossible to change cancelation message.

This message is only used for cancelation in the PPS System

solution:

-

17.1.572 Errorcode 1955: Not possible to change original message

Shortform:

Original n.alterable

Description:

It is impossible to change original message.

Problem:

It is impossible to change original message.

This message is only used to see the original value send from the terminal

solution:

-

17.1.573 Errorcode 1956: Par.conf.n.alterable with curr.run.scen.

Shortform:

Cur.part.conf.n.alt.

Description:

Partial confirmation with currently running scenario cannot be changed.

Problem:

Partial confirmation with currently running scenario cannot be changed, because changing the partial confirmation changes also the operation posting and this one is not available at that moment

solution:

Wait till the operation is interrupted before changing the partial confirmation

17.1.574 Errorcode 1957: Record type not alterable

Shortform:

Record type n.alter.

Description:

Record type cannot be changed.

Problem:

Record type cannot be changed.

solution:

Create the new booking via copying and then delete the no more used booking

17.1.575 Errorcode 1958: Data for OP,MNR and period alr. exists

Shortform:

Data OP alr.exists

Description:

A concurrent log record already exists for OP and machine for the selected period.

Problem:

A concurrent log record already exists for OP and machine for the selected period.

solution:

Please check the bookings for machine/op and change the timestamps,
so no more overlapping bookings are existing

17.1.576 Errorcode 1970: OP is no split OP

Shortform:

OP is no split OP

Description:

The OP is not a split OP.

Problem:

Possible causes are:

1. op which should be deleted is no split master
2. op which should be deleted is no operation of a split

solution:

Delete split or split master to delete the split itself

17.1.577 Errorcode 1971: Min. no. of splits not reached

Shortform:

No.of splits<Minimum

Description:

The minimum number of splits has not been reached.

Problem:

To create a split the split number must be minimum 2

solution:

Please insert a split number > 1

17.1.578 Errorcode 1984: Order has been technically completed**Shortform:**

Order techn.complet.

Description:

It is impossible to reactivate technically completed orders.

17.1.579 Errorcode 1985: Proport.targ. qty./partitioning incorr.**Shortform:**

Prop.targ.qty/part.

Description:

The target quantity/partitioning relation is incorrect.

17.1.580 Errorcode 1986: Operation cannot be deleted**Shortform:**

OP not deletable

Description:

Operation cannot be deleted.

Problem:

The order header or the operation cannot be deleted. This is prevented by the current status of the order or the operation.

In HYDRA Standard active operations cannot be deleted.

solution:**17.1.581 Errorcode 1987: Operation cannot be changed****Shortform:**

OP not alterable

Description:

The operation cannot be changed.

Problem:

The order header or the operation cannot be changed. This is prevented by the current status of the order or the operation.

In HYDRA standard active/finished operations cannot be changed.

solution:

17.1.582 Errorcode 1989: Max.number of orders exceeded for prio

Shortform:

No. > max. no. prio.

Description:

Maximum number of orders has been exceeded for prio.

Problem:

Maximum number of orders has been exceeded for prio if using the functionality priority check

solution:

Please change the operationgroup configuration

17.1.583 Errorcode 1990: Order header cannot be deleted

Shortform:

AUNR not deletable

Description:

Order header cannot be deleted.

Problem:

Order can not be deleted because: 1. minimum one op of the order can not be deleted concerning the operation status configuration 2. one op of the order is running 3. orderstatus is configured as not deletable concerning in operation status configuration

solution:

1.Please change the operation status configuration so that all operation status (except L) are deletable 2.Interrupt the running operation 3.Please change the operation status configuration of the order to deletable = J

17.1.584 Errorcode 1991: Order header cannot be changed

Shortform:

AUNR not alterable

Description:

Order header cannot be changed.

17.1.585 Errorcode 1993: Error in formula calculation for times

Shortform:

Error formula calc.

Description:

Error in formula calculation for times.

Problem:

While calculating the values by formulas an error is occurred

solution:

Verify the input values and the formulas used

17.1.586 Errorcode 1994: OP not subj.to comparison of targ.qty.

Shortform:

No comp.of targ.qty.

Description:

Operation is not subject to comparison of target quantities

Problem:

Operation is not subject to comparison of target quantities

solution:

Configure the operation to comparison of target quantities

17.1.587 Errorcode 1995: Operation has already been scheduled

Shortform:

OP alr. scheduled

Description:

Operation has already been scheduled.

17.1.588 Errorcode 1996: Batch job is already running

Shortform:

Batch already runs

Description:

Batch job is already running.

Problem:

Batch job is already running.

solution:

Please wait till batchob is finished

17.1.589 Errorcode 1997: Order type is not equal**Shortform:**

Order type n. equal

Description:

Order type is not the same.

Problem:

Parallel Logon of operations with different order types is not allowed.

solution:

-

17.1.590 Errorcode 1998: Order model not available**Shortform:**

Order model n.avail.

Description:

There is no order model.

Problem:

Source order not existing when copying an order

solution:

Please select an existing order as source order

17.1.591 Errorcode 2000: An U/E record alr. exists in period**Shortform:**

U/E-rec.alr.exists

Description:

An U/E record already exists within the period.

17.1.592 Errorcode 2001: Wrong sequence of OP logon**Shortform:**

Wrong sequence

Description:

Wrong sequence of OP posting.

Problem:

The specified posting sequence has not been observed when logging the OP on to the machine.

solution:

Please check the statuses of the preceding OPs. There must not exist a prepared predecessor OP within this order.

17.1.593 Errorcode 2002: Wrong scheduling sequence at machine

Shortform:

Wrong sched.sequence

Description:

Wrong planning sequence at the machine.

Problem:

The specified posting sequence with respect to the planned start date has not been observed when logging the OP on to the machine.

solution:

Checking the status and start date of the preceding OPs at the machine or in the machine group. When the compulsory sequence is activated the current OP can only be logged on provided that there is no OP within the pool of orders that has the status prepared and whose planned date lies prior to the date of the OP to be logged on.

The inspection is configured based on machines via the compulsory sequence of parameters (sequence of the specification list when logging OPs on).

17.1.594 Errorcode 2003: Not possible to log OP on to group

Shortform:

Cannot be logged on

Description:

It is impossible to log the OP on to the group.

Problem:

When logging the OP on to the machine the default group of the machine has not been observed.

solution:

The inspection is configured on the basis of machines via the group production parameter (customer-specific). If this flag is set only the same (or no) OP may be logged on to the machines of this group.

As this is a configuration specific to groups a modification automatically affects all other machines of this group.

17.1.595 Errorcode 2004: Status of preceding OP not allowed

Shortform:

Error preced. status

Description:

Status of the preceding OP is not allowed.

Problem:

When logging the OP on to the machine the default status of the predecessor OP is not observed.

solution:

Please check the status of the preceding OP. The configuration based on the OP defines which status the preceding OP must have in order that a logon is allowed. In this case the preceding OP is determined due to the start sequence.

17.1.596 Errorcode 2007: Production variant not found for OP

Shortform:

Prod.variant n. found

Description:

Production variant belonging to the OP has not been found.

Problem:

Production variant belonging to the OP has not been found.

solution:

Please check the production variant belonging to the OP.

17.1.597 Errorcode 2011: Reserved batch has not been logged on

Shortform:

Reserv. still open

Description:

Reserved batches have not been logged on.

Problem:

Reserved batches have not been logged on for the OP.

solution:

Please check status of reserved batches.

17.1.598 Errorcode 2012: Batch has been reserved f.another order

Shortform:

Batch reserved

Description:

Batch has been reserved for another order.

Problem:

Batch could not be locked on, because it has been reserved for another order.

solution:

-

17.1.599 Errorcode 2013: Quantity is missing for an output batch

Shortform:

O.batchw/o qty.found

Description:

Quantity is missing for an output batch.

Problem:

Output batches without quantity are found for the OP.

solution:

-

17.1.600 Errorcode 2020: Weight of roll has alr. been recorded

Shortform:

Roll alr. weighed

Description:

The weight of the roll has already been recorded.

Problem:

The batch has already been weighed.

solution:

Please check status of the batch.

17.1.601 Errorcode 2021: Roll alr. assigned to pallet

■■■■■■■■■■

Shortform:

Roll alr. assigned

Description:

Roll has already been assigned to a pallet.

Problem:

The batch has already been assigned to a pallet.

solution:

-

17.1.602 Errorcode 2022: Usage decision alr. available f.order**Shortform:**

USD alr. made

Description:

Usage decision is already available for the order.

Problem:

Usage decision has already been made for order header.

solution:

-

17.1.603 Errorcode 2023: Usage decision alr. available f. batch**Shortform:**

USD already made

Description:

Usage decision is already available for the batch.

Problem:

The Usage decision has already been made for batch.

solution:

-

17.1.604 Errorcode 2024: Usage decision is not valid

Shortform:

USD is invalid

Description:

Usage decision is invalid.

Problem:

The Usage decision is not valid.

solution:

-

17.1.605 Errorcode 2025: Batch is still active

Shortform:

Batch still runs

Description:

Batch is still active.

Problem:

Batch is still in status running.

solution:

Please check status of the batch.

17.1.606 Errorcode 2026: Operation is still running

Shortform:

OP still runs

Description:

Operation is still running.

Problem:

Changing of running order is not possible.

solution:

-

17.1.607 Errorcode 2027: Processing mode is invalid

Shortform:

Invalid mode

Description:

Processing mode is invalid.

17.1.608 Errorcode 2028: Roll has alr. been defined as scrap**Shortform:**

Roll already scrap

Description:

Roll has already been posted as scrap.

Problem:

Batch has already been posted as WASTE.

solution:

-

17.1.609 Errorcode 2029: A quantity blancing must be done**Shortform:**

Do quantity blancing

Description:

Quantity balancing has to be performed.

Problem:

Quantity balancing has to be performed.

solution:

-

17.1.610 Errorcode 2030: Carrier material has alr.been logged on**Shortform:**

C.mat.alr.logged on

Description:

Carrier material has already been logged on.

Problem:

Carrier material already logged on as input batch at machine.

solution:

-

17.1.611 Errorcode 2031: Bill of material item for mat. invalid

Shortform:

Bill o.mat.item inv.

Description:

Bill of material item belonging to material is invalid.

Problem:

BOM item is invalid for changing input material.

solution:

-

17.1.612 Errorcode 2032: Unplanned material runs on machine

Shortform:

Unplan. mat. active

Description:

Unplanned material is running at the machine.

Problem:

Unplanned material must not run during status change.

solution:

Please check configuration of machine status.

17.1.613 Errorcode 2034: Batch has alr.been reported as finished

Shortform:

Batch is processed

Description:

Batch has already been registered as prcessed.

17.1.614 Errorcode 2036: Batch has no quantity

Shortform:

Batch without qty.

Description:

Batch has not got a quantity.

Problem:

Batches without quantity was found.

solution:

-

17.1.615 Errorcode 2039: Machine is not available

Shortform:

Mach.not available

Description:

Machine is not available.

17.1.616 Errorcode 2041: Batch has already been blocked

Shortform:

Batch is blocked

Description:

Batch has already been blocked.

Problem:

Batches have already been blocked.

solution:

-

17.1.617 Errorcode 2043: Total cutting width is too large

Shortform:

Cutting width inval.

Description:

Total cutting width is too large.

17.1.618 Errorcode 2046: Batch has alr.been logged on i.adv.f.OP

Shortform:

Adv.logon alr.avail.

Description:

Batch has already been logged on in advance for OP.

Problem:

Advance logon already available for batch.

solution:

-

17.1.619 Errorcode 2047: Batch has not been logged on i.adv.f.OP

Shortform:

Adv.logon n.avail.

Description:

Batch has not been logged on in advance for OP.

Problem:

There is no advance logon for the batch.

solution:

-

17.1.620 Errorcode 2048: Input batch found without residual qty.

Shortform:

I.batch w/o res.qty.

Description:

Input batch without remaining quantity found.

Problem:

Input batch with remaining quantity ≤ 0 found.

solution:

Please ckeck status of the input batches on the OP.

17.1.621 Errorcode 2051: Scrap reason is not allowed

Shortform:

Scrap reas.n.allowed

Description:

Scrap reason is not allowed.

Problem:

Scrap reason must not be posted.

17.1.622 Errorcode 2069: Data record has not been changed

Shortform:

Data rec.n.changed

Description:

Data record has not been changed.

17.1.623 Errorcode 2400: Please state valid characteristic no.

Shortform:

Invalid charact.no.

Description:

Invalid characteristic number.

Problem:

You have entered an invalid characteristic number.

solution:

Check your input or configure the characteristic before you use it

17.1.624 Errorcode 2401: Charact.assigned to at least one mach.

Shortform:

Ch.assign.meas.chan.

Description:

Characteristic is at least assigned to one machine.

Problem:

The characteristic can not be deleted because the characteristic is assigned at least to one machine.

solution:

Delete all the channels to which this characteristic is assigned before you delete the characteristic

17.1.625 Errorcode 2402: Characteristic used in at least on IPL

Shortform:

Ch. assigned to IPL

Description:

Characteristic is used at least in one inspection plan.

Problem:

The characteristic can not be deleted because the characteristic is used at least in inspection plan

17.1.626 Errorcode 2403: Characteristic is not available

Shortform:

Charac.n.available

Description:

Characteristic is not available.

Problem:

Characteristic for the input characteristic number is not available

solution:

Select a valid characteristic number

17.1.627 Errorcode 2404: Collect.is curr.active at meas.channel

Shortform:

Coll.active meas.ch.

Description:

Collection is currently active at measuring channel.

Problem:

The measuring channel can not be deleted at the moment, because the collection is active at this channel

solution:

Log off the operations at this machine (at the terminal), before you delete the measuring channel.

17.1.628 Errorcode 2405: Max.no. of meas.chan.per mach.reached

Shortform:

Max.16 meas.chan.def

Description:

Maximum number of measuring channels has been reached per machine.

17.1.629 Errorcode 2406: Coll.w.assignm.active at 1 mach.at least

Shortform:

Coll.w.assign.active

Description:

Collection including assignment is active at one machine at least.

Problem:

The inspection plan, which is assigned in this reference, is active at least at one machine.

solution:

Log off the operations at this machine (at the terminal), which use this inspection plan, before you delete the assignment.

17.1.630 Errorcode 2407: Select machine, article or tool no.!

Shortform:

Indicate MNR/ATK/WNR

Description:

Choose machine, article or tool number!

Problem:

You have not chosen any keys for the assignment of the inspection plan.

solution:

You will need to assign at least one key (machine, article and / or tool number).

17.1.631 Errorcode 2408: Please indicate valid inspect. plan no.

Shortform:

Invalid insp. plan

Description:

Please enter valid inspection plan number.

Problem:

An inspection plan with the specified ID does not exist.

solution:

Enter a valid ID for the inspection plan

17.1.632 Errorcode 2409: Please indicate valid insp.plan version

Shortform:

Invalid IPL version!

Description:

Please enter valid inspection plan version.

Problem:

The inspection plan does not exist with the given version

solution:

Enter a valid inspection plan version.

17.1.633 Errorcode 2410: N.possible,insp.plan has been productive

Shortform:

Insp.plan productive

Description:

Impossible, inspection plan has been productive.

Problem:

Deleting or modifying a inspection plan, which was already used to record measurements, is not possible.

solution:

Disable the inspection, if the inspection plan should no longer be used or insert a new version of the inspection plan, if you want to change it

17.1.634 Errorcode 2411: Invalid reference has been indicated

Shortform:

Invalid reference

Description:

Invalid reference has been stated.

Problem:

Data record has been deleted. Please request the list anew.

17.1.635 Errorcode 2412: Please state valid process intervent.no.

Shortform:

Invalid PE no.

Description:

Invalid action or machine number. Please enter valid action number or machine number.

Problem:

You have an invalid action number and / or machine number.

solution:

Check your input.

17.1.636 Errorcode 2413: Process intervent.no.hasn't been stated

Shortform:

Proc.interv.missing

Description:

Process action number has not been entered.

Problem:

You have entered an invalid action number

solution:

Check your input.

17.1.637 Errorcode 2415: Channel type not supported

Shortform:

C.type unsupported

Description:

Channel type is not supported

Problem:

You have entered an invalid channel type

solution:

Check your input.

17.1.638 Errorcode 2416: PDV Event not set

Shortform:

PDV Event not set

Description:

Assigned PDV Event is not available

Problem:

Assigned PDV Event is not available

solution:

Assign a configured PDV Event

17.1.639 Errorcode 2417: Wrong channel data for anonym pparam

Shortform:

Wrong channel data

Description:

Anonym processparameters do not support this chan. data

Problem:

Anonym processparameters dont support any specifications so only measure values are valid channel data entries

solution:

Please change channel data to MW

17.1.640 Errorcode 2418: Invalid channel number

Shortform:

Invalid chan. number

Description:

Invalid channel number assigned

Problem:

Channel number must be between 1 and 9999

solution:

Please insert a channel number between 1 and 9999

17.1.641 Errorcode 2419: Invalid cycle time

Shortform:

Invalid cycle time

Description:

Invalid cycle time

Problem:

Invalid cycle time entered

solution:

Please insert a valid cycle number

17.1.642 Errorcode 2420: Invalid channel orientation

Shortform:

Invalid chan. orien.

Description:

Invalid channel orientation

Problem:

Invalid channel orientation for assigned channel data

solution:

Please insert a valid channel orientation (Input / Output) for assigned channel data

17.1.643 Errorcode 2421: Alert not supported

Shortform:

Alert not supported

Description:

Alert not supported for this channel data

Problem:

Alert not supported for this channel data. Only channel data for limits support alert channels

solution:

Please change channel data or remove alert

17.1.644 Errorcode 2422: Machine already assigned to terminal

Shortform:

Machine ardy. assig.

Description:

Machine already assigned to another terminal

Problem:

Machine already assigned to another terminal using logical channels.

solution:

Please assign machine of this logical channel to same terminal

17.1.645 Errorcode 2423: MachNo-TermNo-Chan-Combi already assign

Shortform:

Channel ardy. assign.

Description:

This combination of machine, terminal and channel already assigned

Problem:

This combination of machine, terminal and channel already assigned. The combination must be unique.

solution:

Please assign an other free logical channel.

17.1.646 Errorcode 2424: MachNo-TermNo-FKey-Combi already assign

Shortform:

FKey ardy. assign.

Description:

This combination of machine, terminal and fkey already assigned

Problem:

This combination of machine, terminal and fkey already assigned. The combination must be unique.

solution:

Please assign an other free fkey.

17.1.647 Errorcode 2600: Logical system is not available!

Shortform:

Log.system invalid

Description:

Logical system is not available.

Problem:

Logical system is not available.

solution:

Define the Logical system first.

17.1.648 Errorcode 2601: Logical system already exists!

Shortform:

Log.sys.alr.avail.

Description:

Logical system is already available.

Problem:

Logical system is already available.

solution:

Use another name for the new logical system.

17.1.649 Errorcode 2602: Configuration n.available f.log.system!

Shortform:

LS config. invalid

Description:

The configuration belonging to the logical system is not available.

Problem:

The configuration belonging to the logical system is not available.

solution:

Define a valid configuration for the logical system.

17.1.650 Errorcode 2603: Config. alr. exists for logical system.!

Shortform:

LS config.alr.avail.

Description:

Configuration belonging to the logical system is already available.

Problem:

Configuration belonging to the logical system is already available.

solution:

Define a configuration for another logical system.

17.1.651 Errorcode 2604: Distribution model is not available!

Shortform:

Distr.model invalid

Description:

Distribution model is not available.

Problem:

Distribution model is not available.

solution:

Define a valid Distribution model.

17.1.652 Errorcode 2605: Distribution model already exists!

Shortform:

Dist.model alr.avail

Description:

Distribution model is already available.

Problem:

Distribution model is already available.

solution:

Choose another Name for the new entry.

17.1.653 Errorcode 2606: Wrong MESTYP

Shortform:

Wrong MESTYP

Description:

Wrong MESTYP

Problem:

The message type is not be supported.

solution:

Choose a supported message type.

17.1.654 Errorcode 2607: IDoc not found

Shortform:

IDoc not found

Description:

IDoc not found

17.1.655 Errorcode 2608: IDoc status not for processing

Shortform:

Do not process IDoc

Description:

IDoc status is not to be processed.

17.1.656 Errorcode 2609: No processible data found

Shortform:

No processible data

Description:

No processible data found.

17.1.657 Errorcode 2610: Wrong segment type

Shortform:

Wrong segment type

Description:

Wrong segment type.

17.1.658 Errorcode 2611: Segment at wrong position in IDoc

Shortform:

Wrong segment pos.

Description:

Segment is at wrong position within IDoc.

17.1.659 Errorcode 2612: Error in initialization

Shortform:

Init. error

Description:

Error in initialization.

17.1.660 Errorcode 2613: Order cannot be processed

Shortform:

Wrong order status

Description:

Order cannot be processed.

17.1.661 Errorcode 2614: Error when connecting to sap system**Shortform:**

No Connection to SAP

Description:

A connection to the SAP system cannot be established.

17.1.662 Errorcode 2615: Incorrect reply from the SAP system**Shortform:**

Incorrect reply

Description:

The SAP system reports an invalid response

17.1.663 Errorcode 2700: There are dependencies (machine table)**Shortform:**

Mach.depend.exists

Description:

There are still dependencies (table of machines)

Problem:

It is not possible to delete the dataset, because of the dependencies of the machine.

solution:

Please unlock the maschine dependencies.

17.1.664 Errorcode 2701: There are dependencies(hierarc.assignm.)**Shortform:**

Hier.assignm.exists

Description:

There are still dependencies (hierarchical assignments)!

Problem:

It is not possible to delete the dataset, because of the hierarchical assignments.

solution:

Please unlock the hierarchical assignments.

17.1.665 Errorcode 2702: There are dependencies(transport table)

Shortform:

Transp.depend.exists

Description:

There are still dependencies (transport table)

Problem:

It is not possible to delete the dataset, because of the transport assignments.

solution:

Please unlock the transport assignments.

17.1.666 Errorcode 2703: Hier.ID bigger than select.hier.buffer

Shortform:

Hierar.ID bigger

Description:

The hierarchical ID is larger than that of the selected hierarchical buffer.

Problem:

The hierarchical ID is larger than that of the selected hierarchical buffer.

solution:

Please choose another material buffer.

17.1.667 Errorcode 2704: Hier.ID smaller than hier.buffer

Shortform:

Hierar.ID smaller

Description:

The hierarchical ID is smaller than at least one of the assigned buffers.

Problem:

The hierarchical ID is smaller than at least one of the assigned buffers.

solution:

Please choose another material buffer.

17.1.668 Errorcode 2705: Invalid hierarchy

Shortform:

Assignm.smaller hier

Description:

Selected destination is not available.

Problem:

Selected destination is not available.

solution:

Please choose an available destination.

17.1.669 Errorcode 2707: Reference tab

MAT_MATTYP/LOS_BESTAND

Shortform:

Refer.tab MATMATYP

Description:

There is a reference to the table MAT_MATTYP and/or LOS_BESTAND

Problem:

There is a reference to the table MAT_MATTYP and/or LOS_BESTAND.

solution:

Please choose another MAT_MATTYP.

17.1.670 Errorcode 2708: String length not equal

C_GEN_FIX/C_FIX

Shortform:

Differ. string len.

Description:

Fix string length of the automatical generation of batch numbers is not identical (column C_GEN_FIX and C_FIX)

Problem:

Fix string length of the automatical generation of batch numbers is not identical (column C_GEN_FIX und C_FIX)

solution:

Please correct the string length.of the automatical generation of batch numbers.

17.1.671 Errorcode 2709: Material type does not exist

Shortform:

MATTYP doesn't exist

Description:

Material type does not exist.

Problem:

Material type does not exist.

solution:

Please declare an correct material type.

17.1.672 Errorcode 2710: Mat.buffers of type F may be assigned

Shortform:

Assign. MATPUT Typ=F

Description:

Only material buffers of the type F may be assigned.

Problem:

Only material buffers of the type F may be assigned.

solution:

Please use an material buffer of type F.

17.1.673 Errorcode 2712: Transp.unit occupied by current batch

Shortform:

TPU = occ.curr.batch

Description:

Transport unit is occupied by an active batch.

Problem:

Transport unit is occupied by an active batch.

solution:

Please choose another transport unit.

17.1.674 Errorcode 2715: Wrong status

Shortform:

Wrong status

Description:

Wrong status

Problem:

There are inconsistencies with date of expiry/availability date .

solution:

Please correct the inconsistencies.

17.1.675 Errorcode 2716: Filling out the table(qty.,unit,status)

Shortform:

Filling the table

Description:

Error when filling the table LOS_BESTAND

Problem:

Invalid status of the lot when updating the table LOS_BESTAND.

solution:

Please insert a correct status of the lot.

17.1.676 Errorcode 2717: Transport unit not available

Shortform:

TPU not available

Description:

Transport unit is not available.

Problem:

Transport unit is not available.

solution:

Please insert a correct transport unit.

17.1.677 Errorcode 2718: Material buffer not available

Shortform:

Mat.buf.n. available

Description:

Material buffer is not available.

Problem:

Material buffer is not available.

solution:

Please insert a correct material buffer.

17.1.678 Errorcode 2719: Semi-finished material type n. available

Shortform:

Semi-f.type n.avail.

Description:

Semi-finished material type not available.

Problem:

Semi-finished material type not available.

solution:

Please insert a correct Semi-finished material type.

17.1.679 Errorcode 2720: Material buffer not connected with PL

Shortform:

Mat.buf.n.connected

Description:

Deletion impossible, as material buffer is not explicitly connected to the production step.

17.1.680 Errorcode 2721: Assignment not possible (recursion)

Shortform:

Assignment n.poss.

Description:

Assignment impossible (recursion).

17.1.681 Errorcode 2722: Destination is still being used

Shortform:

ZLO is used

Description:

Destination is still being used.

17.1.682 Errorcode 2723: Max. field length exceeded

Shortform:

Field length too big

Description:

Maximum field length exceeded.

Problem:

The maximum field length has been exceeded.

solution:

Choose a valid field length. The field may be at most <MAXLEN> characters long.

17.1.683 Errorcode 2724: Max.no.of decimal places exceeded

Shortform:

Decim.places too big

Description:

The maximum number of decimal places exceeded.

Problem:

The maximum number of decimal places has been exceeded.

solution:

Choose a valid number of decimal places. The field can have at most <MAXNKS> decimal places.

17.1.684 Errorcode 2725: Invalid indexing. Value range!

Shortform:

Invalid index

Description:

Invalid indexing. Consider value range!

Problem:

You have chosen an invalid index. Please consider the value range.

solution:

Invalid indexing. Value range between <MINIDX> and <MAXIDX>.

17.1.685 Errorcode 2726: Invalid input type

Shortform:

Invalid input type

Description:

Invalid input type.

Problem:

You have chosen an invalid input type.

solution:

Please choose a valid input type.

17.1.686 Errorcode 2727: Display position has alr. been defined

Shortform:

Display pos.avail.

Description:

The display position has already been defined for this semi finished article!

Problem:

The display position has already been defined for this semi finished article!

solution:

Enter another display position.

17.1.687 Errorcode 2728: Print position has alr. been defined

Shortform:

Print pos. available

Description:

The print position has already been defined for this semi-finished article!

Problem:

The print position has already been defined for this semi-finished article!

solution:

Enter another print position.

17.1.688 Errorcode 2729: Table does not exist

Shortform:

Table doesn't exist

Description:

Table does not exist!

17.1.689 Errorcode 2730: There are still dependencies!

Shortform:

Dependencies avail.

Description:

There are still dependencies (LOS_BESTAND-Tabelle)!

Problem:

There are still dependencies (LOS_BESTAND-Tabelle)

solution:

Please dissolve the dependencies.

17.1.690 Errorcode 2733: Storage location is still being used

Shortform:

Storage loc. in use

Description:

Destination is still being used.

Problem:

Destination is still being used.

solution:

Delete the dependencies first (i.e. at the ressource).

17.1.691 Errorcode 2734: The reason text is still being used!

Shortform:

Text is used

Description:

The text is still being used in a configuration!

17.1.692 Errorcode 2801: Order split not possible.

Shortform:

Order split n.poss.

Description:

Order split is impossible. The number of splits exceeds the maximum number of 99 splits or the quantity of the OP(s) exceeds the max. possible quantity.

17.1.693 Errorcode 2802: Order must not be a split order

Shortform:

No split order poss.

Description:

This order is split and thus cannot be deleted. Please cancel the split at first.

17.1.694 Errorcode 2803: Order mustn't be order of a split order

Shortform:

No split order poss.

Description:

The order is a split order and thus cannot be deleted. Please cancel the split at first.

17.1.695 Errorcode 2804: Only allowed for split order

Shortform:

Only split ord.poss.

Description:

Canceling a split is only possible in case of an order that is split or a split order.

17.1.696 Errorcode 2805: Quick order alphanumeric after 1st digit

Shortform:

Quick order alphanumeric

Description:

The creation of quick orders with alphanumeric characters after the 1st digit is not allowed.

Problem:

The creation of quick orders with alphanumeric characters after the 1st digit is not allowed.

solution:

Change the order number of the quick order.

17.1.697 Errorcode 2807: Status n.alterable as sequence inactive

Shortform:

Status n. alterable

Description:

Status cannot be changed as sequence is inactive.

Problem:

Status of an operation can not be changed if operation is member of an inactive sequence

solution:

-

17.1.698 Errorcode 2808: Start date is after end date

Shortform:

Start after end

Description:

Start date lies after end date.

Problem:

Start date lies after end date.

solution:

Please set a correct start and end date

17.1.699 Errorcode 2809: Order type n.alterable as order started

Shortform:

Order type n.alter.

Description:

Order type cannot be changed as order has been started.

Problem:

Order type cannot be changed as order has been started.

solution:

-

17.1.700 Errorcode 2810: Value batch management is different

Shortform:

Value batch man. dif

Description:

Only operations having the same value within the batch management requirement field may be grouped to collective operations, i.e. a collective operations may only include operations that are subject to batch management requirement OR operations that are not.

Problem:

Only operations having the same value within the batch management requirement field may be grouped to collective operations, i.e. a collective operations may only include operations that are subject to batch management requirement OR operations that are not.

solution:

-

17.1.701 Errorcode 2811: Order not allowed for collective OP

Shortform:

OP not allow. col.OP

Description:

OP cannot be added to collective OP.

Problem:

OP cannot be added to collective OP because it is a child operation

solution:

-

17.1.702 Errorcode 2812: Order already exists in archive

Shortform:

OP already archived

Description:

Order is already available within the archive.

Problem:

It was tried to create an order which is already available within the archive. Orders which are once in the archive can not be created anymore in the actual dataset

solution:

-

17.1.703 Errorcode 2813: Activity Code key not defined

Shortform:

Activity Code n.avail

Description:

The stated activity code key does not exist in HYDRA.

Problem:

The stated activity code key does not exist in HYDRA.

solution:

Please configure activity code key in HYDRA.

17.1.704 Errorcode 2817: Order Type not available

Shortform:

Order Type not avail.

Description:

Order type not available.

Problem:

Order type not available.

solution:

Please enter a valid order type

17.1.705 Errorcode 2818: Categorie order type is not equal

Shortform:

Order cat. n. equal

Description:

Category of order type is not the same.

Problem:

When copying an order the category of the order type of source and target order must be the same

solution:

-

17.1.706 Errorcode 2901: Is used as source in inspection plan

Shortform:

Is IPL source

Description:

Is used as source within inspection plan.

Problem:

You are trying to delete a catalog characteristic for which a reference (details or specifications) exists within the inspection planning.

solution:

If possible, please change the reference data within the inspection plan characteristics in such a way that the inspection plan is used as source for the detail and specification data.

If this is impossible the characteristic must not be deleted.

17.1.707 Errorcode 2902: Inspection order has not been found

Shortform:

Insp. order n.avail.

Description:

Inspection order has not been found.

Problem:

You are trying to create an inspection requirement by logging an order onto the terminal or you are trying to create a calibration or maintenance order.

solution:

Please make sure that an active inspection plan is available for the inspection requirement or the calibration or maintenance plan.

17.1.708 Errorcode 2903: Indicated company not available

Shortform:

Company n. available

Description:

Company has not been found.

Problem:

The entered company number or company group is invalid.

solution:

Correct the company number or enter a new company in the master data.

17.1.709 Errorcode 2904: Is used in specification list

Shortform:

Used in spec.list

Description:

Is being used within the specification list.

Problem:

You are trying to delete a catalog characteristic which entries in the specification list exist for.

solution:

If possible, please delete the entries in the specification list having a reference to this characteristic number.

If this is impossible the characteristic must not be deleted.

17.1.710 Errorcode 2905: Mandatory insp.has not been carried out

Shortform:

Mand.insp.n.executed

Description:

Mandatory inspection has not been carried out.

Problem:

You are trying to finish an inspection order having a characteristic that is identified by "mandatory inspection". Measured values have not been recorded for this characteristic.

solution:

Please collect measured values for all characteristics that are labeled by "mandatory inspection".

17.1.711 Errorcode 2906: Calculat. character., no entry possible

Shortform:

Calculated character

Description:

Calculated characteristic, input impossible

Problem:

You are trying to enter, change or delete a measured value for a calculated characteristic.

solution:

Single values of calculated characteristics can only be changed by altering characteristic values, which are taken into account in the computation formula.

17.1.712 Errorcode 2907: Measured value is invalid(not plausible)

Shortform:

Meas.value invalid

Description:

Measured value is invalid as it is not plausible.

Problem:

You are trying to save a measured value that is beyond the plausibility limits.

solution:

If plausibility limits are defined within the inspection planning the corresponding single values have to be within these limits. Please correct the measured value accordingly.

17.1.713 Errorcode 2908: No Q-character. found for preced.roll**Shortform:**

No preceding roll

Description:

No Q characteristic has been found for preceding roll.

Problem:

When completing an inspection order it is searched for a Q characteristic of the preceding roll. However, a corresponding characteristic has not been found for this one.

solution:

Please respond to this message according to the specified options.

17.1.714 Errorcode 2909: Preceding order hasn't been completed**Shortform:**

Order n.completed

Description:

The preceding order has not been completed.

Problem:

When completing an inspection order it is searched for Q data of the preceding roll. The order of this preceding roll has indeed been found but it is not completed.

solution:

Respond to this message according to the specified options.

17.1.715 Errorcode 2910: Measured values handed down are faulty**Shortform:**

Meas.values faulty

Description:

Inherited measured values are faulty.

Problem:

Measured values from the preceding roll are attempted to be adopted for an unchecked characteristic. However, this roll disposes of characteristics that would lead to a violation of limit values within the current characteristic.

solution:

Please respond to this message according to the specified options.

17.1.716 Errorcode 2911: The distributor doesn't contain entries

Shortform:

Distributor empty

Description:

The distributor does not contain entries.

Problem:

A measure is attempted to be generated for a distributor. This distributor does not contain entries.

solution:

Assign entries to the distributor or choose another party responsible for the action.

17.1.717 Errorcode 2912: Specified measure not distinct

Shortform:

Several measures

Description:

Specified measure is not unique.

Problem:

You are trying to change data of a measure.

solution:

The key fields to identify the measure are not sufficient enough to identify exactly one measure.

There are several measures tha correspond to the key fields.

Please contact MPDV Support.

17.1.718 Errorcode 2913: The assessment catalog is active

Shortform:

Assessm.catal.active

Description:

The assessment catalog is active.

Problem:

You are trying to change data of an active assessment catalog.

solution:

Deactivate the assessment catalog before changing the data.

17.1.719 Errorcode 2914: The assessment catalog is used

Shortform:

Assessm.cat.in use

Description:

The assessment catalog is being used.

Problem:

You are trying to change the data of an assessment catalog that is in use.

solution:

Data of an assessment catalog that is already used cannot be changed. Please create a new assessment catalog or delete the assessments that are using this assessment catalog.

17.1.720 Errorcode 2915: The assessment has been completed

Shortform:

Assessment completed

Description:

The assessment has been completed.

Problem:

You are trying to change data of a completed assessment.

solution:

Data of a completed assessment cannot be changed.

17.1.721 Errorcode 2916: The control plan has been released

Shortform:

Control pl. released

Description:

The control plan has been released.

Problem:

You are trying to change the data of a released control plan.

solution:

Please change the release of the control plan.

17.1.722 Errorcode 2917: The control plan is active

Shortform:

Control plan active

Description:

The control plan is active.

Problem:

You are trying to change the data of an active control plan.

solution:

Deactivate the control plan before changing the data.

17.1.723 Errorcode 2918: Gage is not allowed for mass output

Shortform:

Gage n.mass output

Description:

Gage has been excluded from mass output.

Problem:

The gage has been excluded from mass output.

solution:

Please use a gage that is allowed for mass output.

17.1.724 Errorcode 2919: Stock is not available

Shortform:

Stock not available

Description:

Stock is not available.

Problem:

The stock is not available.

solution:

Please enter valid stock.

17.1.725 Errorcode 2920: Department not available.

Shortform:

Dept. not available

Description:

Department is not available.

17.1.726 Errorcode 2921: No.of NCU larger than sample size

Shortform:

NCU larger spl.size

Description:

Number of nonconforming units is larger than sample size.

Problem:

The number of nonconforming units entered is larger than the sample size.

solution:

Please enter less nonconforming units.

17.1.727 Errorcode 2922: Invalid input type

Shortform:

Invalid input tpye

Description:

Invalid input type.

Problem:

The input type (variable, attributive, etc.) does not exist.

solution:

Please choose a valid input type.

17.1.728 Errorcode 2923: Order status does not allow an entry

Shortform:

Invalid order status

Description:

Order status does not allow an entry

17.1.729 Errorcode 2924: Character. status doesn't allow entry

Shortform:

Inv.character.status

Description:

Character. status doesn't allow entry.

17.1.730 Errorcode 2925: Measured value violates tolerance limit

Shortform:

Meas.val.violates TL

Description:

Measured value violates tolerance limit.

17.1.731 Errorcode 2926: Characteristic has not been defined

Shortform:

Character.not avail.

Description:

Characteristic has not been defined.

17.1.732 Errorcode 2927: The gage has become due

Shortform:

Gage due

Description:

The gage has become due.

17.1.733 Errorcode 2928: The sample number is invalid

Shortform:

Sample no. invalid

Description:

The sample number is invalid or a new number entry could not be created.

17.1.734 Errorcode 2929: The sample number already exists

Shortform:

Sample no. exists

Description:

The sample number already exists.

17.1.735 Errorcode 2930: A measured value with this ID exists**Shortform:**

Meas.val.ID exists

Description:

A measured value with this ID exists.

17.1.736 Errorcode 2931: Simulation OK**Shortform:**

Simul. OK

Description:

Simulation OK.

17.1.737 Errorcode 2932: Min. 1 sample has not been completed!**Shortform:**

Sample n. completed

Description:

Min. 1 sample has not been completed!

17.1.738 Errorcode 2933: This function not supported for input type!**Shortform:**

Wrong input type

Description:

This function not supported for input type.

Problem:

You are trying to record inspection results.

solution:

Please use another method for recording results (CPAUSP or CPAUMW).

Please contact MPDV Support.

17.1.739 Errorcode 2934: Maximum of samples reached!

Shortform:

Max. samples reached

Description:

Maximum of samples reached.

Problem:

You are trying to record inspection results.

solution:

The number of samples are limited for the current input type. You are trying to record one sample more than allowed.

Please contact MPDV Support.

17.1.740 Errorcode 2935: Maximum of samples for number reached!

Shortform:

Max. samples number

Description:

Maximum of samples for number reached.

Problem:

You are trying to record inspection results.

solution:

The number of samples of a number entry is limited for the current input type. You are trying to record one sample more than allowed.

Please contact MPDV Support.

17.1.741 Errorcode 2936: Inspection point(s) not finished!

Shortform:

Insp. points n. fini

Description:

Inspection point(s) not finished.

Problem:

There are inspection points that have not yet been completed.

solution:

Please complete all inspection points.

17.1.742 Errorcode 2937: Inspection point(s) not finished for machine!

Shortform:

Insp. points n. fini

Description:

Inspection point(s) not finished for machine.

Problem:

There are inspection points that have not yet been completed for the machine.

solution:

Please complete all inspection points for the machine.

17.1.743 Errorcode 2938: Inspection scope incorrect!

Shortform:

Insp. scope incorr.

Description:

Inspection scope incorrect.

Problem:

The inspection scope has not been observed.

solution:

The inspection scope has not been observed. Either too many or not enough values have been recorded for at least one corresponding characteristic.

17.1.744 Errorcode 2939: Inspection order not finished!

Shortform:

Inspec.ord. not fini

Description:

Inspection order not finished.

Problem:

There are inspection orders that have not yet been finished.

solution:

Please finish all inspection orders.

17.1.745 Errorcode 2940: Inspection not finished!

Shortform:

Inspec. not finished

Description:

Inspection not finished.

Problem:

The quality inspection has not been carried out completely or was checked NOK (not ok).

solution:

Please carry out the quality inspection completely.

17.1.746 Errorcode 2941: Last Container already reached!

Shortform:

Last Cont. reached

Description:

Last Container already reached.

17.1.747 Errorcode 2942: Open measures exist!

Shortform:

Open measures exist

Description:

Open measures exist.

17.1.748 Errorcode 2943: Invalid Input type must be "AUTOMAT"

Shortform:

Invalid Input type

Description:

Invalid Input type must be "AUTOMAT".

17.1.749 Errorcode 2944: Wrong specification

Shortform:

Wrong specification

Description:

Wrong specification.

17.1.750 Errorcode 2945: Characteristic, Changing not possible

Shortform:

Changing n. possible

Description:

Characteristic, Changing not possible.

17.1.751 Errorcode 2946: Prod. operation is still logged on

Shortform:

Prod. OP logged on

Description:

Prod. operation is still logged on.

Problem:

There is still a (superior) productive operation logged on for the QM operation, which is to be finished or interrupted.

solution:

Msn: Booking requirement possible => "Yes"-Button OR, if necessary, log productive operation off.

17.1.752 Errorcode 2947: Inspection point(s) already finished!

Shortform:

Insp. points finish

Description:

Inspection point(s) already finished.

Problem:

The inspection point is already completed.

solution:

Please reopen the inspection point.

17.1.753 Errorcode 2948: Inspection order already finished!

Shortform:

Inspec.ord finished

Description:

Inspection order already finished.

Problem:

The inspection order is already finished.

solution:

Reopen the inspection order.

17.1.754 Errorcode 2949: Inspection requirem. already finished!**Shortform:**

Inspec.req. finished

Description:

Inspection requirement already finished.

Problem:

The inspection requirement is already finished.

solution:

Reopen the inspection requirement.

17.1.755 Errorcode 2950: Gauge not useable (status)!**Shortform:**

Gauge not useable

Description:

Gauge not useable because of the status.

Problem:

Gauge not useable because of the status.

solution:

Change the status of the gauge.

17.1.756 Errorcode 2951: Incorrect format of input data!**Shortform:**

Incorrect inputform.

Description:

Contents of list are not correct

Problem:

value of column or count of columns are not correct

solution:

check content of data row

17.1.757 Errorcode 2952: No data found in tnt_table_repo!

Shortform:

No data,tnttablerepo

Description:

No entry is existed in table tnt_tbale_repo, with this keys.

Problem:

Entry of TNT-table does not exist.

solution:

-

17.1.758 Errorcode 2953: Column is_online is not N!

Shortform:

Is_online is not N!

Description:

Table: tnt_table_repo, column: is_online with value unequal N

Problem:

The process is stopped for this entry, jump to next step.

solution:

-

17.1.759 Errorcode 2954: TNT-table is locked by process!

Shortform:

Table is locked!

Description:

TNT-table is locked by an other process.

Problem:

The process is ignored the TNT-table, because an other process is used the TNT-table.

solution:

-

17.1.760 Errorcode 2955: TNT-table,lock status is indeterminate!

Shortform:

Lock status unknow!

Description:

Lock status of TNT-table is indeterminate.

Problem:

The process is ignored the TNT-table, (jump to next step).

solution:

check: database is online. check: table hyd_lock is existed.

17.1.761 Errorcode 2956: Entry was not found in tnt_headers!

Shortform:

No tnt_header found!

Description:

Header entry of table tnt_headers was not found.

Problem:

No entry is existed for this table_id.

solution:

-

17.1.762 Errorcode 2957: TNT-table was not created!

Shortform:

TNT-table not create

Description:

Error by creating TNT-table.

Problem:

TNT-table could not be created!

solution:

-

17.1.763 Errorcode 2958: Index of TNT-table was not created!

Shortform:

Index not create

Description:

Error by creating index of TNT-table

Problem:

Index of TNT-table could not be created!

solution:

-

17.1.764 Errorcode 2959: Archiving file was not found!

Shortform:

Arc. file not found

Description:

Archiving file was not found!

Problem:

Archiving directory or archiving file are not correct.

solution:

Check, archiving directory. Check, archiving file.

17.1.765 Errorcode 2960: File transfer was failed!

Shortform:

File transfer failed

Description:

File transfer was failed from archiving directory to transport directory.

Problem:

File was not copied into transport directory.

solution:

Check, archiving directory. Check, transport directory. Check, file already exist in transport directory.

17.1.766 Errorcode 2961: Reading file was failed!

Shortform:

Reading file failed

Description:

Reading file was failed.

Problem:

Reading file was failed (or general error in process\function do_pdv_reload_massdate)

solution:

Check, if file is existed in transport directory. Check, if file has reading rights.

17.1.767 Errorcode 2962: Reload flag was not updated!

Shortform:

Reload flag not set

Description:

Reload flag was not updated in table tnt_table_repo.

Problem:

The Status "is_online" of tnt_table was not set from 'N' (not online) to 'R' (reload), because the process is run into an error.

solution:

-

17.1.768 Errorcode 2963: Param for calculation is missing!

Shortform:

Param f. calc. miss.

Description:

One or more params for calculation are missing!

Problem:

The limits can not be calculated because one or more params are missing.

solution:

Check the params. Use the Users Guide.

17.1.769 Errorcode 2964: Error in formula calculation for test result

Shortform:

Error formula calc.

Description:

Error in formula calculation for test result.

Problem:

While calculating the values by formulas an error is occurred

solution:

Verify the existence of input values and the formulas used

17.1.770 Errorcode 2965: Wrong acquisition workplace

Shortform:

Wrong aquis. workpl.

Description:

The test result cant be changed on by this acquisition workplace.

Problem:

The test result cant be changed on by this acquisition workplace, because it was measured by another workplace.

solution:

Change the test result in context of the original aquisiton workplace.

17.1.771 Errorcode 2966: Missing last off inspection

Shortform:

Missing l.o. insp.

Description:

The operation cannot be logged off or interrupted.

Problem:

The operation cannot be logged off or interrupted because there is no inspection point for the last off inspection.

solution:

Create an inspection point for the last off inspection.

17.1.772 Errorcode 3000: Transaction has already been opened

Shortform:

Transact.alr.open

Description:

Transaction has already been opened.

Problem:

A transaction was attempted to be started although a transaction has already been opened. Nested transactions are impossible.

solution:

Please correct the processing logic.

17.1.773 Errorcode 3001: No transaction has been opened

Shortform:

No transaction open

Description:

No transaction opened.

Problem:

A transaction was attempted to be finished although no transaction is open.

solution:

Please correct the processing logic.

17.1.774 Errorcode 3002: DLG error in transaction -> ROLLBACK

Shortform:

ROLLBACK DLG error

Description:

Errors within the transaction. The changes have been reversed.

Problem:

An error occurred when processing the data within a transaction. The transaction has been canceled.

solution:

Please correct the data processed or the processing logic.

17.1.775 Errorcode 3003: Exception: Bapicallexecute: no handler

Shortform:

Exception: Bapicall

Description:

Exception occurred when calling a BAPI.

Problem:

Internal error

solution:

Please contact MPDV Support.

17.1.776 Errorcode 3020: Account blocked, logon not possible

Shortform:

Account blocked

Description:

The user account has been blocked!

Problem:

The user account has been blocked. Logon is not possible at the moment.

solution:

Please contact your HYDRA administrator.

17.1.777 Errorcode 3021: Not possible. User is logged on

Shortform:

User logged on

Description:

Impossible as the user <BEARB> is logged on to client <KONS>.

Problem:

You cannot delete a user account if the user is logged on.

solution:

The user must be logged off before the user account can be deleted

17.1.778 Errorcode 3022: Script file is not available.

Shortform:

Script not available

Description:

Script file is not available.

Problem:

The script file is not available.

solution:

Please restore the script file.

17.1.779 Errorcode 3023: Script has already been released

Shortform:

Scr.alr.released

solution:

When creating a new version of the HR master data a new personnel number or a new validity date has to be indicated. You can recognize from the other details of the error message which company, cost center and responsibility area this person is assigned to.

17.1.783 Errorcode 3027: Person ■■■■■■■■ badge overlap

■■■■■■■■■

Shortform:

Badge overlap

Description:

Badge overlap due to elongation of previous version of this person.

Problem:

Deleting this version of this person results in a badge overlap with the badge number of another person.

solution:

First delete the previous version of this person or assign an empty badge number or give another badge number to the other person.

17.1.784 Errorcode 3028: Label type and alias already exists**Shortform:**

Typ and alias exists

Description:

Label type and alias has already been assigned.

Problem:

Label type and alias has already been assigned.

solution:

Enter a not assigned alias name.

17.1.785 Errorcode 3029: Label type is not available**Shortform:**

Label type n. avail.

Description:

Label type not available.

Problem:

Label type is not available.

solution:

Please enter a valid label type

17.1.786 Errorcode 3030: Label alias is not available

Shortform:

Label alias n. avail

Description:

Label alias not available.

Problem:

Label alias is not available.

solution:

Please enter a valid label alias

17.1.787 Errorcode 3031: The data must not be deleted

Shortform:

Data n.be deleted

Description:

Data cannot be deleted.

Problem:

These data have been marked quenchless by the system.

solution:

The required action cannot be deleted.

17.1.788 Errorcode 3100: Workflow active.Modification n.possible

Shortform:

Workflow active

Description:

The workflow is active.

Problem:

The workflow is active. Because of this it is not possible to change it.

solution:

Copy the workflow and make changes in the duplicate. Activate the copy, after all changes are done.

17.1.789 Errorcode 3102: Configuration has not been indicated**Shortform:**

Configurat. missing

Description:

Configuration has not been indicated

17.1.790 Errorcode 3104: Event has not been indicated**Shortform:**

Event is missing

Description:

Event has not been indicated

17.1.791 Errorcode 3108: Sub event has not been indicated**Shortform:**

Subev.not indicated

Description:

Sub event has not been indicated.

**17.1.792 Errorcode 3109: Workflow is used. Modificat.
impossible****Shortform:**

Workflow is used

Description:

Workflow is used.

Problem:

Workflow is used. Because of this it is not possible to change it.

solution:

Copy the workflow and make changes in the duplicate. Activate the copy, after all changes are done.

17.1.793 Errorcode 3200: Invalid or empty resource

Shortform:

Inval.or empty res.

Description:

Invalid or empty resource.

Problem:

No resource or resource reference has been transferred to the dialog.

solution:

A resource number including resource type or a resource ID (reference to resource) has to be transferred to the dialog.

17.1.794 Errorcode 3201: Resource not available

Shortform:

Res.not available

Description:

Resource not available.

Problem:

The resource indicated in the dialog is not defined within the resource stock.

solution:

An existing resource number including resource type or a valid resource ID has to be transferred to the dialog.

17.1.795 Errorcode 3202: Resource(w/o type)several times i.stock

Shortform:

Res.sev.times avail.

Description:

Resource(w/o type) is several times in stock.

Problem:

The resource (without resource type) indicated within the dialog has been defined several times with different resource types within the resource stock .

solution:

Please check the stock or transfer the resource type as 2nd key besides the resource name to the dialog.

17.1.796 Errorcode 3203: Resource list max. depth reached

Shortform:

Res.list max. depth

Description:

Resource list max. depth reached.

Problem:

At the moment the resource list is limited to 10 levels at most. If this value is exceeded (insertion of an 11th level) the action will be rejected. Please do not mistake this for parallel resources within one level.

solution:

Please check whether it is actually required to create more than 10 BOM levels or whether this is rather a mistake.

Please contact MPDV if more than 10 BOM levels are required.

17.1.797 Errorcode 3204: Resource already available

Shortform:

Res.alr.available

Description:

Resource already available.

Problem:

The resource indicated in the dialog has already been defined within the resource stock.

solution:

Please check the stock.

17.1.798 Errorcode 3205: Resource could not be created

Shortform:

Res. not created

Description:

Resource could not be created.

Problem:

The new resource indicated in the dialog could not be created within the resource stock.

solution:

Analysis of the HYMW logs to determine the reason. Please note: in case the resource already exists message 3204 appears.

17.1.799 Errorcode 3210: Invalid or empty resource status

Shortform:

Invalid res.status

Description:

Invalid or empty resource status.

Problem:

No resource status indicated.

solution:

Transfer of a status > 0.

17.1.800 Errorcode 3211: Resource status is not available

Shortform:

Res.status n.avail.

Description:

Resource status is not available.

Problem:

The status indicated does not go with the resource type/ resource family transferred.

solution:

Please check status assignment.

17.1.801 Errorcode 3212: Resource status is not allowed

Shortform:

Res.status n.allowed

Description:

Resource status is not allowed.

Problem:

At the moment this check is not supported. Therefore, this message cannot appear.

solution:

17.1.802 Errorcode 3213: No release status available

Shortform:

No rel. stat.avail.

Description:

No release status available.

Problem:

At least one status having the property "RELEASED" has to be defined for all resource types, e.g.: "WNR" (tool). Therefore, the resource types specified by HYDRA already have the status "999".

solution:

A release status has to be defined for the resource type of the resource to be processed. Please set "processing" flag to "F".

17.1.803 Errorcode 3214: Resource type is not available

Shortform:

Res.type n. avail.

Description:

Resource type is not available.

Problem:

The indicated resource type has not been defined within the system.

solution:

Definition of the resource type in HYDRA.

17.1.804 Errorcode 3215: Resource family is not available

Shortform:

Res.family n.avail.

Description:

Resource family is not available.

Problem:

The indicated resource family has not been defined within the system.

solution:

Definition of the resource family in HYDRA.

17.1.805 Errorcode 3216: No status available for logging off res.

Shortform:

No l.off s.res.avail

Description:

No status available for logging off resource.

Problem:

When logging resources off from the machine (happens automatically when orders are logged off) it can be switched to a certain resource status. This status has been defined with "processing" = "B" at the resource type. If no status is available no status is changed.

solution:

If it is required to switch to a certain resource status when orders are logged off or interrupted a respectively identified status has to be created.

17.1.806 Errorcode 3217: Product. status f.resource n.available

Shortform:

Prod.st.res.n.avail.

Description:

Production status for resource is not available.

Problem:

It is impossible to switch to the required status having the ID PROD = <indicated value> as such a status has not been defined in HYDRA.

solution:

Please create a status with the respective flag "processing" = <indicated value>.

17.1.807 Errorcode 3218: Resource blocked

Shortform:

Resource blocked

Description:

Resource blocked.

Problem:

Resource blocked due to respective status OR collective block

solution:

Please check the status of the resource.

17.1.808 Errorcode 3219: Resource is no DNC resource

Shortform:

Res. no DNC resource

Description:

Resource is no DNC resource.

Problem:

The type of the resource indicated in the dialog is no DNC resource type.

solution:

Please check the resource types for the DNC processing field. This field should not be "K". This message only appears for DNC dialogs.

17.1.809 Errorcode 3220: Resource scheduled or blocked

Shortform:

Res.sched.or blocked

Description:

Resource scheduled or blocked.

Problem:

The resource has already been logged on and therefore it cannot be logged on once again.

solution:

Please check where the resource has already been logged on to.

17.1.810 Errorcode 3221: Machine has not been indicated

Shortform:

Mach. not indicated

Description:

Machine has not been indicated.

Problem:

When it comes to an DNC upload the stated machine is checked for plausibility.

solution:

Please enter a valid machine in the dialog.

17.1.811 Errorcode 3222: DNC family has not been stated

Shortform:

DNC fam.not stated

Description:

DNC family has not been stated.

Problem:

When it comes to an DNC upload the stated DNC familiy is checked for plausibility.

solution:

Please enter valid DNC family in the dialog.

17.1.812 Errorcode 3223: Machine and DNC family do not match

Shortform:

Mach+DNCfam.n.match

Description:

Machine and DNC family do not match.

Problem:

When it comes to an DNC upload the entered machine and DNC family are checked for plausibility.

solution:

Please define information on the relationship between machine and DNC family in HYDRA.

17.1.813 Errorcode 3224: Resource cannot be logged on

Shortform:

Res.n. be logged on

Description:

Resource cannot be logged on.

Problem:

A resource, which is defined as "cannot be logged on", is attempted to be logged on.

solution:

Please check the configuration at the resource type: "When logging OP on also log on".

17.1.814 Errorcode 3225: Status does not allow processing

Shortform:

Res.stat.no process.

Description:

Status does not allow processing.

Problem:

The resource is currently blocked and therefore it cannot be logged on.

solution:

Please unblock the resource.

17.1.815 Errorcode 3226: Res.alr.log.on t.this mach.w.this order

Shortform:

Res.l.on w.mach.+ord

Description:

Res.alr.log.on t.this mach.w.this order.

Problem:

Resource has already been logged on to this machine with this order.

solution:

17.1.816 Errorcode 3227: Res. has been logged on too many times

Shortform:

Res.l.on too often

Description:

Res. has been logged on too many times.

Problem:

An anonymous resource is attempted to be logged on more often than it is available within stock.

solution:

If required, please increase its quantity within stock.

17.1.817 Errorcode 3228: resource <RES> has alr. been logged on

Shortform:

res. alr. logged on

Description:

resource has already been logged on.

Problem:

Resource has already been logged on.

solution:

Please check configuration and to which machine the resource has already been logged on.

17.1.818 Errorcode 3229: Resource has not been logged on

Shortform:

Res.not logged on

Description:

Resource has not been logged on.

Problem:

Resource has not been logged on and is attempted to be logged off.

solution:

17.1.819 Errorcode 3230: End date is smaller than current time

Shortform:

End dat.smaller curr

Description:

End date is smaller than current time.

Problem:

It is attempted to transfer a date for the future whereas the point in time has already been exceeded.

solution:

Please check the data.

17.1.820 Errorcode 3231: Resource is active

Shortform:

Resource is active

Description:

Resource is active.

Problem:

Checking whether the resource is inactive fails, i.e. resource is currently being used.

solution:

Please log resource off at another place.

17.1.821 Errorcode 3232: Resource is not active

Shortform:

Resource not active

Description:

Resource is not active.

Problem:

Checking whether resource is active fails, i.e. resource is currently not in use.

solution:

Please log resource on in advance.

17.1.822 Errorcode 3233: There are events for the resource

Shortform:

Res in event_res

Description:

There are events for the resource.

17.1.823 Errorcode 3235: Maintenance not in threshold range

Shortform:

Maint. outside range

Description:

The next Maintenance is outside the threshold range.

17.1.824 Errorcode 3240: Resource type is not editable

Shortform:

Res.type n.editable

Description:

Resource type is not editable.

Problem:

The resource type cannot be changed. It was protected by HYDRA.

solution:

Only HYDRA can change the resource type.

17.1.825 Errorcode 3241: User field key not defined

Shortform:

User f. key n.avail.

Description:

User field key not defined.

Problem:

The stated user field key is not available within HYDRA.

solution:

Please configure user field key in HYDRA.

17.1.826 Errorcode 3242: Resource type is currently being used

Shortform:

Res type is used

Description:

Resource type is currently being used.

Problem:

A resource type is attempted to be deleted but there are still resources of this type.

solution:

Please delete all resources of this type.

17.1.827 Errorcode 3243: Resource family is used

Shortform:

Res.fam.is used

Description:

Resource family is used.

Problem:

A resource family is attempted to be deleted but there are still resources of this family.

solution:

Please delete all resources of the family.

17.1.828 Errorcode 3244: If changed KENN must have prefix U:

Shortform:

KENN must prefix U:

Description:

If changed KENN must have prefix U:.

Problem:

Customer-specific user fields may only be changed (with prefix "U:").

solution:

This user field type cannot be changed.

17.1.829 Errorcode 3245: prod=F may only exist once per type/fam.

Shortform:

prod = F only once

Description:

F may only exist once per type/fam..

Problem:

A second status having the flag "processing" = "F" is attempted to be created.

solution:

Please remove the status with the flag "processing" = "F" at first then a new assignment will be possible.

17.1.830 Errorcode 3246: No header record is available

Shortform:

No header record

Description:

No header record is available

Problem:

User field configuration has internal error as there is no basic information

solution:

17.1.831 Errorcode 3247: Resource status is in use

Shortform:

Status in use

Description:

Resource status is in use.

Problem:

A resource status is attempted to be deleted but there are still resources having this status.

solution:

Change the statuses of all resources that are still assigned to this status.

17.1.832 Errorcode 3248: Header record of resource is in use

Shortform:

Header rec. in use

Description:

Header record of resource is in use.

Problem:

User field header record is to be deleted but it is still being used.

solution:

Please check the fields assigned to the user field header record.

17.1.833 Errorcode 3249: Copy of itself is not possible.

Shortform:

Copy of itself

Description:

Copy of itself is not possible.

Problem:

Attempt to copy itself.

solution:

17.1.834 Errorcode 3250: The path is not available

Shortform:

Path not available

Description:

The path is not available.

Problem:

The path specification has not been defined in HYDRA.

solution:

Please define path ID in HYDRA.

17.1.835 Errorcode 3251: Invalid blocking reason

Shortform:

Inv.blocking reason

Description:

Invalid blocking reason.

17.1.836 Errorcode 3252: Invalid measure**Shortform:**

Invalid measure

Description:

Invalid measure.

Problem:

The measure is not known within HYDRA.

solution:

Please configure measure in HYDRA.

17.1.837 Errorcode 3253: Resource is still available in BOM**Shortform:**

Resource in BOM

Description:

Resource is still available in BOM

Problem:

Resource can't be deleted, because it is still available in resource list

solution:

Delete the resource list entry first.

17.1.838 Errorcode 3254: Res.is still being used as component**Shortform:**

Res. is component

Description:

Res.is still being used as component

Problem:

Resource can't be deleted, because it is still available in component list

solution:

Delete the component list entry first.

17.1.839 Errorcode 3255: Invalid maintenance

Shortform:

Invalid maintenance

Description:

Invalid maintenance.

Problem:

The indicated maintenance has not been recorded within the system.

solution:

Please create maintenance within the system in advance.

17.1.840 Errorcode 3256: Maintenance condition is not allowed

Shortform:

Maint.cond.n.allowed

Description:

Maintenance status is not allowed.

Problem:

An invalid maintenance status was attempted to be set in the database.

solution:

The maintenance statuses 0 to 3 are allowed.

17.1.841 Errorcode 3257: Resource measure has alr. been recorded

Shortform:

Measure is used

Description:

Resource measure has alr. been recorded

Problem:

Measure can't be deleted because it is already in use.

solution:

Active measures can't be deleted.

17.1.842 Errorcode 3259: Status assignments not configurable

Shortform:

Status n.configurab.

Description:

Status assignments not configurable

17.1.843 Errorcode 3260: DNC file has already been assigned

Shortform:

DNC file invalid

Description:

DNC file has already been assigned

Problem:

Ressource can't be inserted/updated because the DNC file has already been assigned.

solution:

Use another DNC file.

17.1.844 Errorcode 3261: Resource is still i.maintenance calendar

Shortform:

RES i.maint.calendar

Description:

Resource is still i.maintenance calendar

Problem:

Ressource can't be deleted because it is still in the maintenance calendar.

solution:

Delete the maintenance calendar first.

17.1.845 Errorcode 3262: Maintenance n.possible for resource type

Shortform:

Maintenance n.poss.

Description:

Maintenance n.possible for resource type

Problem:

Maintenance is not possible for DNC ressources !

solution:

Maintenance is not possible for DNC ressources !

17.1.846 Errorcode 3263: Family status has become invalid

Shortform:

Fam.status invalid

Description:

Status of resource family has become invalid.

Problem:

Through an update of the resource family the status has become invalid !

solution:

Define the current status on the new family or change the resource status to an general status first!

17.1.847 Errorcode 3264: Status alr. assigned for family/type

Shortform:

Status alr. assigned

Description:

Status has already been assigned for resource family/resource type.

Problem:

Status has already been assigned for resource family/resource type !

solution:

Us a new Status.

17.1.848 Errorcode 3265: Resource-ID is invalid!

Shortform:

Resource-ID invalid!

Description:

Resource-ID is invalid!

Problem:

Resource-ID is invalid!

solution:

Resource-ID is invalid!

17.1.849 Errorcode 3266: Master resource already exists

Shortform:

Master res. exists

Description:

Master resource already exists.

Problem:

Master resource already exists.

solution:

Please choose another master resource.

17.1.850 Errorcode 3267: Parent and child are master resources

Shortform:

Two master resources

Description:

Parent and child are master resources.

Problem:

Parent and child are master resources

solution:

Please choose another master resource for parent or child.

17.1.851 Errorcode 3270: Max. no. of fast USRFLD reached

Shortform:

Max. number reached

Description:

Max. no. of fast USRFLD reached

Problem:

Internal error message.

solution:

-

17.1.852 Errorcode 3271: N.possible, entry is still being used

Shortform:

Entry is still used

Description:

Impossible - entry is still being used.

Problem:

The action cannot be carried out as the data are still being used.

solution:

Please make sure that the data are not used any longer and repeat the action.

17.1.853 Errorcode 3272: N.possible,year model is factory calend.

Shortform:

Year mod.fact.calend

Description:

Impossible - year model has been defined as factory calendar.

Problem:

This year model is defined as a factory calender, and can not be deleted if it is valid for the current year.

17.1.854 Errorcode 3273: N.possible-processing SYSTEM entry

Shortform:

SYSTEM entry

Description:

Impossible - a reason can either be assigned to SYSTEM or to a user-defined number of machines.

17.1.855 Errorcode 3274: Password must not contain user name

Shortform:

Password not allowed

Description:

Password must not include user name.

Problem:

According to password guidelines the password must not include user name.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.856 Errorcode 3275: Password contains insufficient letters

Shortform:

Password not allowed

Description:

Password contains insufficient letters.

Problem:

According to password guidelines the password contains insufficient letters.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.857 Errorcode 3276: Password contains insufficient numbers

Shortform:

Password not allowed

Description:

Password contains insufficient numbers.

Problem:

According to password guidelines the password contains insufficient numbers.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.858 Errorcode 3277: Passw.contains insuffic.spec.characters

Shortform:

Password not allowed

Description:

Password contains insufficient special characters.

Problem:

According to password guidelines the password contains insufficient special characters.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.859 Errorcode 3278: Password is altogether too short

Shortform:

Password not allowed

Description:

Password is altogether too short.

Problem:

According to password guidelines the password is too short.

solution:

Enter an longer password or contact your HYDRA administrator.

17.1.860 Errorcode 3279: Password contains invalid characters

Shortform:

Password not allowed

Description:

Password contains invalid characters.

Problem:

According to password guidelines the password contains invalid characters.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.861 Errorcode 3280: Password violates password history

Shortform:

Password not allowed

Description:

Password violates password history.

Problem:

According to password guidelines the entered password was used before and cannot be used again.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.862 Errorcode 3281: Password history is not available

Shortform:

Passw.hist.n.avail.

Description:

Password history is not available.

Problem:

Internal error when accessing password history

solution:

Please contact MPDV Support.

17.1.863 Errorcode 3282: Password has expired

Shortform:

Password expired

Description:

Password has expired.

Problem:

Your password has expired.

solution:

Change your password

17.1.864 Errorcode 3283: Password must be changed!

Shortform:

Change password!

Description:

Password has to be changed!

Problem:

The entered password is the same as the actual one.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.865 Errorcode 3284: Bill of material level is invalid

Shortform:

BOM level is invalid

Description:

BOM level is invalid!

Problem:

BOM level is invalid. Please check correct level.

17.1.866 Errorcode 3285: Cutting plan not found for order

Shortform:

Cutt.plan.not avail.

Description:

Cutting plan has not been found for the order.

17.1.867 Errorcode 3286: Overall width of web distrib.too small

Shortform:

Width too small

Description:

Overall width of cutting plan too small

17.1.868 Errorcode 3287: Parent OP is already available

Shortform:

Par.OP alr.available

Description:

Parent OP is already available.

17.1.869 Errorcode 3288: Cutting plan is already active

Shortform:

Cutt.plan.alr.active

Description:

Cutting plan is already active!

17.1.870 Errorcode 3299: Material component not found for OP

Shortform:

Invalid component

Description:

Material component has not been found for OP.

Problem:

Material component of the OP is missing.

17.1.871 Errorcode 3300: Assignment code must show the value NUM

Shortform:

Assignm.code <> NUM

Description:

The assignment code must show the value NUM.

Problem:

The assignment code must show the value NUM.

solution:

Change the assignment code

17.1.872 Errorcode 3301: No. is not within the defined range

Shortform:

FROM<No or No>TO

Description:

The number is not within the defined range.

Problem:

The number is not within the defined range.

solution:

Enter the correct number

17.1.873 Errorcode 3302: Number starts with wrong prefix

Shortform:

Prefix not OK

Description:

The number starts with a wrong prefix.

Problem:

The number starts with a wrong prefix.

Lösung:

Enter the correct prefix

17.1.874 Errorcode 3303: Generat.type P does not generate a No.

Shortform:

Generation type P

Description:

The generation type P does not generate a number.

Problem:

The generation type P does not generate a number.

solution:

-

17.1.875 Errorcode 3304: Active template must not be deleted

Shortform:

Active not deletable

Description:

Active template must not be deleted.

Problem:

Active template must not be deleted.

solution:

Please deactivate the template before deleting it

17.1.876 Errorcode 3400: Parameter InstID not indicated

Shortform:

Inst. canceled

Description:

Parameter InstID has not been indicated.

Problem:

The installation id has not been indicated.

solution:

-

17.1.877 Errorcode 3401: Installation path not created

Shortform:

Inst. canceled

Description:

Installation path has not been created.

Problem:

The installation path has not been created.

solution:

-

17.1.878 Errorcode 3402: Media path not created

Shortform:

Inst. canceled

Description:

Media path has not been created.

Problem:

The media path has not been created.

solution:

-

17.1.879 Errorcode 3403: Backup path could not be created

Shortform:

Inst. canceled

Description:

Backup path could not be created.

Problem:

The backup path could not be created.

solution:

-

17.1.880 Errorcode 3404: Files have already been installed

Shortform:

Inst. canceled

Description:

Files have already been installed.

Problem:

This update has already been installed.

solution:

-

17.1.881 Errorcode 3405: Log file could not be created

Shortform:

Inst. canceled

Description:

Log file could not be created.

Problem:

The log file could not be created.

solution:

-

17.1.882 Errorcode 3406: Source could not be opened

Shortform:

Inst. canceled

Description:

Source could not be opened.

Problem:

The source directory could not be opened.

solution:

-

17.1.883 Errorcode 3420: Do not delete or change stand. config.

Shortform:

Don't change st.conf

Description:

Standard configuration can neither be deleted nor changed.

17.1.884 Errorcode 3421: Do not delete standard configuration

Shortform:

Don't delete st.conf

Description:

Do not delete standard configuration

17.1.885 Errorcode 3430: Invalid signature 1 or level 1

Shortform:

Invalid sig./level 1

Description:

Invalid signature 1 or level 1.

Problem:

The entered signature 1 or level 1 are invalid.

solution:

Please enter a valid signature 1 or level 1.

17.1.886 Errorcode 3431: Invalid signature 2 or level 2

Shortform:

Invalid sig./level 2

Description:

Invalid signature 2 or level 2

Problem:

The entered signature 2 or level 2 are invalid.

solution:

Please enter a valid signature 2 or level 2.

17.1.887 Errorcode 3432: Invalid sig.1 and 2 or level 1 and 2

Shortform:

Inv.sig./level 1+2

Description:

Invalid signature 1 and 2 or level 1 and 2.

Problem:

The entered signatures or levels are invalid.

solution:

Please enter two valid pairs of signatures/levels.

17.1.888 Errorcode 3433: Input for action necessary

Shortform:

Input necessary

Description:

Input is necessary for the action in order to be able to document this one.

Problem:

The action can only be carried out if it is documented

17.1.889 Errorcode 3434: No dialog data existing

Shortform:

No dialog data

Description:

As no dialog data have been recorded it is impossible to restore them.

17.1.890 Errorcode 3500: Invalid processing flag

Shortform:

Inv.processing flag

Description:

Invalid processing flag has been entered.

Problem:

The entered processing flag is invalid.

solution:

Please enter a valid processing flag.

17.1.891 Errorcode 3501: Invalid variant

Shortform:

Invalid variant

Description:

Variant does not exist within customer name space.

Problem:

Variant does not exist within customer name space.

solution:

Please use the prefix U: for customer specific variants.

17.1.892 Errorcode 3502: Invalid BAPI-POS

Shortform:

Invalid BAPI-POS

Description:

Invalid BAPI-POS entered.

Problem:

Invalid BAPI-Position entered.

solution:

Please enter a valid BAPI-Position.

17.1.893 Errorcode 3503: Invalid field position

Shortform:

Invalid FIELD-POS

Description:

Invalid field position has been entered.

Problem:

Invalid field position entered.

solution:

Please enter a valid field position.

17.1.894 Errorcode 3504: Invalid formula position

Shortform:

Invalid EXPR-POS

Description:

Invalid formula position has been entered.

Problem:

Invalid formula position entered.

solution:

Please enter a valid formula position.

17.1.895 Errorcode 3505: Invalid basic configuration

Shortform:

Invalid bas.config.

Description:

Invalid basic configuration has been entered.

Problem:

The entered basic configuration does not exist.

solution:

Please enter an existing basic configuration.

17.1.896 Errorcode 3506: Invalid segment configuration

Shortform:

Invalid segm.config.

Description:

Invalid segment configuration has been entered.

Problem:

The entered segment configuration does not exist.

solution:

Please enter an existing segment configuration.

17.1.897 Errorcode 3507: Invalid field configuration

Shortform:

Inval.field config.

Description:

There is no field configuration.

Problem:

The entered field configuration does not exist.

solution:

Please enter an existing field configuration.

17.1.898 Errorcode 3508: Invalid conversion function

Shortform:

Inv.conversion fct.

Description:

There is no conversion function.

Problem:

The entered conversion function does not exist.

solution:

Please enter an existing conversion function.

17.1.899 Errorcode 3509: Acronym has already been assigned

Shortform:

Invalid acronym

Description:

Acronym has already been assigned.

Problem:

The entered Acronym is already in user.

solution:

Please enter an other Acronym name.

17.1.900 Errorcode 3510: Invalid formula

Shortform:

Invalid formula

Description:

Invalid formula indicated.

Problem:

The entered formula does not exist.

solution:

Please enter an existing formula.

17.1.901 Errorcode 3511: Invalid transaction flag

Shortform:

Inv.transaction flag

Description:

Invalid transaction flag entered.

Problem:

Invalid transaction flag entered.

solution:

Use I or O for the transaction flag.

17.1.902 Errorcode 3512: Transact.not avail.or not yet processed

Shortform:

Transact.n.processed

Description:

Transaction not available or not yet processed.

Problem:

The current transaction status does not allow an reset.

solution:

Only processed transactions can be resetted.

17.1.903 Errorcode 3513: Transaction archived or not available

Shortform:

Transact. archived

Description:

Transaction has already been archived or is not available.

Problem:

The transaction can't be resetted because it is already archived.

solution:

Archived transactions can't be resetted.

17.1.904 Errorcode 3514: Initial download is not allowed.

Shortform:

Init down. n.a.

Description:

Initial download is not allowed.

Problem:

Initial download can not be performed because the INI configuration is not available or inactive.

solution:

Check the SAP INI configuration with key ACTIVE_UNTIL.

17.1.905 Errorcode 3602: Main OP defined several times

Shortform:

Main OP multiple

Description:

Main OP has been defined several times!

17.1.906 Errorcode 3603: Cut number has been defined sev.times

Shortform:

Cut no. multiple

Description:

Cut number has been defined several times!

17.1.907 Errorcode 3604: Sum of cut widths > overall width

Shortform:

Cut widths too large

Description:

Sum of cut widths > Overall width!

17.1.908 Errorcode 3605: Active orders cannot be changed

Shortform:

Active n.alterable

Description:

Active orders cannot be changed!

17.1.909 Errorcode 3606: No header rec. available for cut layout

Shortform:

No header rec.avail.

Description:

There is no header record for the cutting layout!

17.1.910 Errorcode 3608: Cutting plan alr.avail. for order

Shortform:

Cutt.plan alr.avail.

Description:

Cutting plan is already available for the order!

17.1.911 Errorcode 3612: Batch has alr.been packed in container

Shortform:

Batch alr. packed

Description:

Batch has already been packed in container!

17.1.912 Errorcode 3613: Batch has already been deleted

Shortform:

Batch is deleted

Description:

Batch has already been deleted!

17.1.913 Errorcode 3631: Material width of batch is too small

Shortform:

Inv.material width

Description:

Material width of batch is too small

Problem:

Material width of batch is too small for logging on at OP.

solution:

Please check the width of the batch or the cutting plan of the OP.

17.1.914 Errorcode 3636: Batch is blocked due to quality reasons

Shortform:

Batch is blocked

Description:

Batch is blocked due to quality reasons

17.1.915 Errorcode 3638: Article not allowed for package**Shortform:**

Article wrong

Description:

Article not allowed for package

17.1.916 Errorcode 3639: Roll width not allowed for package**Shortform:**

Roll width wrong

Description:

Roll width not allowed for package

17.1.917 Errorcode 3640: Order not allowed for package**Shortform:**

Order wrong

Description:

Order not allowed for package

17.1.918 Errorcode 3645: The user password expires**Shortform:**

Password expires

Description:

The user password expires in <PWD:VALIDTG> days!

Problem:

The user password expires in a few days.

solution:

Assign a new password

17.1.919 Errorcode 3646: Signature(s) required**Shortform:**

Signature required

Description:

Signature(s) required.

Problem:

This action can only be carried out if it is signed

solution:

Enter a valid signature or contact the Hydra administrator

17.1.920 Errorcode 3647: Higher authorization level required

Shortform:

Higher auth.lev.req.

Description:

Higher authorization level required.

Problem:

You do not have the authorization level, which is needed for the required signature

17.1.921 Errorcode 3648: Signature invalid

Shortform:

Signature invalid

Description:

Signature invalid.

Problem:

Entered signature is invalid

solution:

Enter a valid signature or contact the Hydra administrator

17.1.922 Errorcode 3649: Invalid error code

Shortform:

Invalid error code

Description:

Invalid error code

Problem:

An invalid error code has been recorded during posting.

solution:

All error codes have to be defined with the type "L" the reasons configuration at the HYDRA client.

17.1.923 Errorcode 3650: Material availability exceeded

Shortform:

Mat.n.sufficient

Description:

Material availability exceeded.

Problem:

The quantity of input material is not sufficient for the production during posting.

solution:

Please change input batch or quantity.

17.1.924 Errorcode 3653: The handling unit has assigned batches

Shortform:

HU has assig.batches

Description:

The actual handling unit has still assigned batches

Problem:

This OP cannot be logged off because the actual handling unit has still assigned batches.

solution:

Please make sure that the actual handling unit (output batch) has to complete before log off order.

17.1.925 Errorcode 3654: No batches have been assigned to HU

Shortform:

Handl. unit is empty

Description:

The actual handling unit could not complete without assigned batches.

17.1.926 Errorcode 3655: Batch is not assigned to handling unit

Shortform:

Batch is n. assigned

Description:

The batch is not assigned to the actual handling unit.

17.1.927 Errorcode 3656: Quantity of batch has alr. been recorded

Shortform:

Batch alr. recorded

Description:

The quantity of the batch has already been recorded.

Problem:

The batch has already been recorded.

solution:

Please check status of the batch.

17.1.928 Errorcode 3657: Unplanned Material is not allowed

Shortform:

Unpl.Mat. n. allowed

Description:

Unplanned Material is not allowed in this machine status.

Problem:

When logging a batch on it is detected that the material is not planned within the material list of the operation and the machine status does not allow the log on.

solution:

Check the configuration of machine status.

17.1.929 Errorcode 3658: Scrap quantity for batch not allowed

Shortform:

Inadmiss. scrap qty.

Description:

Batch has still yield.

Problem:

Scrap quantity is not allowed because batch has still yield.

solution:

Please check your input

17.1.930 Errorcode 3659: There is no serial number for quantity

Shortform:

No serial number

Description:

The quantity has booked without serial number.

Problem:

The quantity has booked without serial number.

solution:

Please check your input

17.1.931 Errorcode 3660: Serial number is blocked

Shortform:

Serial numb. blocked

Description:

Serial number is blocked

Problem:

The batch of the Serial number is blocked

solution:

Please check your input

17.1.932 Errorcode 3661: Webservice communication error

Shortform:

WS comm. error

Description:

The Webservice communication with the external system is faulty.

Problem:

There is no connection to the external system via Webservice.

solution:

Please check the configuration of the Webservice.

17.1.933 Errorcode 3662: Material reservation is not planned

Shortform:

Mat.res. n. planned

Description:

Material reservation has not been planned.

Problem:

When logging a batch on it is detected that the material reservation is not planned within the material reservation list of the operation.

solution:

Check the material reservation list in your system or log another batch on.

17.1.934 Errorcode 3663: Material for BOM cannot be logged on

Shortform:

BOM already active

Description:

Material cannot be logged on for bill of material.

Problem:

A batch has already been logged on for an input material.

solution:

Log the batch that is already active for the material off.

17.1.935 Errorcode 3664: The working status not exist

Shortform:

Workstatus not exist

Description:

The working status does not exist.

Problem:

Please insert an valid working status (seetable mpl_status_zuord)

solution:

Please insert an valid working status (seetable mpl_status_zuord)

17.1.936 Errorcode 3665: Material type n. available

Shortform:

Mat.type n.avail.

Description:

Material type not available.

Problem:

Material type not available.

solution:

Please insert a correct material type.

17.1.937 Errorcode 3666: Input material consumed!

Shortform:

In.mat cons.

Description:

The input material has been consumed.

Problem:

The total quantity of output material exceeds the still available quantity of one of the registered input materials of the operation.

solution:

Enter less output material or change the input batch before, in order to have a sufficient amount of input material available. If the booking is intended please activate the mandatory posting option.

17.1.938 Errorcode 3667: Coilno. not assigned

Shortform:

Coilno. not assigned

Description:

Coilno. not assigned.

Problem:

Coilno. not assigned.

solution:

Please insert a correct coilno..

17.1.939 Errorcode 3668: OP has no box quantity

Shortform:

no box quantity

Description:

OP has no box quantity.

Problem:

OP has no box quantity.

solution:

Please configure op .

17.1.940 Errorcode 3669: ATK double scan

Shortform:

ATK double scan.

Description:

ATK double scan.

Problem:

ATK double scan.

solution:

Please scan not the same ATK.

17.1.941 Errorcode 3702: Operation not available

Shortform:

OP not available

Description:

Operation is not available.

Problem:

An operation, which does not exist within the HYDRA dataset, is attempted to be logged on.

solution:

Please check whether the number entered is correct. At the MOC within the order overview it can be checked whether an operation exists in HYDRA.

17.1.942 Errorcode 3704: Exclusion list contains password

Shortform:

Password not allowed

Description:

Password is included in exclusion list.

Problem:

The password you entered is not allowed, because the password is in the exclusion list.

solution:

Enter an other password or contact your HYDRA administrator.

17.1.943 Errorcode 3705: The password is not correct

Shortform:

Wrong password

Description:

The password is incorrect.

Problem:

The entered old password is not correct.

solution:

Check your input

17.1.944 Errorcode 3706: annotation too long

Shortform:

annotaiton too long

Description:

The entered comment is too long (250 characters at most)

17.1.945 Errorcode 4000: PCC: Load Driver

Shortform:

PCC: Load Driver

Description:

Error in loading a driver (PCC).

17.1.946 Errorcode 4001: PCC: Channel not configured

Shortform:

PCC: Ch. not config.

Description:

Channel has not been configured (PCC).

17.1.947 Errorcode 4002: PCC: Channel Write Error

Shortform:

PCC: Ch. Write Error

Description:

Write error of channel (PCC).

17.1.948 Errorcode 4003: PCC: Channel Read Error

Shortform:

PCC: Ch. Read Error

Description:

Read error of channel (PCC).

17.1.949 Errorcode 4004: PCC: Channel not active

Shortform:

PCC: Ch. not active

Description:

Channel is inactive (PCC).

17.1.950 Errorcode 4005: PCC: Error event

Shortform:

PCC: Error event

Description:

Driver reports error to PCC.

17.1.951 Errorcode 4100: workplace Ressource cant be logged off

Shortform:

no ressource logoff

Description:

The machine-related resource cannot be logged off as a higher-level machine-related resource is still logged on to the machine.

17.1.952 Errorcode 4101: Requirement Ressource in parts list

Shortform:

Req.Res. in STKL

Description:

Requirement Ressource in parts list

Problem:

The stated reference ressource is in parts list.

solution:

Reference ressource can't be in parts list. Delete the parts list entry first.

17.1.953 Errorcode 4102: assigned resource is invalid

Shortform:

assign. res. invalid

Description:

assigned resource is invalid

Problem:

You have tried to assign an anonym- or a further Requirement-Ressource to an Requirement-Ressource.

solution:

Anonym- or Requirement-Ressources can not be assigned to Requirement-Ressources.

17.1.954 Errorcode 4103: res. is not defined as req. resource

Shortform:

res. not req. res.

Description:

res. is not defined as req. resource

Problem:

You have tried to assign ressource to a normal ressource as a requirement.

solution:

Only Requirement-Ressources are valid for this configuration.

17.1.955 Errorcode 4104: invalid reference resource

Shortform:

inv. ref. resource

Description:

invalid reference resource

Problem:

The stated reference ressource is not valid.

solution:

Use a reference ressource which is scheduled on the order.

17.1.956 Errorcode 4105: no free explicit ressource

Shortform:

no free expl. res.

Description:

no free explicit ressource

Problem:

For the explicit resource registration is no free explicit ressource available

solution:

Log off another explicit resource first.

17.1.957 Errorcode 4106: ressource has no explicit booking

Shortform:

res. is not explicit

Description:

ressource has no explicit booking

Problem:

The stated resource is not configured for explicit bookings

solution:

Configure the ressource for explicit bookings

17.1.958 Errorcode 4107: Requirement ressource cant be logged on

Shortform:

req. res. n. log. on

Description:

Requirement ressource cant be logged on

Problem:

You have tried to log on a requirement ressource

solution:

Requirement Resources cant be logged on

17.1.959 Errorcode 4108: Ressource already referenced

Shortform:

res. already refer.

Description:

Ressource already referenced

Problem:

The stated resource is already by logged on as a reference

solution:

log off the referencing ressource first.

17.1.960 Errorcode 4109: Missing logons for req. ressource

Shortform:

req. res. missing

Description:

Missing logons for req. ressource

Problem:

Requirement Ressources is not enough logged on

solution:

Log on all required resources

17.1.961 Errorcode 4110: Resource is a req. resource assigned

Shortform:

Res. in BEDRESZUORD

Description:

Resource is a req. resource assigned

17.1.962 Errorcode 4111: Invalid maintenance duration

Shortform:

Invalid duration

Description:

Invalid maintenance duration

17.1.963 Errorcode 4112: Invalid maintenance quantity

Shortform:

Invalid quantity

Description:

Invalid maintenance quantity

17.1.964 Errorcode 4113: No activ maintenance notification

Shortform:

N.atc.m.n.

Description:

No activ maintenance notification

17.1.965 Errorcode 4114: Could not create maintenance number

Shortform:

no m. number

Description:

Could not create maintenance number

17.1.966 Errorcode 4115: Could not create a maintenance order

Shortform:

no m. order

Description:

Could not create a maintenance order

17.1.967 Errorcode 4116: IH number not available

Shortform:

IHNR not available

Description:

IH number not available

Problem:

The IH number does not exist within the HYDRA dataset.

solution:

Please check whethther the entered number is correct.

17.1.968 Errorcode 4117: Cavity assignment to resource is invalid

Shortform:

assign. invalid

Description:

Cavity assignment to resource is invalid

Problem:

Missing cavity assignment to ressource

solution:

Assign cavity to the ressource

17.1.969 Errorcode 4118: Status type is reserved for the system

Shortform:

Status type reserved.

Description:

Status type invalid.

Problem:

The indicated status type is reserved for the system (MST, RESSTA, ...).

solution:

Use an other name for the status type.

17.1.970 Errorcode 4119: Status type does not exist

Shortform:

Status type n. exist.

Description:

Status does not exist.

Problem:

The indicated ressource status type does not exist for ressource_type/family.

solution:

Use an existing status type or create a new one.

17.1.971 Errorcode 4120: Status text is invalid

Shortform:

Status invalid.

Description:

Status text is invalid.

Problem:

The indicated ressource status text does not exist for ressource_type/family/status_text.

solution:

Use an existing status type or create a new one.

17.1.972 Errorcode 4121: Combination RES/RESFAM is invalid

Shortform:

Combination invalid.

Description:

Combination RES/RESFAM is invalid

Problem:

The indicated combination ressource/ressource family is invalid.

solution:

Indicate either ressource or ressource family, not both at the same time.

17.1.973 Errorcode 4122: Download is not possible

Shortform:

Download not poss.

Description:

Download of the DNC resource is not possible.

Problem:

Download of the DNC resource is not possible.

solution:

Check the status of the DNC resource.

17.1.974 Errorcode 4123: Upload is not possible

Shortform:

Upload not poss.

Description:

Upload of the DNC resource is not possible.

Problem:

Upload of the DNC resource is not possible.

solution:

Terminal / PCC was offline, but must be online.

17.1.975 Errorcode 4124: stroke booking is not possible

Shortform:

strokes not poss.

Description:

ressource has no explicit booking of strokes

Problem:

The resource type is not configured for explicit bookings of stokes

solution:

Configure the ressource for explicit bookings of strokes

17.1.976 Errorcode 4200: data already reloaded

Shortform:

data alr. reloaded

Description:

Die Reloaddaten befinden sich bereits im Reloadbereich

17.1.977 Errorcode 4201: data already reloaded

Shortform:

data alr. reloaded

17.1.978 Errorcode 4202: cannot open reloadfile

Shortform:

cannot open relfile

17.1.979 Errorcode 4203: Error exporting file to customer dir.

Shortform:

export error

17.1.980 Errorcode 4204: Error reading metadata

Shortform:

error in metadata

17.1.981 Errorcode 7000: Resource is in use!

Shortform:

Resource in use

Description:

Resource is being used!

Problem:

The ressource is being used!

solution:

-

17.1.982 Errorcode 7003: The filename of the image is too long.

Shortform:

Filename to long.

Description:

Problem:

The file name of the picture is too long. Only files, whose file names including extension do not exceed a maximum of 12 characters, may be assigned.

solution:

-

17.1.983 Errorcode 7004: Temporary users are not alterable.

Shortform:

Temporary user.

Description:

Problem:

The user is a temporary user. Such users are not manually alterable.

solution:

-

17.1.984 Errorcode 7005: Autologin user manually login forbidden

Shortform:

Autologin user error

Description:

Autologin user can not perform a manually login.

Problem:

The user is a autologin user. Such users can not perform a manually login via username and password. Only auto login without username and password is supported.

solution:

-

17.1.985 Errorcode 7007: Person has no qualification for OP

Shortform:

No qualification

Description:

The operation can not be logged on, because the person has not the necessary qualification.

Problem:

Operations can only be logged on by persons, who own the the qualification of the operation.

solution:

Assign a valid qualification to the person, consider the period and activate (field ranking order) the assignement.

17.1.986 Errorcode 7008: Logged on person no qualification for OP

Shortform:

No qualification

Description:

The operation can not be logged on, because there are persons logged on, who do not own the necessary qualification.

Problem:

Operations can only be logged, when all logged on persons do own the the qualification of the operation.

solution:

Assign a valid qualification to the logged on persons, consider the period and activate (field ranking order) the assignment.

17.1.987 Errorcode 7009: Person no qualification for logged on OP

Shortform:

No qualification

Description:

The person can not be logged on, because the person has not the necessary qualification for the logged on operations.

Problem:

Persons can only be logged on, when they own the the qualification of the logged on operations.

solution:

Assign the necessary valid qualification to the person, consider the period and activate (field ranking order) the assignment.

17.1.988 Errorcode 7010: Clearing without posting is not possible

Shortform:

Clearing n. possib

Description:

Clearing without posting is not possible.

17.1.989 Errorcode 7011: Change of Batch Number is not allowed

Shortform:

Ch. Batch n. allowed

Description:

It is not allowed to change the Batch Number

17.1.990 Errorcode 7012: Duplicate component not allowed.

Shortform:

Dupl. Comp.n. allow.

Description:

Component is not set for automatic duplication.

Problem:

Component is not set for automatic duplication.

solution:

Set component user field 31 = Y

17.1.991 Errorcode 7013: Carrier status not (2) EMPTY

Shortform:

Carrier not empty

Description:

Carrier status not (2) empty

Problem:

Carriers have to be empty to be used for packing.

solution:

Force carrier status EMPTY via terminal dialog or set carrier status manually.

17.1.992 Errorcode 7014: Original booking is canceled

Shortform:

Booking is canceled

Description:

Original booking has already been canceled

Problem:

Original booking has already been canceled and can not be changed

solution:

Insert a new booking.

17.1.993 Errorcode 7015: Reversal booking not editable.

Shortform:

Reversalbooking

Description:

A reversal booking can not be changed.

Problem:

A reversal booking can not be changed.

solution:

A reversal booking can not be changed.

17.1.994 Errorcode 7016: Booking is canceled and not editable.**Shortform:**

Booking is canceled,

Description:

Booking is canceled and not editable.

Problem:

Booking is canceled and not editable.

solution:

Insert a new booking.

17.1.995 Errorcode 7017: Debited bookings are not editable.**Shortform:**

Debited booking n.e.

Description:

Debited bookings are not editable.

Problem:

The booking was created by the debiting and can not be changed.

solution:

The booking was created by the debiting and can not be changed.

17.1.996 Errorcode 7018: Wrong workplace, no allocated time.**Shortform:**

w. workplace.

Description:

Wrong workplace, no allocated time.

Problem:

The Sign in at the workstation is not possible.

solution:

The Sign in at the workstation is not possible.

17.1.997 Errorcode 7019: Possibly teamwork!

Shortform:

p. teamwork!

Description:

Possibly teamwork!

17.1.998 Errorcode 7020: One/more previous AGs are not complete

Shortform:

Prev. AGs n. compl.

Description:

One or more previous AGs are not complete.

17.1.999 Errorcode 7021: AG already been registered in package

Shortform:

AG already reg.

Description:

The AG has already been registered in the package.

17.1.1000 Errorcode 7022: AG has wrong time type specification.

Shortform:

w. specification.

Description:

AG has wrong time type specification.

17.1.1001 Errorcode 7023: No package registered on the machine.

Shortform:

n. package reg.

Description:

No package was registered on the machine.

17.1.1002 Errorcode 7024: Entry is enabled.

Shortform:

Entry is enabled.

Description:

Entry is already enabled.

17.1.1003 Errorcode 7025: Error by calculating remaining effort

Shortform:

Err remaining effort

Description:

Error by calculating the new remaining effort.

17.1.1004 Errorcode 7026: Workflow could not be started.

Shortform:

Workflow n. started

Description:

Workflow could not be started.

17.1.1005 Errorcode 7027: Component not reserved.

Shortform:

Component n. reserved

Description:

The material component has not been reserved.

17.1.1006 Errorcode 7028: Target qty. smaller than loaded. qty.

Shortform:

targ.qty. too small

Description:

Target quantity smaller than loaded quantity

17.1.1007 Errorcode 7029: No melting aggregate found

Shortform:

no melt. aggregate

Description:

No melting aggregate found

17.1.1008 Errorcode 7030: No melting operation found**Shortform:**

no melting op.

Description:

No melting operation found

17.1.1009 Errorcode 7031: No preceding operation found**Shortform:**

no preceding op.

Description:

No preceding operation found

17.1.1010 Errorcode 7032: Melting operation already assigned**Shortform:**

Melt. op. assigned

Description:

Melting operation already assigned

17.1.1011 Errorcode 7033: Incorrect component type**Shortform:**

Incorrect comp.type

Description:

Incorrect component type

17.1.1012 Errorcode 7034: Component is already available**Shortform:**

Comp. alr.available

Description:

Component is already available

17.1.1013 Errorcode 7035: article do not match

Shortform:

article not match

Description:

article do not match

17.1.1014 Errorcode 7036: Material in output buffer not distinct

Shortform:

mat. in buf. n.dist.

Description:

Material in output buffer not distinct

17.1.1015 Errorcode 7037: OP is not in status prepared

Shortform:

op. n. status prep.

Description:

OP is not in status prepared

17.1.1016 Errorcode 7038: Batch not in material buffer

Shortform:

Batch n.in mat.buff.

Description:

Batch not in material buffer

17.1.1017 Errorcode 7039: Resource not in material buffer

Shortform:

Res. n.in mat.buff.

Description:

Resource not in material buffer

17.1.1018 Errorcode 7040: Invalid material buffer type

Shortform:

Inv. mat. buff. typ

Description:

Invalid material buffer type

solution:

Enter a valid material buffer type.

17.1.1019 Errorcode 7041: Batch transport status not allowed

Shortform:

trans.sta.n.allowed

Description:

Batch transport status not allowed

solution:

Check the transport status.

17.1.1020 Errorcode 7042: Not allowed run through batch status

Shortform:

Thr.bat.sta.n.allow.

Description:

The run-through status batch is not allowed.

Problem:

The run-through status batch is not allowed.

solution:

17.1.1021 Errorcode 7043: Work plan not found

Shortform:

Work plan n. found

Description:

Work plan not found

17.1.1022 Errorcode 7044: Transportation order already assigned

Shortform:

T.order assigned

Description:

Transportation order already assigned

17.1.1023 Errorcode 7045: Capacity order type not set

Shortform:

No capa. order type

Description:

Capacity order type not configured

17.1.1024 Errorcode 7046: Kanban order type not set

Shortform:

No KBN order type

Description:

Kanban order type not configured

17.1.1025 Errorcode 7047: Kanban resource status not configured

Shortform:

KBN res.stat n.conf.

Description:

Kanban resource status not configured

17.1.1026 Errorcode 7048: Kanban order is already available

Shortform:

KBN-Ord. alr. avail.

Description:

Kanban order is already available

17.1.1027 Errorcode 7049: Capacity order not available

Shortform:

Capa.order n. avail.

Description:

Capacity order not available

17.1.1028 Errorcode 7050: Max. no. of kanban reached

Shortform:

Max. no. of kbn.

Description:

Maximum number of kanban reached.

17.1.1029 Errorcode 7051: Collective batch already running

Shortform:

col. batch running

Description:

Collective batch already running

17.1.1030 Errorcode 7052: Child batches have wrong status

Shortform:

child batch wrong sta

Description:

Child batches have wrong status

17.1.1031 Errorcode 7053: Output batch change not allowed

Shortform:

O.batch chg. n.all.

Description:

Output batch change not allowed

17.1.1032 Errorcode 7054: Batch is no collective batch

Shortform:

no collective batch

Description:

Batch is no collective batch

17.1.1033 Errorcode 7055: Batch has no childs

Shortform:

batch has no childs

Description:

Batch has no childs

17.1.1034 Errorcode 7056: Input file not available**Shortform:**

Input file not avail.

Description:

Input file not available

17.1.1035 Errorcode 7060: File could not be saved at the dest.**Shortform:**

File not saved at d.

Description:

File could not be saved at the destination

17.1.1036 Errorcode 7061: Destination does not exist**Shortform:**

Dest. does not exist

Description:

Destination does not exist

17.1.1037 Errorcode 7062: Dir. could not be created at the dest.**Shortform:**

Dir. at dist. n. a.

Description:

Directory could not be created at the destination

17.1.1038 Errorcode 7063: File could not be renamed.**Shortform:**

File could not be ren

Description:

File could not be renamed according to the renaming rules.

17.1.1039 Errorcode 7064: File could not be read on the HYDRA serv

Shortform:

File could not read.

Description:

File could not be read on the HYDRA server.

17.1.1040 Errorcode 7065: Invalid combination of doc and link type

Shortform:

Invalid combination.

Description:

Invalid combination of documenttype and link type.

17.1.1041 Errorcode 7066: Access to the directory is not possible

Shortform:

Access to the dir.

Description:

Access to the directory is not possible.

17.1.1042 Errorcode 7067: For this record, no text is entered.

Shortform:

No text for entry.

Description:

For this record, no text is entered.

17.1.1043 Errorcode 7068: Documents entry does not exist

Shortform:

Doc entry not exist

Description:

Documents entry does not exist.

17.1.1044 Errorcode 7069: Collective not available

Shortform:

col. batch n. availa.

Description:

Collective not available

17.1.1045 Errorcode 7070: The Collective batch is not free

Shortform:

col. batch not free

Description:

The Collective batch is not free

17.1.1046 Errorcode 7071: Not allowed batch status

Shortform:

Bat.sta.n.allow.

Description:

Not allowed batch status

17.1.1047 Errorcode 7072: serial number could not be created

Shortform:

SNR creation failed

Description:

Serial number could not be created.

Problem:

There is some problem with the number range.

solution:

Configure the correct number range or enter a serial number

17.1.1048 Errorcode 7073: serial number is required

Shortform:

SNR required

Description:

A serial number is required for this process.

Problem:

The transmitted data contain no serial number.

solution:

Enter a serial number

17.1.1049 Errorcode 7074: serial component cannot be logged on

Shortform:

SNR cant logged on

Description:

Serial number component cannot be logged on.

Problem:

A single serial number component cannot be manually logged on.

solution:

Single serial number components are automatically logged on by the process.

17.1.1050 Errorcode 7075: invalid classification

Shortform:

invalid class choice

Description:

Invalid classification.

Problem:

This class is not allowed for this batch.

solution:

Another class must be elected for this batch

17.1.1051 Errorcode 7076: SNR does not match the input component

Shortform:

SNR does not match

Description:

Serial number does not match with the input component.

Problem:

Serial number does not match with the input component.

solution:

Another serial number must be used or the input component changed.

17.1.1052 Errorcode 7077: serial component cannot be logged off**Shortform:**

SNR cant logged off

Description:

Serial number component cannot be logged off.

Problem:

A single serial number component cannot be manually logged off.

solution:

Single serial number components are automatically logged off by the process.

17.1.1053 Errorcode 7078: The coll. batch has assigned batches**Shortform:**

CB has assig.batches

Description:

The actual collective batch has still assigned batches

Problem:

This OP cannot be logged off because the actual collective batch has still assigned batches.

solution:

Please make sure that the actual collective batch (output batch) has to complete before log off order.

17.1.1054 Errorcode 7079: already a existing deleted RESSTA**Shortform:**

already del. RESSTA

Description:

There already exists for this resource type and resource family a deleted status.

Problem:

Only one deleted status for the same resource type and resource family is allowed.

solution:

Please change the deleted status or the actual one.

17.1.1055 Errorcode 7080: set status deleted only if col. blocked

Shortform:

set del. only if blo.

Description:

It is not possible to set the status deleted while collection is released.

Problem:

It is only possible to set the status deleted when collection is blocked.

solution:

Change the collectin to blocked.

17.1.1056 Errorcode 7081: The TU is not reserved for running OP

Shortform:

TU not reserv.for OP

Description:

The TU (transport unit) is not reserved for running Operation.

Problem:

The TU (transport unit) is not reserved for running Operation.

solution:

Choose TU, that is reserved for running operation.

17.1.1057 Errorcode 7082: The TU could not be logged on

Shortform:

TU not logged on

Description:

The TU (transport unit) could not be logged on.

Problem:

The TU (transport unit) could not be logged on.

solution:

Check status of the TU (batch).

17.1.1058 Errorcode 7083: Posting only at longest running OP

Shortform:

Posting not possible

Description:

Posting at this OP not possible. Booking is only possible at operation <ANR>.

Problem:

Booking is only allowed at the operation, which is logged on the longest.

solution:

Choose the operation, which is logged on the longest.

17.1.1059 Errorcode 7084: Op. already logged on at given workplace

Shortform:

Op. already logged on

Description:

The operation is already logged on at the given workplace in the future.

Problem:

The delayed booking can not be processed because the operation is already logged on at this workplace.

solution:

-

17.1.1060 Errorcode 7085: Target partitioning is required

Shortform:

partitioning required

Description:

For this posting target partitioning is mandatory.

Problem:

For the processing of this posting the target partitioning is mandatory.

solution:

Enter a target partitioning

17.1.1061 Errorcode 7086: There are open escalations.

Shortform:

ESK msg. are open.

Description:

For this escalation configuration there are still open escalation messages.

Problem:

For this escalation configuration there are still open escalation messages.

solution:

Please close all open escalation messages for this configuration.

17.1.1062 Errorcode 7087: Material type do not match

Shortform:

Mat.type mismatch

Description:

material type do not match

Problem:

material type must match

solution:

Please choose a batch with the same material type as the component

17.1.1063 Errorcode 7088: Batch class must be yield

Shortform:

Wrong batch class

Description:

You can only log on an input batch with batch class yield

Problem:

The input batch has not batch class yield

solution:

Please choose a batch with batch class yield

17.1.1064 Errorcode 7089: Missing quantity unit..

Shortform:

Missing qty unit

Description:

There is no quantity unit for batch and component available

Problem:

For calculation of consumption the batch or the component must have a quantity unit.

solution:

Please select a valid quantity unit.

17.1.1065 Errorcode 7090: Missing mandatory parameter batch id

Shortform:

Missing batch id

Description:

The posting does not contain the mandatory parameter batch id

Problem:

Batch id is mandatory for this posting

solution:

Please add a batch id to the posting

17.1.1066 Errorcode 7091: Missing mandatory parameter shift begin

Shortform:

Missing shift begin

Description:

The posting does not contain the mandatory parameter shift begin (shift.begin_ts)

Problem:

The parameter shift begin is mandatory for this posting

solution:

Please add a shift begin to the posting

17.1.1067 Errorcode 7092: Missing mandatory parameter shift end

Shortform:

Missing shift end

Description:

The posting does not contain the mandatory parameter shift end (shift.end_ts)

Problem:

The parameter shift end is mandatory for this posting

solution:

Please add a shift end to the posting

17.1.1068 Errorcode 7093: Shift begin not possible

Shortform:

Shiftbegin n.possible

Description:

Shift begin not possible

Problem:

Shift begin not possible because it is already another shift activ

solution:

Please wait until shift end

17.1.1069 Errorcode 7094: Shift end is not possible

Shortform:

Shift end n.possible

Description:

Shift end is not possible

Problem:

Shift end is not possible because there is no shift activ

solution:

Please wait until next shift begin

17.1.1070 Errorcode 7095: Missing mandatory parameter batch class

Shortform:

Missing batch class

Description:

The posting does not contain the mandatory parameter batch class

Problem:

Batch class is mandatory for this posting

solution:

Please add a batch class to the posting

17.1.1071 Errorcode 7096: Remaining quantity is not allowed

Shortform:

Rem. qty not allowed

Description:

This scenario allows no given remaining quantity.

Problem:

The Batch is parallel logged on at multiple operations.

solution:

Please remove the remaining quantity of the posting.

17.1.1072 Errorcode 7097: No counter allowed for MPL type manuell

Shortform:

No counter allowed

Description:

No counter configuration is allowed for this workplace.

Problem:

For the manuell MPL there is no counter configuration allowed for this workplace.

Only counter configuration with the following conditions are allowed:

- 1) Counter with indicator "No booking"
- 2) Counter as consumption counter

solution:

Please change or remove the counter configurations for this workplace.

17.1.1073 Errorcode 7098: Only batch class yield is allowed

Shortform:

Only yield class allow

Description:

The posting allows only yield batch class

Problem:

The MPL type OUTPUTBATCH_COLLECTION_TYPE "YIELD_BATCHES_ONLY" allows only batches with class yield.

solution:

Please use batch class yield or change the MPL type.

17.1.1074 Errorcode 7099: No Shift: No status change possible

Shortform:

No stat. change poss

Description:

It is impossible to change the status because there is no shift activ

Problem:

It is impossible to change the status because there is no shift activ

solution:

Please wait until next shift begin

17.1.1075 Errorcode 7100: Not a valid required resource

Shortform:

Not a val. req. res.

Description:

The posted resource is not a valid required resource

Problem:

The posted resource is not a valid required resource

solution:

Please post valid required resource

17.1.1076 Errorcode 7101: Not enough companay licenses avail.

Shortform:

company licenses mis

Description:

Exceeded number of licensed workplaces

Problem:

Exceeded number of licensed workplaces

solution:

Please check number of company licenses for workplaces.

17.1.1077 Errorcode 7102: Not enough companay licenses avail.

Shortform:

company licenses mis

Description:

Exceeded number of licensed logical channels

Problem:

Exceeded number of licensed logical channels

solution:

Please check number of company licenses for logical channels.

17.1.1078 Errorcode 7103: Not enough companay licenses avail.

Shortform:

company licenses mis

Description:

Exceeded number of licensed DNC resources

Problem:

Exceeded number of licensed DNC resources

solution:

Please check number of company licenses for DNC resources.

17.1.1079 Errorcode 7104: Not enough company licenses avail.

Shortform:

company licenses mis

Description:

Exceeded number of licensed persons

Problem:

Exceeded number of licensed persons

solution:

Please check number of company licenses for persons.

17.1.1080 Errorcode 7105: License service not available

Shortform:

License service n.a.

Description:

License service not available

Problem:

License service not available

solution:

Please check if license service is running.

17.1.1081 Errorcode 7106: The batch quality status is invalid**Shortform:**

Batch qstatus invalid

Description:

The quality status of the batch is invalid.

Problem:

The quality status is invalid for this posting.

solution:

Please use another quality status for this batch.

17.1.1082 Errorcode 7107: A negative consumption is not allowed.**Shortform:**

Negative consumption

Description:

A negative consumption is inadmissible.

Problem:

It is not allowed to send a negativ consumption with this posting.

solution:

Please use a positiv consumption.

17.1.1083 Errorcode 7108: Batch already archived**Shortform:**

Batch alr. archived

Description:

Batch already archived

Problem:

Batch already archived

solution:

-

17.1.1084 Errorcode 7109: The max. number of batches is exceeded

Shortform:

Max. no. of batches

Description:

The maximum number of batches has been exceeded.

Problem:

The maximum number of batches has been exceeded.

solution:

The maximum number is 500 batches.

17.1.1085 Errorcode 7110: msl attributes are different

Shortform:

msl attrib. are diff.

Description:

The msl attributes are different.

Problem:

The msl attributes of the batches are different.

solution:

Please check the msl expire date and the msl time of each batch.

17.1.1086 Errorcode 7111: msl time is not defined

Shortform:

msl time not defined

Description:

The msl time is not defined.

Problem:

There is no msl time defined for this batch or material.

solution:

Please define a msl time at the batch or for this material.

17.1.1087 Errorcode 7112: requested amount of data is too large

Shortform:

requ. data too large

Description:

The requested amount of data is too large. Please restrict the data using selection criteria.

Problem:

The requested amount of data is too large.

solution:

Please restrict the data using selection criteria.

17.1.1088 Errorcode 7113: ReferenceAggr. already assigned

Shortform:

RefAggr.already.ass.

Description:

Problem:

solution:

17.1.1089 Errorcode 7114: Passwords does not match

Shortform:

Passwords not match

Description:

The entered passwords do not match.

Problem:

solution:

17.1.1090 Errorcode 7115: Error in password processing

Shortform:

Password processing

Description:

An error occurred during password processing.

Problem:

solution:

Please contact the administrator of Hydra

17.1.1091 Errorcode 7116: Not enough company licenses avail.

Shortform:

company licenses mis

Description:

Exceeded number of licensed employees in production

Problem:

Exceeded number of licensed employees in production

solution:

Please check number of company licenses for employees in production.

17.1.1092 Errorcode 7120: Missing mandatory param. material buffer

Shortform:

Missing mat. buffer

Description:

The posting does not contain the mandatory parameter material buffer

Problem:

Material buffer is mandatory for this posting

solution:

Please add a material buffer to the posting

17.1.1093 Errorcode 7121: Missing mandat. param. consumpt. quant.

Shortform:

Missing mat. buffer

Description:

The posting does not contain the mandatory parameter material buffer

Problem:

Material buffer is mandatory for this posting

solution:

Please add a material buffer to the posting

17.1.1094 Errorcode 7122: Missing mandatory parameter material

Shortform:

Missing material

Description:

The posting does not contain the mandatory parameter material

Problem:

Material is mandatory for this posting

solution:

Please add a material to the posting

17.1.1095 Errorcode 7123: Group is no capacity group

Shortform:

No capacity group

Description:

Specified group is not a capacity group.

Problem:

The specified group must be a capacity group

17.1.1096 Errorcode 7124: Validity date causes gap in versions

Shortform:

Date gap in versions

Description:

The date specified causes a gap between the versions.

Problem:

Gaps between versions are not allowed.

solution:

Check the validity period. There must be no gaps between the versions. A new start date must be no later than the day following the last version. The end date can only be freely chosen for the last version.

17.1.1097 Errorcode 7125: Incorrect length of batch number

Shortform:

Incor. len. batch nr

Description:

The batch number length entered does not correspond to the specifications.

Problem:

An attempt is made to specify a batch number length outside the valid range.

solution:

The batch number length must be a minimum of 8 and a maximum of 20.

17.1.1098 Errorcode 7126: Invalid machine number

Shortform:

Syntax error filter

Description:

Invalid machine number

17.1.1099 Errorcode 7127: Invalid character in machine number

Shortform:

Syntax error filter

Description:

Invalid character in machine number

17.1.1100 Errorcode 7128: Invalid character in resource

Shortform:

Syntax error filter

Description:

Invalid character in resource

17.1.1101 Errorcode 7129: Output lot with quantity 0 not allowed.

Shortform:

A-lot with qty 0.

Description:

The output lot has the quantity 0.

Problem:

An attempt is made to log off an output lot with quantity 0.

solution:

Enter a quantity greater than 0. This message can be overridden.

17.1.1102 Errorcode 7130: Output lot with quantity 0 not allowed.

Shortform:

A-lot with qty 0.

Description:

The output lot has the quantity 0.

Problem:

An attempt is made to log off an output lot with quantity 0.

solution:

Enter a quantity greater than 0. This message cannot be overridden.

17.2 Local error messages at the terminal

17.2.1 Overview

The terminal even checks host computer data and thus detects errors that are displayed for the user.

17.2.2 Error when saving the machine label

Cause

Machine label neither could be saved locally.

17.2.3 Error when saving the machine status

Cause

Error when saving the machine status locally.

17.2.4 Error 901

Cause

Machine label could not be read (no network or not available).

17.2.5 Error 902

Cause

Machine label neither could be read locally.

17.2.6 Error 903

Cause

A shift model has not been defined for the workplace/machine.

17.2.7 Error 904

Cause

Shift model: Error in loading other shifts.

17.2.8 Error 905

Cause

The shift calendar could not be read or it is not available.

17.2.9 Error 906 (DOS terminals only)

Cause

The machine status could not be read.

17.2.10 Error 907 (DOS terminals only)

Cause

Not assigned.

17.2.11 Error 908 (DOS terminals only)

Cause

The machine status neither could be read locally.

17.2.12 Error 909

Cause

No status table available.

17.2.13 Error 951

Cause

The “general disturbance” status is not available for the machine.

17.2.14 Error code 10001

Cause

Demo mode: The directory %1% including the demo data is missing!!

Solution

17.2.15 Error code 10002

Cause

The queue %1% could not be created.

Solution

17.2.16 Error code 10003

Cause

Error in terminal label: Terminal %1% has not been configured.

Solution

17.2.17 Error code 10004

Cause

Error in terminal label: Different user numbers: Ctwini.ini: %1% tkenn.dat: %2%

Solution

17.2.18 Error code 10005

Cause

Error in reading the local clock! It is impossible to read the LAN clock. LAN not ready? ADE/PZE terminals cannot be started without clock!

Solution

17.2.19 Error code 10006

Cause

Terminal label could not be read. Ctwini.ini: usr=%1%

Solution**17.2.20 Error code 10007****Cause**

No dialog files available!!

Solution**17.2.21 Error code 10008****Cause**

Dialog files are not available on the server! The terminal starts with the last local configuration! Please also check the HYDRA path: hypath=%1%

Solution**17.2.22 Error code 10009****Cause**

Downloading the file %1% has failed. Local file could not be created.

Solution**17.2.23 Error code 10010****Cause**

Downloading the file %1% has failed. Error in accessing the host computer file.

Solution**17.2.24 Error code 10011****Cause**

The file %1% could not be loaded. %2%

Solution

17.2.25 Error code 10012

Cause

File %1% not found. Code: %2%

Solution

17.2.26 Error code 10013

Cause

%1% structure of OP info: AGInfoField=%2%

Solution

17.2.27 Error code 10014

Cause

The file %1% has an unknown file extension %2% %3%

Solution

17.2.28 Error code 10015

Cause

Error in opening a dialog list automatically. Failure type: %1% Dialog: %2% Field ID: %3%

Solution

17.2.29 Error code 10016

Cause

Due to the customer-specific layout the button configuration is ignored.

Solution

17.2.30 Error code 10017

Cause

The application %1% has not been found.

Solution**17.2.31 Error code 10018****Cause**

The system has been running for more than 30 days. The system is now restarted in order to avoid problems with a hardware timer.

Solution**17.2.32 Error code 10019****Cause**

Error in opening the file "%1%"

Solution**17.2.33 Error code 10020****Cause**

File %1% is defective.

Solution**17.2.34 Error code 10021****Cause**

Unknown button ID "%1%" in "%2%".

Solution**17.2.35 Error code 10022****Cause**

Dialog %1% has not been configured!

Solution

17.2.36 Error code 10023

Cause

Error in converting a transfer value: %1%

Solution

17.2.37 Error code 18001

Cause

Window not found

Solution

17.2.38 Error code 19001

Cause

Partial quantities can only be printed online.

Solution

17.2.39 Error code 20001

Cause

A quantity must not be posted onto an order having the order type %1%

Solution

17.2.40 Error code 20002

Cause

The order is already running on the machine %1%

Solution

17.2.41 Error code 20003

Cause

The file %1% could not be written.

Solution**17.2.42 Error code 20004****Cause**

Order data for "%1%" could not be loaded!

Solution**17.2.43 Error code 20005****Cause**

The machine status "%1%" may only be set when no order is running at the machine!

Solution**17.2.44 Error code 20006****Cause**

The machine status "%1%" may only be set when an order is running at the machine!

Solution**17.2.45 Error code 20007****Cause**

The posting is impossible for the current machine status "%1%"!

Solution**17.2.46 Error code 20008****Cause**

No more than 8 orders may be logged on to the machine!

Solution

17.2.47 Error code 20009

Cause

Error in scrap posting: Order %1% not found.

Solution

17.2.48 Error code 20010

Cause

Error in scrap posting: No data found for the order %1%

Solution

17.2.49 Error code 20011

Cause

Error in scrap posting: Order type %2% not found for order %1%.

Solution

17.2.50 Error code 20012

Cause

Error in scrap posting: The option OPT:SNR is missing in the order type %2% for order %1%

Solution

17.2.51 Error code 20013

Cause

Error in scrap posting: There is an unknown option OPT:SNR=%3% in the order type %2% (order %1%)

Solution

17.2.52 Error code 20014

Cause

Entry has already been completed

Solution**17.2.53 Error code 20015****Cause**

Serial number has already been assigned.

Solution**17.2.54 Error code 20016****Cause**

Operations of the order %1% can only be logged on.

Solution**17.2.55 Error code 20017****Cause**

When updating the order list an error appeared: %1% the order list will be reloaded as soon as the terminal is again online!

Solution**17.2.56 Error code 29801****Cause**

There is no information on the collective OP. Info on individual OPs via "COP list"!

Solution**17.2.57 Error code 30001****Cause**

Machine list could not be loaded. Please check the network!

Solution

17.2.58 Error code 30002

Cause

Order list could not be loaded. Please check the network connection!

Solution

17.2.59 Error code 30003

Cause

Error in line configuration: Aggregates, however, no line available!

Solution

17.2.60 Error code 30004

Cause

Error in changing containers: The total quantity has been enlarged! The initial value is entered!

Solution

17.2.61 Error code 30005

Cause

Dialog %1% is not allowed as the machine is in shift break.

Solution

17.2.62 Error code 39801

Cause

Manual status change is not allowed.

Solution

17.2.63 Error code 39802

Cause

The Engel interfacing is currently not ready

Solution**17.2.64 Error code 60001****Cause**

Error in loading the machine list of the terminal %1%

Solution**17.2.65 Error code 60002****Cause**

Error in loading the inspection plan of machine %1%

Solution**17.2.66 Error code 60003****Cause**

Error in loading the measuring channels of terminal %1%

Solution**17.2.67 Error code 60004****Cause**

PDV file error: File %1% could not be created.

Solution**17.2.68 Error code 60005****Cause**

Only %1% PDV machines can be operated all other machines are ignored.

Solution

17.2.69 Error code 60006

Cause

Error in loading an inspection plan. Data are set up locally.

Solution

17.2.70 Error code 60007

Cause

The IOP file %1% has not been picked up. The file will be overwritten.

Solution

17.2.71 Error code 60008

Cause

Unknown requirement of the IOP: %1%

Solution

17.2.72 Error code 60009

Cause

The IOP file %1% has not been picked up %2%

Solution

17.2.73 Error code 60010

Cause

PDV inactive! (probably none of the machines at the terminal has been configured for PDV)

Solution

17.2.74 Error code 60011

Cause

Wrong configuration of tolerance limits LTL = %1%, UTL = %2%

Solution**17.2.75 Error code 60012****Cause**

A new inspection plan could not be loaded. The previous inspection plan is not valid anymore. A new online registration of the order is required!

Solution**17.2.76 Error code 70001****Cause**

Batch info on "%1%" could not be loaded.

Solution**17.2.77 Error code 70002****Cause**

Batch info on "%1%" is empty.

Solution**17.2.78 Error code 70003****Cause**

The batch "%1%" may only be logged off by entering a new batch of the same material.

Solution**17.2.79 Error code 70004****Cause**

The dialog %1% has been configured incorrectly. The batch number must include the DLL ID.

Solution

17.2.80 Error code 70005

Cause

No order available

Solution

17.2.81 Error code 70006

Cause

The order is not subject to batch management requirement

Solution

17.2.82 Error code 70007

Cause

Fct: edit batches, machine %1% not known.

Solution

17.2.83 Error code 70008

Cause

It is impossible to post batches in OFFLINE mode

Solution

17.2.84 Error code 70009

Cause

Batch not found

Solution

17.2.85 Error code 70010

Cause

The run-through batch must not be changed

Solution**17.2.86 Error code 70011****Cause**

"Material can be logged on several times" not allowed for coil-based manufacturing.

Solution**17.2.87 Error code 70012****Cause**

The material is not planned

Solution**17.2.88 Error code 70013****Cause**

The batch has already been processed.

Solution**17.2.89 Error code 70014****Cause**

No batch data available.

Solution**17.2.90 Error code 70015****Cause**

No batch data available.

Solution

17.2.91 Error code 70016

Cause

No batch data available.

Solution

17.2.92 Error code 70017

Cause

Log input batch on: Data could not be taken over

Solution

17.2.93 Error code 70018

Cause

Log input batch off: Data could not be taken over.

Solution

17.2.94 Error code 70019

Cause

Input batch is missing for material %1%

Solution

17.2.95 Error code 70020

Cause

No carrier material logged on.

Solution

17.2.96 Error code 70021

Cause

%1% carrier batches are logged on.

Solution**17.2.97 Error code 81001****Cause**

Machine %1% has not been assigned to the terminal.

Solution**17.2.98 Error code 81002****Cause**

No DNC element has been chosen.

Solution**17.2.99 Error code 81003****Cause**

Path %1% has not been defined.

Solution**17.2.100 Error code 81004****Cause**

Error "%1%" in reading the file path in paths.lst: %2% Error log: %3%

Solution**17.2.101 Error code 81005****Cause**

File %1% could not be loaded onto the terminal.

Solution

17.2.102 Error code 81006

Cause

The element %1% has been blocked.

Solution

17.2.103 Error code 81007

Cause

At least one element of the package %1% has been blocked.

Solution

17.2.104 Error code 81008

Cause

DNC: The file %1% for transferring data to the MWP could not be written.

Solution

17.2.105 Error code 81009

Cause

Error in plausibility check: %1%

Solution

17.2.106 Error code 81010

Cause

Not all files could be copied onto the terminal for the download.

Solution

17.2.107 Error code 81011

Cause

The element %1% does not contain any load file.

Solution**17.2.108 Error code 81012****Cause**

File %1% has not been found for upload.

Solution**17.2.109 Error code 81013****Cause**

MWP sends data without reference to machines: MNR or MNRID have to be stated.

Solution**17.2.110 Error code 81014****Cause**

It is impossible to filter according to the DNC family in offline mode.

Solution**17.2.111 Error code 81015****Cause**

When filtering by the DNC family additional parameters have to be stated as the list might get too long.

Solution**17.2.112 Error code 81016****Cause**

The list is too long. Not all resources are displayed.

Solution

17.2.113 Error code 81017

Cause

Uploads are not allowed for the selected element.

Solution

17.2.114 Error code 82001

Cause

The order %2% is still assigned to the NC program %1%. The assignment is replaced by the new order %s.

Solution

17.2.115 Error code 82002

Cause

The file %1% cannot be written.

Solution

17.2.116 Error code 82003

Cause

The file %1% cannot be written.

Solution

17.2.117 Error code 82004

Cause

No order has been found for the NC program %1%

Solution

17.2.118 Error code 82005

Cause

The maximum number of %2% orders has already been logged on to machine %1%

Solution