## Timers


Lecture 4

Bilal Habib DCSE, UET

- The 8051 has two timers/counters, they can be used either as
  - > Timers to generate a time delay or as
  - Event counters to count events happening outside the microcontroller
- Both Timer 0 and Timer 1 are 16 bits wide
  - Since 8051 has an 8-bit architecture, each 16-bits timer is accessed as two separate registers of low byte and high byte

Timer 0 & 1 Registers

- Accessed as low byte and high byte
  - The low byte register is called TL0/TL1 and
  - The high byte register is called TH0/TH1
  - Accessed like any other register
    - MOV TLO,#4FH
    - MOV R5, TH0

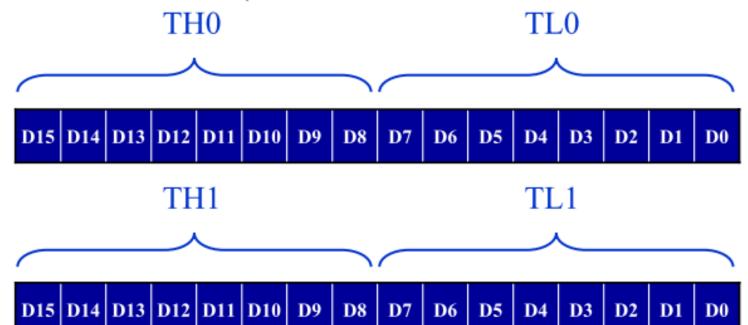

### PIN DESCRIPTION

Port 3



- Port 3 can be used as input or output
  - Port 3 does not need any pull-up resistors
- Port 3 has the additional function of providing some extremely important signals

			_	
P3 Bit	Function	Pin		Serial
P3.0	RxD	10	1/	communications
P3.1	TxD	11	<b></b>	External
P3.2	INT0	12	\/	interrupts
P3.3	INT1	13	<b></b>	
P3.4	T0	14	<b>l/</b>	Timers
P3.5	T1	15	<b>5</b>	Dand/Write signals
P3.6	WR	16		Read/Write signals of external memories
P3.7	RD	17		

## TMOD Register

- Both timers 0 and 1 use the same register, called TMOD (timer mode), to set the various timer operation modes
- TMOD is a 8-bit register
  - > The lower 4 bits are for Timer 0
  - The upper 4 bits are for Timer 1
  - In each case,
    - The lower 2 bits are used to set the timer mode
    - The upper 2 bits to specify the operation



**TMOD** (cont')

Register

Gating control wher Timer/counter is enal only while the INTx high and the TRx cor pin is set

When cleared, the time enabled whenever the TRx control bit is set

(MSB)								(LSB)			
GATE	C/T		M1	М0,	GATE	C/T	M1	М0			
	Т	ime	r1 /		Timer0						
$\top$									1		
1		M	1 /M0	Mode	Operating Mode						
		0	0	0	13-bit timer mode 8-bit timer/counter THx with TLx as 5-bit prescaler						
		0	1	1	16-bit timer mode 16-bit timer/counter THx and TLx are cascaded; there is no prescaler						
n set. Ible pin is		1	0	2	8-bit auto reload 8-bit auto reload timer/counter; THx holds a value which is to be reloaded TLx each time it overfolws						
ntrol 1 1 3				3	Split timer mode						
imer is	L	-	Timer	or cou	unter selected						

Cleared for timer operation (input from internal system clock)

Set for counter operation (input from Tx input pin)

# COUNTER PROGRAMMING

C/T Bit in TMOD Register

- The C/T bit in the TMOD registers decides the source of the clock for the timer
  - When C/T = 1, the timer is used as a counter and gets its pulses from outside the 8051
    - The counter counts up as pulses are fed from pins 14 and 15, these pins are called T0 (timer 0 input) and T1 (timer 1 input)

#### Port 3 pins used for Timers 0 and 1


Pin	Port Pin	Function	Description
14	P3.4	T0	Timer/counter 0 external input
15	P3.5	T1	Timer/counter 1 external input

# COUNTER PROGRAMMING

- Timers can also be used as counters counting events happening outside the 8051
  - When it is used as a counter, it is a pulse outside of the 8051 that increments the TH, TL registers
  - TMOD and TH, TL registers are the same as for the timer discussed previously
- Programming the timer in the last section also applies to programming it as a counter
  - Except the source of the frequency


Mode 1 Programming

- The following are the characteristics and operations of mode1:
  - It is a 16-bit timer; therefore, it allows value of 0000 to FFFFH to be loaded into the timer's register TL and TH
  - 2. After TH and TL are loaded with a 16-bit initial value, the timer must be started
    - This is done by SETB TRO for timer 0 and SETB TR1 for timer 1
  - 3. After the timer is started, it starts to count up
    - It counts up until it reaches its limit of FFFFH

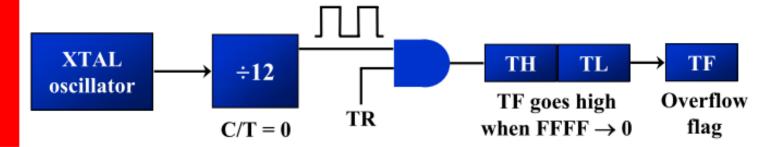

Mode 1 Programming (cont')

- **3.** (cont')
  - When it rolls over from FFFFH to 0000, it sets high a flag bit called TF (timer flag)
    - Each timer has its own timer flag: TF0 for timer 0, and TF1 for timer 1
    - This timer flag can be monitored
  - When this timer flag is raised, one option would be to stop the timer with the instructions CLR TRO or CLR TR1, for timer 0 and timer 1, respectively
- After the timer reaches its limit and rolls over, in order to repeat the process
  - TH and TL must be reloaded with the original value, and
  - TF must be reloaded to 0

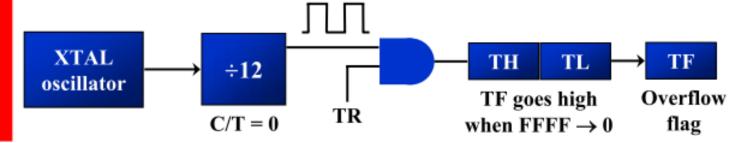

Mode 1 Programming

Steps to Mode 1
Program

## To generate a time delay

- Load the TMOD value register indicating which timer (timer 0 or timer 1) is to be used and which timer mode (0 or 1) is selected
- Load registers TL and TH with initial count value
- 3. Start the timer
- 4. Keep monitoring the timer flag (TF) with the JNB TFx, target instruction to see if it is raised
  - Get out of the loop when TF becomes high
- 5. Stop the timer
- 6. Clear the TF flag for the next round
- Go back to Step 2 to load TH and TL again

#### Example 9-4

In the following program, we create a square wave of 50% duty cycle (with equal portions high and low) on the P1.5 bit. Timer 0 is used to generate the time delay. Analyze the program

```
MOV TMOD, #01 ; Timer 0, mode 1(16-bit mode)
HERE: MOV TLO, #0F2H ; TLO=F2H, the low byte
MOV THO, #0FFH ; THO=FFH, the high byte
CPL P1.5 ; toggle P1.5
ACALL DELAY
SJMP HERE
```

In the above program notice the following step.

- 1. TMOD is loaded.
- 2. FFF2H is loaded into TH0-TL0.
- 3. P1.5 is toggled for the high and low portions of the pulse.

#### Example 9-4 (cont')

```
DELAY:

SETB TRO ;start the timer 0

AGAIN: JNB TF0,AGAIN ;monitor timer flag 0
;until it rolls over

CLR TRO ;stop timer 0
CLR TF0 ;clear timer 0 flag
RET
```

- 4. The DELAY subroutine using the timer is called.
- 5. In the DELAY subroutine, timer 0 is started by the SETB TRO instruction.
- 6. Timer 0 counts up with the passing of each clock, which is provided by the crystal oscillator. As the timer counts up, it goes through the states of FFF3, FFF4, FFF5, FFF6, FFF7, FFF8, FFF9, FFFA, FFFB, and so on until it reaches FFFFH. One more clock rolls it to 0, raising the timer flag (TF0=1). At that point, the JNB instruction falls through.



7. Timer 0 is stopped by the instruction CLR TRO. The DELAY subroutine ends, and the process is repeated.

Notice that to repeat the process, we must reload the TL and TH registers, and start the process is repeated ...

## IE: Interrupt Enable

#### IE : Interrupt Enable Register (Bit Addressable)

If the bit is 0, the corresponding interrupt is disabled. If the bit is 1, the corresponding interrupt is enabled.


		EA	-	-	ES	ETI	EX1	ET0	EX0	
EA	IE.7			THE RESERVE OF THE PARTY OF THE			ill be ackno		f EA = 1, interrup	
-	IE.6	Not	Not implemented, reserved for future use*.							
	IE.5	Not	Not implemented, reserved for future use*.							
ES	IE.4	Enable or disable the Serial port interrupt.								
ETI	IE.3	Enab	Enable or disable the Timer 1 overflow interrupt.							
EX1	IE.2	Enab	Enable or disable External interrupt 1.							
ET0	IE.1	Enab	ole or disab	le the Tim	er 0 overflo	w interrupt				
EX0	IE.0	Enab	Enable or disable External Interrupt 0.							

 $IE = 1000 \ 1000 = 0x88$ 

IE = 1000 0010 = 0x82 IE = 1000 1000 = 0x88

# Timer Example 1: 10msec delay


Digital Oscilloscope

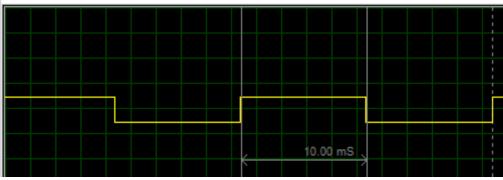

```
U1
19 XTAL1
                                 P0.0/AD0
                                 P0.1/AD1
                                 P0.2/AD2
       XTAL2
                                 P0.3/AD3
                                 P0.4/AD4
                                 P0.5/AD5
                                 P0.6/AD6
                                 P0.7/AD7
                                  P2.0/A8
                                  P2.1/A9
                                 P2.2/A10
29
30
31
ALE
EA
                                 P2.4/A12
                                 P2.5/A13
                                 P2.7/A15
1 P1.0
2 P1.1
3 P1.2
4 P1.3
5 P1.4
6 P1.5
7 P1.6
8 P1.7
                                P3.0/RXD
                                P3.1/TXD
                                P3.2/INT0
                                P3.3/INT1
                                  P3.4/T0
                                  P3.5/T1
                                 P3.6/WR
                                  P3.7/RD
```

```
#include <reg51.h>
#include <stdio.h>
sbit pin = P3^{0};
void Start timer0(void)
    TR0 = 1;
void timer0(void) interrupt 1
    THO = 0 \times D8; // 10 msec delay
    TL0 = 0xEF;
void Init timer0(void)
    TMOD = 0 \times 01; //16 bit mode of Timer 0.
    THO = 0xD8; // 10 msec delay
    TL0 = 0xEF;
    IE = 0x82; //Enable Timer0 and Global Interrupt
void main(void)
    Init timer0(); //10msec delay
    Start timer0();
    while (1)
    while (TF0==0);
    pin = \sim pin;
```

# Timer example 2: 200 msec delay

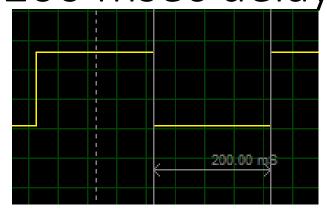

```
U1
19 XTAL1
                           P0.0/AD0
                           P0.1/AD1
                           P0.2/AD2
18 XTAL2
                           P0.3/AD3
                           P0.4/AD4
                           P0.5/AD5
                           P0.6/AD6
                           P0.7/AD7
                            P2.0/A8
                            P2.1/A9
                            P2.2/A10
                           P2.3/A11
                           P2.4/A12
                            P2.5/A13
                           P2.6/A14
                           P2.7/A15
                           P3.0/RXD
                           P3.1/TXD
                           P3.2/INT0
                           P3.3/INT1
                            P3.4/T0
                            P3.5/T1
                           P3.6/WR
                            P3.7/RD
```

```
#include <reg51.h>
#include <stdio.h>
sbit pin = P1^0;
int \mathbf{x} = 0;
                                Using software variable
void Start timer(void)
    TR1 = 1;
void timer1(void) interrupt 3 //ISR: Interrupt Service Routine
    x++;
    if(x==4) { //50msec x 4 = 200ms
        pin = ~pin;
        x = 0;
    TH1 = 0x3C; // 50 msec delay
    TL1 = 0xAF;
void Init timer(void)
    TMOD = 0 \times 10; //16 bit mode of Timer 1.
    TH1 = 0x3C; // 50 msec delay
    TL1 = 0xAF;
    IE = 0x88; //Enable Timer1 and Global Interrupt
void main(void)
    Init timer(); //50msec delay
    Start timer();
    while (1)
```