

ZZ1 ■ These assemblies are ESD sensitive, ESD precautions shall be observed.

ZZ2 ■ These assemblies must be clean and free from flux and all contaminants. Use of no clean flux is not acceptable.


ZZ3 ■ These assemblies must comply with workmanship standards IPC-A-610 Class 2, unless otherwise specified.

ZZ4 ■ For -001: Shunt #1 <SH1> should be installed in PIN 1-2 for J3

ZZ5 ■ For -002 and -003: Shunt #1 <SH1> should be installed in PIN 2-3 for J3


ZZ6 ■ Shunt #2 <SH2> should be installed in PIN 2-3 for J4

ZZ7 ■ Install label in silkscreen box after final wash. Text shall be 8pt font. Text shall be per Label Table in PDF schematic.

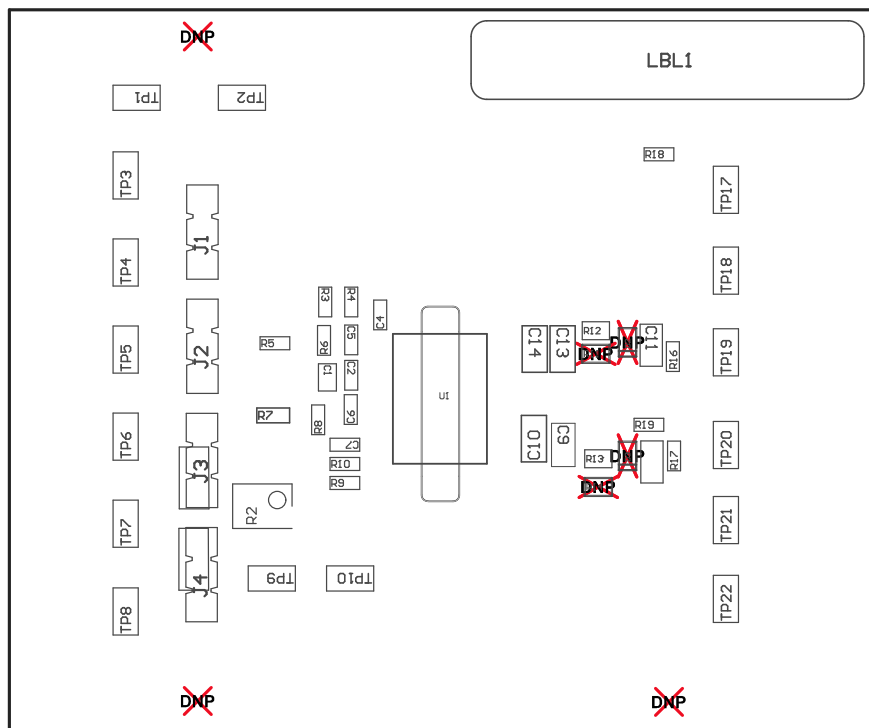

COMPONENTS MARKED 'DNP' SHOULD NOT BE POPULATED.
ASSEMBLY VARIANT: 002

PCB VIEWED FROM TOP SIDE	BOARD #: SU601286	REV: G	SUN REV: Not In VersionControl
	TID #: N/A		
PLOT NAME = Top Assembly Drawing	GENERATED : 5/19/2021 11:38:27 AM	TEXAS INSTRUMENTS	

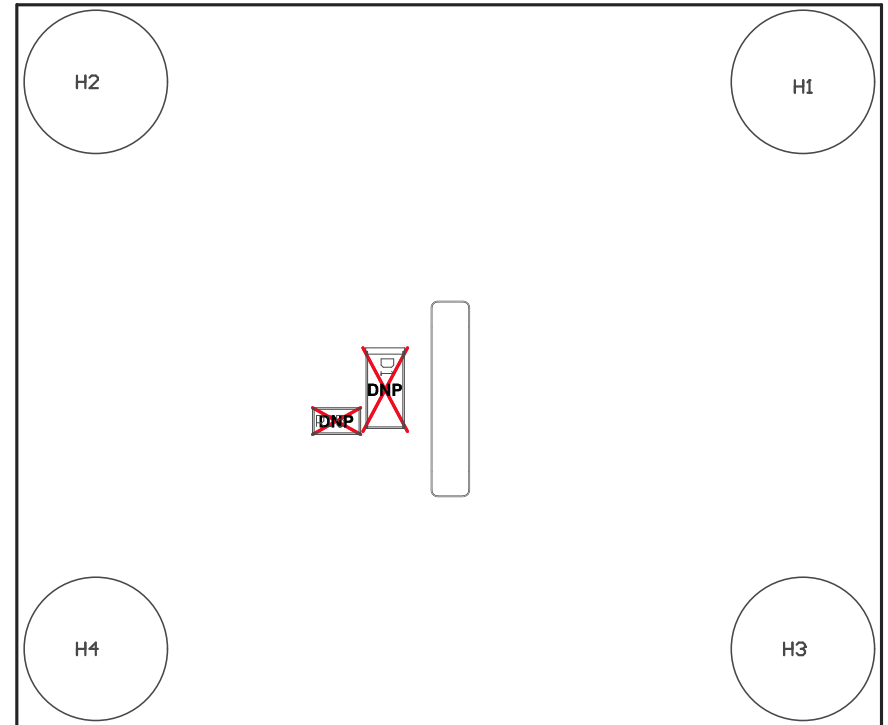

COMPONENTS MARKED 'DNP' SHOULD NOT BE POPULATED.
ASSEMBLY VARIANT: 002

PCB VIEWED FROM BOTTOM SIDE	BOARD #: SU601286	REV: G	SUN REV: Not In VersionControl
	TID #: N/A		
PLOT NAME = Bottom Assembly Drawing	GENERATED : 5/19/2021 11:38:30 AM		TEXAS INSTRUMENTS