


TOPTES

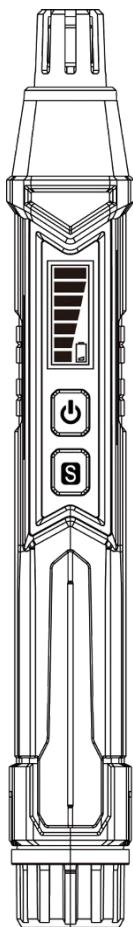

Please read these
instructions before
operating the product

USER MANUAL

Gas Leak Detector
PT199



CONTENTS

Specifications	3
Product Overview	3
Feature Details	
Function Buttons	
Symbol Definitions	
Batteries and Power	4
Battery Replacement	
Low-Battery Indication	
Operation	4
Turn On & Calibration	
Test	
Low & High Sensitivity	
Locate the Leaking Point	
Reset to Zero	
Turn Off / Automatic Shut-down	
Tips	
User Safety	6
Warnings	
Working Area	
Maintenance	6
Cleaning	
Storage	
Disposal / Recycle	
Support	6



To ensure the safe operation and service of the tester, follow these instructions. Failure to observe these warnings can result in severe injury or death. High concentrations of combustible gases can cause explosions, fires, asphyxia, and other hazards that could lead to serious personal injury or death. Know the characteristics of the gas you are working with and use proper precautions to avoid hazardous conditions.



Please allow 30 seconds of warm-up time before operation.

SPECIFICATIONS


TopTes PT199 is an efficient, handy combustible gas detector that can accurately locate the gas leakage of various combustible gases, such as methane, natural gas, propane, liquefied petroleum gas, gasoline, etc. It is a small yet useful instrument for the toolbox. For example, it provides audible and visual alarms in the presence of methane at concentrations as low as 50 ppm.

Sensor	Gas sensitive semiconductor (GSS)
Alarm Mode	Audible and visual alarms
Audible Alert	75 dB ticking, modulation proportional to gas concentration
Visual Alert	7 × bar graph, The bar graph on the screen is proportional to the gas concentration, and the screen background changes from green to red.
*Range	50 to 1,000 ppm (Low sensitivity: 500 to 1,000 ppm; High sensitivity: 50 to 500 ppm)
*Response Time (after calibration)	<=500PPM: 0.5 - 3 seconds >500PPM: 0.5 - 2 seconds
Relative Humidity	20~ 80%RH
Operating Temp	32~122°F (0~ 50°C)
Storage Temp	14~140°F (-10~ 60°C)
Dimensions	6.50" x 0.79" x 0.79" (165 x 20 x 20 mm)
Weight	2.01 oz. (57 g) including batteries
Batteries	2 x 1.5V AAA alkaline

*Based on Methane. Other gases or mixtures will have different values. Specifications subject to change.

PRODUCT OVERVIEW

Feature Details

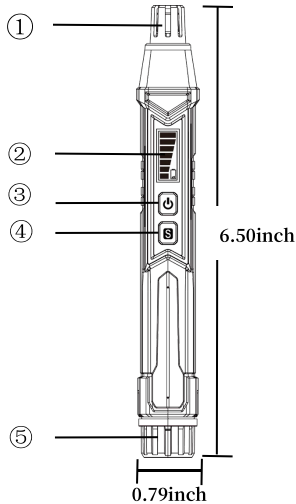


- 1. Sensor Head
- 2. LCD Display
- 3. Power Button
- 4. Sensitivity Button
- 5. Battery Cover


NOTE: There are no user-serviceable parts inside the tester.

Function Buttons

Sensitivity Button  : Press to Light on to enter High-Sensitivity mode (50 to 500 ppm)

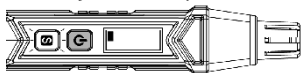

Sensitivity Button  : Press to Light off to enter Low-Sensitivity mode (500 to 1,000 ppm)

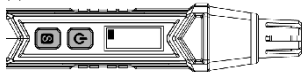

Power Button  : Long press to turn the tester on and off


Symbol Definitions


The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	Read manual symbol - alerts user to read manual.
	WARNING indicates a hazardous situation that could result in death or serious injury if not avoided.
	This symbol designates that this gas leak detector complies with Part 15 of the FCC Rules.
	This symbol indicates that the gas leak detector uses two 1.5 V AAA alkaline batteries and illustrates the orientation of the installed battery.

BATTERIES AND POWER

Battery Replacement

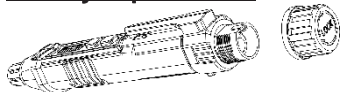




Step1. Loosen the battery cover at the bottom of the detector.

Step2. Remove and recycle two spent AAA batteries.

Step3. Install two new AAA batteries into the cartridge, noting proper polarity.

Low-Battery Indication

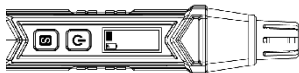

When the battery voltage is lower than the working voltage, the display will show , Please replace the battery in time.



WARNING: Do NOT replace the batteries in an explosive atmosphere.



Remove the batteries when the detector is not in use for a prolonged period. Do not expose to high temperatures or humidity. After a period of storage in extreme conditions exceeding the limits mentioned in the Specifications section, allow the tester to return to normal operating conditions before use.

OPERATION

Turn On & Calibration

In an area where combustible gas is known not to be present, press the power button



for more than 1 second. The detector will beep and start a 30-second zero-calibration process while the indicator lights on the display will flash in cycles. Once complete, the indicator bar will stop cycling and the tester will beep twice. The sensitivity button  indicator will stay on, indicating it is ready to take a measurement.

Test

It is recommended to use lighter or stove gas to test the effectiveness of the detector (make sure the gas is released, but there is no flame).

Low Sensitivity & High Sensitivity

Start measuring in the high-sensitivity mode (50 to 500 ppm). Press the sensitivity button  to enter low-sensitivity mode (500 to 1,000 ppm).

NOTE: In low-sensitivity mode, concentration levels are measured in

larger intervals than in high-sensitivity mode, meaning greater concentration levels are required to illuminate each indicator light.


Low-Sensitivity Mode

Range	500 - 1,000 ppm
Audible	75 dB ticking
Visual	The bar graph on the screen climbs, and the background changes from green to red

High-Sensitivity Mode

Range	50 to 500 ppm
Audible	75 dB ticking
Visual	The bar graph on the screen climbs, and the background changes from green to red

Locate the Leaking Point

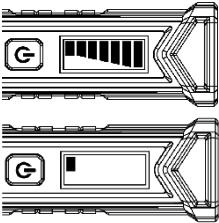

**A: Fast beeps
Red screen**

B: Green screen

Point the sensor toward the area to test. When the detector detects combustible gas, the number of indicator lights will increase with the gas concentration, and the background changes from green to red (as shown in picture [A] above). As the gas concentration increases, the beeps will also become faster.

If all the indicator lights are on in high-sensitivity mode, it means that the gas concentration at this time exceeds the upper limit of ppm (500ppm) in this mode. For a more precise location of leaks, press button **[S]** to switch to low-sensitivity mode (**NOTE: This may cause most lights to go out**). The more you have to reduce the sensitivity, the worse the leak.

Reset to Zero

When the gas concentration in the environment where the sensor is located is lower than the preset value of the sensor, the detector will automatically return to zero (about 10-30 seconds) and then to the initial working state.

Turn Off / Automatic Shut-down

Press and hold the power button **[P]** for more than 1 second. The buzzer will beep once and the detector will turn off. (Tip: When a leak is found and you feel the detector is too noisy, you can turn it off.)

*The detector will automatically shut down after 5 minutes of inactivity to save energy (**Note: Remove the batteries when the tester is not in use for a prolonged period of time**).

Tips

- It is recommended to use this detector to check for gas leakage once a week (if you smell a strong odor, please use this detector to check immediately).
- Rapidly shaking or moving the detector during the detection process will accelerate the volatilization of the gas detected by the sensor and reduce the concentration of combustible gas, resulting in incorrect detection results. Please move the detector slowly for more accurate results.
- Gas will adhere to the detector sensor cover. You will find that even if the detector is moved to a clean environment, the detector's alarm will continue for a while. Please wait for the detector to automatically clear and stop the alarm (about 10-30 seconds).
- It is recommended to use lighter or stove gas to test the effectiveness of the detector (make sure the gas is released, but there is no flame). Note: Oral gas is not recommended as a test gas for the detector, as high-humidity oral gas can cause false positives for the sensor.
- The gas-sensing semi-conductor sensor issues an alarm according to the concentration of combustible gas it detects. Therefore, if you directly touch the sensor head with your hand, the high concentration of gas attached to your hand may cause the detector to miscalculate and issue an alarm.

USER SAFETY

⚠️WARNING

- Read, understand, and follow all instructions to ensure safe operation.
- Always turn on the gas detector in an area known to be free of combustible gases.
- Initial calibration should be performed in an area known to be free of combustible gases. Calibration in an area containing combustible gas will result in incorrect calibration that's lower than the actual readings. This could result in combustible gases not being detected.
- The combustion gas leak detector is not a safety monitoring device. It is NOT intended as a personal protection device (PPE) or monitoring instrument.
- Do NOT replace batteries in an explosive atmosphere.
- Do NOT use in closed rooms with explosive gas mixtures.
- The combustion gas leak detector is NOT insulated. Avoid contact with areas where energized conductive elements may be present. Shut off power to the area before starting measurements.
- Do NOT probe moving machinery that could catch any part of the meter and cause harm to the operator and the meter.
- Do NOT store the combustion gas leak detector together with water, solvents, acids, or other corrosive substances.
- Always carry out a functionality test before gas detection.

Working Area

- ◆ You must turn on the detector in a clean-air environment and wait for the warm-up to complete.
- ◆ **Relative Humidity:** 20~80% RH non-condensing
- ◆ **Operating Temp:** 32° to 122°F (0° to 50°C)
- ◆ Do NOT use in closed rooms with explosive gas mixtures.

MAINTENANCE

Cleaning

Ensure the tester is turned off, and wipe with a clean, dry lint-free cloth. Do not use aggressive cleaning products or solvents.

Storage

- Remove the batteries when the tester is not used for a prolonged period.
- Do not expose to high temperatures or humidity.
- After a period of storage in extreme conditions exceeding the limits mentioned in the Specifications section, allow the tester to return to normal operating conditions before use.

Disposal / Recycle

Do not place equipment and its accessories in the trash.
Items must be appropriately disposed of following local regulations. Please see www.epa.gov or www.ecycle.org for additional information.

Support

Three-Year Warranty

TopTes provide a 36-Month after-sale service and lifetime technical support. For further details on warranty coverage and warranty repair information, contact us on our official website:

www.toptestools.com/pages/warranty

Or

Contact us at support@topptestools.com

UK	REP
----	-----

EVATOST CONSULTING LTD
Suite 11, First Floor, Moy Road Business
Centre, Taffs Well, Cardiff, Wales, CF15 7QR
contact@evatmaster.com

