# Chip delayering by russian methods

http://psxdev.ru

### Overview

Method: manual lapping.

## Equipment

### Needed equipment:

- simple cover glass
- glue «Moment»
- compatible Dremel
- hairy nozzle
- GOI paste
- house protection

#### Photos:




Picture 1- Kitchen Setup



Picture 2 - GOI Paste



Picture 3 - Fix the chip on cover glash by glue

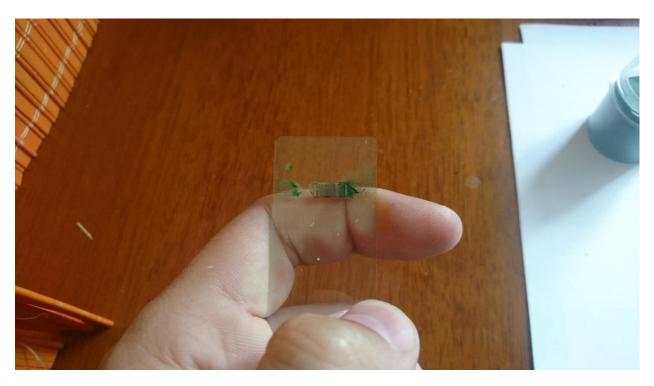

Picture 4 - Smear chip surface with a paste




Picture 5 - Do not forget to protect the house from the shit flying around

## **Processing**


The speed of the dremel and the duration of the action are chosen experimentally.

At low speed, grinding is very slow or not at all. I set the average speed and worked on the surface for about 30 seconds. It was enough to remove the top layer of metal more or less evenly.

### Results

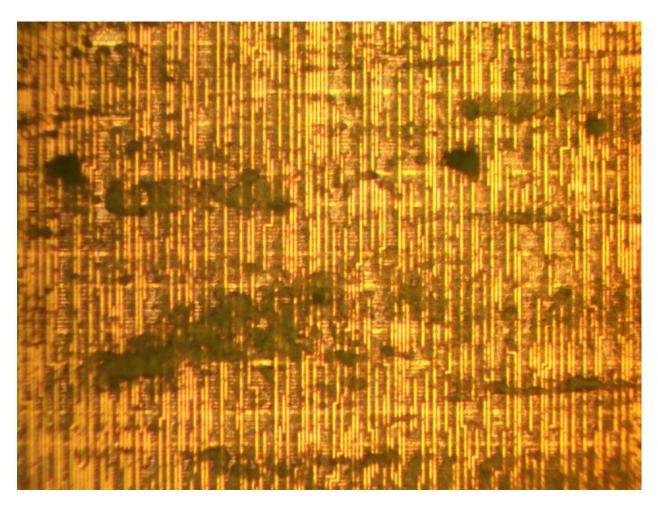

Picture 6 - The surface is evenly covered with shit

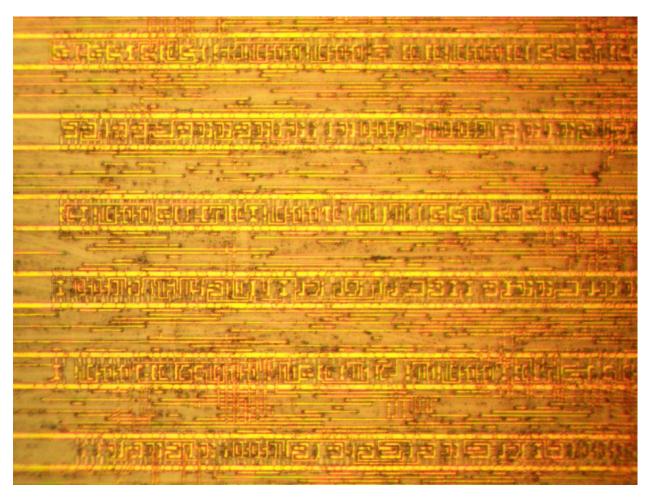

Picture 7 - Top metal layer lapped out