# Akdeniz University Computer Engineering Department

CSE206 Computer Organization Week03: Computer Systems

Assoc.Prof.Dr. Taner Danışman tdanisman@akdeniz.edu.tr

	Week 1	10-Feb-25	Introduction	Ch1
	Week 2	17-Feb-25	Computer Evolution	Ch2
	Week 3	24-Feb-25	Computer Systems	Ch3
	Week 4	3-Mar-25	Cache Memory, Direct Cache Mapping	Ch4
	Week 5	10-Mar-25	Associative and Set Associative Mapping	Ch4
	Week 6	17-Mar-25	Internal Memory, External Memory, I/O	Ch5-Ch6-Ch7
	Week 7/	24-Mar-25	Number Systems, Computer Arithmetic	Ch9-Ch10
	Week 8	31-Mar-25	Midterm (Expected date, may change)	Ch1Ch10
	Week 9	7-Apr-25	Digital Logic	Ch11
	Week 10	14-Apr-25	Instruction Sets	Ch12
/	Week 11	21-Apr-25	Addressing Modes	Ch13
	Week 12	28-Apr-25	Processor Structure and Function	Ch14
	Week 13	5-May-25	RISC, Inctruction Level Parallelism	Ch15-Ch16
	Week 14	12-May-25	Assembly Language (TextBook: Assembly Language for x86 Processors)	Kip Irvine
			Assembly Language (TextBook: Assembly Language for x86 Processors)	Kip Irvine

#### Computer Components

- Contemporary computer designs are based on concepts developed by John von Neumann at the Institute for Advanced Studies, Princeton
- Referred to as the von Neumann architecture and is based on three key concepts:
  - Data and instructions are stored in a single read-write memory
  - The contents of this memory are addressable by location, without regard to the type of data contained there
  - Execution occurs in a sequential fashion (unless explicitly modified) from one instruction to the next

#### Hardwired program

The result of the process of connecting the various components in the desired configuration

### Hardware and Software Approaches

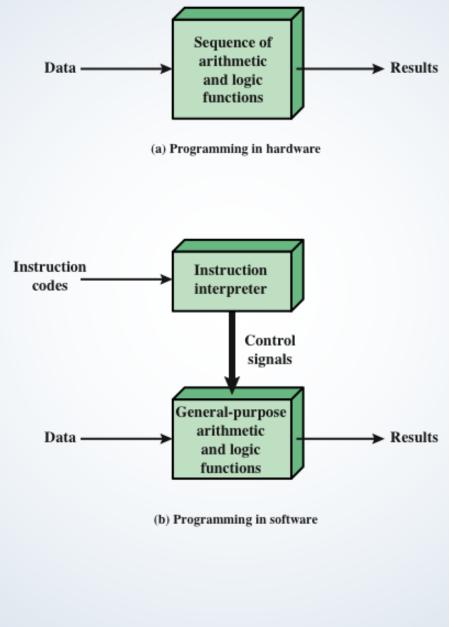


Figure 3.1 Hardware and Software Approaches

#### I/O Components

#### Software

- A sequence of codes or instructions
- Part of the hardware interprets each instruction and generates control signals
- Provide a new sequence of codes for each new program instead of rewiring the hardware

#### Major components:

- CPU
  - Instruction interpreter
  - Module of general-purpose arithmetic and logic functions
- I/O Components
  - Input module
    - Contains basic components for accepting data and instructions and converting them into an internal form of signals usable by the system
  - Output module
    - Means of reporting results

#### Memory address register (MAR)

 Specifies the address in memory for the next read or write

## Memory buffer register (MBR)

 Contains the data to be written into memory or receives the data read from memory

MAR

## I/O address register (I/OAR)


Specifies a particular I/O device

## I/O buffer register (I/OBR)


 Used for the exchange of data between an I/O module and the CPU

MBR

# Computer Components: Top Level View CPU Main Mer

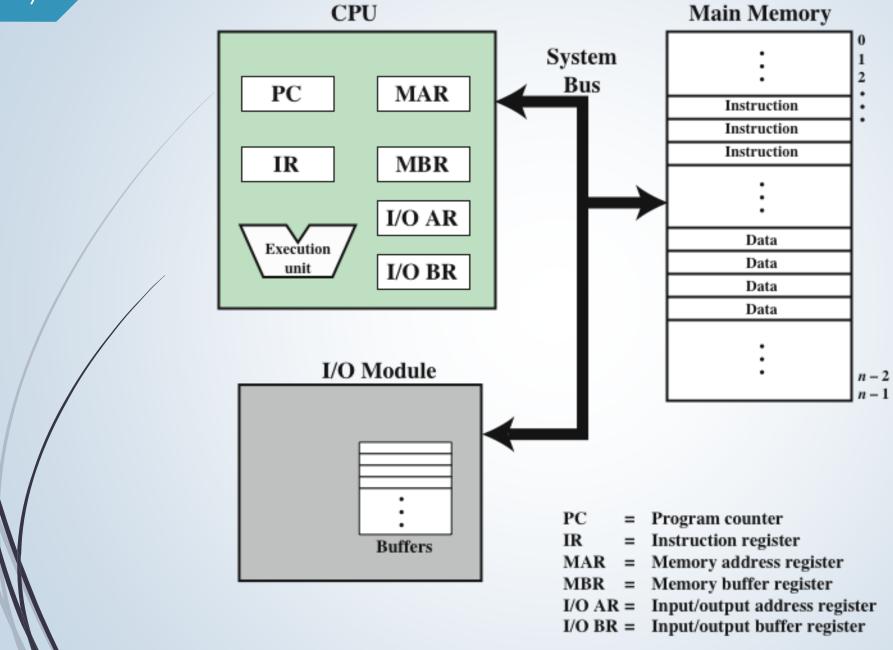

## Basic Instruction Cycle

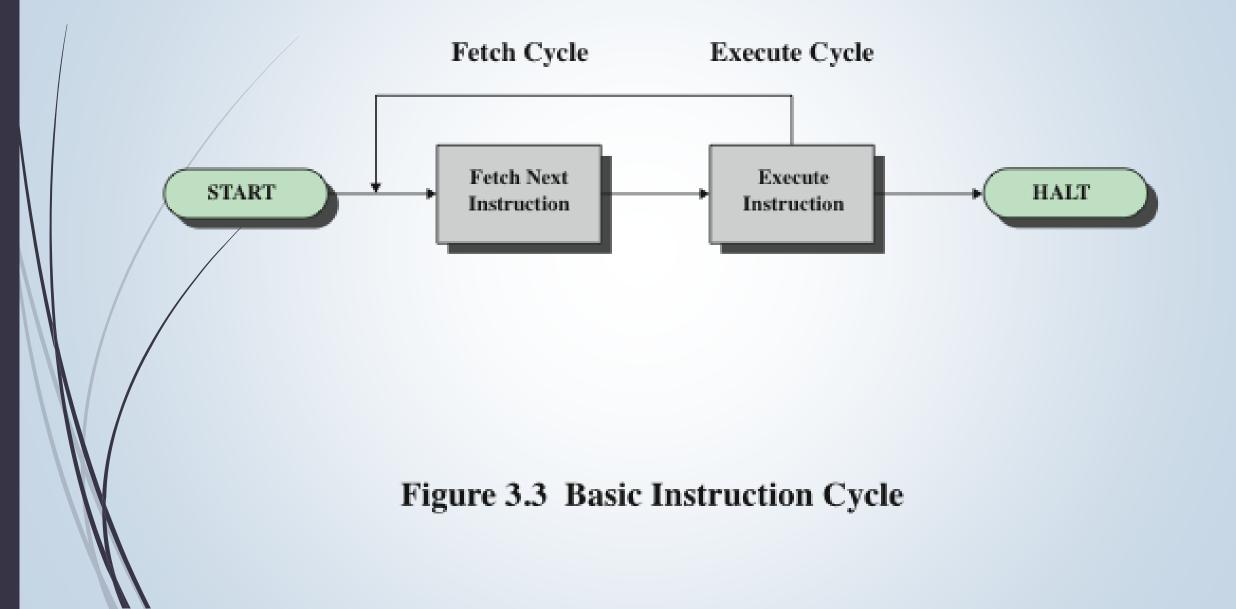

### Fetch Cycle

- At the beginning of each instruction cycle the processor fetches an instruction from memory
- The program counter (PC) holds the address of the instruction to be fetched next
- The processor increments the PC after each instruction fetch so that it will fetch the next instruction in sequence
- The fetched instruction is loaded into the instruction register (IR)
- The processor interprets the instruction and performs the required action

#### Processormemory

Data
transferred
from
processor to
memory or
from
memory to
processor

#### Processor-I/O

Data
transferred
to or from a
peripheral
device by
transferring
between the
processor
and an I/O
module


# Data processing

The processor may perform some arithmetic or logic operation on data

#### **Control**

An instruction may specify that the sequence of execution be altered

### Characteristics of a Hypothetical Machine

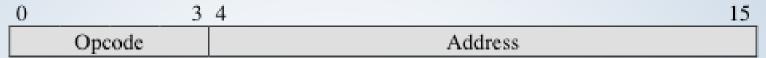

(a) Instruction format

0 1 15 S Magnitude

(b) Integer format

Program Counter (PC) = Address of instruction Instruction Register (IR) = Instruction being executed Accumulator (AC) = Temporary storage


(c) Internal CPU registers

0001 = Load AC from Memory 0010 = Store AC to Memory


0101 = Add to AC from Memory

(d) Partial list of opcodes

#### Example of Program Execution

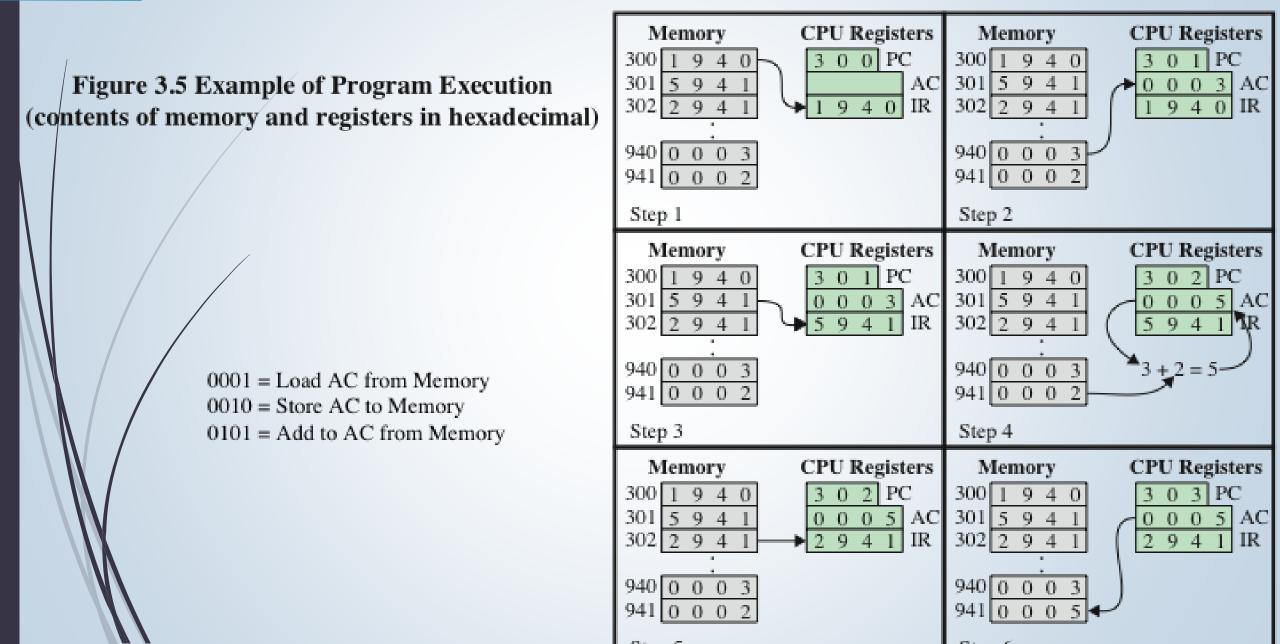

### Instruction Cycle State Diagram

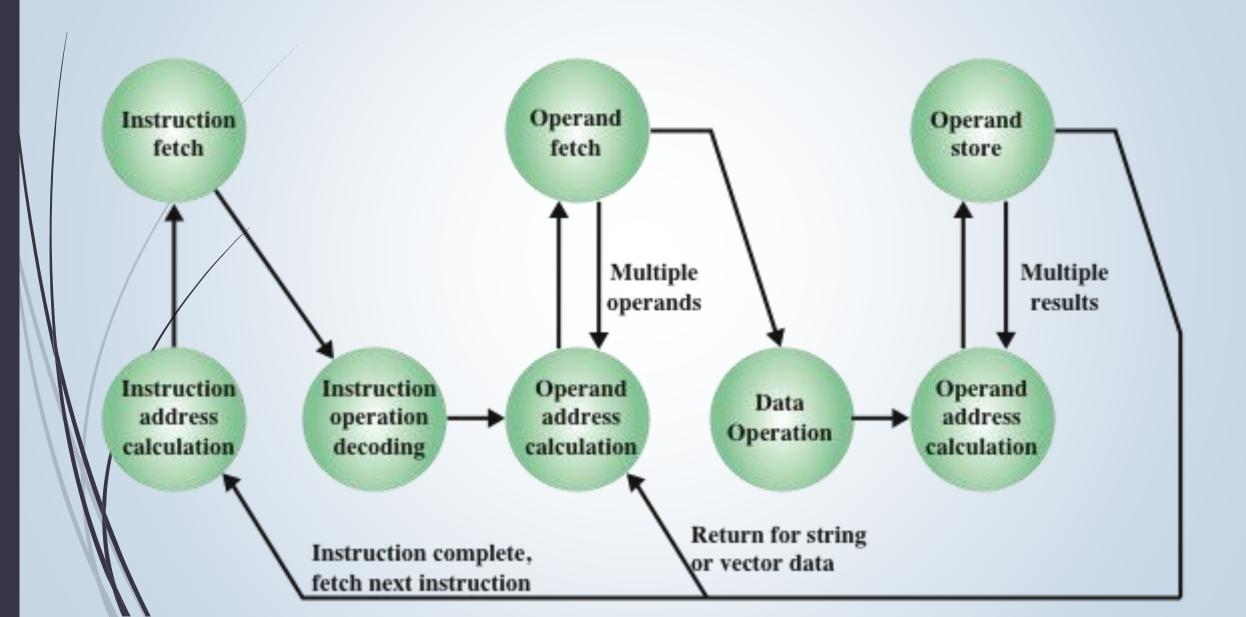

## 14 Classes of Interrupts

Program	Generated by some condition that occurs as a result of an instruction execution, such as arithmetic overflow, division by zero, attempt to execute an illegal machine instruction, or reference outside a user's allowed memory space.
Timer	Generated by a timer within the processor. This allows the operating system to perform certain functions on a regular basis.
I/O	Generated by an I/O controller, to signal normal completion of an operation, request service from the processor, or to signal a variety of error conditions.
Hardware failure	Generated by a failure such as power failure or memory parity error.

### Program Flow Control



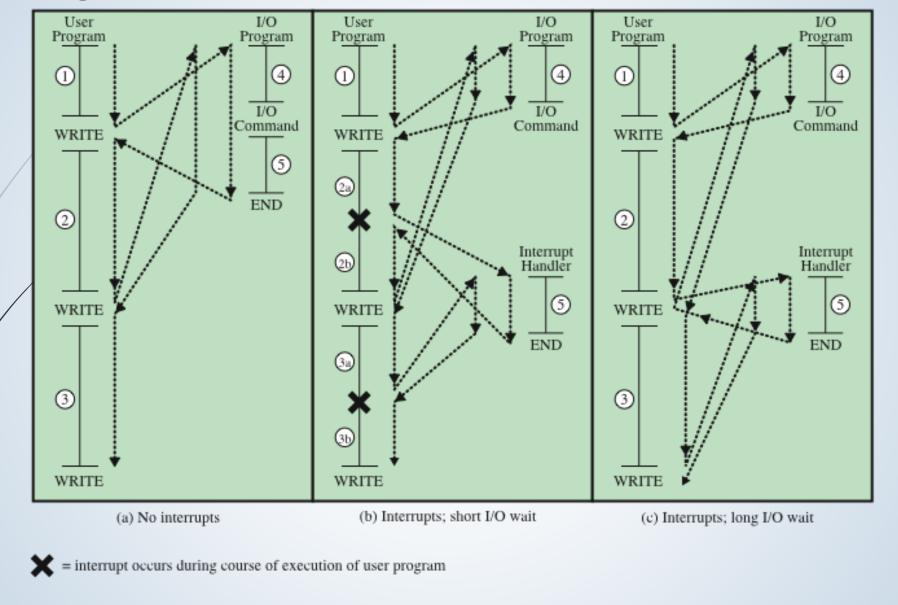


Figure 3.7 Program Flow of Control Without and With Interrupts


## Transfer of Control via Interrupts

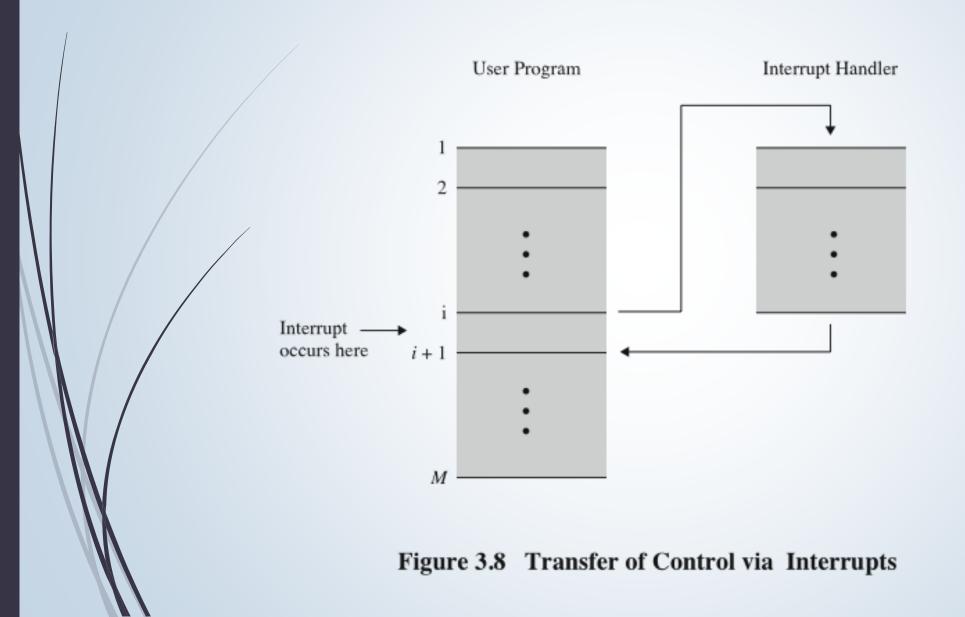


### Instruction Cycle With Interrupts

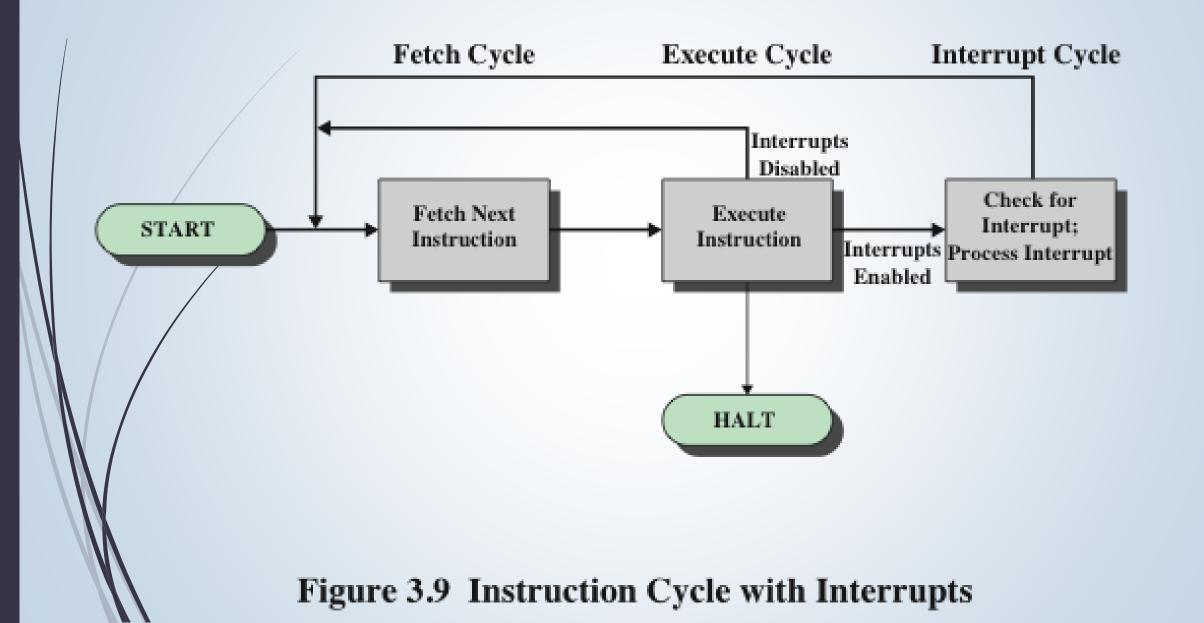

# Program Timing: Short I/O Wait

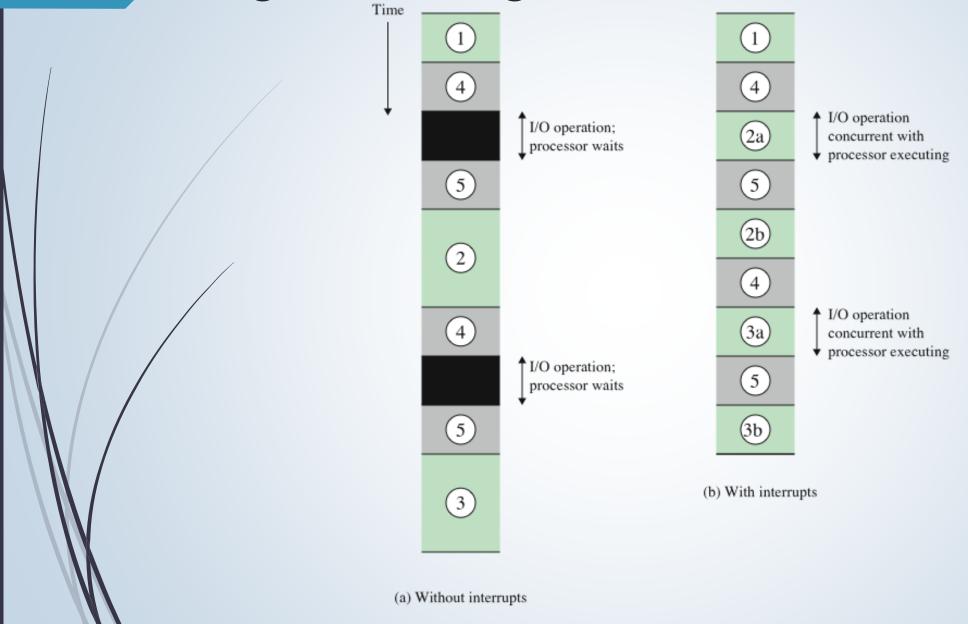

# Program Timing: Long I/O Wait

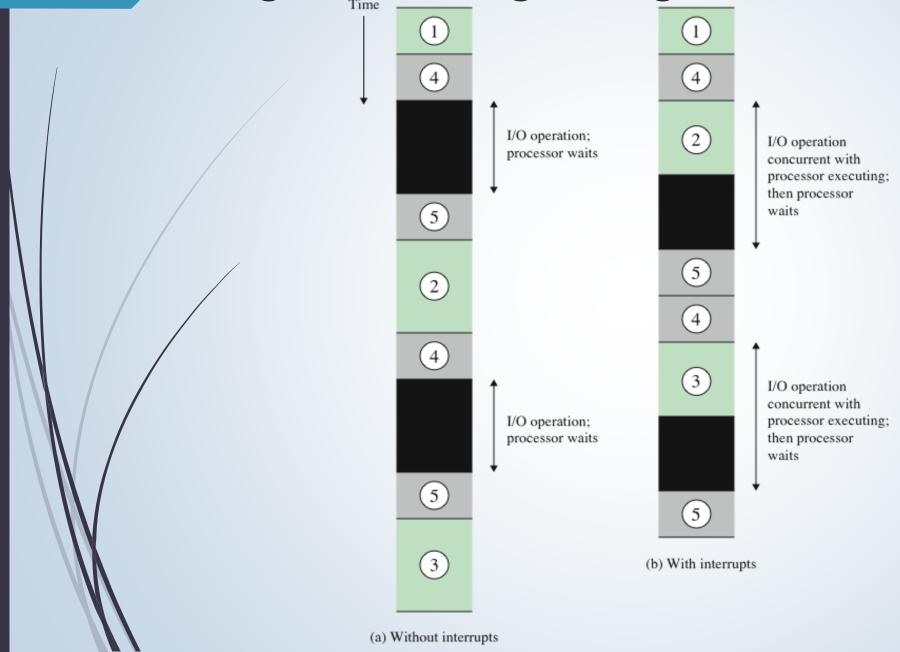

# Instruction Cycle State Diagram With Interrupts

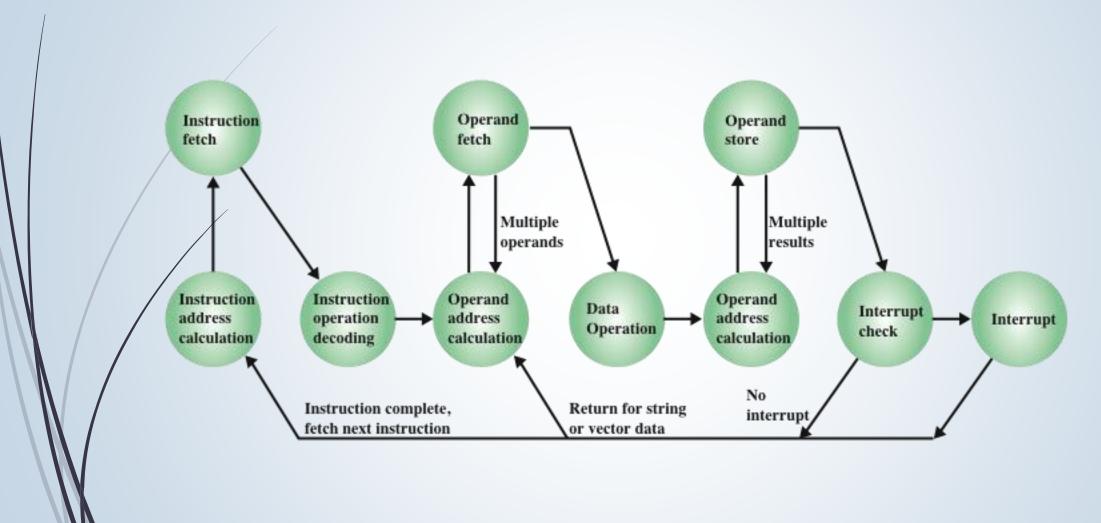


Figure 3.12 Instruction Cycle State Diagram, With Interrupts

#### Transfer of Control with Multiple Interrupts


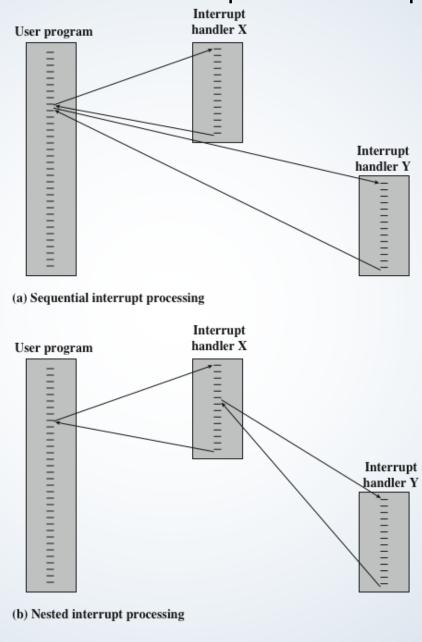


Figure 3.13 Transfer of Control with Multiple Interrupts


#### Time Sequence of Multiple Interrupts

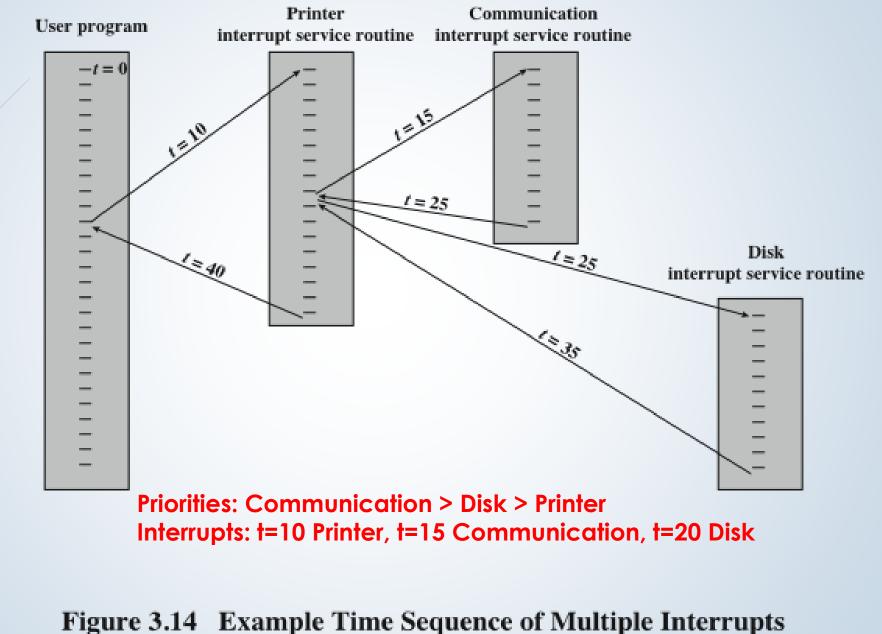

#### I/O Function

- I/O module can exchange data directly with the processor
- Processor can read data from or write data to an I/O module
  - Processor identifies a specific device that is controlled by a particular I/O module
  - I/O instructions rather than memory referencing instructions
- In some cases it is desirable to allow I/O exchanges to occur directly with memory
  - The processor grants to an I/O module the authority to read from or write to memory so that the I/O memory transfer can occur without tying up the processor
  - The I/O module issues read or write commands to memory relieving the processor of responsibility for the exchange
  - This operation is known as direct memory access (DMA)

## Computer Modules

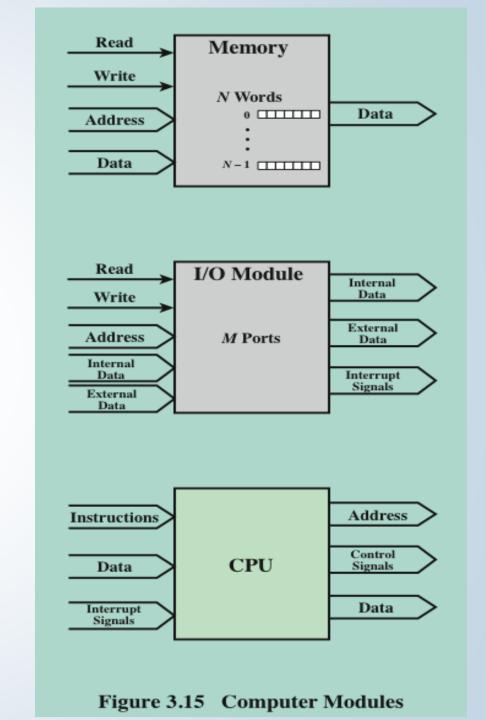

The interconnection structure must support the following types of transfers:

Memory to processor

Processor
reads an
instruction or
a unit of
data from
memory

Processor to memory

> Processor writes a unit of data to memory

I/O to processor

Processor reads data from an I/O device via an I/O module Processor to I/O

> Processor sends data to the I/O device

I/O to or from memory

An I/O
module is
allowed to
exchange
data directly
with memory
without
going
through the
processor
using direct
memory
access

#### BusInterconnection

## A communication pathway connecting two or more devices

 Key characteristic is that it is a shared transmission medium Signals transmitted by any one device are available for eception by all other devices trached to the bus

 If two devices transmit during the same time period their signals will overlap and become garbled

#### Typically consists of multiple communication lines

 Each line is capable of transmitting signals representing binary 1 and binary 0

Computer systems contain a number of different buses that provide pathways between components at various levels of the computer system hierarchy

#### System bus

 A bus that connects major computer components (processor, memory, I/O)

The most common computer interconnection structures are based on the use of one or more system buses

#### Data Bus

- Data lines that provide a path for moving data among system modules
- May consist of 32, 64, 128, or more separate lines
- The number of lines is referred to as the width of the data bus
- The number of lines determines how many bits can be

transferred at a time

 The width of the data bus is a key factor in determining overall system performance


#### Address Bus


- Used to designate the source or destination of the data on the data bus
  - If the processor wishes to read a word of data from memory it puts the address of the desired word on the address lines
- Width determines the maximum possible memory capacity of the system
- Also used to address I/O ports
  - The higher order bits are used to select a particular module on the bus and the lower order bits select a memory location or I/O port within the module

#### Control Bus

- Used to control the access and the use of the data and address lines
- Because the data and address lines are shared by all components there must be a means of controlling their use
- Control signals transmit both command and timing information among system modules
- Timing signals indicate the validity of data and address information
- Command signals specify operations to be performed

#### Bus Interconnection Scheme

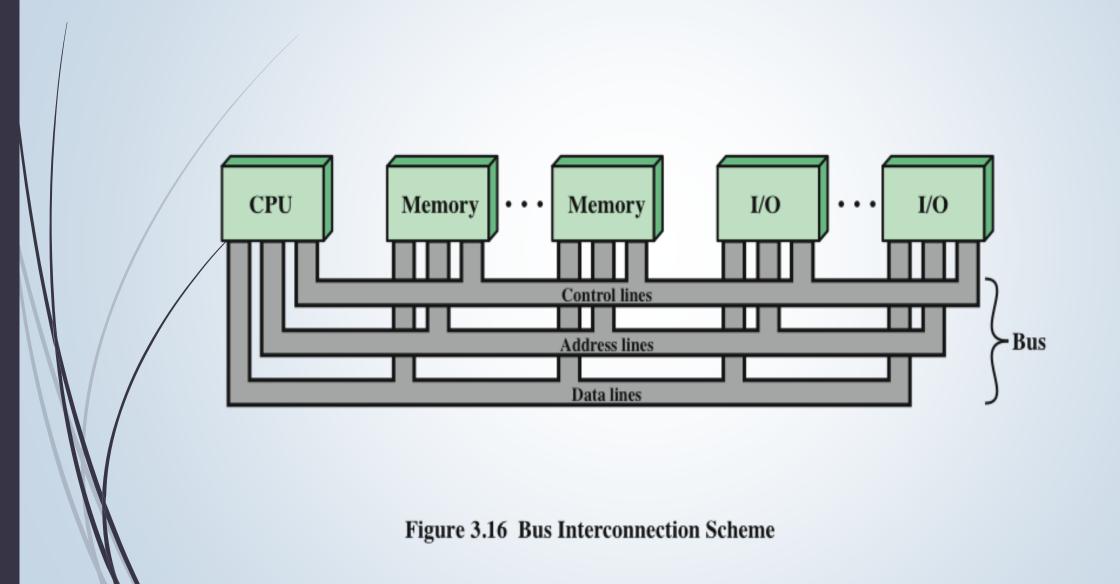

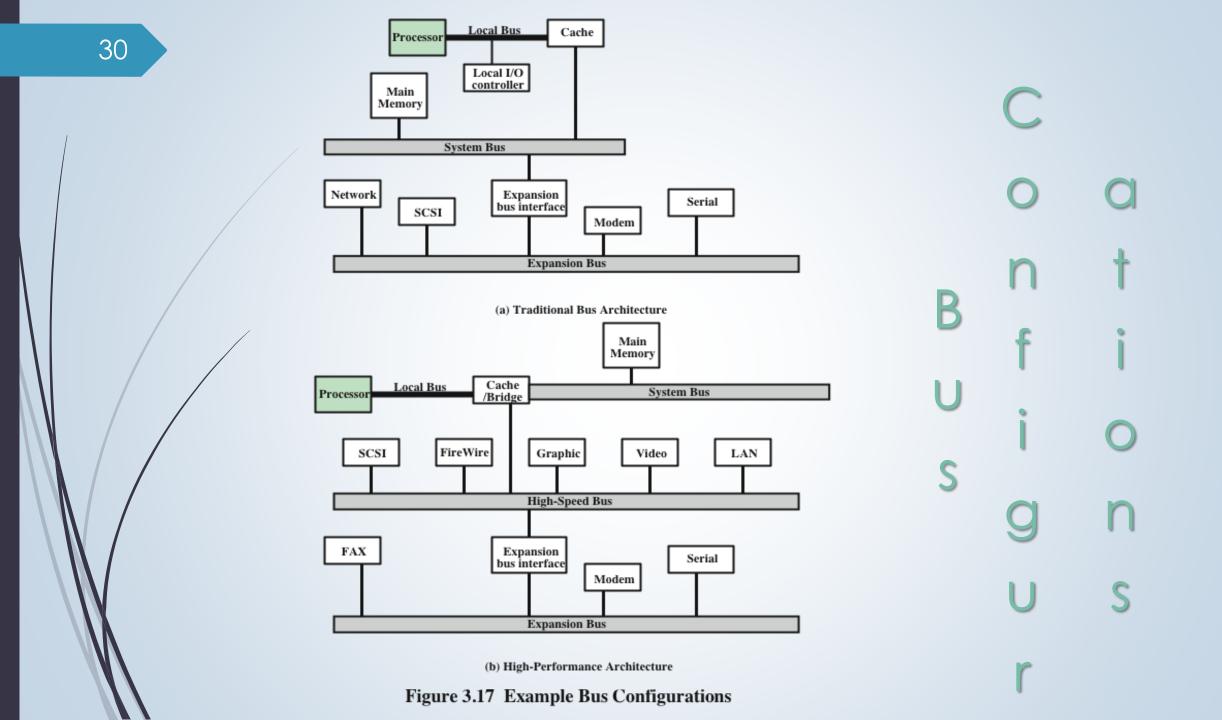

## Elements of Bus Design

Type Bus Width

Dedicated Address

Multiplexed

Method of Arbitration Data Transfer Type

Centralized Read

Distributed Write

Timing

Synchronous

Asynchronous

Read-modify-write

Read-after-write

Block

Data

## Timing of Synchronous Bus Operations

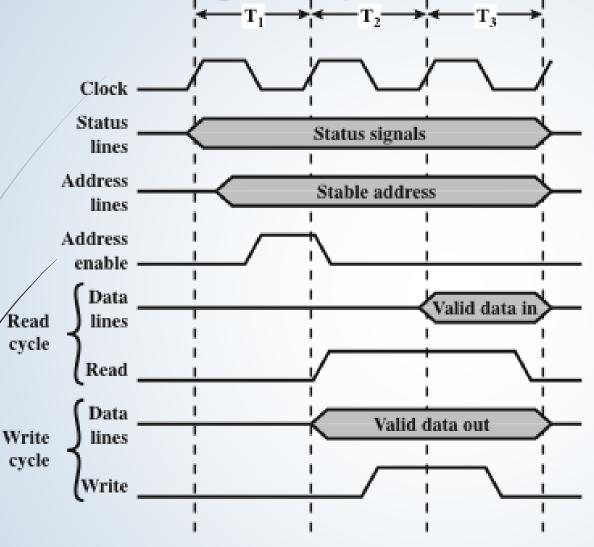


Figure 3.18 Timing of Synchronous Bus Operations

# Timing of Asynchronous Bus Operations

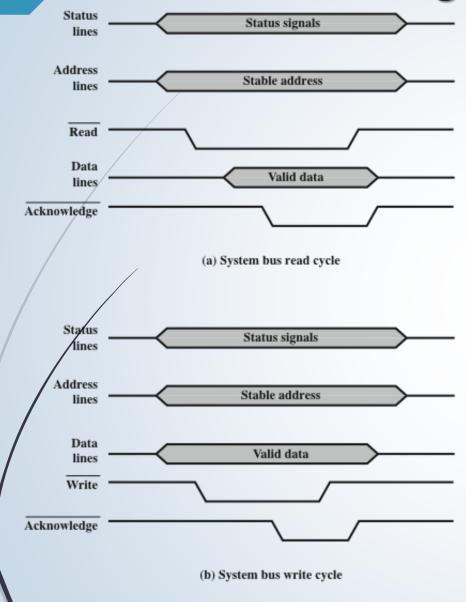


Figure 3.19 Timing of Asynchronous Bus Operations

#### Point-to-Point Interconnect

Principal reason for change was the electrical constraints encountered with increasing the frequency of wide synchronous buses

At higher and higher data rates it becomes increasingly difficult to perform the synchronization and arbitration functions in a timely fashion

A conventional shared bus on the same chip magnified the difficulties of increasing bus data rate and reducing bus latency to keep up with the processors

Has lower latency, higher data rate, and better scalability

#### Quick Path Interconnect


- Introduced in 2008
- Multiple direct connections



- Direct pairwise connections to other components eliminating the need for arbitration found in shared transmission systems
- Layered protocol architecture
  - These processor level interconnects use a layered protocol architecture rather than the simple use of control signals found in shared bus arrangements
- Packetized data transfer

Data are sent as a sequence of packets each of which includes control headers and error control codes

### Multicore Configuration Using

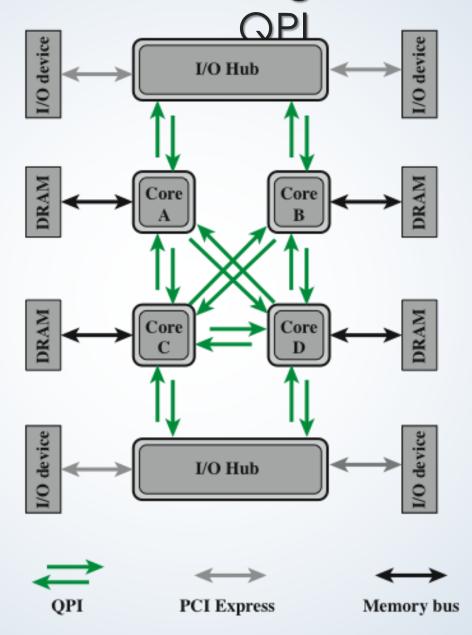

## QPI Layers

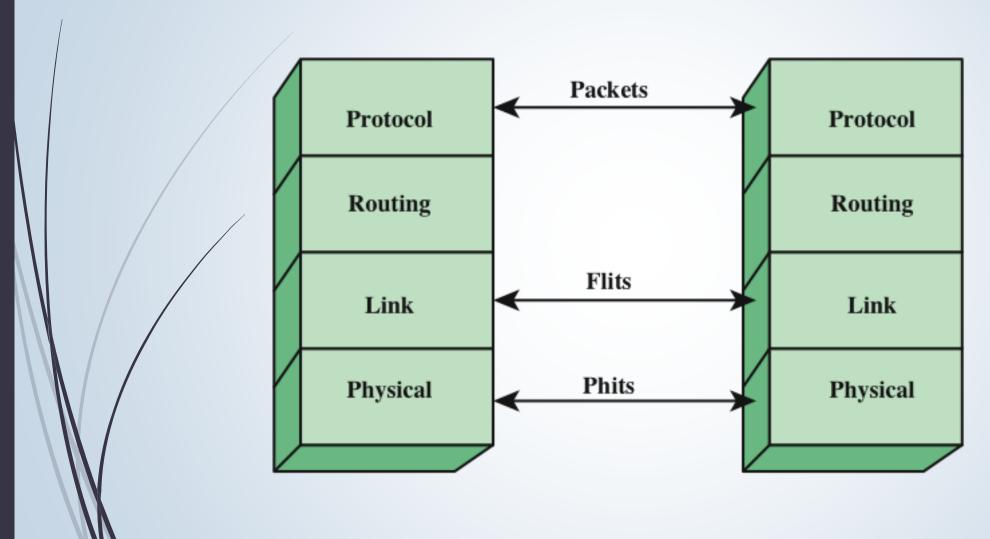


Figure 3.21 QPI Layers

#### Physical Interface of the Intel QPI Interconnect

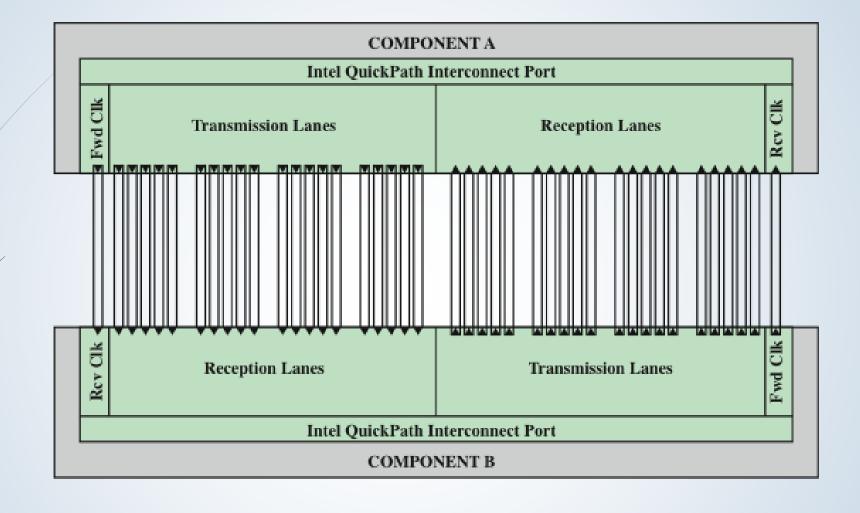


Figure 3.22 Physical Interface of the Intel QPI Interconnect

#### **QPI Link Layer**

- Performs two key functions: flow control and error control
  - Operate on the level of the flit (flow control unit)
  - Each flit consists of a 72-bit message payload and an 8-bit error control code called a cyclic redundancy check (CRC)

- Flow control function
  - Needed to ensure that a sending QPI entity does not overwhelm a receiving QPI entity by sending data faster than the receiver can process the data and clear buffers for more incoming data
- Error control function
  - Detects and recovers from bit errors, and so isolates higher layers from experiencing bit errors


## QPI Routing and Protocol Layers

- Routing Layer
- Used to determine the course that a packet will traverse across the available system interconnects
- Defined by firmware and describe the possible paths that a packet can follow

- Protocol Layer
- Packet is defined as the unit of transfer
- One key function performed at this level is a cache coherency protocol which deals with making sure that main memory values held in multiple caches are consistent
- A typical data packet payload is a block of data being sent to or from a cache

### Peripheral Component Interconnect (PCI)

- A popular high bandwidth, processor independent bus that can function as a mezzanine or peripheral bus
- Delivers better system performance for high speed I/O subsystems
- PCI Special Interest Group (SIG)
  - Created to develop further and maintain the compatibility of the PCI specifications
- PCI Express (PCIe)
  - Point-to-point interconnect scheme intended to replace bus-based schemes such as PCI
  - Key requirement is high capacity to support the needs of higher data rate I/O devices, such as Gigabit Ethernet
  - Another requirement deals with the need to support time dependent data streams

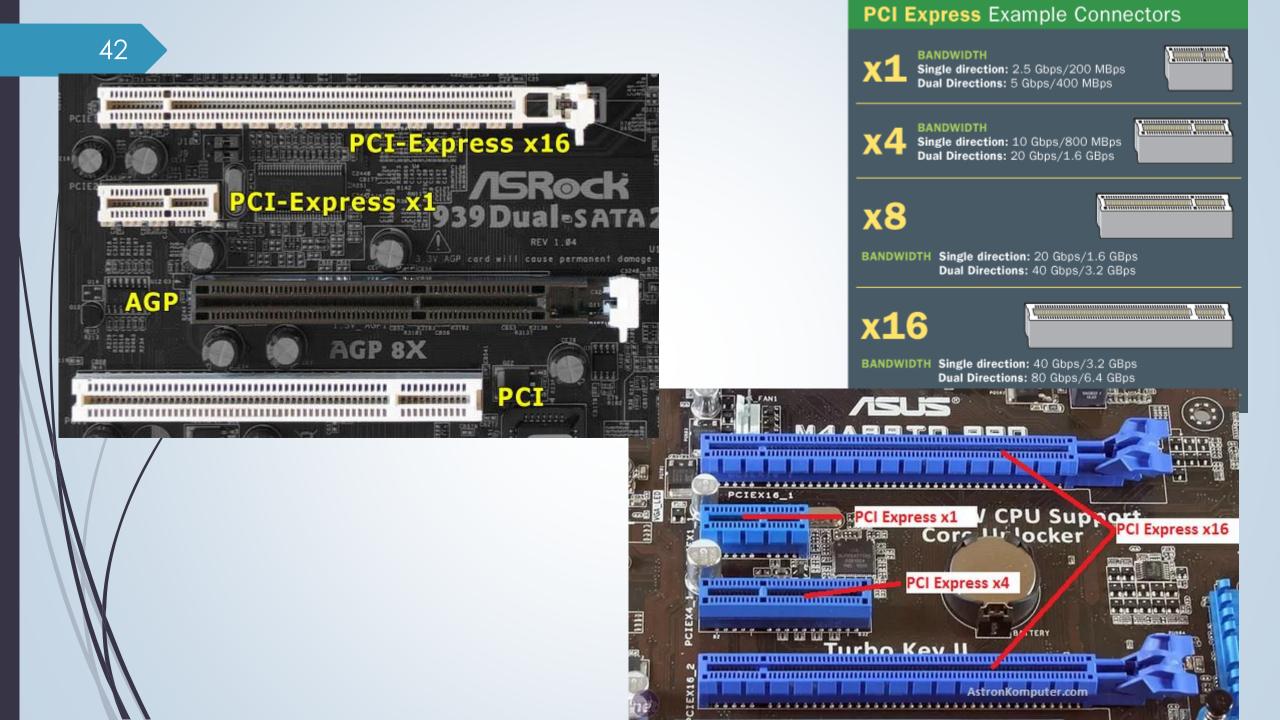



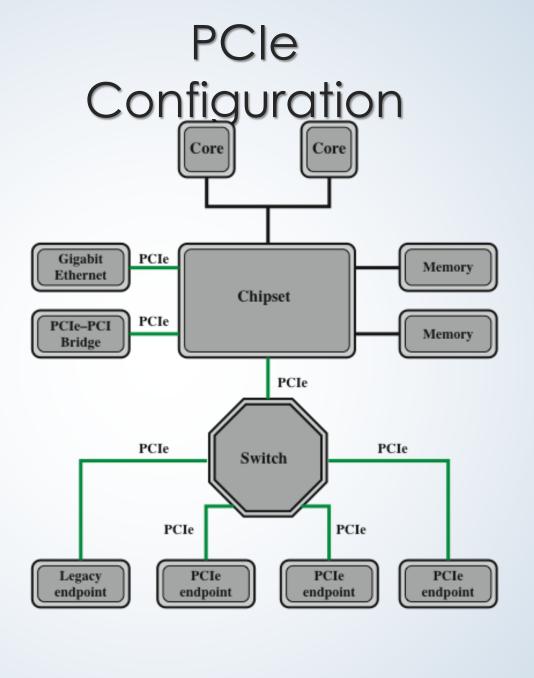


Figure 3.24 Typical Configuration Using PCIe

### PCIe Protocol Layers

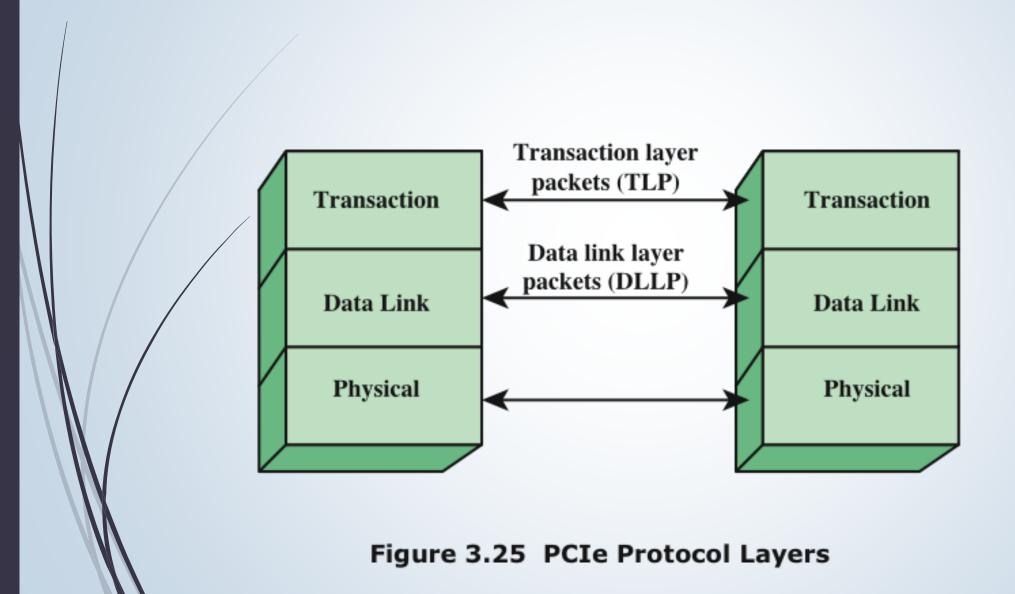

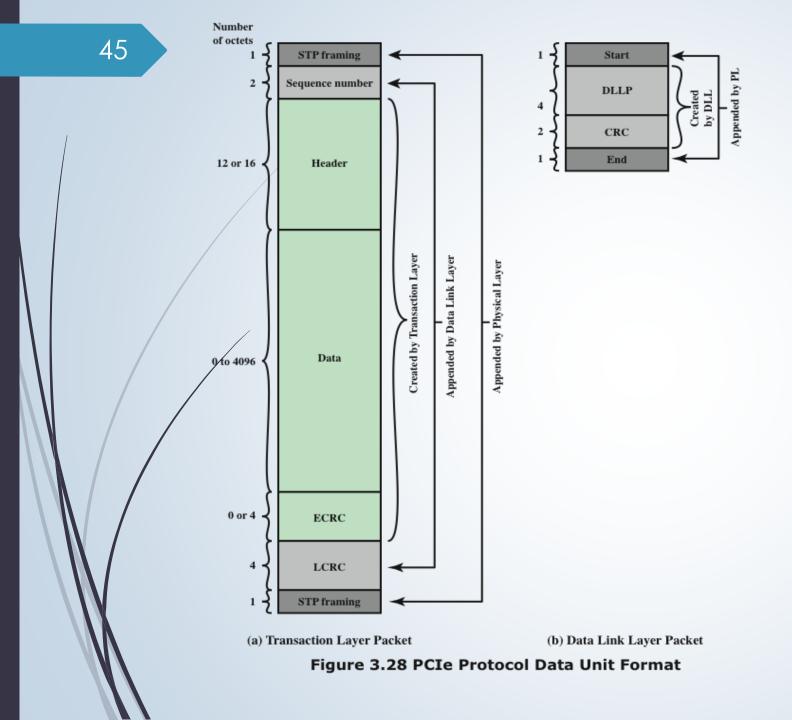

## PCIe Protocol Data Unit Format

## Summary

- Computer components
- Computer function
  Chapter 3
  Instruction fetch and execute
  - Interrupts
  - I/O function
  - Interconnection structures
  - Bus interconnection
    - Bus structure
    - Multiple bus hierarchies
    - Elements of bus design

- A Top-Level View of Computer **Function** and Interconnection
- Point-to-point interconnect
  - QPI physical layer
  - QPI link layer
  - QPI routing layer
  - QPI protocol layer
- PCI express
  - PCI physical and logical architecture
  - PCle physical layer
  - PCIe transaction layer
  - PCIe data link layer