


## Appendix A Pre-Flight Calibration of localizer and glide slope

Open the SysCal software tool and select the checkbox "calibrate from BIT data"

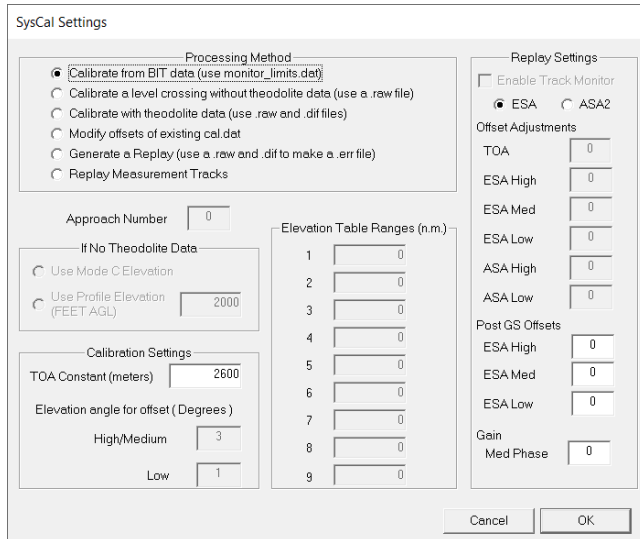

The SysCal Settings dialog box is divided into several sections:

- Processing Method:**
  - ☒ Calibrate from BIT data (use monitor\_limits.dat)
  - ☐ Calibrate a level crossing without theodolite data (use a .raw file)
  - ☐ Calibrate with theodolite data (use .raw and .dif files)
  - ☐ Modify offsets of existing cal.dat
  - ☐ Generate a Replay (use a .raw and .dif to make a .err file)
  - ☐ Replay Measurement Tracks
- Approach Number:** 0
- If No Theodolite Data:**
  - ☐ Use Mode C Elevation
  - ☐ Use Profile Elevation (FEET AGL) 2000
- Calibration Settings:**
  - TOA Constant (meters) 2600
  - Elevation angle for offset (Degrees):
    - High/Medium 3
    - Low 1
- Elevation Table Ranges (n.m.):**


|   |   |
|---|---|
| 1 | 0 |
| 2 | 0 |
| 3 | 0 |
| 4 | 0 |
| 5 | 0 |
| 6 | 0 |
| 7 | 0 |
| 8 | 0 |
| 9 | 0 |
- Replay Settings:**
  - ☐ Enable Track Monitor
  - ☒ ESA ☐ ASA2
  - Offset Adjustments:**
    - TOA 0
    - ESA High 0
    - ESA Med 0
    - ESA Low 0
    - ASA High 0
    - ASA Low 0
  - Post GS Offsets:**
    - ESA High 0
    - ESA Med 0
    - ESA Low 0
  - Gain Med Phase:** 0

Buttons: Cancel, OK

**USE THE FILE MENU SELECTION TO OPEN THE MONITOR LIMITS FROM THE MI COMPUTER.**

Select the checkbox "Use these offsets to replace existing ASA offsets"

Select the checkbox "Use these offsets to replace existing ESA offsets"

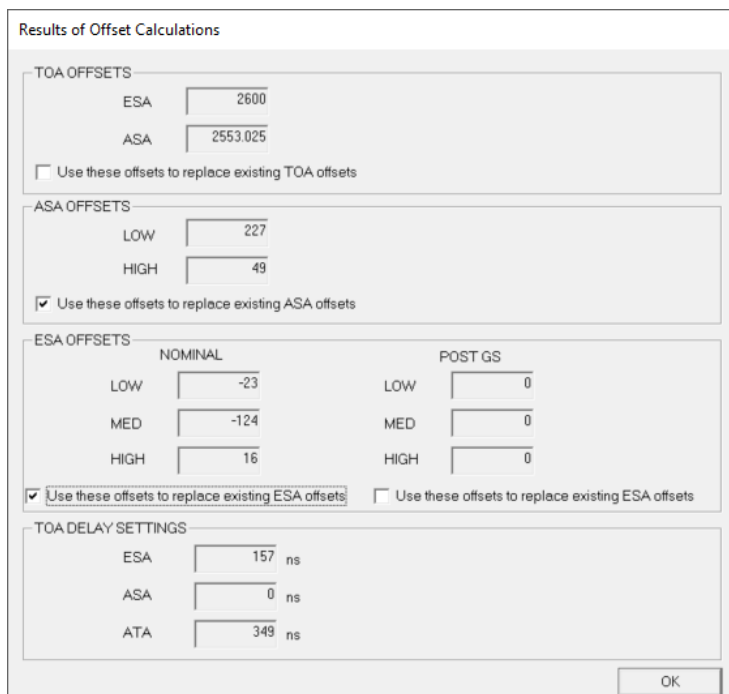

The Results of Offset Calculations dialog box displays the following data:

- TOA OFFSETS:**
  - ESA 2600
  - ASA 2553.025
  - ☐ Use these offsets to replace existing TOA offsets
- ASA OFFSETS:**
  - LOW 227
  - HIGH 49
  - ☒ Use these offsets to replace existing ASA offsets
- ESA OFFSETS:**

|      | NOMINAL | POST GS |
|------|---------|---------|
| LOW  | -23     | 0       |
| MED  | -124    | 0       |
| HIGH | 16      | 0       |

  - ☒ Use these offsets to replace existing ESA offsets
  - ☐ Use these offsets to replace existing ESA offsets
- TOA DELAY SETTINGS:**
  - ESA 157 ns
  - ASA 0 ns
  - ATA 349 ns

Button: OK

**PRESS OK AND THEN SELECT SAVE CAL.DAT FROM THE FILE MENU OR SAVE ICON IN THE TOOLBAR AND ENSURE THAT THE NEW MONITOR\_LIMITS.DAT WAS SAVED TO BOTH BASE1 AND BASE2**