

EnOcean Serial Protocol 3 (ESP3)

V1.47/ Sep. 4, 2018



Content

1	EnO	cean Sei	rial Protocol 3 (ESP3)	5
	1.1	Terms 8	& Abbreviations	8
	1.2	Introdu	ction	9
	1.3	Packet s	structure	. 10
	1.4	Upward	compatibility	. 11
	1.5	UART fr	aming	. 12
	1.6	UART sy	ynchronization (packet detection)	. 12
		1.6.1	Packet description	. 13
		1.6.2	Packet types	. 13
		1.6.3	Direction of packet types	. 14
		1.6.4	ESP3 Timeout	. 14
2	ESP	3 Comma	and Description	.15
	2.1 F	Packet Ty	pe 1: RADIO_ERP1	. 15
		2.1.1	Packet structure	. 15
		2.1.2	Radio variants (examples)	. 17
	2.2	Packet ⁻	Type 2: RESPONSE	. 19
		2.2.1	Packet structure	. 19
		2.2.2	List of Return Codes	. 19
		2.2.3	Standard Response Structure	. 19
	2.3	Packet ⁻	Type 3: RADIO_SUB_TEL	. 20
	2.4	Packet ⁻	Type 4: EVENT	. 21
		2.4.1	Structure	. 21
		2.4.2	List of EVENT Codes	. 21
		2.4.3	Code 01: SA_RECLAIM_NOT_SUCCESSFUL	. 22
		2.4.4	Code 02: SA_CONFIRM_LEARN	. 23
		2.4.5	Code 03: SA_LEARN_ACK	
		2.4.6	Code 04: CO_READY	
		2.4.7	Code 05: CO_EVENT_SECUREDEVICES	
		2.4.8	Code 06: CO_DUTYCYCLE_LIMIT	
		2.4.9	Code 07: CO_TRANSMIT_FAILED	
	2.5	Packet ⁷	Type 5: COMMON_COMMAND	
		2.5.1	Structure	
		2.5.2	List of COMMON_COMMAND Codes	
		2.5.3	Code 01: CO_WR_SLEEP	
		2.5.4	Code 02: CO_WR_RESET	
		2.5.5	Code 03: CO_RD_VERSION	
		2.5.6	Code 04: CO_RD_SYS_LOG	
		2.5.7	Code 05: CO_WR_SYS_LOG	
		2.5.8	Code 06: CO_WR_BIST	
		2.5.9	Code 07: CO_WR_IDBASE	
		2.5.10	Code 08: CO_RD_IDBASE	
		2.5.11	Code 09: CO_WR_REPEATER	. 36



2.5.12	Code 10: CO_RD_REPEATER	37
2.5.13	Code 11: CO_WR_FILTER_ADD	38
2.5.14	Code 12: CO_WR_FILTER_DEL	40
2.5.15	Code 13: CO_WR_FILTER_DEL_ALL	41
2.5.16	Code 14: CO_WR_FILTER_ENABLE	42
2.5.17	Code 15: CO_RD_FILTER	43
2.5.18	Code 16: CO_WR_WAIT_MATURITY	44
2.5.19	Code 17: CO_WR_SUBTEL	44
2.5.20	Code 18: CO_WR_MEM	45
2.5.21	Code 19: CO_RD_MEM	46
2.5.22	Code 20: CO_RD_MEM_ADDRESS	47
2.5.23	Code 21: DEPRECIATED: CO_RD_SECURITY	48
2.5.24	Code 22: DEPRECIATED: CO_WR_SECURITY	49
2.5.25	Code 23: CO_WR_LEARNMODE	50
2.5.26	Code 24: CO_RD_LEARNMODE	51
2.5.27	Code 25: CO_WR_SECUREDEVICE_ADD	52
2.5.28	Code 26: CO_WR_SECUREDEVICE_DEL	53
2.5.29	Code 27: CO_RD_SECUREDEVICE_BY_INDEX	54
2.5.30	Code 28: CO_WR_MODE	56
2.5.31	Code 29: CO_RD_NUMSECUREDEVICES	57
2.5.32	Code 30: CO_RD_SECUREDEVICE_BY_ID	58
2.5.33	Code 31: CO_WR_SECUREDEVICE_ADD_PSK	59
2.5.34	Code 32: CO_WR_SECUREDEVICE_SENDTEACHIN	60
2.5.35	Code 33: CO_WR_TEMPORARY_RLC_WINDOW	61
2.5.36	Code 34: CO_RD_SECUREDEVICE_PSK	62
2.5.37	Code 35: CO_RD_DUTYCYCLE_LIMIT	63
2.5.38	Code 36: CO_SET_BAUDRATE	64
2.5.39	Code 37: CO_GET_FREQUENCY_INFO	64
2.5.40	Code 38: Reserved	65
2.5.41	Code 39: CO_GET_STEPCODE	65
2.5.42	Code 40: Reserved	66
2.5.43	Code 41: Reserved	66
2.5.44	Code 42: Reserved	66
2.5.45	Code 43: Reserved	66
2.5.46	Code 44: Reserved	66
2.5.47	Code 45: Reserved	66
2.5.48	Code 46: CO_WR_REMAN_CODE	67
2.5.49	Code 47: CO_WR_STARTUP_DELAY	67
2.5.50	Code 48: CO_WR_REMAN_REPEATING	67
2.5.51	Code 49: CO_RD_REMAN_REPEATING	68
2.5.52	Code 50: CO_SET_NOISETHRESHOLD	69
2.5.53	Code 51: CO_GET_NOISETHRESHOLD	69
acket T		
2.6.1	Structure	70
2	2.5.51 2.5.52 2.5.53 Packet T	2.5.51 Code 49: CO_RD_REMAN_REPEATING

2.6



		2.6.2	List of SMART ACK Codes	70
		2.6.3	Code 01: SA_WR_LEARNMODE	71
		2.6.4	Code 02: SA_RD_LEARNMODE	72
		2.6.5	Code 03: SA_WR_LEARNCONFIRM	73
		2.6.6	Code 04: SA_WR_CLIENTLEARNRQ	74
		2.6.7	Code 05: SA_WR_RESET	75
		2.6.8	Code 06: SA_RD_LEARNEDCLIENTS	76
		2.6.9	Code 07: SA_WR_RECLAIMS	77
		2.6.10	Code 08: SA_WR_POSTMASTER	77
		2.6.11	Code 09: SA_RD_MAILBOX STATUS	78
		2.6.12		
	2.7	Packet	Type 7: REMOTE_MAN_COMMAND	80
		2.7.1	Structure	80
		2.7.2	Description	80
	2.8	Packet	Type 8: PRODUCTION_COMMAND	82
	2.9	Packet	Type 9: RADIO_MESSAGE	82
			2.9.1.1 Packet structure	82
	2.10	Packet	Type 10: RADIO_ERP2	
		2.10.1		
	2.11		Type 16: RADIO_802_15_4: 802.15.4 Physical Raw Packet	
			Packet structure	
	2.12	Packet	Type 17: COMMAND_2_4	
		2.12.1		
		2.12.2		
		2.12.3		
3	Appe			
	3.1	ESP3 [Data flow sequences	90
		3.1.1	Client data request	90
		3.1.2	Teach IN via VLL	90
		3.1.3	Teach IN via Smart Ack	91
		3.1.4	Teach IN via Smart Ack incl. repeater	91
	3.2	ESP3 t	elegram examples	92
		3.2.1	Packet: Radio VLD	92
		3.2.2	Packet: CO_WR_SLEEP	
		3.2.3	Packet: CO_WR_RESET	92
		3.2.4	Packet: CO_RD_IDBASE	
		3.2.5	Packet: REMOTE_MAN_COMMAND	
	3.3	CRC8	calculation	94
	3.4	UART S	Synchronization (example c-code)	
		3.4.1	ESP3 Packet Structure	95
		3.4.2	Get ESP3 Packet	95
		3.4.3	Send ESP3 Packet	99



1 EnOcean Serial Protocol 3 (ESP3)

REVISION HISTORY

The following major modifications and improvements have been made to the first version of this document:

No.	Major Changes	Date	Who	Reviewer
1.0	First Version			
1.1	Corrections, added uses cases			
1.2	Added small correction in CMD_SA_LEARNDEVICE			
	command.			
1.2	Reworked improved protocol			
1.3	Removed SMACK comments – rework needed			
1.4	Document Reviewed, performance measurements			
4 -	moved to EO3000I_API			
1.5	Added PacketType = 3			
1.6	Added types and defined commands	2012 20 21		
1.7	New terms and definitions; extended description	2010-08-31	ap, op, jh	
1.8	Modifications	2010-09-07	ap, op	
1.9	Extracted from system spec document, removed internal info	2010-09-15	ASt	
1.10	1 st review	2010-09-28	ор	
1.11	2 nd review (notes ap, mf)	2010-10-11	ор	
1.12	Minor modifications	2010-10-27	nm, op	
1.13	Minor modifications	2010-11-03	nm, op	
1.14	New event: CO_READY	2010-12-10	ор	
1.15	New optional data in CO_RD_IDBASE	2011-02-28	wh,ap	
1.16	Corrected wrong CRC8D in CO_WR_RESET example Changed the REMOTE_MAN_COMMAND	2011-06-14	jh	
1.17	Examples added for CO_WR_FILTER_ADD	2011-08-02	mho, wh	
1.18	Fixed CO_RD_FILTER description	2012-03-16	jh	
1.19	Common commands for secure devices added;	2012-12-15	ap	
	minor modifications		~P	
1.20	Added CO_WR_MODE, type RADIO_ADVANCED to support advanced protocol	2013-01-06	jh	
1.21	Minor editorial changes	2013-02-12	ар	
1.22	Added type RADIO_MESSAGE,	2013-03-04	ар	
	CO_RD_SECURE_DEVICE,			
	CO_RD_NUM_SECURE_DEVICES. Updated types table			
1.23	Fixed typos . Updated security commands, added	2013-08-19	jh	
	commands:			
	CO_WR_SECUREDEVICE_ADD_PSK,			
	CO_WR_SECUREDEVICE_SENDTEACHIN,			
1.24	CO_WR_TEMPORARY_RLC_WINDOW	2012 10 14	ih	
1.24	Added CO_RD_SECUREDEVICE_PSK	2013-10-14	jh	
1.25	Modifications in filter and repeater common commands to enable filtered repeating functionality	2014-02-24	ар	
1.26	Changed description of SA_RD_LEARNEDCLIENTS response, enhanced secure ESP 3 messages	2014-05-06	mhs	
1.27	CO WR SECURE DEVICE ADD: Added optional byte	2014-07-30	ар	



	defining if it is a PTM. Added			
	CO_RD_DUTYCYCLE_LIMIT and			
	CO_DUTYCYCLE_LIMIT.Remote management examples			
	corrected. Many typos corrected. Renamed "Advanced			
4.00	Protocol" to ERP2.			
1.28	Return code RET_LOCK_SET added.	2015 10 16	ap	
1.29	Reference to 2.4 Commands added.	2015-10-16	tm	
	CO_SET_BAUDRATE and new supported higher			
4.00	baudrates added	2016 02 22		
1.30	CO_GET_FREQUENCY_INFO, CO_GET_STEPCODE and	2016-03-22	tm	
4 24	2.4 documentation added	2016 07 10		
1.31	New smart ack commands added, formatting updated	2016-07-18	tm	
1.32	Added Config Commands	2016-10-25	fg	
1.33	CO_READY extended by mode	2016-12-21	ар	
	CO_WR_REMAN_CODE added			
1.34	CO_WR_STARTUP_DELAY defined	2017-02-08	mf	
1.35	Packet Type 32	2017-03-17	rs	TM
4.55	Packet Type 33 added	2017.05.00		
1.36	CO_SET_REMAN_REPEATED	2017-05-09	tm	
4.07	CO_GET_REMAN_REPEATED	2017 10 17		
1.37	Modification of the CO_RD_STEPCODE	2017-10-17	mf	
1.38	Modification of the CO_EVENT_SECUREDEVICES	2017-12-06	mf	
1.39	Modification of Security Level inside of	2017-12-11	tm	mh
	RADIO_PACKET_ERP1			
	Added Security Level to RADIO_PACKET_ERP2 and			
	Message			
1 40	Updated CO_EVENT_SECUREDEVICES	2017 12 11		and to
1.40	Redundant ESP3 command Code 40	2017-12-11	at	mh
	CO_WR_SECUREDEVICE_CLEAR_LIST deleted. Packet			
	11 CONFIG_COMMAND codes deleted. Adding commands 36 to 51 missing in the list of			
	common commands codes			
1.41	The ESP3 CO_WR_SECUREDEVICE_DEL contains a	2018-01-21	mf	mh
1.41	new optional data value = 0x03 that allows deleting	2010-01-21	''''	11111
	the whole contains from all link tables.			
1.42	Changing the current description of CO 48 and CO 49	2018-01-22	at	mh
1.42	for a proper one	2010-01-22	at	11111
1.43	Added option for EEPROM reading and writing	2018-01-29	mf	mh
1.73	(CO_RD_MEM, CO_RD_MEM_ADDRESS and	2010 01-29	1111	
	CO_WR_MEM).			
1.44	Commands for RD and WR RORG deleted	2018-03-06	at	
1.77	Packet Type 32 and 33 not included for this version	2010 03 00	at	
1.45	Table 57,58 and 59 adding option 0x00000000 as ID	2018-05-07	at	
1.15	to delete broadcast device and Optional Data Direction			
1.46	Description for Tables 4 and 10 updated, Code 07	2018-05-29	at	mh
1.10	description corrected, Code 25, 26 and 27 Security			
	Level information updated. Missing description for			
	responses added. Formatting checked			
1.47	CO_WR_FILTER_DEL addition of syntax in-line with	2018-09-4	at	mh
,,	Filter Add. CO RD FILTER response, destination ID			.,,,,
	added. ID Base change restriction documented now in			
	product user manuals.			
Dublick	ned by EnOcean GmbH. Kolningring 18a, 82041 Ohe	rhaching Co		

Published by EnOcean GmbH, Kolpingring 18a, 82041 Oberhaching, Germany www.enocean.com, info@enocean.com, phone ++49 (89) 6734 6890



© EnOcean GmbH All Rights Reserved

Important!

This information describes the type of component and shall not be considered as assured characteristics. No responsibility is assumed for possible omissions or inaccuracies. Circuitry and specifications are subject to change without notice. For the latest product specifications, refer to the EnOcean website: http://www.enocean.com.

As far as patents or other rights of third parties are concerned, liability is only assumed for modules, not for the described applications, processes and circuits.

EnOcean does not assume responsibility for use of modules described and limits its liability to the replacement of modules determined to be defective due to workmanship. Devices or systems containing RF components must meet the essential requirements of the local legal authorities.

The modules must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with applications that can result in danger for people, animals or real value.

Components of the modules are considered and should be disposed of as hazardous waste. Local government regulations are to be observed.

Packing: Please use the recycling operators known to you. By agreement we will take packing material back if it is sorted. You must bear the costs of transport. For packing material that is returned to us unsorted or that we are not obliged to accept, we shall have to invoice you for any costs incurred.



1.1 Terms & Abbreviations

Term / Abbr.	Description		
μC	Microcontroller (external)		
API	Application Programming Interface		
APP	Application		
BIST	Built-in self-test		
CRC8	Cyclic redundancy check (CRC) or polynomial code checksum; CRC-8 =		
	9 bits polynomial lengths		
CRC8D	CRC8 for Group 'Data' (incl. Optional Data)		
CRC8H	CRC8 for Group 'Header'		
Data	Payload of ESP3 packet		
EEP	EnOcean Equipment Profile		
ERP1, ERP2	EnOcean Radio Protocol. There are versions 1 and 2.		
ESP3	EnOcean Serial Protocol V3		
Field	Identifier of Data subset / element		
Group	Part of ESP3 packet (header, data, optional data)		
Host	ESP3 communication device		
LSB	Least significant bit		
Mailbox	Message filing of the Postmaster for each Smart Ack Sensor/Client		
MSB	Most significant bit		
Offset	Byte position pointer of packet		
Packet	ESP3 data unit		
Packet Type	Type of ESP3 Packet (Command, Event, Radio,)		
PM	Postmaster		
Postmaster	Includes multiple mailboxes for each Smart Ack Sensor/Client		
R-ORG	Unique identification of radio telegram types		
R-ORG_EN	Addressed version of 'R-ORG' (EN = encapsulation)		
RS-232	Telecommunication standard for serial binary single-ended data and		
	control signals; ESP3 use only the minimal "3-wire" RS-232 connection		
	consisting only of transmit data, receive data, and ground. The full		
	facilities of RS-232 are not required.		
RSSI	Received signal strength indication (dBm)		
Smart Ack	EnOcean standard for energy-optimized bidirectional transmission		
Subtelegram	Smallest unit of data in radio transmission, using orthogonal structure		
Sync Byte	Identifier for ESP3 packet start		
UART	Universal Asynchronous Receiver Transmitter		



1.2 Introduction

This document specifies the EnOcean Serial Protocol 3.0 (ESP3).

The ESP3 defines the serial communication between a host and EnOcean modules (based on Dolphin Platform). Hosts are external microcontrollers or PC's incl. software tools. The physical interface between a host and a EnOcean RF module (UART) is a 3-wire connection (Rx, Tx, GND / software handshake / full-duplex), modelled on RS-232 serial interface.




Figure 1

ESP3 enhances ESP2, adding future-proof structures and extending the data content. The new functional properties are:

- Transmission of the received radio signal strength and number of the received subtelegrams
- Future requirements can be realized flexibly with the packet group "Optional Data", without violating the compatibility
- Improved data security and consistency by CRC8 Data verification
- Higher reliable ESP3 packet detection at serial byte stream
- Approximately at least seven-time higher baud rate
- The standard baud rate is 57600. If the device supports an higher baudrate, the command SET BAUDRATE can be used to modify it.

The ESP2/3 differences in summary:

	ESP 2.0	ESP 3.0
Subtelegram count		•
Receive signal strength (RSSI)		•
Upward compatible with 'Optional Data'		•
Data verification	Checksum	CRC8
UART Synchronization (packet detection)	2 bytes	6 bytes
Max. number of ESP packet types	8	256
Types of data	Radio, Command	Any type of data
Max. size of transferred data	28 bytes	65535 bytes
Communication speed	9600 baud	57600 baud 115200 baud 230400 baud 460800 baud

Table 1



ESP3 Packet

1.3 Packet structure

Data structure

ESP3 is a Point-to-Point protocol with a packet data structure.

This principle encapsulates actual user data (payload), Command, Event or Response messages.

Sync (1 byte) Sync Byte Field Byte ... Data Length Group Field Byte ... Header Optional Length Field Byte ... Packet Type CRC8 Header (1 byte) CRC8 Header Field Byte ... ESP3 Field Byte ... Data Group **Packet** Field Byte Field Byte ... Field Byte ... Field Byte **Optional Data** Group Field Byte Field Byte ... CRC8 Data (1 byte) CRC8 Data

Figure 2

Every ESP3 packet consists of Header, Data and Optional Data.

The packet (frame) is divided into: Sync.-Byte (start), CRC8 for Header and CRC8 for Data (incl. Optional Data).

Every group consists of Fields, each with 1 or x bytes.

The ESP3 Header consists of the Fields:

- Data Length (number of bytes of the group Data)
- Optional Length (number of bytes of the group Optional Data)
- Packet Type (RADIO, RESPONSE, EVENT, COMMAND ...)



1.4 Upward compatibility

The ESP3 protocol is defined as a specific structure of Sync.-Byte, Header & CRC8, which should not be changed in future versions.

For each type of packet the content and the length of DATA is different.

Today's applications have to be compliant with later versions of the ESP3 protocol ensuring an upwards compatibility.

New software applications or devices might require the definition of new types of packet.

Existing packet types may be modified only via the field OPTIONAL_DATA. The field DATA is not to be changed.

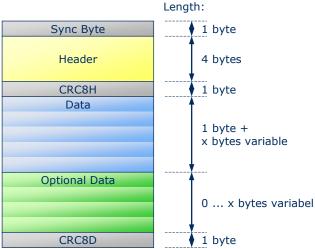


Figure 3

Existing devices will react as follows:

- Unknown packet types are confirmed with the RESPONSE message 'not supported' and will not be processed further.
- New fields in the Optional Data section of an <u>existing packet type</u> will be ignored; a RESPONSE message will not be sent.
- It is allowed to skip bytes (not transfer them) from optional fields when they are located at the end of the optional field.

Thus, backwards compatibility is secured.



1.5 UART framing

The UART of the EnOcean module has the framing: 8 data bits, no parity bit, one start bit (logical 0), one stop bit (logical 1). The line idle (≜neutral) is logical 1 (standard).

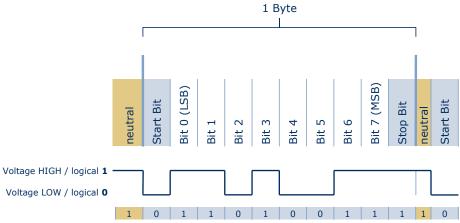


Figure 4

1.6 UART synchronization (packet detection)

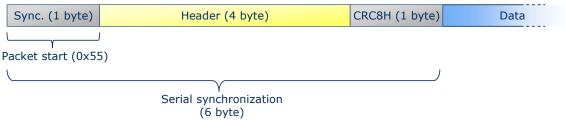


Figure 5

With ESP3 the reliability of the synchronization has been improved significantly:

As soon as a Sync.-Byte (value 0x55) is identified, the subsequent 4 byte-Header is compared with the corresponding CRC8H value.

If the result is a match the Sync.-Byte is correct. Consequently, the ESP3 packet is detected properly and the subsequent data will be passed.

If the Header does not match the CRC8H, the value 0x55 does not correspond to a Sync.-Byte. The next 0x55 within the data stream is picked and the verification is repeated.

The chapter 3.4 shows an example for a feasible implementation.



1.6.1 Packet description

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	Serial synchronization byte; always set to 0x55
Header	1	2	Data Length	0xnnnn	Specifies how many bytes in DATA must be interpreted
	3	1	Optional Length	0xnn	Specifies how many bytes in OPTIONAL_DATA must be interpreted
	4	1	Packet Type	0xnn	Specifies the packet type of DATA, respectively OPTIONAL_DATA
-	5	1	CRC8H	0xnn	CRC8 Header byte; calculated checksum for bytes: DATA_LENGTH, OPTIONAL LENGTH and TYPE
Data	6	х		 	Contains the actual data payload with topics: - RawData (e.g. 1:1 radio telegram) - Function codes + optional parameters - Return codes + optional parameters - Event codes x = variable length of DATA / byte number
Optional Data	6+x	У			Contains additional data that extends the field DATA; y = variable length of OPTIONAL_DATA
-	6+x+y	1	CRC8D	0xnn	CRC8 <u>D</u> ata byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 2

1.6.2 Packet types

Depending on the field [Packet Type] a different kind of packet is transmitted.


_ op o		[mila or packet is transmitted.			
Type No.	Value hex	Name	Description			
0	0x00		Reserved			
1	0x01	RADIO_ERP1	Radio telegram			
2	0x02	RESPONSE	Response to any packet			
3	0x03	RADIO_SUB_TEL	Radio subtelegram			
4	0x04	EVENT	Event message			
5	0x05	COMMON_COMMAND	Common command			
6	0x06	SMART_ACK_COMMAND	Smart Ack command			
7	0x07	REMOTE_MAN_COMMAND	Remote management command			
8	0x08		Reserved for EnOcean			
9	0x09	RADIO_MESSAGE	Radio message			
10	0x0A	RADIO_ERP2	ERP2 protocol radio telegram			
11 15	0x0A 0F		Reserved for EnOcean			
16	0x10	RADIO_802_15_4	802_15_4_RAW Packet			
17	0x11	COMMAND_2_4	2.4 GHz Command			
18 127	0x12 0x1F		Reserved for EnOcean			
128255	0x80 FF	available	MSC and messages			
Table 3						

Table 3



1.6.3 Direction of packet types

The function and the properties of a packet type determine the direction of the ESP3 data traffic, and whether a RESPONSE message is required or not.

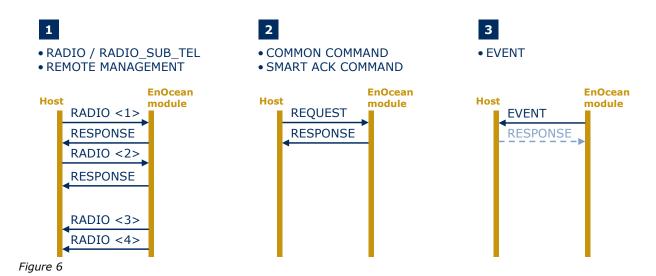

Case 1: ESP3 packets of the type RADIO_ERP1, RADIO_SUB_TEL or REMOTE_MAN pass bidirectionally across the serial interface. After sending a packet (host -> module) it is mandatory to wait for the RESPONSE message, only then the telegram is passed correctly via the radio interface.

After receiving (module -> host) a packet no RESPONSE is required (see RADIO_ERP1 no. <3> and <4>).

Case 2: Only a host sends a ESP3 COMMAND (COMMON, SMART ACK) to an EnOcean module. Each REQUEST is answered with a RESPONSE message (OK, error, etc.). The reverse direction module-to-host is not possible.

Case 3: Only an EnOcean module sends an EVENT to a host. The type of the EVENT defines whether a RESPONSE message is required or not.

1.6.4 ESP3 Timeout

A timeout in an ESP3 packet is defined as soon as the time between two characters exceeds 100ms.

If the answer time between REQUEST/EVENT and RESPONSE exceeds 500ms a timeout is identified as well.



2 ESP3 Command Description

2.1 Packet Type 1: RADIO_ERP1

2.1.1 Packet structure

The ERP1 radio telegram (raw data) is embedded into the ESP3 packet. The actual user data (variable length) is a subset of the radio telegram.

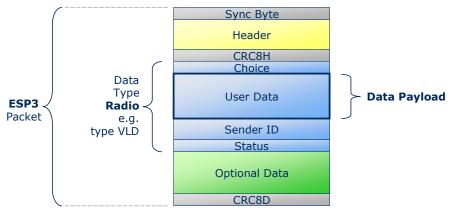


Figure 7

The following structure is applicable to all types of radio telegrams:

Group	Offset	Siza	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	Description
	1	2	Data Length	0xnnnn	Variable length of radio telegram
Header	3	1	Optional Length	0x07	7 fields fixed
	4	1	Packet Type	0x01	RADIO_ERP1 = 1
-	5	1	CRC8H	0xnn	
Data	6	x			Radio telegram without checksum/CRC x = variable length / size
	6+x	1	SubTelNum	0xnn	Number of subtelegram; Send: 3 / receive: 1 y
	7+x	4	Destination ID	0xnnnnnnnn	Broadcast transmission: FF FF FF Addressed transmission (ADT): Destination ID (= address)
Optional	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
Data	12+x		Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated
-	13+x	1	CRC8D	0xnn	CRC8 <u>Data</u> byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 4



When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

05 RET_LOCK_SET

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

Note:

- Security: When sending an Addressed Radio Packet (ADT Telegram) the used security features will be determined by the Secure Link Table. Security level field in ESP3 will not have any influence in send case.
 - If the destination address is setup in the outbound table then the configured Security features will be used.
 - If the destination address is not setup in the outbound link table then Security Level 0x00 (no encryption/authentication) will be used.



2.1.2 Radio variants (examples)

Out of the numerous variants of the RADIO_ERP1 packet, described in other documents, only a few examples are described here. These examples describe the structure of DATA on the ESP3 interface. On the radio link specifically the ADT telegram has a different structure (e.g. R-ORG_EN).

RADIO (VLD)

Group	Offset	Size	Field	Value hex	Description
	6	1	R-ORG	0xD2	Radio type VLD = D2
	7	Х	User Data	0xnn0xnn	1 14 byte data payload
Data	7+x	4	Sender ID	0xnnnnnnnn	Unique device sender ID
Data	11+x	1	Status	0xnn	Telegram control bits – used in case of
					repeating, switch telegram encapsulation,
					checksum type identification

Table 5

RADIO (ADT) Addressing Destination Telegram

KADIO	<u>(701)</u>	Auui	essing Destination	i relegialli	
Group	Offset	Size	Field	Value hex	Description
	6	1	R-ORG	0xA6	Radio type, e.g. ADT = A6, 4BS = 0xA5
	7	Х	User Data	0xnn0xnn	1 9 byte data payload
Data	7+x	4	Sender ID	0xnnnnnnn	Unique device sender ID
	11+x	1	Status	0xnn	Telegram control bits – used in case of repeating, switch telegram encapsulation, checksum type identification
	6+x	1	SubTelNum	0xnn	Number of sub telegram; Send: 3 / receive: 1 y
	7+x	4	Destination ID	0xnnnnnnn	Addressed transmission (ADT): Destination ID (= address)
Optional	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
Data	12+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated

Table 6

RADIO (4BS) / EEP profile 07-02-14

IVADIO	(400)	,	prome of or		
Group	Offset	Size	Field	Value hex	Description
	6	1	R-ORG	0xA5	Radio type 4BS
	7	1	Data Byte 3	0x00	Unused in this EEP profile
	8	1	Data Byte 2	0x00	Unused in this EEP profile
Data	9	1	Data Byte 1	0xnn	Temperature value 255 0
Data	10	1	Data Byte 0	0b0000 n 000	DB_0.BIT 3 = Learn Bit
					Normal mode = $1 / \text{Teach In} = 0$
	11	4	Sender ID	0xnnnnnnnn	Unique device sender ID
	15	1	Status	0xnn	Telegram control bits - used in case of



ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

		repeating, switch telegrar	n encapsulation,
		checksum type identificat	ion

Table 7



2.2 Packet Type 2: RESPONSE

2.2.1 Packet structure

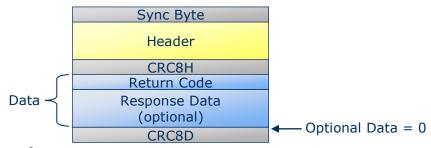


Figure 8

The properties of the preceding command and the re-delivered return-code determine whether optional response data are included, or only the return code itself.

2.2.2 List of Return Codes

Code	Name	Description
00	RET_OK	OK command is understood and triggered
01	RET_ERROR	There is an error occurred
02	RET_NOT_SUPPORTED	The functionality is not supported by that implementation
03	RET_WRONG_PARAM	There was a wrong parameter in the command
04	RET_OPERATION_DENIED	Example: memory access denied (code-protected)
05	RET_LOCK_SET	Duty cycle lock
06	RET_BUFFER_TO_SMALL	The internal ESP3 buffer of the device is too small, to handle this telegram
07	RET_NO_FREE_BUFFER	Currently all internal buffers are used.
> 128		Return codes greater than 0x80 are used for commands with special return information, not commonly useable.

Table 8

2.2.3 Standard Response Structure

Example of standard RESOPNSE with RET_OK (without response data)

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	Data = 1 byte
Header	3	1	Optional Length	0x00	Optional Data = 0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK
-	7	1	CRC8D	0xnn	

Table 9

Specific variants of the response messages are described in the chapter of the command.



2.3 Packet Type 3: RADIO_SUB_TEL

This ESP3 packet type is functionality internal to EnOcean; it is applied for e.g. diagnosis or statistics. The packet design corresponds to the type RADIO_ERP1. The content of the OPTIONAL_DATA is altered slightly.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	Variable length of radio subtelegram
Header	3	1	Optional Length	0xnn	9 + x + 3*s bytes x = variable length radio subtelegram s = number of subtelegram
	4	1	Packet Type	0x03	RADIO SUB TEL = 3
-	5	1	CRC8H	0xnn	
Data	6	х			Radio telegram without checksum/CRC x = variable length / size
	6+x	1	SubTelNum	0xnn	actual sequence number of subtelegrams (1 y); Repeated telegrams will be added
	7+x	4	Destination ID	0xnnnnnnn	Broadcast transmission: FF FF FF Addressed transmission (ADT): Destination ID (= address)
	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
Optional Data	12+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated
	13+x	2	TimeStamp	0xnnnn	Timestamp of 1 st subtelegram is the system timer tick [ms] (2 byte lower address)
	15+x+ +s	1	Tick SubTel	0xnn	Relative time [ms] of each subtelegram in relation to the TimeStamp
	15+x +2*s	1	dBm SubTel	0xnn	RSSI value of each subtelegram
	15+x +3*s	1	Status SubTel	0xnn	Telegram control bits of each subtelegram – used in case of repeating, switch telegram encapsulation, checksum type identification
-	15+x +4*s	1	CRC8D	0xnn	

Table 10

Every received subtelegram has the group \mathbf{s} with fields in the order: Tick SubTel, dBm SubTel, Status SubTel ($\mathbf{s} =$ also number of subtelegram / multiplier to calculate the offset).

S



When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

05 RET_LOCK_SET

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

2.4 Packet Type 4: EVENT

2.4.1 Structure

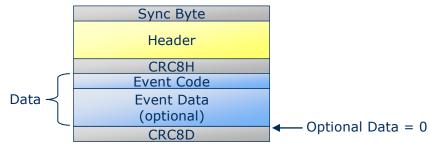


Figure 9

An EVENT is primarily a confirmation for processes and procedures, incl. specific data content.

2.4.2 List of EVENT Codes

Code	Name	Description
01	SA_RECLAIM_NOT_SUCCESSFUL	Informs the backbone of a Smart Ack Client about an unsuccessful reclaim.
02	SA_CONFIRM_LEARN	Used for SMACK to confirm/discard learn in/out
03	SA_LEARN_ACK	Inform backbone about result of learn request
04	CO_READY	Inform backbone about the readiness for operation
05	CO_EVENT_SECUREDEVICES	Informs about a secure device
06	CO_DUTYCYCLE_LIMIT	Informs about duty cycle limit
07	CO_TRANSMIT_FAILED	Informs that the device was not able to send a
		telegram.

Table 11



2.4.3 Code 01: SA_RECLAIM_NOT_SUCCESSFUL

Function: Informs the backbone of a Smart Ack Client about an unsuccessful reclaim.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x01	SA_RECLAIM_NOT_SUCCESSFUL = 1
-	7	1	CRC8D	0xnn	

Table 12

Following described **RESPONSE** applies to return codes:

00: RET_OK

01: RET_ERROR
02: RET_NOT_SUPPORTED
03: RET_WRONG_PARAM

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0xnn	00, 01, 02, 03
-	7	1	CRC8D	0xnn	

Table 13



2.4.4 Code 02: SA_CONFIRM_LEARN

Function: Request to backbone controller how to handle the received learn request.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0011	17 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x02	SA_CONFIRM_LEARN = 2
	7	1	Priority of the	0xnn	Already post master 0b xxxx 1xxx
			postmaster		Place for mailbox 0b xxxx x1xx
			candidate		Good RSSI 0b xxxx xx1x
					Local 0b xxxx xxx1
	8	1	2^2 2^0:	0b00000nnn	nnn = Most significant 3 bits of the
			Manufacturer ID		Manufacturer ID
5 .			2^7 2^3: Res.		00000 = reserved
Data	9	1	Manufacturer ID	0xnn	Least significant bits of the Manufact. ID
	10	3	EEP	0xnnnnnn	Code of used EEP profile
	13	1	RSSI	0xnn	Signal strength; Send case: FF
					Receive case: actual RSSI
	14	4	Postmaster	0xnnnnnnnn	Device ID of the Post master candidate
			Candidate ID		
	18	4	Smart Ack ClientID	0xnnnnnnn	This sensor would be Learn IN
	22	1	Hop Count	0xnn	Numbers of repeater hop
-	23	1	CRC8D	0xnn	

Table 14

Following described **RESPONSE** applies to return code: 00: RET OK

UU: KEI	_0ĸ				
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0004	4 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	2	Response time	0xnnnn	Response time for Smart Ack Client in ms in which the controller can prepare the data and send it to the postmaster. Only actual if learn return code is Learn IN
Data	9	1	Confirm code	0xnn	0x00 Learn IN 0x11 Discard Learn IN, EEP not accepted 0x12 Discard Learn IN, PM has no place for further mailbox 0x13 Discard Learn IN, Controller has no place for new sensor 0x14 Discard Learn IN, RSSI was not good enough 0x20 Learn OUT 0xFF Function not supported
-	10	1	CRC8D	0xnn	

Table 15



For **RESPONSE** with return codes: 01 RET_ERROR, 02 RET_NOT_SUPPORTED, 03 RET_WRONG_PARAM is the structure described by the chapter: 2.2.3

2.4.5 Code 03: SA_LEARN_ACK

Function: Informs Smart Ack client about the result of a previous sent learn request.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0004	4 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x03	SA_LEARN_ACK = 3
	7	2	Response time	0xnnnn	Response time for Smart Ack Client in ms in which the controller can prepare the data and send it to the postmaster. Only actual if learn return code is Learn IN
Data	9	1	Confirm code	0xnn	0x00 Learn IN 0x11 Discard Learn IN, EEP not accepted 0x12 Discard Learn IN, PM has no place for further MB 0x13 Discard Learn IN, Controller has no place for new sensor 0x14 Discard Learn IN, RSSI was not good enough 0x20 Learn OUT
-	10	1	CRC8D	0xnn	

Table 16

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET WRONG PARAM

Since no additional data are included, that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3



2.4.6 Code 04: CO_READY

Function: Informs backbone about the readiness for operation.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	1 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x04	CO_READY = 4
Data	7	1	Reset Cause	0xnn	 00 = Voltage supply drop or indicates that VDD > VON 01 = Reset caused by usage of the reset pin (is set also after downloading the program with the programmer) 02 = Watchdog timer counter reached the timer period 03 = Flywheel timer counter reached the timer period 04 = Parity error 05 = HW Parity error in the Internal or External Memory 06 = A memory request from the CPU core does not correspond to any valid memory location. This error may be caused by a S/W malfunction. 07 = Wake-up pin 0 activated 08 = Wake-up pin 1 activated 09 = Unknown reset source - reset reason couldn't be detected
Optional Data	8	1	Mode	0xnn	00 = Standard Security01 = Extended Security
-	8	1	CRC8D	0xnn	

Table 17

This EVENT does not require any RESPONSE message.



2.4.7 Code 05: CO_EVENT_SECUREDEVICES

Function: Informs backbone about events regarding a secure device

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x05	CO_EVENT_SECUREDEVICES = 5
Data	7	1	Event Cause	0xnn	00 = Teach in failed, because no more space available 01 = reserved 02 = Resynchronization attempt with wrong private key 03 = Configured count of telegrams with wrong CMAC received 04 = Teach-In failed. Telegram corrupted. 05 = PSK Teach-In failed. No PSK is set for the device 06 = Teach-In failed. Trying to teach-in without Pre-Shared Key even if the PSK is set for the device 07 = CMAC or RLC not correct 08 = Standard Telegram from device in secure link table 09255 = reserved
	8	4	Device ID	0xnnnnnnn	Device ID
-	12	1	CRC8D	0xnn	

Table 18

This EVENT does not require any RESPONSE message.



2.4.8 Code 06: CO_DUTYCYCLE_LIMIT

Function: Informs backbone about duty cycle limit

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x06	CO_DUTYCYCLE_LIMIT = 6
Data	7	1	Event Cause		 00 = Duty cycle limit released, it's possible to send telegrams 01 = Duty cycle limit reached, no more telegram will be sent 02255 = reserved
-	8	1	CRC8D	0xnn	

Table 19

This EVENT does not require any RESPONSE message.

2.4.9 Code 07: CO_TRANSMIT_FAILED

Function: Informs that the device was not able to send a telegram

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
	6	1	Event Code	0x07	CO_TRANSMIT_FAILED = 7
	7	1	Event Cause	0xnn	00 = CSMA failed, channel was never
Data					free
Data					01 = No Acknowledge received, telegram
					was transmitted, but no ack received.
					02255 = reserved
-	8	1	CRC8D	0xnn	

Table 20

This EVENT does not require any RESPONSE message.



2.5 Packet Type 5: COMMON_COMMAND

2.5.1 Structure

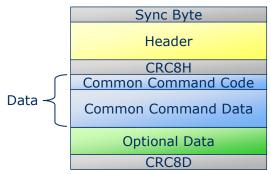


Figure 10

2.5.2 List of COMMON_COMMAND Codes

Code	Function Name	Description
01	CO_WR_SLEEP	Order to enter in energy saving mode
02	CO_WR_RESET	Order to reset the device
03	CO_RD_VERSION	Read the device (SW) version / (HW) version, chip ID etc.
04	CO_RD_SYS_LOG	Read system log from device databank
05	CO_WR_SYS_LOG	Reset System log from device databank
06	CO_WR_BIST	Perform Flash BIST operation
07	CO_WR_IDBASE	Write ID range base number
08	CO_RD_IDBASE	Read ID range base number
09	CO_WR_REPEATER	Write Repeater Level off,1,2
10	CO_RD_REPEATER	Read Repeater Level off,1,2
11	CO_WR_FILTER_ADD	Add filter to filter list
12	CO_WR_FILTER_DEL	Delete filter from filter list
13	CO_WR_FILTER_DEL_ALL	Delete all filters
14	CO_WR_FILTER_ENABLE	Enable/Disable supplied filters
15	CO_RD_FILTER	Read supplied filters
16	CO WR WAIT MATURITY	Waiting till end of maturity time before received radio
		telegrams will transmitted
17	CO_WR_SUBTEL	Enable/Disable transmitting additional subtelegram info
18	CO_WR_MEM	Write x bytes of the Flash, XRAM, RAM0
19	CO_RD_MEM	Read x bytes of the Flash, XRAM, RAM0
20	CO_RD_MEM_ADDRESS	Feedback about the used address and length of the config
		area and the Smart Ack Table
21	CO_RD_SECURITY	DEPRECIATED Read own security information (level, key)
22	CO_WR_SECURITY	DEPRECIATED Write own security information (level, key)
23	CO_WR_LEARNMODE	Enable/disable learn mode
24	CO_RD_LEARNMODE	Read learn mode
25		Add a secure device
26	CO_WR_SECUREDEVICE_DEL	Delete a secure device
27	CO_RD_SECUREDEVICE_ BY INDEX	Read secure device by index
28	CO_WR_MODE	Sets the gateway transceiver mode
29	CO_RD_NUMSECUREDEVICES	Read number of taught in secure devices
30	CO_RD_SECUREDEVICE_ BY_ID	Read secure device by ID



31	CO_WR_SECUREDEVICE_ ADD_PSK	Add Pre-shared key for inbound secure device.		
32	CO_WR_SECUREDEVICE_ SENDTEACHIN	Send secure Teach-In message.		
33	CO_WR_TEMPORARY_RLC_ WINDOW	Set the temporary rolling-code window for every taught- in device		
34	CO_RD_SECUREDEVICE_PSK	Read PSK		
35	CO_RD_DUTYCYCLE_LIMIT	Read parameters of actual duty cycle limit		
36	CO_SET_BAUDRATE	Modifies the baud rate of the EnOcean device		
37	CO_GET_FREQUENCY_INFO	Reads Frequency and protocol of the Device		
38	Reserved			
39	CO_GET_STEPCODE	Reads Hardware Step code and Revision of the Device		
40	Reserved			
41	Reserved			
42	Reserved			
43	Reserved			
44	Reserved			
45	Reserved			
46	CO_WR_REMAN_CODE	Sets secure code to unlock Remote Management functionality by radio		
47	CO_WR_STARTUP_DELAY	Sets the startup delay: the time before the system initializes		
48	CO_WR_REMAN_REPEATING	Select if REMAN telegrams originating from this module can be repeated		
49	CO_RD_REMAN_REPEATING	Check if REMAN telegrams originating from this module can be repeated		
50	CO_SET_NOISETHRESHOLD	Sets the RSSI noise threshold level for telegram detection		
51	CO_GET_NOISETHRESHOLD	Gets the RSSI noise threshold level for telegram detection		

Table 21



2.5.3 Code 01: CO_WR_SLEEP

Function: Order to enter the energy saving mode.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x01	CO_WR_SLEEP = 1
Data	7	4	Deep sleep period		Period in 10 ms units 00000000 = default max. value = max. data range 00 FF FF FF (~ 46h); After waking up, the module generate an internal hardware reset
-	11	1	CRC8D	0xnn	

Table 22

In this case, the following **RESPONSE** message gives only the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.4 Code 02: CO_WR_RESET

Function: Order to reset the device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x02	CO_WR_RESET = 2
-	7	1	CRC8D	0xnn	

Table 23

In this case, the following **RESPONSE** message gives only the return codes:

00 RET OK

01 RET_ERROR

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3



2.5.5 Code 03: CO_RD_VERSION

Function: Read the device SW version / HW version, chip-ID, etc.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x03	CO_RD_VERSION = 3
-	7	1	CRC8D	0xnn	

Table 24

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0021	33 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	4	APP version	0xnnnnnnnn	Application
					Byte 1: Main version
					Byte 2: Beta version
					Byte 3: Alpha version
					Byte 4: Build
	11	4	API version	0xnnnnnnnn	Application Programming Interface
Data					Byte 1: Main version
					Byte 2: Beta version
					Byte 3: Alpha version
					Byte 4: Build
	15	4	Chip ID	0xnnnnnnnn	Unique ID
	19	4	Chip Version	0xnnnnnnnn	Reserved for internal use
	23	16	App. description	char. ASCII	8 bit ASCII / 16 characters;
					Null-terminated string
-	39	1	CRC8D	0xnn	

Table 25

For **RESPONSE** with return code:



2.5.6 Code 04: CO_RD_SYS_LOG

Function: Read System Log from device databank.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x04	CO_RD_SYS_LOG = 4
-	7	1	CRC8D	0xnn	

Table 26

Following described **RESPONSE** applies to return code:

00: RET OK

UU: KEI	_UK				
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	1+x bytes
Header	3	1	Optional Length	0xnn	y bytes
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	х	API Log entry 000 API Log entry 001 API Log entry 002	0xnn 0xnn 0xnn 	Log entry 000 - xxx in DATA: Log counter of API
Optional Data	7+x	У	APP Log entry 000 APP Log entry 001 APP Log entry 002	0xnn 0xnn 0xnn 	Log entry 000 - xxx in OPTIONAL_DATA: Log counter of APP
-	7+x+y	1	CRC8D	0xnn	

Table 27

After a reset, the counters starts with FF and decrement with each new EVENT down to 00 and will stopped. With a reset command the counter starts again with FF.

For **RESPONSE** with return code:



2.5.7 Code 05: CO_WR_SYS_LOG

Function: Reset System Log from device databank.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x05	CO_WR_SYS_LOG = 5
-	7	1	CRC8D	0xnn	

Table 28

In this case, the following **RESPONSE** message gives only the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.8 Code 06: CO_WR_BIST

Function: Perform Flash BIST operation (Built-in-self-test).

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x06	CO_WR_BIST = 6
-	7	1	CRC8D	0xnn	

Table 29

Following described **RESPONSE** applies to return code:

00: RET OK

OO. KEI_OK							
Group	Offset	Size	Field	Value hex	Description		
-	0	1	Sync. Byte	0x55			
	1	2	Data Length	0x0002	2 bytes		
Header	3	1	Optional Length	0x00	0 byte		
	4	1	Packet Type	0x02	RESPONSE = 2		
-	5	1	CRC8H	0xnn			
Data	6	1	Return Code	0x00	$RET_OK = 0$		
	7	1	BIST result	0xnn	BIST OK = 0, BIST failed = other value		
-	8	1	CRC8D	0xnn			

Table 30

For **RESPONSE** with return code:



2.5.9 Code 07: CO_WR_IDBASE

Function: Write ID range base number.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x07	CO_WR_IDBASE = 7
Data	7	4	Base ID		Range between 0xFF800000 and 0xFFFFFF80
-	11	1	CRC8D	0xnn	

Table 31

RESPONSE:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0xnn	RET_OK = 0x00 RET_NOT_SUPPORTED = 0x02 FLASH_HW_ERROR = 0x82 The write/erase/verify process failed, the flash page seems to be corrupted BASEID_OUT_OF_RANGE = 0x90 BASEID_MAX_REACHED = 0x91
-	7	1	CRC8D	0xnn	

Table 32



2.5.10 Code 08: CO_RD_IDBASE

Function: Read ID range base number.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x08	CO_RD_IDBASE = 8
-	7	1	CRC8D	0xnn	

Table 33

Following described **RESPONSE** applies to return code:

00: RET OK

OO. ILL					
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	4	Base ID	0xFFnnnnnn	Range between 0xFF800000 and 0xFFFFFF80
Optional Data	8	1	Remaining write cycles for Base ID	0xnn	Remaining write cycles for Base ID. If this value is 0xFF, there is no limit for writing cycles.
-	9	1	CRC8D	0xnn	

Table 34

For **RESPONSE** with return code:



2.5.11 Code 09: CO_WR_REPEATER

Function: Write Repeater Level OFF, 1, 2.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x09	CO_WR_REPEATER = 09
	7	1	REP_ENABLE		Repeater OFF = 0, ON all = 1, ON filtered = 2
	8	1	REP_LEVEL		When Repeater OFF must be 0, when ON then 1 for Level-1, 2 for Level-2
-	9	1	CRC8D	0xnn	

Table 35

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3



2.5.12 Code 10: CO_RD_REPEATER

Function: Read Repeater Level OFF, 1, 2.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0A	CO_RD_REPEATER = 10
-	7	1	CRC8D	0xnn	

Table 36

Following described **RESPONSE** applies to return code:

00: RET OK

	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	REP_ENABLE	0x000x02	Repeater
Data					OFF = 0 , ON all = 1 , ON filtered = 2
Data	8	1	REP_LEVEL	0x000x02	Repeater OFF $= 0$,
					1 for Level-1,
					2 for Level-2
-	9	1	CRC8D	0xnn	

Table 37

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter: 2.2.3



2.5.13 Code 11: CO_WR_FILTER_ADD

Function: Add filter to filter list.

Info on filters:

ALL and OR composition are logical operation on the result of each filter. Each result of each filter is then OR or ALL operated.

BLOCK is the negation result of the filter operation.

Two example use cases:

Only allow certain ids, use an OR composition and APPLY filter for the ids. Block certain ids, use an AND composition and BLOCK filter for the ids.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0007	7 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x0B	CO_WR_FILTER_ADD = 11
	7	1	Filter type	0x000x03	Device source ID = 0, R-ORG = 1, dBm = 2, destination ID = 3
Data	8	4	Filter value	0xnnnnnnn	Value of filter function 'compare': - device source or destination ID - R-ORG - dBm value RSSI of radio telegram (unsigned, but interpreted as negative dBm value)
	12	1	Filter kind	0x00 0x80 0x40 0xC0	blocks radio interface = 0x00 apply radio interface = 0x80 blocks filtered repeating = 0x40 apply filtered repeating = 0xC0
-	13	1	CRC8D	0xnn	

Table 38

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 01 RET_ERROR (memory space full)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



```
Some examples for filters:
//BLOCKS specified ID
Filter type = 0x0 (ID)
Filter_value = 0x12345678 (device source ID)
Filter\_kind = 0x00 (block)
//BLOCKS all other IDs besides specified ID
Filter type = 0x00 (ID)
Filter value = 0x12345678 (device source ID)
Filter\_kind = 0x80 (apply)
//BLOCKS telegrams with specified R-ORG
Filter type = 0x01 (R-ORG)
Filter_value = 0xA5 (4BS)
Filter\_kind = 0x00 (block)
//BLOCKS all other telegrams besides telegrams with specified R-ORG
Filter type = 0x01 (R-ORG)
Filter value = 0xA5 (4BS)
Filter\_kind = 0x80 (apply)
//BLOCKS signals weaker than -70dBm
Filter_type = 0x02 (dBm)
Filter_value = 0x00000046 (dec 70)
Filter\_kind = 0x00 (block)
//BLOCKS signals stronger than -70dBm
Filter_type = 0x02 (dBm)
Filter_value = 0x00000046 (dec 70)
Filter\_kind = 0x80 (apply)
//Repeats only specified ID (when filtered repeating is ON)
Filter type = 0x00 (ID)
Filter value = 0x12345678 (device source ID)
Filter kind = 0xC0 (apply for filtered repeating)
//Does not repeat telegrams with specified R-ORG (when filtered repeating is ON)
Filter_type = 0x01 (R-ORG)
Filter value = 0xA5 (4BS)
Filter\_kind = 0x40 (block for filtered repeating)
// Does not repeat signals stronger than -70dBm (when filtered repeating is ON)
Filter_type = 0x02 (dBm)
Filter value = 0x00000046 (dec 70)
Filter kind = 0xC0 (apply for filtered repeating)
```



2.5.14 Code 12: CO_WR_FILTER_DEL

Function: Delete filter from filter list. To make this command structure in line with CO_WR_FILTER_ADD Filter kind was added to the Data field.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0007	7 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x0C	CO_WR_FILTER_DEL = 12
	7	1	Filter type	0x000x03	Device source ID = 0, R-ORG = 1, dBm =
					2, destination ID = 3
	8	4	Filter value	0xnnnnnnnn	Value of filter function 'compare':
					- device source or destination ID
					- R-ORG
Data					- dBm value RSSI of radio telegram
					(unsigned, but interpreted as negative
					dBm value)
	9	1	Filter kind	0x00	blocks radio interface = 0x00
				0x80	apply radio interface = 0x80
				0x40	blocks filtered repeating = 0x40
				0xC0	apply filtered repeating = 0xC0
-	12	1	CRC8D	0xnn	

Table 39

Previous command syntax (backward compatible):

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x0C	CO_WR_FILTER_DEL = 12
	7	1	Filter type	0x000x03	Device source ID = 0, R-ORG = 1, dBm = 2, destination ID = 3
Data	8	4	Filter value	0xnnnnnnn	Value of filter function 'compare': - device source or destination ID - R-ORG - dBm value RSSI of radio telegram (unsigned, but interpreted as negative dBm value)
- 10	12	1	CRC8D	0xnn	

Table 40

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 01 RET ERROR
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.5.15 Code 13: CO_WR_FILTER_DEL_ALL

Function: Delete all filters from filter list.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0D	CO_WR_FILTER_DEL = 13
-	7	1	CRC8D	0xnn	

Table 41

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

Since no additional data are included which require description the standard RESPONSE structure is detailed in chapter: 2.2.3



2.5.16 Code 14: CO_WR_FILTER_ENABLE

Function: Enable/Disable all supplied filters.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x0E	CO_WR_FILTER_ENABLE = 14
	7	1	Filter ON/OFF	0x00 0x01	All radio interface filter disable = 0 (OFF) All radio interface filter enable = 1 (ON)
Data	8	1		0x00 0x01 0x08 0x09	OR composition of all filters = 0 AND composition of all filters = 1 OR for radio interface filters; AND for filtered repeating filters = 8 AND for radio interface filters; OR for filtered repeating filters = 9
-	9	1	CRC8D	0xnn	

Table 42

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.5.17 Code 15: CO_RD_FILTER

Function: Read supplied filters.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0F	CO_RD_FILTER = 15
-	7	1	CRC8D	0xnn	

Table 43

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55) compain
	1	2	Data Length	0xnnnn	1 + 5*f bytes (f = number of filters)
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	$RET_OK = 0$
Dutu	7+5*f	1	Filter type	0xnn	Device ID = 0, R-ORG = 1, dBm = 2, Destination ID = 3
	8+5*f	4	Filter value	0xnnnnnnn	Value of filter function 'compare': - device ID - R-ORG - RSSI of radio telegram in dBm
-	12+5*f	1	CRC8D	0xnn	

Table 44

Every supplied filter has the group **f** with fields in the order: filter type, filter value.

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3



2.5.18 Code 16: CO_WR_WAIT_MATURITY

Function: Waiting till end of maturity time before received radio telegrams will transmit.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x10	CO_WR_WAIT_MATURITY = 16
Data	7	1	Wait End Maturity		Radio telegrams are send immediately Radio telegrams are send after the maturity time is elapsed
-	8	1	CRC8D	0xnn	

Table 45

In this case, the following **RESPONSE** gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.19 Code 17: CO_WR_SUBTEL

Function: Enable/Disable transmitting additional subtelegram info.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x11	CO_WR_SUBTEL = 17
Data	7	1	Enable	0xnn	Enable = 1
					Disable = 0
-	8	1	CRC8D	0xnn	

Table 46

In this case, the following **RESPONSE** gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.5.20 Code 18: CO_WR_MEM

Function: Write x bytes of the Flash, RAMO, DATA, IDATA, XDATA.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	6 + x bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x12	CO_WR_MEM = 18
Data	7	1	Memory type	0xnn	Flash 0x00 RAM 0 0x01 data RAM 0x02 idata RAM 0x03 xdata RAM 0x04 EEPROM 0x05
	8	4	Memory address	0xnnnnnnn	Start address to write
	12	Х	Memory data	0xnn	Data content to write
				 0xnn	
-	12+x	1	CRC8D	0xnn	

Table 47

In this case, the following **RESPONSE** gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (address outside range of values)
- 04 RET_OPERATION_DENIED (memory access denied / code-protected)



2.5.21 Code 19: CO_RD_MEM

Function: Read x bytes of the Flash, RAMO, DATA, IDATA, XDATA.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnn08	8 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x13	CO_RD_MEM = 19
	7	1	Memory type	0xnn	Flash 0x00
					RAM 0 0x01
					data RAM 0x02
Data					idata RAM 0x03
					xdata RAM 0x04
					EEPROM 0x05
	8	4	Memory address	0xnnnnnnnn	Start address to read
	12	2	Data lenght	0xnnnn	Length to be read
-	14	1	CRC8D	0xnn	

Table 48

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	1 + x bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	Х	Memory data	0xnn	Of read memory contents
Data					
				0xnn	
-	7+x	1	CRC8D	0xnn	

Table 49

For **RESPONSE** with return codes:

- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (address outside range of values)
- 04 RET_OPERATION_DENIED (memory access denied / code-protected)



2.5.22 Code 20: CO_RD_MEM_ADDRESS

Function: Feedback about the used address and length of the configuration area and the Smart Ack table.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x14	CO_RD_MEM_ADDRESS = 20
Data	7	1	Memory area	0xnn	Config area = 0
Data					Smart Ack Table = 1
					System error log = 2
-	8	1	CRC8D	0xnn	

Table 50

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x000A	10 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	Memory type	0xnn	Flash 0x00
					RAM 0 0x01
					data RAM 0x02
					idata RAM 0x03
Data					xdata RAM 0x04
					EEPROM 0x05
	8	4	Memory address	0xnnnnnnnn	Start address of config area / Smart Ack
					table / system error log
	12	4	Memory length	0xnnnnnnnn	Data length of config area / Smart Ack
					table / system error log
-	16	1	CRC8D	0xnn	

Table 51

For **RESPONSE** with return codes:

02 RET NOT SUPPORTED

03 RET WRONG PARAM

04 RET_OPERATION_DENIED (memory access denied / code-protected)



2.5.23 Code 21: DEPRECIATED: CO_RD_SECURITY

Function: Read security information (level, keys). This function does not support the actual security concept and should not be used any more.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x15	CO_RD_SECURITY = 21
-	7	1	CRC8D	0xnn	

Table 52

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x000A	10 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	SEC LEVEL	0x0n	Type no. of encryption
Data	8	4	KEY	0xnnnnnnnn	Security key
	12	4	Rolling Code	0x00000000	Reserved
-	16	1	CRC8D	0xnn	

Table 53

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED



2.5.24 Code 22: DEPRECIATED: CO_WR_SECURITY

Function: Write security information (level, keys). This function does not support the actual security concept and should not be used any more.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x000A	10 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x16	CO_WR_SECURITY = 22
Data	7	1	SEC LEVEL	0x0n	Type no. of encryption
Data	8	4	KEY	0xnnnnnnnn	Security key
	12	4	Rolling Code	0x00000000	Reserved
-	16	1	CRC8D	0xnn	

Table 54

In this case, the following **RESPONSE** gives the return codes:

- 00 RET_OK
- 01 RET_ERROR
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.5.25 Code 23: CO_WR_LEARNMODE

Function: Enables or disables learn mode of Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x17	CO_WR_LEARNMODE = 23
	7	1	Enable	0x0n	Start Learn mode = 1
Data					End Learn mode = 0
Data	8	4	Timeout	0xnnnnnnnn	Time-Out for the learn mode in ms.
					When time is 0 then default period of
					60'000 ms is used
Optional	12	1	Channel	0xnn	00xFD = Channel No. absolute
Data					0xFE = Previous channel relative
Data					0xFF = Next channel relative
-	-	1	CRC8D	0xnn	

Table 55

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.5.26 Code 24: CO_RD_LEARNMODE

Function: Reads the learn-mode state of Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x18	CO_RD_LEARNMODE = 24
-	7	1	CRC8D	0xnn	

Table 56

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	Enable	0x0n	Learn mode not active = 0
					Learn mode active = 1
Optional	8	1	Channel	0xnn	00xFD = Channel No. absolute
Data					0xFE = not used
Data					0xFF = not used
-	-	1	CRC8D	0xnn	

Table 57

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED



2.5.27 Code 25: CO_WR_SECUREDEVICE_ADD

Function: Add secure device to controller. It is possible to add only one or more rocker with this function.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0019	25 bytes
Header	3	1	Optional Length	0x02	2 bytes
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x19	CO_WR_SECUREDEVICE_ADD = 25
	7	1	SLF	0xnn	Security Level Format
	8	4	ID	0xnnnnnnnn	Device ID
	12	16	Private key	0xnnnnnnnn	16 bytes private key of the device
Data				0xnnnnnnnn	
				0xnnnnnnnn	
				0xnnnnnnnn	
	28	3	Rolling code	0xnnnnnn	If a 16 bit rolling code is defined in SLF,
					the MSB is undefined
	31	1	Direction	0xnn	Add device security information to:
					0x00 = Inbound table (default),
					ID = Source ID
					0x01 = Outbound table,
					ID = Destination ID. For secure
Ontional					broadcast use 0x00000000 or own ID in
Optional Data					the outbound table 0x02 = Outbound broadcast table,
Data					ID = Source ID (can be ChipID or
					one of BaseIDs)
					0x030xFF = not used
	32	1	PTM Sender	0xnn	0x00 = not PTM sender
	32	_	- The School	O.A.III	0x01 = PTM sender
					0x020xFF = Not Used.
	33	1	Teach-Info	0x0n	Secure device Teach-In info
-	-	1	CRC8D	0xnn	

Table 58

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (memory space full)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (added device known, but private key wrong)



2.5.28 Code 26: CO_WR_SECUREDEVICE_DEL

Function: Delete secure device from controller. It is only possible to delete ALL rockers of a secure device. If there was a Pre-Shared Key entry specified for that device then it will be removed as well.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1A	CO_WR_SECUREDEVICE_DEL = 26
Data	7	4	ID	0xnnnnnnnn	Device ID.
Optional Data	8	1	Direction		Remove secure device from: 0x00 = Inbound table (default) 0x01 = Outbound table 0x02 = Outbound table broadcast. 0x03 = Erase ID in both inbound and outbound directions 0x040xFF = Not used
-	-	1	CRC8D	0xnn	

Table 59

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 01 RET_ERROR (device not in list)
- 02 RET_NOT_SUPPORTED



2.5.29 Code 27: CO_RD_SECUREDEVICE_BY_INDEX

Function: Read secure device by index

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x1B	CO_RD_SECUREDEVICE = 27
Data	7	1	Index	0x000xFE	Index of secure device to read, starting with 0254
Optional Data	8	1	Direction	0xnn	Read device security information from: 0x00 = Inbound table (default) 0x01 = Outbound table, 0x02 = Outbound broadcast table 0x030xFF = not used
-	9	1	CRC8D	0xnn	

Table 60

Following described **RESPONSE** applies to return code:

00: RET OK

UU. KLI	<u>_UN</u>		•		
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	SLF	0xnn	Security Level Format
	8	4	ID	0xnnnnnnnn	Device ID
	12	16	Private Key	0xnnnnnnn 0xnnnnnnnn 0xnnnnnnn 0xnnnnnnn	16 bytes private key of the device
Optional Data	28	3	Rolling Code	0xnnnnn	If a 16 bit rolling code is defined in SLF, the MSB is undefined
	31	16	PSK	0xnnnnnnn 0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnn	16 bytes pre-shared key of the device. (when not present it will be set to 0x00)
	47	1	Teach-In info	0x0n	Teach-In info of the secure device
-	47	1	CRC8D	0xnn	

Table 61

For **RESPONSE** with return code:

01 RET_ERROR (device not in list)

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

Note:



ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

•	If PSK was not set, it will be not included in the packet. If in the future response will be extended, all bytes of non-existing PSK will be set to $0x00$	



2.5.30 Code 28: CO_WR_MODE

Function: Sets the gateway transceiver mode.

There are two modes available:

- Compatible mode ERP1 gateway uses Packet Type 1 to transmit and receive radio telegrams for ASK products with ERP2 radio protocol
- Advanced mode ERP2 gateway uses Packet Type 10 to transmit and receive radio telegrams – for FSK products with ERP2 radio protocol

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x1C	CO_WR_MODE = 28
Data	6	1	Mode	0xnn	0x00 - Compatible mode (default) - ERP1
					0x01 - Advanced mode - ERP2
-	7	1	CRC8D	0xnn	

Table 62

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 01 RET_ERROR (device not in list)
- 02 RET_NOT_SUPPORTED



2.5.31 Code 29: CO_RD_NUMSECUREDEVICES

Function: Read number of taught in secure devices

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x000x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1D	CO_RD_NUMSECUREDEVICES = 29
Optional Data	7	1	Direction	0xnn	0x00 = Inbound Table (default) 0x01 = Outbound table Destination ID Based
-	8	1	CRC8D	0xnn	

Table 63

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	Number	0xnn	Number of secure devices learned in
-	8	1	CRC8D	0xnn	

Table 64

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED



2.5.32 Code 30: CO_RD_SECUREDEVICE_BY_ID

Function: Read secure device by ID

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x000x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
D - 1 -	6	1	COMMAND Code	0x1E	CO_RD_SECUREDEVICE_BY_ID= 30
Data	7	4	ID	0xnnnnnnnn	Device ID
Optional Data	11	1	Direction	0xnn	0x00 = Inbound table (default) 0x01 = Outbound table Destination ID Based
-	12	1	CRC8D	0xnn	

Table 65

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x000x01	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
D-1-	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	SLF	0xnn	Security Level Format
Optional	8	1	Index	0x000xFE	Index of secure device in the devices
Data					table, starting with 0254
-	9	1	CRC8D	0xnn	

Table 66

For **RESPONSE** with return code:

01 RET_ERROR (device not in the list)02 RET_NOT_SUPPORTED



2.5.33 Code 31: CO_WR_SECUREDEVICE_ADD_PSK

Function: Add Pre-shared key for inbound secure device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0015	21 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x1F	CO_WR_SECUREDEVICE_ADD_PSK = 31
	8	4	ID	0xnnnnnnn	Device ID
Data	12	16	,	0xnnnnnnn 0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn	16 bytes pre-shared key of the device
-	-	1	CRC8D	0xnn	

Table 67

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (memory space full)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (added device known, but private key wrong)



2.5.34 Code 32: CO_WR_SECUREDEVICE_SENDTEACHIN

Function: Send secure Teach-In message. The device has to exist in the outbound table. Use CO_WR_SECUREDEVICE_ADD to add outbound device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x000x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x20	CO_WR_SECUREDEVICE_SENDTEACHIN
Data					= 32
	8	4	ID	0xnnnnnnnn	Device ID
Optional	8	1	TeachInInfo	0xnn	Teach-In Info
Data					
-	-	1	CRC8D	0xnn	

Table 68

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (error in sending TeachIn)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (link table empty, device not found)



2.5.35 Code 33: CO_WR_TEMPORARY_RLC_WINDOW

Function: Sets the temporary rolling-code window for every taught-in device. Once a taught-in secure telegram is received the RLC window is set to the standard value (128).

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x21	CO_WR_TEMPORARY_RLC_WINDOW=33
	7	1	Enable	0xnn	0x00 - Disables the temporary RLC
					window
Data					0x01 - Enables the temporary RLC
					window
	8	4	RLC Window	0xnnnnnnnn	Temporary rolling code window size.
					Only applied when Enabled = 0x01
-	-	1	CRC8D	0xnn	

Table 69

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 01 RET_ERROR (device not in list)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (zero is not allowed as temporary rolling code window)



2.5.36 Code 34: CO_RD_SECUREDEVICE_PSK

Function: Read Pre-shared key for inbound secure device or for the module itself.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x22	CO_RD_SECUREDEVICE_PSK = 34
Data	8	4	ID	0xnnnnnnnn	Device ID 0x00000000: will return the module PSK other ID: will return inbound device PSK
-	-	1	CRC8D	0xnn	

Table 70

In this case, the following **RESPONSE** message gives only the return codes:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0011	17 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	16	PSK	0xnnnnnnnn	16-bytes Pre-Shared Key
Data				0xnnnnnnnn	
				0xnnnnnnnn	
				0xnnnnnnnn	
-	12	1	CRC8D	0xnn	

Table 71

- 01 RET_ERROR (no PSK assigned to the ID)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (added device known, but private key wrong)



2.5.37 Code 35: CO_RD_DUTYCYCLE_LIMIT

Function: Read actual duty cycle limit values.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x23	CO_RD_DUTYCYCLE_LIMIT = 35
-	-	1	CRC8D	0xnn	

Table 72

In this case, the following **RESPONSE** message gives only the return codes: 00 RFT OK

UU KLI_					
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0008	8 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	Available duty cycle	00x64	Total load of available 1% duty cycle from 0100%
. .	8	1	Slots	0xnn	Total number of duty cycle slots
Data	9	2	Slot period	0xnnnn	Period of one slot in seconds
	11	2	Actual slot left	0xnnnn	Time left in actual slot in seconds
	13	1	Load after actual	00x64	Load available when period ends from 0100%
-	14	1	CRC8D	0xnn	

Table 73

02 RET_NOT_SUPPORTED



2.5.38 Code 36: CO_SET_BAUDRATE

Function: Modifies the baud rate of the EnOcean device.

Note: The standard start up baud rate is 57600 and not all devices support the faster baudrate.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
	6	1	COMMAND Code	0x24	CO_SET_BAUDRATE = 36
	7	1	BAUDRATE	0xnn	0 = 57600 BAUD
Data					1 = 115200 BAUD
					2 = 230400 BAUD
					3 = 460800 BAUD
-	-	1	CRC8D	0xnn	

Table 74

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET NOT SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

Note:

• The response is send with the current Baud rate settings. If the baud rate can be modified the response is then send afterwards again with the new baudrate

2.5.39 Code 37: CO_GET_FREQUENCY_INFO

Function: Reads Frequency and protocol of the Device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x25	CO_GET_FREQUENCY_INFO = 37
-	7	1	CRC8D	0xnn	

Table 75



In this case, the following $\ensuremath{\textbf{RESPONSE}}$ message gives only the return codes:

00 RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	Frequency	0xnn	0x00 315Mhz
					0x01 868.3Mhz
					0x02 902.875Mhz
					0x03 925 Mhz
					0x04 928 Mhz
Data					0x20 2.4 Ghz
	8	1	Protocol	0xnn	0x00 ERP1
					0x01 ERP2
					0x10 802.15.4
					0x20 Bluetooth
					0x30 Long Range
-	9	1	CRC8D	0xnn	

Table 76

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.40 Code 38: Reserved

Reserved for future use.

2.5.41 Code 39: CO_GET_STEPCODE

Function: Reads Hardware Step code and Revision of the Device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x27	CO_GET_STEPCODE = 39
-	7	1	CRC8D	0xnn	

Table 77



In this case, the following **RESPONSE** message gives only the return codes:

00 RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	Step code	0xnn	e.g. 0xDA ,0xCA
	8	1	Status code	0xnn	e.g. 0x01, 0x02
-	9	1	CRC8D	0xnn	

Table 78

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.42 Code 40: Reserved

Reserved for future use.

2.5.43 Code 41: Reserved

Reserved for future use.

2.5.44 Code 42: Reserved

Reserved for future use.

2.5.45 Code 43: Reserved

Reserved for future use.

2.5.46 Code 44: Reserved

Reserved for future use.

2.5.47 Code 45: Reserved

Reserved for future use.



2.5.48 Code 46: CO_WR_REMAN_CODE

Function: Sets secure code to unlock Remote Management functionality by radio.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x2E	CO_WR_RORGS_CLEAR = 46
Data	7	4	Secure code	0xnnnnnnn	Secure code for unlocking device
-	11	1	CRC8D	0xnn	

Table 79

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (Hardware Error)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.49 Code 47: CO_WR_STARTUP_DELAY

Function: Sets the startup delay: the time before the system initializes

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x2F	CO_WR_STARTUP_DELAY = 47
Data	7	1	Startup Delay	0xnn	StartupDelay[10ms]
-	8	1	CRC8D	0xnn	

Table 80

Start-up Delay = $1 \rightarrow$ Start delay = 10ms Start-up Delay = $90 \rightarrow$ Start delay = 900ms

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (Hardware Error)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.50 Code 48: CO_WR_REMAN_REPEATING

Function: Select if REMAN telegrams originating from this module can be repeated.



Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x30	CO_WR_REMAN_REPEATING = 48
Data	7	1	Repeated	0x00 0x01	Reman answers will not be repeated (Status =0x8F) Reman answers will be repeated (Status =0x80)
-	8	1	CRC8D	0xnn	

Table 81

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.51 Code 49: CO_RD_REMAN_REPEATING

Function: Check if the REMAN telegrams originating from this module can be repeated.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x31	CO_RD_REMAN_REPEATING = 49
-	7	1	CRC8D	0xnn	

Table 82

In this case, the following **RESPONSE** message gives only the return codes:

00: RET OK

UU: KEI	_OK				
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	Repeated	0x00	Send REMAN messages will contain "not
Data					to be repeated" (Status $=0x8F$)
				0x01	Send REMAN messages will contain "can
					be repeated"(Status =0x80)
-	8	1	CRC8D	0xnn	

Table 83

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM



Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.52 Code 50: CO_SET_NOISETHRESHOLD

Function: Sets the RSSI noise threshold level for telegram detection.

-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x32	CO_SET_NOISETHRESHOLD = 50
	7	4	RSSI level	0xnn	RSSI Level to initiate telegram detection
-	11	1	CRC8D	0xnn	

Table 84

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (Hardware Error)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.53 Code 51: CO_GET_NOISETHRESHOLD

Function: Gets the RSSI noise threshold level for telegram detection.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x33	CO_GET_NOISETHRESHOLD = 51
-	7	1	CRC8D	0xnn	

Table 85

In this case, the following **RESPONSE** message gives only the return codes:00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	RSSI level		RSSI level set up on the radio to initiate
					telegram detection
-	8	1	CRC8D	0xnn	

Table 86

02 RET_NOT_SUPPORTED



03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.6 Packet Type 6: SMART_ACK_COMMAND

2.6.1 Structure

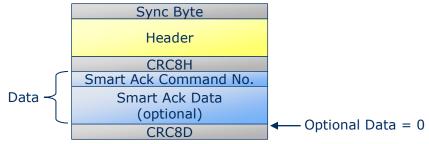


Figure 11

In the current version of ESP3 the packet type SMART_ACK_COMMAND carries no Optional Data.

2.6.2 List of SMART ACK Codes

Code	Function Name	Description			
01	SA_WR_LEARNMODE	Set/Reset Smart Ack learn mode			
02	SA_RD_LEARNMODE	Get Smart Ack learn mode state			
03	SA_WR_LEARNCONFIRM	Jsed for Smart Ack to add or delete a mailbox of a client			
04	SA_WR_CLIENTLEARNRQ	Send Smart Ack Learn request (Client)			
05	SA_WR_RESET	Send reset command to a Smart Ack client			
06	SA_RD_LEARNEDCLIENTS	Get Smart Ack learned sensors / mailboxes			
07	SA_WR_RECLAIMS	Set number of reclaim attempts			
08	SA_WR_POSTMASTER	Activate/Deactivate Post master functionality			

Table 87



2.6.3 Code 01: SA_WR_LEARNMODE

Function: Enables or disables learn mode of Smart Ack Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0007	7 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x01	SA_WR_LEARNMODE = 1
	7	1	Enable	0x0n	Start Learnmode = 1
					End Learnmode = 0
	8	1	Extended	0x0n	Simple Learnmode = 0
Data					Advance Learnmode = 1
					Advance Learnmode select Rep. = 2
	9	4	Timeout	0xnnnnnnnn	Time-Out for the learn mode in ms.
					When time is 0 then default period of
					60'000 ms is used
-	13	1	CRC8D	0xnn	

Table 88

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.6.4 Code 02: SA_RD_LEARNMODE

Function: Reads the learn mode state of Smart Ack Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x02	SA_RD_LEARNMODE = 2
-	7	1	CRC8D	0xnn	

Table 89

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0003	3 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	1	Enable	0x0n	Learnmode not active = 0
Data					Learnmode active = 1
Data	8	1	Extended	0x0n	Simple Learnmode = 0
					Advance Learnmode = 1
					Advance Learnmode select Rep. = 2
-	9	1	CRC8D	0xnn	

Table 90

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED



2.6.5 Code 03: SA_WR_LEARNCONFIRM

Function: Send smart ack learn answer to modify mailbox at postmaster.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x000C	12 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x03	SA_WR_LEARNCONFIRM = 3
	7	2	Response time	0xnnnn	Response time for sensor in ms in which
					the controller can prepare the data and
					send it to the postmaster. Only actual, if
					learn return code is Learn IN.
Data	9	1	Confirm code	0xnn	Learn IN: 0x00
					Learn OUT: 0x20
	10	4	Postmaster	0xnnnnnnnn	Device ID of the used Post master
			Candidate ID		
	14	4	Smart Ack	0xnnnnnnnn	Device ID of the learned IN/OUT Smart
			Client ID		Ack Client
-	18	1	CRC8D	0xnn	

Table 91

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.6.6 Code 04: SA_WR_CLIENTLEARNRQ

Function: Sends Smart Ack Learn Request telegram to Smart Ack Controller. This function will only be used in a Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0006	6 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x04	SA_WR_ CLIENTLEARNRQ = 4
Data	7		2^2 2^0: Manufacturer ID 2^7 2^3: Reserved		nnn = Most significant 3 bits of the Manufacturer ID 11111 = reserved / default values
	8	1	Manufacturer ID	0xnn	Least significant bits of the Manufacturer ID
	9	3	EEP	0xnnnnnn	EEP of the Smart Ack client, who wants to Teach IN.
-	12	1	CRC8D	0xnn	

Table 92

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.6.7 Code 05: SA_WR_RESET

Function: Send reset command to a Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0005	5 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x05	SA_WR_ RESET = 5
Data	7	4	Smart Ack	0xnnnnnnnn	Device ID of the Smart Ack Client
			Client ID		
-	11	1	CRC8D	0xnn	

Table 93

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.6.8 Code 06: SA_RD_LEARNEDCLIENTS

Read mailbox information at the Post Master device, about all learned Smart Ack clients.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0001	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x06	SA_RD_ LEARNEDCLIENTS = 6
-	7	1	CRC8D	0xnn	

Table 94

Following described **RESPONSE** applies to return code:

00: RET OK

UU. KLI	_0k				
Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	1 + 9*c bytes (c = number of clients)
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
	7	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the Smart Ack Client
Data	7	4	Controller ID	0xnnnnnnn	Controller ID dedicated Smart Ack Client
	+4*c				
	7	1	Mailbox index	0xnn	Internal counter of Post master
	+8*c				(0x00 0x0E)
-	7	1	CRC8D	0xnn	
	+9*c				
-	7	1	CRC8D	0xnn	(0.000 0.001)

Table 95

Every learned Smart Ack Client has the group \mathbf{c} with fields in the order: Controller ID, Smart Ack Client ID, Mailbox index ($\mathbf{c} = \mathsf{also}$ number of clients / multiplier to calculate the offset).

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED



2.6.9 Code 07: SA_WR_RECLAIMS

Function: Set the amount of reclaim tries in Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x07	SA_WR_RECLAIMS = 7
Data	7	1	Reclaim count	0xnn	Presetting for the number of required reclaim tries
-	8	1	CRC8D	0xnn	

Table 96

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.10 Code 08: SA_WR_POSTMASTER

Function: Enables/Disables postmaster function of device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
	6	1	SMART_ACK Code	0x08	SA_WR_POSTMASTER = 8
Data	7	1	Mailbox count		Amount of mailboxes available, 0 = disable post master functionality; Maximum 28 mailboxes can be created. This upper limit is for each firmware restricted and may be smaller.
-	8	1	CRC8D	0xnn	

Table 97

In this case, the following **RESPONSE** message gives the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.6.11 Code 09: SA_RD_MAILBOX STATUS

Read mailbox information about a certain device

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0009	9 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x09	SA_RD_ MAILBOXSTATUS = 9
	7	4	Smart Ack	0xnnnnnnnn	Device ID of the Smart Ack Client
			Client ID		
	11	4	Controller ID	0xnnnnnnnn	Controller ID dedicated Smart Ack Client
-	15	1	CRC8D	0xnn	

Table 98

Following described **RESPONSE** applies to return code:

00: RET OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x02	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	MailBox status	0xnn	0 = mailbox is empty 1 = mailbox is full 2 = mailbox does not exists.
-	8	1	CRC8D	0xnn	

Table 99

2.6.12 Code 10: SA_DEL_MAILBOX

Delete mailbox for a certain pair

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0009	1 byte
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x0A	SA_DEL_MAILBOX = 10
	7	-	Smart Ack Client ID	0xnnnnnnn	Device ID of the Smart Ack Client
	11	4	Controller ID	0xnnnnnnnn	Controller ID dedicated Smart Ack Client
-	15	1	CRC8D	0xnn	

Table 100

Following described **RESPONSE** applies to return code:

00: RET_OK

OO. ILL	KEI_OK									
Group	Offset	Size	Field	Value hex	Description					
-	0	1	Sync. Byte	0x55						
	1	2	Data Length	0xnnnn	2 bytes					

ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
	6	1	Return Code	0x00	$RET_OK = 0$
Data	7	1	MailBox delete	0xnn	0 = mailbox deleted
Data			status		1 = mailbox does not exists.
					2 = mailbox locked
-	8	1	CRC8D	0xnn	

Table 101



2.7 Packet Type 7: REMOTE_MAN_COMMAND

2.7.1 Structure

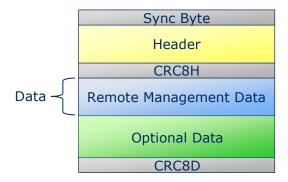


Figure 12

This section describes the remote management command structure. This structure is applied for the send as well as the receive case.

2.7.2 Description

Function: Remote Management send or receive message.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	4 + x bytes
Header	3	1	Optional Length	0x0A	10 bytes
	4	1	Packet Type	0x07	REMOTE_MAN_COMMAND = 7
-	5	1	CRC8H	0xnn	
	6	2	Function No.	0x0nnn	Range: 0x0000 0x0FFF
Data	8	2	Manufacturer ID	0x0nnn	Range: 0x0000 0x07FF
	10	Х	Message data		N bytes
	10+x	4	Destination ID	0xnnnnnnnn	Destination ID
					Broadcast ID: FF FF FF FF
	14+x	4	Source ID	0xnnnnnnnn	Receive case: Source ID of the sender
					Send case: 0x00000000
	18+x	1	dBm	0xnn	Send case: 0xFF
					Receive case: Best RSSI value of all
Optional					received sub telegrams (only if wait for
Data					maturity is set to true!) (value decimal
					without minus)
	19+x	1	Send With Delay	0x0n	1: if the first message has to be sent with
					random delay. When answering to
					broadcast message this has to be 1,
					otherwise 0.
					Default: 0
-	20+x	1	CRC8D	0xnn	CRC8 <u>D</u> ata byte; calculated checksum for
					whole byte groups: DATA and
					OPTIONAL_DATA

Table 102



ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

The receive case has no RESPONSE.

The send case has the following **RESPONSE** with the return codes:

- 00 RET_OK
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM



2.8 Packet Type 8: PRODUCTION_COMMAND

Internal EnOcean GmbH document, refer to EnOceanSerialProtocol3-ProductionCommand.doc

2.9 Packet Type 9: RADIO_MESSAGE

2.9.1.1 Packet structure

The radio message (payload data without any radio telegram contents) is embedded into the ESP3 packet.

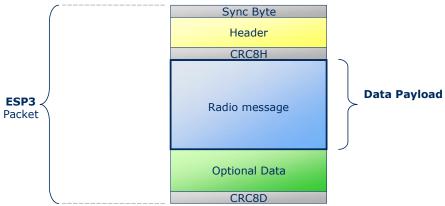


Figure 13

The following structure is applicable to all types of radio messages:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	Variable length of message
Header	3	1	Optional Length	0x09	Optional Data = 9 bytes
	4	1	Packet Type	0x09	RADIO_MESSAGE = 9
-	5	1	CRC8H	0xnn	
Data	6	1	Message RORG	0xnn	RORG
Data	7	Х	Message Data		Message Data Content
	7+x	4	Destination ID	0xnnnnnnnn	Destination ID
					Broadcast ID: FF FF FF FF
	11+x	4	Source ID	0xnnnnnnnn	Receive case: Source ID of the sender
					Send case: 0x00000000
	15+x	1	dBm	0xnn	Send case: 0xFF
					Receive case: Best RSSI value of all
Optional					received sub telegrams (value decimal
Data					without minus)
					(only if wait for maturity is set to true!)
	16+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is
					selected by link table entries)
					Receive case:
					0 = telegram unencrypted
					1 = Obsolete (old security concept)



					2 = Telegram encrypted 3 = Telegram authenticated 4 = Telegram encrypted + authenticated
-	13+x	1	CRC8D	0xnn	CRC8 <u>Data</u> byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 103

When receiving a message, no RESPONSE has to be sent. When sending a message, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

05 RET_LOCK_SET



2.10 Packet Type 10: RADIO_ERP2

2.10.1 Packet structure

The ERP2 radio protocol telegram (raw data without LEN) is embedded into the ESP3 packet.

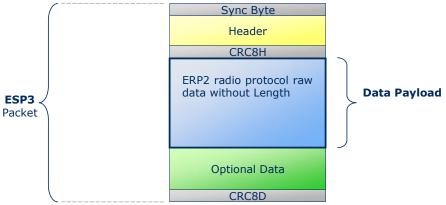


Figure 14

The following structure is applicable to all types of radio telegrams:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	Variable length of radio telegram
Header	3	1	Optional Length	0x02	2 fields fixed
	4	1	Packet Type	0x0A	RADIO_ERP2 = 10
-	5	1	CRC8H	0xnn	
Data	6	х	Raw data		ERP2 radio protocol telegram without the first Length byte. For sending the ERP2 protocol CRC8 byte can be set to any value. x = Data Length
	6+x	1	SubTelNum	0xnn	Number of sub telegram; Send: 3 / receive: 1 y
Ontional	7+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received sub telegrams (value decimal without minus) (only if wait for maturity is set to true!)
Optional Data	8+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram unencrypted 1 = Obsolete (old security concept) 2 = Telegram encrypted 3 = Telegram authenticated 4 = Telegram encrypted + authenticated
- Table 104	8+x	1	CRC8D	0xnn	CRC8 <u>D</u> ata byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 104



When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

2.11 Packet Type 16: RADIO_802_15_4: 802.15.4 Physical Raw Packet

This packet is sent from an 802.15.4 sniffer to a client after receiving a valid 802.15.4 frame. If a gateway receives such a telegram, the packet will be send via the air interface.

2.11.1 Packet structure

The whole 802.15.4 mac frame omitting the FCS is embedded into the ESP3 packet.

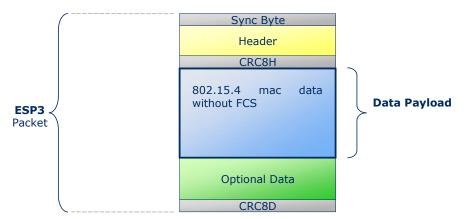


Figure 15 Packet Type 0x10

Octets: 2	1	0/2	0/2/8	0/2	0/2/8	0/5/6/10/14	variable	2
Frame Control	Sequence Number	Destination PAN Identifier	Destination Address	Source PAN Identifier	Source Address	Auxiliary Security Header	Frame Payload	FCS
			Addressing	fields				
			MAC Payload	MFR				

Figure 16 Mac Data Format

The following structure is applicable to all types of radio telegrams:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Svnc. Bvte	0x55	

ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

	1	2	Data Length	0xnnnn	Variable length of radio telegram
Header	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x10	RADIO_802_15_4= 16
-	5	1	CRC8H	0xnn	
Data	6	Х	Raw data		802.15.4 MHR+ mac payload
					without the FCS
Optional	6+x	1	RSSI	0xnn	Send case: don't care
Data					Receive case: - RSSI
-	8+x	1	CRC8D		CRC8 <u>D</u> ata byte; calculated checksum for
					whole byte groups: DATA and
					OPTIONAL_DATA

Table 105



When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following RESPONSE message gives the return codes:

00 RET OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

07 RET_NO_FREE_BUFFER

When no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.12 Packet Type 17: COMMAND_2_4

2.12.1 List of EnOcean 2.4 commands

Code	Command Name	Description
01	SET_CHANNEL	Sets the current 802.15.4 channel
02	GET_CHANNEL	Gets the current 802.15.4 channel

Table 106



2.12.2 Code 01: R802_WR_CHANNEL

Function: Set 802.15.4 channel

The command structure is following:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x11	$COMMAND_2_4 = 0x11$
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x01	$R802_WR_CHANNEL = 0x01$
Data	7	1	Channel	11-26	The 802.15.4 channel to use
-	8	1	CRC8D	0xnn	

Table 107

Following described **RESPONSE** applies to return code:

00: RET OK

001 K21_0K									
Group	Offset	Size	Field	Value hex	Description				
-	0	1	Sync. Byte	0x55					
	1	2	Data Length	0x0001	1 byte				
Header	3	1	Optional Length	0x00	0 byte				
	4	1	Packet Type	0x02	RESPONSE = 2				
-	5	1	CRC8H	0xnn					
Data	6	1	Return Code	0xnn	00				
-	7	1	CRC8D	0xnn					

Table 108

For **RESPONSE** with return code:

02: RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.12.3 CODE 02: R802_RD_CHANNEL

Function: Get the device's current used channel

The command structure is following:

THE COIL	The command structure is following.									
Group	Offset	Size	Field	Value hex	Description					
-	0	1	Sync. Byte	0x55						
	1	2	Data Length	0x0001	1 byte					
Header	3	1	Optional Length	0x00	0 byte					
	4	1	Packet Type	0x11	$COMMAND_2_4 = 0x11$					
-	5	1	CRC8H	0xnn						
Data	6	1	COMMAND Code	0x02	R820_RD_CHANNEL = 0x02					
-	7	1	CRC8D	0xnn						

Table 109

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	

	1	2	Data Length	0x0002	2 bytes
Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE_PACKET = 0x02
-	5	1	CRC8H	0xnn	
D-+-	6	1	Return Code	0	OK
Data	7	1	Channel	1126	Used Channel
-	8	1	CRC8D	0xnn	

Table 110

For **RESPONSE** with return code:

02: RET_NOT_SUPPORTED



3 Appendix

3.1 ESP3 Data flow sequences

The following examples illustrate the ESP3 traffic. In particular the flow of the Smart Ack commands is more complex.

3.1.1 Client data request

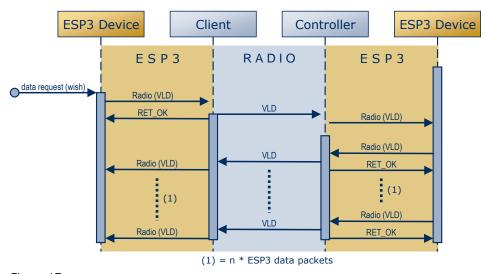


Figure 17

3.1.2 Teach IN via VLL

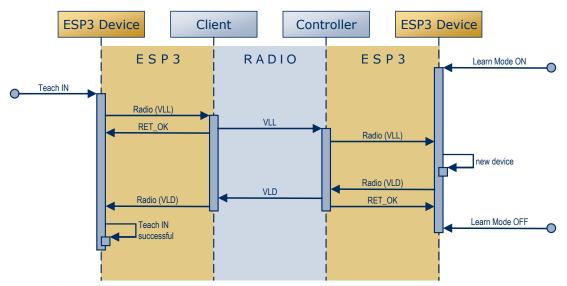


Figure 18



3.1.3 Teach IN via Smart Ack

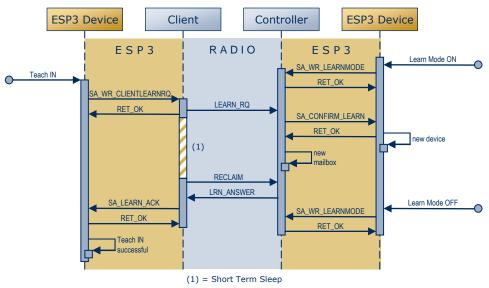


Figure 19

3.1.4 Teach IN via Smart Ack incl. repeater

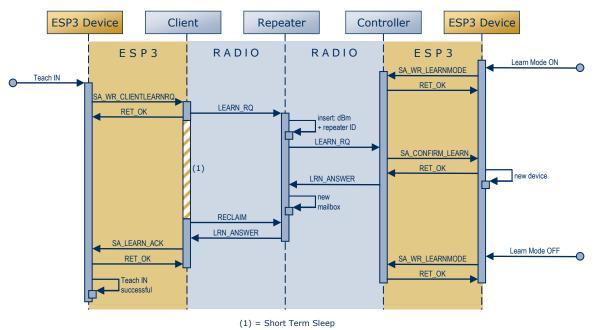


Figure 20



3.2 ESP3 telegram examples

3.2.1 Packet: Radio VLD

Sy		Hea	der		CR C8		Data								Optional Data				CR C8									
55	00	0F	07	01	2В	D2	DD	DD	DD	DD	DD	DD	DD	DD	DD	00	80	35	C4	00	03	FF	FF	FF	FF	4 D	00	36

3.2.2 Packet: CO_WR_SLEEP

Sy					CR C8	Data					
55	00	05	00	05	DB	01	00	00	00	0A	54

Periode = 10 (0x0A)

3.2.3 Packet: CO_WR_RESET

Sy		Hea	der		CR C8	Data	CR C8
55	00	01	00	05	70	02	0E

3.2.4 Packet: CO_RD_IDBASE

Sy		Hea	der	CR C8	Data	CR C8	
55	00	01	00	05	70	08	38

Response RET OK:

Sy					CR C8		Data					
55	00	05	00	02	CE	00	FF	80	00	00	DA	

3.2.5 Packet: REMOTE_MAN_COMMAND


Example dummy command:

Function = 0×0876 Manufacture = $0 \times 07FF$

Message data = 0x000102030405060708090a0b0c0d0e0f

DestinationID = Broadcast = 0xffffffff

SendWithDelay = 0







Example QueryID:

Sy	Header				CR C8	CR Data					
55	00	04	00	07	BE	00	04	07	FF	33	



3.3 CRC8 calculation

The polynomial $G(x) = x^8 + x^2 + x^1 + x^0$ is used to generate the CRC8 table, needed for the CRC8 calculation. Following C code illustrates how the CRC8 value is calculated:

Implementation:

```
uint8 u8CRC8Table[256] = {
    0x00, 0x07, 0x0e, 0x09, 0x1c, 0x1b, 0x12, 0x15, 0x38, 0x3f, 0x36, 0x31, 0x24, 0x23, 0x2a, 0x2d,
    0x70, 0x77, 0x7e, 0x79, 0x6c, 0x6b, 0x62, 0x65,
    0x48, 0x4f, 0x46, 0x41, 0x54, 0x53, 0x5a, 0x5d,
    0xe0, 0xe7, 0xee, 0xe9, 0xfc, 0xfb, 0xf2, 0xf5,
    0xd8, 0xdf, 0xd6, 0xd1, 0xc4, 0xc3, 0xca, 0xcd, 0x90, 0x97, 0x9e, 0x99, 0x8c, 0x8b, 0x82, 0x85,
    0xa8, 0xaf, 0xa6, 0xa1, 0xb4, 0xb3, 0xba, 0xbd,
    0xc7, 0xc0, 0xc9, 0xce, 0xdb, 0xdc, 0xd5, 0xd2,
    0xff, 0xf8, 0xf1, 0xf6, 0xe3, 0xe4, 0xed, 0xea,
    0xb7, 0xb0, 0xb9, 0xbe, 0xab, 0xac, 0xa5, 0xa2,
    0x8f, 0x88, 0x81, 0x86, 0x93, 0x94, 0x9d, 0x9a, 0x27, 0x20, 0x29, 0x2e, 0x3b, 0x3c, 0x35, 0x32,
    0x1f, 0x18, 0x11, 0x16, 0x03, 0x04, 0x0d, 0x0a,
    0x57, 0x50, 0x59, 0x5e, 0x4b, 0x4c, 0x45, 0x42,
    0x6f, 0x68, 0x61, 0x66, 0x73, 0x74, 0x7d, 0x7a,
    0x89, 0x8e, 0x87, 0x80, 0x95, 0x92, 0x9b, 0x9c, 0xb1, 0xb6, 0xbf, 0xb8, 0xad, 0xaa, 0xa3, 0xa4,
    0xf9, 0xfe, 0xf7, 0xf0, 0xe5, 0xe2, 0xeb, 0xec,
    0xc1, 0xc6, 0xcf, 0xc8, 0xdd, 0xda, 0xd3, 0xd4,
    0x69, 0x6e, 0x67, 0x60, 0x75, 0x72, 0x7b, 0x7c,
    0x51, 0x56, 0x5f, 0x58, 0x4d, 0x4a, 0x43, 0x44,
    0x19, 0x1e, 0x17, 0x10, 0x05, 0x02, 0x0b, 0x0c, 0x21, 0x26, 0x2f, 0x28, 0x3d, 0x3a, 0x33, 0x34,
    0x4e, 0x49, 0x40, 0x47, 0x52, 0x55, 0x5c, 0x5b,
    0x76, 0x71, 0x78, 0x7f, 0x6A, 0x6d, 0x64, 0x63,
    0x3e, 0x39, 0x30, 0x37, 0x22, 0x25, 0x2c, 0x2b,
    0x06, 0x01, 0x08, 0x0f, 0x1a, 0x1d, 0x14, 0x13, 0xae, 0xa9, 0xa0, 0xa7, 0xb2, 0xb5, 0xbc, 0xbb,
    0x96, 0x91, 0x98, 0x9f, 0x8a, 0x8D, 0x84, 0x83,
    0xde, 0xd9, 0xd0, 0xd7, 0xc2, 0xc5, 0xcc, 0xcb,
    0xe6, 0xe1, 0xe8, 0xef, 0xfa, 0xfd, 0xf4, 0xf3
    };
#define proccrc8(u8CRC, u8Data) (u8CRC8Table[u8CRC ^ u8Data])
Example:
u8CRC = 0;
for (i = 0 ; i < u16DataSize ; i++)
    u8CRC = proccrc8(u8CRC, u8Data[i]);
printf("CRC8 = %02X\n", u8CRC);
```



3.4 UART Synchronization (example c-code)

Please notice, that the example c-code in this chapter is written for big endian systems only. If you have a little endian system you have to make changes for proper functionality.

3.4.1 ESP3 Packet Structure

```
//! Packet structure (ESP3)
  typedef struct
{
    // Amount of raw data bytes to be received. The most significant byte is sent/received first
        uint16  u16DataLength;
    // Amount of optional data bytes to be received
        uint8  u8OptionLength;
    // Packe type code
        uint8  u8Type;
    // Data buffer: raw data + optional bytes
        uint8  *u8DataBuffer;
} PACKET_SERIAL_TYPE;
```

3.4.2 Get ESP3 Packet

```
//! \file uart getPacket.c
#include "EO3000I_API.h"
#include "proc.h"
#include "uart.h"
#include "time.h'
ESP3 packet structure through the serial port.
Protocol bytes are generated and sent by the application
Sync = 0x55
CRC8H
CRC8D
                                              1
                                                         1
                                                                  u16DataLen + u8OptionLen
| 0x55 | u16DataLen | u8OptionLen | u8Type | CRC8H
                                                                             DATAS
                                                                                       | CRC8D
DATAS structure:
                 u16DataLen
                                                u8OptionLen
                 Data
                                               Optional
RETURN_TYPE uart_getPacket(PACKET_SERIAL_TYPE *pPacket, uint16 u16BufferLength)
    //! uart_getPacket state machine states.
    typedef enum
         //! Waiting for the synchronisation byte 0x55
         GET_SYNC_STATE=0,
         //! Copying the 4 after sync byte: raw data length (2 bytes), optional data length (1), type (1).
         GET HEADER STATE,
         //! Checking the header CRC8 checksum. Resynchronisation test is also done here
         CHECK_CRC8H_STATE,
         //! Copying the data and optional data bytes to the paquet buffer
         GET_DATA_STATE,
         //! Checking the info CRC8 checksum.
         CHECK CRC8D STATE,
```



```
} STATES_GET_PACKET;
//! UART received byte code
uint8 u8RxByte;
//! Checksum calculation
static uint8 u8CRC = 0;
 //! Nr. of bytes received
static uint16 u16Count = 0;
//! State machine counter
static STATES_GET_PACKET u8State = GET_SYNC_STATE;
//! Timeout measurement
static uint8 u8TickCount = 0;
// Byte buffer pointing at the paquet address
uint8 *u8Raw = (uint8*)pPacket;
// Temporal variable
uint8
           i;
 // Check for timeout between two bytes
if (((uint8)ug32SystemTimer) - u8TickCount > SER_INTERBYTE_TIME_OUT)
      // Reset state machine to init state
      u8State = GET_SYNC_STATE;
// State machine goes on when a new byte is received
while (uart_getByte(&u8RxByte) == OK)
      // Tick count of last received byte
      u8TickCount = (uint8)ug32SystemTimer;
      // State machine to load incoming packet bytes
      switch(u8State)
           // Waiting for packet sync byte 0x55
case GET_SYNC_STATE:
                 if (u8RxByte == SER_SYNCH_CODE)
                      u8State = GET HEADER STATE;
                      u16Count = 0;
                      u8CRC = 0;
                 }
                break:
           // Read the header bytes
           case GET_HEADER_STATE:
                 // Copy received data to buffer
                 u8Raw[u16Count++] = u8RxByte;
                 u8CRC = proc_crc8(u8CRC, u8RxByte);
                // All header bytes received?
if(u16Count == SER_HEADER_NR_BYTES)
                     u8State = CHECK CRC8H STATE;
                break:
           // Check header checksum & try to resynchonise if error happened
           case CHECK_CRC8H_STATE:
                 // Header CRC correct?
                 if (u8CRC != u8RxByte)
                      // No. Check if there is a sync byte (0x55) in the header
                      int a = -1;
for (i = 0 ; i < SER_HEADER_NR_BYTES ; i++)
    if (u8Raw[i] == SER_SYNCH_CODE)</pre>
                                 // indicates the next position to the sync byte found
                                 break;
                            };
```



```
if ((a == -1) && (u8RxByte != SER_SYNCH_CODE))
               // Header and CRC8H does not contain the sync code
               u8State = GET SYNC STATE;
               break;
          else if((a == -1) && (u8RxByte == SER SYNCH CODE))
               // Header does not have sync code but CRC8H does. 
// The sync code could be the beginning of a packet
               u8State = GET_HEADER_STATE;
               u16Count = 0;
               u8CRC
                       = 0;
               break;
          // Header has a sync byte. It could be a new telegram.
          // Shift all bytes from the 0x55 code in the buffer.
          // Recalculate CRC8 for those bytes
          u8CRC = 0;
          for (i = 0; i < (SER HEADER NR BYTES - a); i++)
               u8Raw[i] = u8Raw[a+i];
               u8CRC = proc_crc8(u8CRC, u8Raw[i]);
          u16Count = SER HEADER NR BYTES - a;
          // ul6Count = i; // Seems also valid and more intuitive than ul6Count -= a;
          // Copy the just received byte to buffer
          u8Raw[u16Count++] = u8RxByte;
          u8CRC = proc_crc8(u8CRC, u8RxByte);
          if(u16Count < SER HEADER NR BYTES)</pre>
          {
               u8State = GET_HEADER_STATE;
               break;
          }
          break;
     // CRC8H correct. Length fields values valid?
     if((pPacket->u16DataLength + pPacket->u8OptionLength) == 0)
          //No. Sync byte received?
if((u8RxByte == SER_SYNCH_CODE))
               //ves
               u8State = GET_HEADER_STATE;
               u16Count = 0;
               u8CRC = 0;
               break;
          // Packet with correct CRC8H but wrong length fields.
          u8State = GET_SYNC_STATE;
          return OUT OF RANGE;
     \ensuremath{//} Correct header CRC8. Go to the reception of data.
     u8State = GET_DATA_STATE;
     u16Count = 0;
     u8CRC = 0;
    break;
// Copy the information bytes
case GET DATA STATE:
     // Copy byte in the packet buffer only if the received bytes have enough room if(u16Count < u16BufferLength)
     {
          pPacket->u8DataBuffer[u16Count] = u8RxByte;
          u8CRC = proc_crc8(u8CRC, u8RxByte);
```

ENOCEAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

```
\ensuremath{//} When all expected bytes received, go to calculate data checksum
                                                \begin{tabular}{lll} if ( ++u16Count == (pPacket->u16DataLength + pPacket->u8OptionLength) ( ++u16Count == (pPacket->u16DataLength + pPacket->u8OptionLength) ( ++u16Count == (pPacket->u16DataLength + pPacket->u8OptionLength) ( ++u16Count == (pPacket->u8OptionLength) ( ++u16Count
                                                              u8State = CHECK_CRC8D_STATE;
                                               }
                                               break;
                               // Check the data CRC8
                               case CHECK CRC8D STATE:
                                                // In all cases the state returns to the first state: waiting for next sync byte
                                               u8State = GET_SYNC_STATE;
                                              // Received packet bigger than space to allocate bytes?
if (u16Count > u16BufferLength)    return OUT_OF_RANGE;
                                               // Enough space to allocate packet. Equals last byte the calculated CRC8?
                                               if (u8CRC == u8RxByte) return OK;
                                                                                                                                                                                                                               // Correct packet received
                                               // False CRC8.
                                               // If the received byte equals sync code, then it could be sync byte for next paquet.
                                               if((u8RxByte == SER_SYNCH_CODE))
                                                              u8State = GET_HEADER_STATE;
                                                              u16Count = 0;
                                                              u8CRC = 0;
                                               return NOT_VALID_CHKSUM;
                               default:
                                               \ensuremath{//} Yes. Go to the reception of info.
                                            u8State = GET_SYNC_STATE;
                                              break;
             }
return (u8State == GET_SYNC_STATE) ? NO_RX_TEL : NEW_RX_BYTE;
```



3.4.3 Send ESP3 Packet

```
//! \file uart sendPacket.c
#include "E03000I_API.h"
#include "proc.h"
#include "uart.h"
ESP3 packet structure through the serial port.
Protocol bytes are generated and sent by the application
Sync = 0x55
CRC8H
CRC8D
                                                                      1
                                                                                u16DataLen + u8OptionLen
| 0x55 |
             ul6DataLen | u8OptionLen | u8Type |
                                                                    CRC8H |
                                                                                             DATAS
                                                                                                              | CRC8D
DATAS structure:
                      u16DataLen
                                                          u8OptionLen
                                                     | Optional
                    Data
RETURN_TYPE uart_sendPacket(PACKET_SERIAL_TYPE *pPacket)
     uint16 i;
     uint8 u8CRC;
      \ensuremath{//} When both length fields are 0, then this telegram is not allowed.
      \begin{tabular}{ll} if(pPacket->u16DataLength || pPacket->u8OptionLength) == 0) \end{tabular} 
           return OUT OF RANGE;
      // Sync
     while(uart_sendByte(0x55) != OK);
      // Header
     while(uart_sendBuffer((uint8*)pPacket, 4) != OK);
      // Header CRC
     u8CRC = 0;
u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[0]);
u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[1]);
u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[2]);
u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[3]);
     while(uart_sendByte(u8CRC) != OK);
     // Data
     u8CRC = 0;
     for (i = 0 ; i < (pPacket->u16DataLength + pPacket->u8OptionLength) ; i++)
           u8CRC = proc_crc8(u8CRC, pPacket->u8DataBuffer[i]);
           while(uart_sendByte(pPacket->u8DataBuffer[i]) != OK);
     }
      // Data CRC
     while(uart_sendByte(u8CRC)!=OK);
     return OK;
```