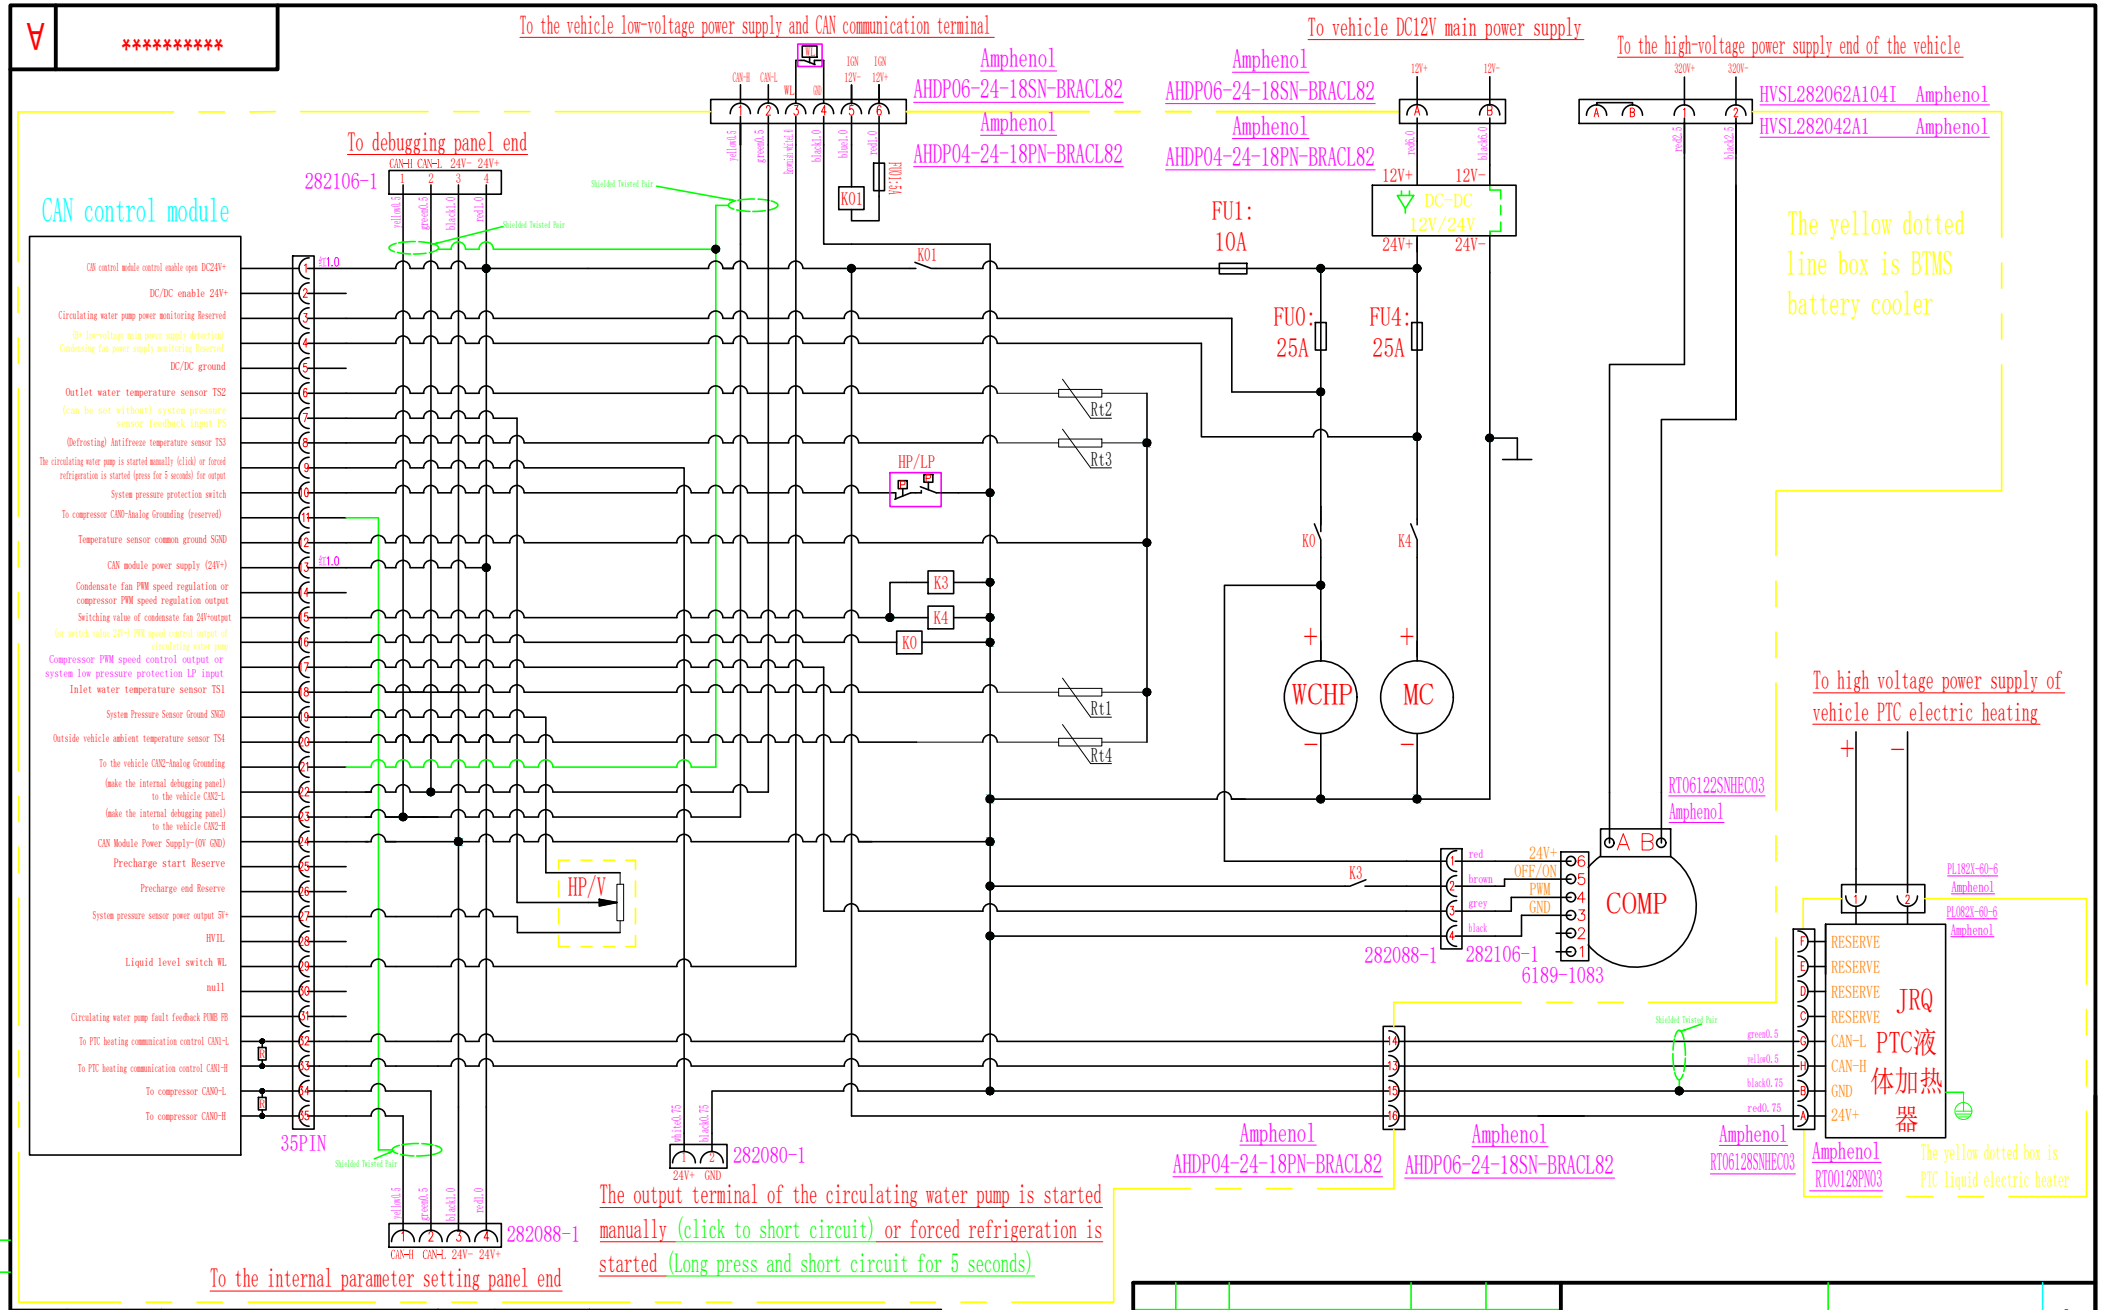

NO.	Component code	Component code model	NO.	Component code	Component code model
1	MC	Condenser fan	10	RT1	Inlet water temperature sensor R25=5K
2	WCHP	Circulating water pump	11	RT2	Outlet water temperature sensor R25=5K
3	COMP	Compressor	12	RT3	Defrost temperature sensor R25=5K
4	FU01	Chip fuse 5A	13	RT4	Outside vehicle temperature sensor R25=5K
5	FU1	Chip fuse 10A	14	HP/V	Voltage type pressure sensor5V(4.75-8V)(Increase or decrease according to demand)
6	FU0.FU4	Chip fuse 25A	15	WL	Water level protection switch(Normally open type for water shortage)
7	K01	Relay DC12V/40A	16	R	0.5-1W/120ohm resistance (terminal resistance) (increase or decrease according to demand)
8	K0.K3.K4	Relay DC24V/40A	17	JRQ	PTC liquid heater
9	HP/LP	High and low pressure composite protection switch	18	CT51521001	control module

Mark	Count	Change the file number	Sign	Date
Design		Standard		
Proofread				
Checked				
Technique		Approve		

BTMS (TKT-BCS3-R-12) ********** A

E-B T M

Wiring Diagram

Stage marker				Weight	Proportion
C	S	D	P		
TOTAL	PAGE	NO.	PAGE		

tkt HVAC solution