#### CE394M: Introduction to the Finite Element Method

#### Krishna Kumar


University of Texas at Austin

January 20, 2019

#### Overview

- Galerkin methods
- Strong form
- Weak form
- Finite Element formulation
- Shape functions

# Finite Element Analysis

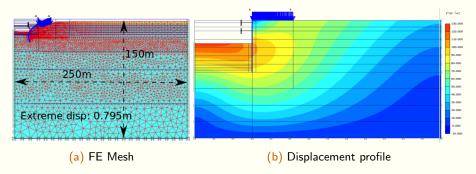

Singapore Nicoll highway excavation FE analysis

#### Galerkin:Ritz method

- **1** Define the functional *u* for which you wish to find stationary points.
- Choose a combination of linearly independent functions that will be used to approximate the solution. These will be called 'basis functions'. The amplitudes of these functions will be the unknowns that you will determine. The basis functions must satisfy the Dirichlet ('fixed') boundary conditions.
- Insert the approximate solution into the functional that is now denoted by  $u_h$ .
- $\bullet$  Take the directional derivative of  $u_h$  with respect to the unknown amplitudes of the basis functions.
- **9** Determine the amplitudes of the basis functions which yield a stationary point of  $u_h$ .

rkin:Ritz method

Define the functional u for which you wish to find stationary points.
Choose a combination of linearly independent functions that will be used to approximate the solution. These will be called 'basis functions'. The amplitudes of these functions will be the unknowns that you will determine. The basis functions must satisfy the Dirichlet

('fixed') boundary conditions.

Insert the approximate solution into the functional that is now


 Take the directional derivative of u<sub>h</sub> with respect to the unknown amplitudes of the basis functions.
 Determine the amplitudes of the basis functions which yield a


Determine the amplitudes of the basis functions which yield a stationary point of u<sub>h</sub>.

Numerical methods for partial differential equations are tools for finding approximate solutions and are normally used with the aid of a computer. A number of numerical methods are closely linked to a variational form of the differential equation. A group of such methods are known as Galerkin methods. The Ritz method is an example of a Galerkin method, and the finite element method is another. If a numerical method is properly formulated (and the equation is stable), the more effort (read computer time) that is expended, the closer one gets to the exact solution.

# Finite Element Approximations

FE approximation of u, which is a dependent variable in a PDE.

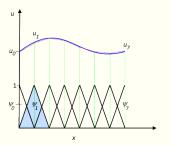


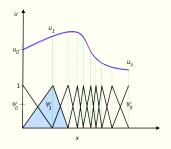

FE basis functions

The function u can be approximated by a function  $u_h$  using linear combinations of basis functions according to the following expressions:


$$u \approx u_h \quad u_h = \sum_i u_i \psi_i$$

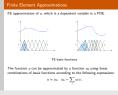

The reality of partial differential equations is that in most cases it is not possible to find an analytical solution. This is particularly so for equations on complicated geometries (as is common in engineering), nonlinear equations and equations with complicated source terms and boundary conditions.

Instead, an approximation of the equations needs to be constructed, typically based upon different types of discretizations. These discretization methods approximate the PDEs with numerical model equations, which can be solved using numerical methods. The solution to the numerical model equations are, in turn, an approximation of the real solution to the PDEs. The finite element method (FEM) is used to compute such approximations.

Finite Element Approximations

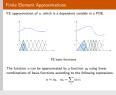


Take, for example, a function u that may be the dependent variable in a PDE (i.e., temperature, electric potential, pressure, etc.) The function u can be approximated by a function uh using linear combinations of basis functions according to the following expressions:

$$u \approx u_h \quad u_h = \sum_i u_i \psi_i$$

Here,  $\psi_i$  denotes the basis functions and  $u_i$  denotes the coefficients of the functions that approximate u with uh. The figure below illustrates this principle for a 1D problem. u could, for instance, represent the temperature along the length (x) of a rod that is nonuniformly heated. Here, the linear basis functions have a value of 1 at their respective nodes and 0 at other nodes. In this case, there are seven elements along the portion of the x-axis, where the function u is defined (i.e., the length of the rod).

Finite Element Approximations

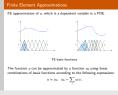


One of the benefits of using the finite element method is that it offers great freedom in the selection of discretization, both in the elements that may be used to discretize space and the basis functions. In the figure above, for example, the elements are uniformly distributed over the x-axis, although this does not have to be the case. Smaller elements in a region where the gradient of u is large could also have been applied.

Both of these figures show that the selected linear basis functions include very limited support (nonzero only over a narrow interval) and overlap along the x-axis. Depending on the problem at hand, other functions may be chosen instead of linear functions.

https://www.comsol.com/multiphysics/finite-element-method

# Strong form of the equilibrium equation for a 1-D bar

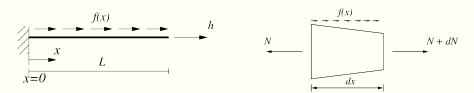

where f is a distributed force and h as a force applied at the end of the bar

The equilibrium equation can be derived by considering an infinitesimal bar:

$$-\frac{dN}{dx} = f$$

where N is the normal force in the bar and f is the distributed force along the bar.

→ロト 4回 ト 4 恵 ト 4 恵 ト ・ 恵 ・ 夕 Q (\*)

# Boundary value problem of a 1-D bar

For linear elasticity

$$N = A\sigma = EA\frac{du}{dx} = EA\varepsilon$$

where A(x) is the area of the bar, E(x) is Young's modulus u is the displacement and  $\varepsilon = du/dx$  is the strain.

$$-\frac{d}{dx}\left(EA\frac{du}{dx}\right) = f$$

which is a second-order differential equation. BCs:

- **1** u = 0 at x = 0 (displacement or 'Dirichlet' boundary condition),
- ②  $EA\varepsilon = h$  at x = L (force or 'Neumann' boundary condition).

We now have a well-defined boundary value problem that can be solved.

CE394M: Intro to FEM 2019-01-20 -Strong form

-Boundary value problem of a 1-D bar

Boundary value problem of a 1-D bar

For linear elasticity  $N = A\sigma = EA\frac{du}{dx} = EAc$ 

displacement and  $\varepsilon = du/dx$  is the strain.

where A(x) is the area of the bar. E(x) is Young's modulus u is the

which is a second-order differential equation. BCs u = 0 at x = 0 (displacement or 'Dirichlet' boundary condition) EAc = h at x = L (force or 'Neumann' boundary condition) We now have a well-defined boundary value problem that can be solved.

To formulate a boundary value problem, we need to assume a constitutive model which defines the relationship between stress and deformation, and we need to supply boundary conditions.

### Weak form of the equilibrium equations of a 1D bar

The general derivation of the weak form of any equation from the strong form follows a standard procedure:

- Multiply the strong equation by a weight function v which is equal to zero where Dirichlet (displacement) boundary conditions are applied, but is otherwise arbitrary (Another condition is that it must be sufficiently continuous. The degree of continuity required depends on the properties of the equation being considered.)
- ② Use integration by parts to 'shift' derivatives to the weight function
- Insert the Neumann (force) boundary conditions

We then want to find a solution u to the weak form that holds for all v. The weight function is also known as the 'test' function.

# Weak form of the equilibrium equations of a 1D bar

Multiplying equilibrium equation by an arbitrary weight function v and integrating along the bar:

$$-\int_0^L v \frac{dN}{dx} \, \mathrm{d}x. = \int_0^L v f \, \mathrm{d}x.$$

we require that v(0) = 0 because of the displacement boundary condition at x = 0.

$$\int_0^L \frac{dv}{dx} N \, \mathrm{d}x. = \int_0^L vf \, \mathrm{d}x + vN|_{x=0}^{x=L}.$$

Since v(0) = 0, inserting the constitutive relationship and taking into account the force boundary condition at x = L.

$$\int_0^L \frac{dv}{dx} EA \frac{du}{dx} dx = \int_0^L vf dx + v(L)h.$$

The task is to find u with u(0) = 0 such that this equation is satisfied for all v.

Weak form of the equilibrium equations of a
 1D bar

Strong form is the conventional PDE. The strong form imposes continuity and differentiability requirements on the potential solutions to the equation. Weak form is an alternate representation of the differential equation. The weak form relaxes these requirements on solutions to a certain extent. This means that a larger set of functions are solutions of the weak form. By construction all solutions of the strong form satisfy the weak form but not vice-versa.

Weak formulations are often referred to as 'variational formulations'. In fact, the weak form is more general than the strong form. The weak form of an equation does not generally make an equation easier to solve analytically (it may make it harder), but is usually a more suitable form for mathematical analysis (allowing us to say things about the properties of the equation without knowing the solution) and for numerical solution methods.

1D bar

An important observation is that the weak form for the bar contains at most first-order derivatives, whereas the strong form for this problem contained second-order derivatives. We have transferred one derivative from the displacement field u to weight function v using integration by parts. This is a key feature of the weak form and is crucial for finite element methods. If the symbol v in the weak form was replaced by the symbol  $\delta \varepsilon$ , the weak form in the case of the bar resembles the virtual work equation. It is in fact equivalent. However, the process that we have followed is general and does not require any knowledge of virtual work, and can be applied to any differential equation.

Approximates the PDE by replacing the unknown function (the displacement u of the elastic bar) and the weight function (v) by approximate fields  $u_h$  and  $v_h$ . Inserting these fields into the weak equilibrium equation for a bar:

$$\int_0^L \frac{dv_h}{dx} EA \frac{du_h}{dx} dx = \int_0^L v_h f dx + v_h(L)h.$$

We now allow only a limited number of possibilities for  $v_h$  and  $u_h$ . Therefore, it is now unlikely that  $u_h$  will be equal to the exact solution.

#### Basis functions

The approximate displacement field  $u_h$  is represented by a set of 'basis functions'  $N_i(x)$ :

$$u_h(x) = \sum_{i}^{n} N_i(x) a_i$$

 $x_i$ : discrete number of points (known as nodes)

ai: degrees of freedom

n: number of nodes


The approximate strain field:

$$\varepsilon_h = \frac{du_h}{dx} = \sum_{i}^{n} \frac{dN_i(x)}{dx} a_i$$

The task of the FE formulation will be to find the coefficients  $a_i$ , which will the approximate solution  $u_h$  and  $\varepsilon_h$ .

### FE shape functions

The simplest finite element basis functions in 1D hat-like continuous, piece-wise linear polynomials.

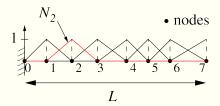


Each node i has its own shape function and its own degree of freedom. A shape function is equal to one at its own node, and zero at all others.

$$N_i(x) = \begin{cases} \frac{x - x_{i-1}}{x_i - x_{i-1}} & x_{i-1} < x \le x_i ,\\ \frac{x_{i+1} - x}{x_{i+1} - x_i} & x_i < x < x_{i+1} ,\\ 0 & \text{otherwise.} \end{cases}$$

# FE shape functions

For a bar divided into three elements, the displacement and strain fields could have the form

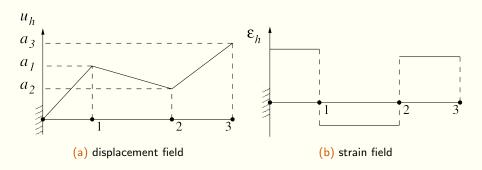

Weak form:

$$\int_0^L EA \frac{dv_h}{dx} \frac{du_h}{dx} dx = \int_0^L v_h f dx + v_h(L)h.$$

Using basis functions for  $u_h$  and  $v_h$ :

$$\int_0^L EA\left(\sum_i^n \frac{dN_i}{dx} \, a_i^*\right) \left(\sum_j^n \frac{dN_j}{dx} \, a_j\right) \, \mathrm{d}x = \int_0^L \left(\sum_i^n N_i a_i^*\right) \, f \, \mathrm{d}x + \\ \left(\sum_i^n N_i(L) a_i^*\right) \, h$$

since  $a_i^*$  and  $a_j$  are not a function of x, we take it out.

$$\sum_{i}^{n} a_{i}^{*} \left( \sum_{j}^{n} a_{j} \int_{0}^{L} EA \frac{dN_{i}}{dx} \frac{dN_{j}}{dx} dx \right) = \sum_{i}^{n} a_{i}^{*} \int_{0}^{L} N_{i} f dx + \sum_{i}^{n} N_{i}(L) a_{i}^{*} h$$

Since  $a_i^*$  is arbitrary for each i we set  $a_{k=i}^* = 1$  and  $a_{k\neq i}^* = 1$ . Then for each i we have an equation with n unknowns (the values of  $a_i$ ):

$$\begin{split} i &= 1: \quad \sum_{j}^{n} a_{j} \int_{0}^{L} EA \frac{dN_{1}}{dx} \frac{dN_{j}}{dx} dx = \int_{0}^{L} N_{1} f dx + N_{i}(L) h, \\ i &= 2: \quad \sum_{j}^{n} a_{j} \int_{0}^{L} EA \frac{dN_{2}}{dx} \frac{dN_{j}}{dx} dx = \int_{0}^{L} N_{2} f dx + N_{i}(L) h, \\ \vdots \\ i &= n: \quad \sum_{j}^{n} a_{j} \int_{0}^{L} EA \frac{dN_{n}}{dx} \frac{dN_{j}}{dx} dx = \int_{0}^{L} N_{n} f dx + N_{i}(L) h, \end{split}$$

A system of linear equations is most conveniently expressed as a matrix:

$$Ka = b$$

Stiffness matrix:

$$K_{ij} = \int_0^L EA \frac{dN_i}{dx} \frac{dN_j}{dx} dx$$

right-hand side vector:


$$b_i = \int_0^L N_i f dx + N_i(L) h.$$

#### Finite Element Method: Formulation

$$\begin{aligned} \left[ \mathbf{K} \right] \mathbf{u} &= F \\ \mathbf{u} &= \left[ \mathbf{K} \right]^{-1} F \end{aligned}$$

	Property [K]	Behavior {u}	Action $\{F\}$
Elastic	stiffness	displacement	force
Thermal	conductivity	temperature	heat source
Fluid	viscosity	velocity	body force

### Linear shape functions

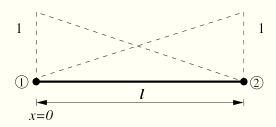

A polynomial shape function is equal to one at its own node, and zero at all other nodes of the element

The displacement field inside the element is given by

$$u_h(x) = N_1(x)a_1 + N_2(x)a_2$$
  
=  $\left(-\frac{x}{l} + 1\right)a_1 + \left(-\frac{x}{l}\right)a_2$ 

<ロト < 回 ト < 巨 ト < 巨 ト 、 巨 ・ りへぐ .

### Linear shape functions: displacements

Writing displacement field using matrices and vectors:

$$u_h = \mathbf{N} \mathbf{a_e}$$

where the matrix N has the shape functions:

$$\mathbf{N} = \begin{bmatrix} N_1(x) & N_2(x) \end{bmatrix}$$

Matrix  $\mathbf{a_e}$  contains the degrees of freedom for an element:

$$\mathbf{a_e} = \begin{bmatrix} a_1 \\ a_2 \end{bmatrix}$$

### Linear shape functions: strains

The strain field is written as:

$$\varepsilon_h(x) = \frac{dN_1(x)}{dx} a_1 + \frac{dN_2(x)}{dx} a_2$$
$$= \left(-\frac{1}{l}\right) a_1 + \left(-\frac{1}{l}\right) a_2$$

Strain inside an element:

$$\varepsilon_h = \mathbf{Ba_e}$$

where the matrix  $\mathbf{B}$  is the derivatives of the shape functions:

$$\mathbf{B} = \begin{bmatrix} \frac{dN_1(x)}{dx} & \frac{dN_2(x)}{dx} \end{bmatrix}$$


Linear shape functions: strains  $c_{12}(z) = \frac{a_{11}^{2}(z)}{a_{12}^{2}} + \frac{a_{12}^{2}(z)}{a_{22}^{2}} + \frac{a_{12}^{2}(z)}$ 


Linear shape functions: strains

Using linear shape functions means that we are trying represent the exact solution using a collection of linear functions. Obviously, if the solution does not resemble a linear function and we use a limited number of elements, the result will not be very accurate. There are two ways to improve the accuracy; the obvious method is to use smaller elements, and the other is to use higher order polynomials within each element.


### Continuity of finite element functions

For a bar divided into three elements, the displacement and strain fields could have the form:

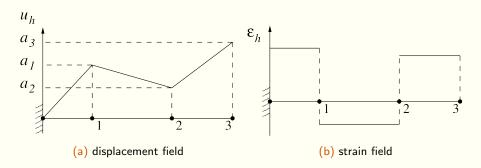

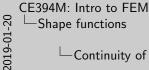



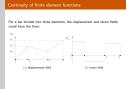


An important point is the continuity of the approximate displacement field  $u_h$ . For the shape functions that we have introduced, the field  $u_h$  is continuous, but its first derivative is discontinuous irrespective of the polynomial order of the basis functions. This is easy to see by considering two elements and computing the displacement and strain fields on either side of the node shared by the two elements.

It does not matter how high the polynomial order of the shape functions is, the strain will be discontinuous at element boundaries.

We can use these simple to construct shape functions that have discontinuous first derivatives in FEA of a bar because the weak form of the equation contains at most first-order derivatives. These shape functions are known as Lagrange polynomials. In the FEM, function with discontinuous derivatives are referred to as  $C^0$  continuous functions. It turns out that these functions are not suitable for thin beam bending problems, and we will need to construct a different type of shape function for beams.

# Quadratic element: shape functions

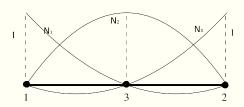

The shape functions:

$$N_1 = a_1 + b_1 x + c_1 x^2$$
,  
 $N_2 = a_2 + b_2 x + c_2 x^2$ ,  
 $N_3 = a_3 + b_3 x + c_3 x^2$ 

$$x_1 = -1$$
,  $x_2 = 1$  and  $x_3 = 0$ :

$$N_1 = \frac{x^2}{2} - \frac{x}{2},$$
 $N_2 = \frac{x^2}{2} + \frac{x}{2},$ 
 $N_3 = -x^2 + 1$ 

# Quadratic element: shape functions

The shape functions must satisfy three conditions and will be cubic polynomials of the form  $N_i = a_i + b_i x + c_i x^2$ . The SF must be equal to one at their node and zero at all others:

$$\begin{bmatrix} 1 & x_1 & x_1^2 \\ 1 & x_2 & x_2^2 \\ 1 & x_3 & x_3^2 \end{bmatrix} \begin{bmatrix} a_i \\ b_i \\ c_i \end{bmatrix} = \begin{bmatrix} 1 & -1 & 1 \\ 1 & 0 & 0 \\ 1 & 1 & 1 \end{bmatrix} \begin{bmatrix} a \\ b \\ c \end{bmatrix} = \begin{bmatrix} N_i(x_1) \\ N_i(x_2) \\ N_i(x_3) \end{bmatrix}$$

Inverting,

$$\begin{bmatrix} 0 & 1 & 0 \\ -0.5 & 0 & 0.5 \\ 0.5 & -1 & 0.5 \end{bmatrix} \begin{bmatrix} N_i(x_1) \\ N_i(x_2) \\ N_i(x_3) \end{bmatrix} = \begin{bmatrix} a_i \\ b_i \\ c_i \end{bmatrix}$$

For node one,  $\begin{bmatrix} N_i(x_1) & N_i(x_2) & N_i(x_3) \end{bmatrix}^T = \begin{bmatrix} 1 & 0 & 0 \end{bmatrix}^T$ , and for node two  $\begin{bmatrix} 0 & 0 & 1 \end{bmatrix}^T$ , for node three  $\begin{bmatrix} 0 & 1 & 0 \end{bmatrix}^T$ . This leads to

$$N_1 = \frac{x^2}{2} - \frac{x}{2}$$
,  $N_2 = \frac{x^2}{2} + \frac{x}{2}$ ,  $N_3 = -x^2 + 1$