

# [Guide] Add HDEF/Clover\_v2

# For Realtek ALC AppleHDA

Clover supports Realtek ALC AppleHDA.kext Audio ID Injection; no kext, dsdt or ssdt enabler required. If required, Clover can add dsdt/HDEF.

### audio\_ALCInjection

toleda/audio\_ALCInjection

### Requirements

- A. OS X versions supported:
  - 1. Yosemite/10.10 or newer
  - 2. Mavericks/10.9 or newer
  - Mountain Lion/10.8.4 and newer
- B. Realtek ALC, one of the following Device\_ID Codec Name
  - 1. 10ec0885 ALC885/ALC889a
  - 2. 10ec0887 ALC887/ALC888b
  - 3. 10ec0888 ALC888/ALC888s
  - 4. 10ec0889 ALC889
  - 5. 10ec0892 ALC892
  - 6. 10ec0899 ALC898
  - 7. 10ec0900 ALC1150 10.8.5 or newer
- C. Supported Audio-IDs (Audio\_ID = layout-id)
  - 1. Audio ID: 1
    - 5/6 port Realtek ALC onboard audio and HD4600/AMD/Nvidia HDMI audio
  - 2. Audio\_ID: 2

- 3 port/5.1 Realtek ALC onboard audio and HD4600/AMD/ Nvidia HDMI audio
- 3. Audio\_ID: 3
  - 1/2/3/5/6 port Realtek ALC onboard audio and HD3000/ HD4000/AMD/Nvidia HDMI audio
- 4. Audio\_IDs: 1 and 2 support analog 5.1 surround sound, 3 does not
- 5. Audio\_IDs: 1, 2 and 3 require HDMI audio dsdt edits/ssdts for HDMI audio
- D. Clover\_v1597 or newer

## Remove Enabler (if installed)

- A. Remove any audio enablers
  - kexts, S/L/E/HDAEnabler1.kext, HDAEnabler8--.kext, ALC8xxHDA.kext, etc.
  - 2. dsdt, remove dsdt/HDEF/layout-id
  - 3. ssdt, remove ssdt/HDEF/layout-id

#### Tools

- A. IORegistryExplorer (Download: select View Raw)
- B. Clover Configurator

#### **Procedures**

- I. IOReg/HDEF Verification
- II. IOReg/Audio\_ID verification
- III. Add dsdt/HDEF
- IV. Set Audio ID
- V. Verification
- VI. Troubleshooting

#### I. IOReg/HDEF Verification

- A. IOReg/Search: HDEF
- B. IF IOReg/HDEF present, see II. IOReg/Audio\_ID verification
- C. If no IOReg/HDEF
  - 1. IOReg/Search: @1B
    - a. Example: IOReg/pci8086,1c20@1B, see III. Add dsdt/HDEF
    - b. If no IOReg/@1B, No Codec, do not proceed


# II. IOReg/Audio\_ID verification

- A. Search: HDEF
- B. Locate: layout-id (right pane, scroll down)
- C. Verify layout-id:
  - <01 00 00 00> valid, all supported codecs

- <02 00 00 00> valid, except ALC885
- <03 00 00 00> valid, except ALC885 and ALC1150
- <00 00 00 00> not valid
- D. See IV. Set Audio ID

#### III. Add dsdt/HDEF

- A. Edit config.plist (EFI/CLOVER/config.plist or EFI/CLOVER/OEM/ ProductName/config.plist)
  - Add config.plist/ACPI/DSDT/Fixes/
    - a. AddDTGP\_0001/YES
    - b. FixHDA 8000/YES
  - 2. Add config.plist/ACPI/DSDT/ Debug/YES (optional; use to verify and then remove)
    - a. Edited dsdt: EFI/CLOVER/ACPI/origin/
      - Native: DSDT-or.amlEdited: DSDT-pa-.aml
  - 2. Save
    - a. Clover Configurator

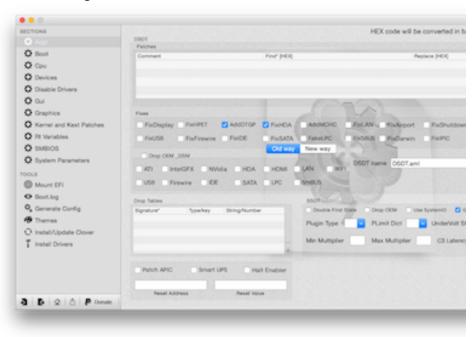

b. Xcode/config.plist


0 0	config-clover-hda.plist	
8   < >   🗎 config-clover-hda.p	list ) No Selection	
Key	Type	Value
r Root	Dictionary	(10 items)
₩ACPI	Dictionary	(2 items)
▼ DSDT	Dictionary	(3 items)
Debug	Boolean	YES
₩ Fixes	Dictionary	(2 items)
AddDTGP_0001	Boolean	YES
FixHDA_8000	Boolean	YES
Name	String	DSDT.aml
▶ SSDT	Dictionary	(6 items)
▶ Boot	Dictionary	(7 items)
▶ CPU	Dictionary	(1 item)
► Devices	Dictionary	(3 items)
▶ DisableDrivers	Array	(1 item)
▶ GUI	Dictionary	(5 items)
▶ Graphics	Dictionary	(1 item)
▶ KernelAndKextPatches	Dictionary	(4 items)
▶ SMBIOS	Dictionary	(17 items)
▶ SystemParameters	Dictionary	(2 items)

# c. TextEdit/config.plist


```
onfig-clover-hda.plist
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE plist PUBLIC "-//Apple//DTD PLIST 1.0//EN" "http://www.apple.com/
PropertyList-1.0.dtd">
<plist version="1.0">
<dict>
          <key>ACPI</key>
          <dict>
                    <key>DSDT</key>
                    <dict>
                              <key>Debug</key>
                              <true/>
<key>Fixes</key>
                              <dict>
                                        <key>AddDTGP_0001</key>
                                        <true/>
<key>FixHDA_8000</key>
                                        <true/>
                              </dict>
                              <key>Name</key>
<string>DSDT.aml</string>
                    </dict>
                    <key>SSDT</key>
                    <dict>
                              <key>DropOem</key>
                              <false/>
<key>EnableC2</key>
                              <true/>
                              <key>EnableC4</key>
                              <true/>
<key>EnableC6</key>
```

#### IV. Set Audio ID

- A. Edit config.plist (EFI/CLOVER/config.plist or EFI/CLOVER/OEM/ ProductName/config.plist)
  - 1. Determine Devices/Audio/Inject (from supported Audio\_IDs above)
    - Audio\_ID = 1, Audio/Inject=1
    - Audio\_ID = 2, Audio/Inject=2
    - Audio\_ID = 3, Audio/Inject=3
  - 2. Add config.plist/DevicesAudio/Inject/1, 2 or 3
  - 3. Save
    - a. Clover Configurator

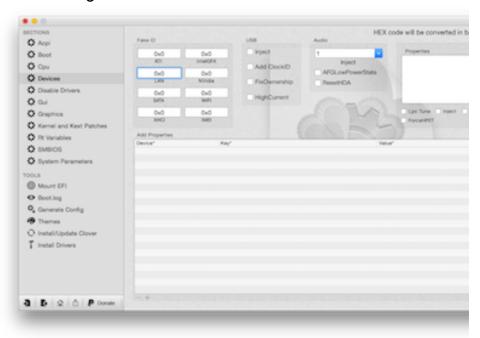

b. Xcode/config.plist

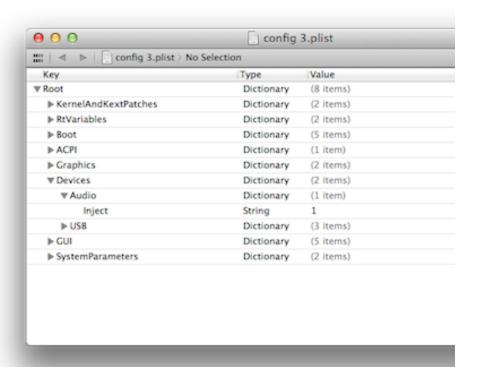

# c. TextEdit/config.plist

```
\Theta \Theta \Theta
                                       config 3.plist
       <key>Graphics</key>
       <dict>
               <key>LoadVBios</key>
               <key>PatchVBios</key>
               <true/>
       <key>Devices</key>
       <dict>
               <key>Audio</key>
               <dict>
                       <key>Inject</key>
                       <string>1</string>
               </dict>
               <key>USB</key>
               <dict>
                       <key>Inject</key>
                       <key>USBFixOwnership</key>
                       <key>AddClockID</key>
               </dict>
       </dict>
       <key>GUI</key>
       <dict>
               <key>Theme</key>
               <string>black_green</string>
               <key>Mouse</key>
               <dict>
```

## V. Verification

- 1. Restart
- 2. IORegistryExplorer
  - a. Search: HDEF
  - b. Locate: layout-id (right pane, scroll down)
  - c. Verify:
    - <01 00 00 00> or
    - <02 00 00 00>

# VI. Troubleshooting

1. See audio\_RealtekALC/DETAILS.md