

Lecture note Instructor: Dr. Young Jin Chun.


1 Signals and Systems

Major References:

- Chapter 1, Signals and Systems by Alan V. Oppenheim et. al., 2nd edition, Prentice Hall
- Chapter 1, Schaum's Outline of Signals and Systems, 2nd Edition, 2010, McGraw-Hill

Introduction

• **Objective**: Describe a **system** (physical, mathematical, or computational) by the way it transforms an **input signal** into an **output signal**.

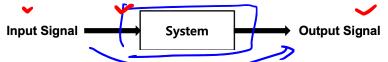

- · System level approach
 - Abstraction
 - Identify the system input and output signals → characterize the signal types
 - * Write input-output relation of the system \rightarrow Operational transformations (e.g., Fourier analysis, Laplace Transformation).
 - * Characterize the system types by the input-output relation \rightarrow system types

- Modular design


- * Break down the system into a number of interconnected subsystems (module)
- * Each module performs some specific task.
- * Focus on the **flow of signal**, abstract everything else away

- Composite system


- * Determine the input-output relationship between each modules
- * Combine the components (module) to composite the overall system
- * Component and composite systems have the same form, and are analyzed with same methods.

Example 1.1

Let's consider a typical mobile communication between the transmitter and receiver. Abstract the system input and output signals, then determine the input-output relationship.

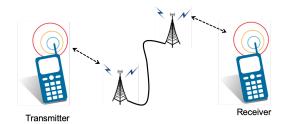

Sol) We first describe each module as a cascade of component systems.

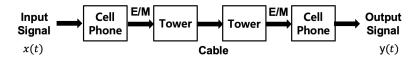


Then we combine the modules into a composite system.




Example 1.2


Determine the input-output relationship of the following electrical circuit.

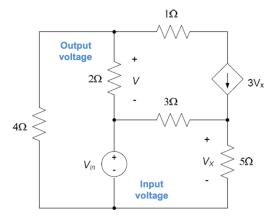

Sol) We first characterize the input and output signals, then perform modular design by breaking the circuit into several modular circuits

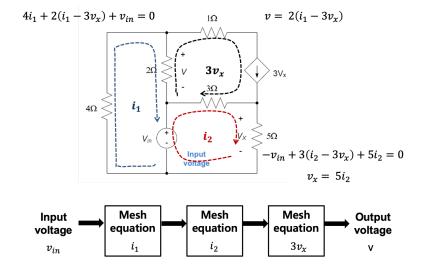

Then we combine the modules into a composite system

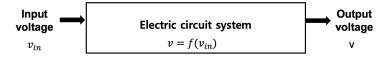

1.1 Classification of Signal Types

• [**Def**] Signal x(t) is a function of an independent variable t representing a physical behavior of the phenomenon.

1. Continuous-Time (CT) and Discrete-Time (DT) Signals

A signal x(t) is a **continuous-time signal** if t is a continuous variable. If t is a discrete variable, i.e., x(t) is defined at discrete times, then x(t) is a **discrete-time signal**.


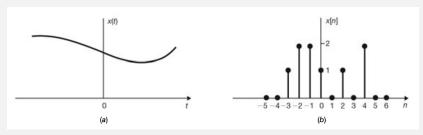


Fig. 1 (a) Continuous-time and (b) discrete-time signals

DT signal x[n] may be obtained by sampling a CT signal x(t) such as

$$x_n = x [n] = x (t_n)$$

CT / DT signal (N-axis) (continuous time) (discrete time) Analog / Pigital signal (y-axis) Periodic/ Aperiodic (non-periodic) Even/odd signel Power/energy signal. $\frac{1}{\sqrt{137}} = \frac{1}{\sqrt{10}}$ $\frac{1}{\sqrt{10}} = \frac{1}{\sqrt{10}}$ $S\left(\frac{1}{2}\right)^n$, $N \ge 0$ $S = \frac{1}{2}$ $S = \frac{1}{2}$ SN=0.→X[0]=1

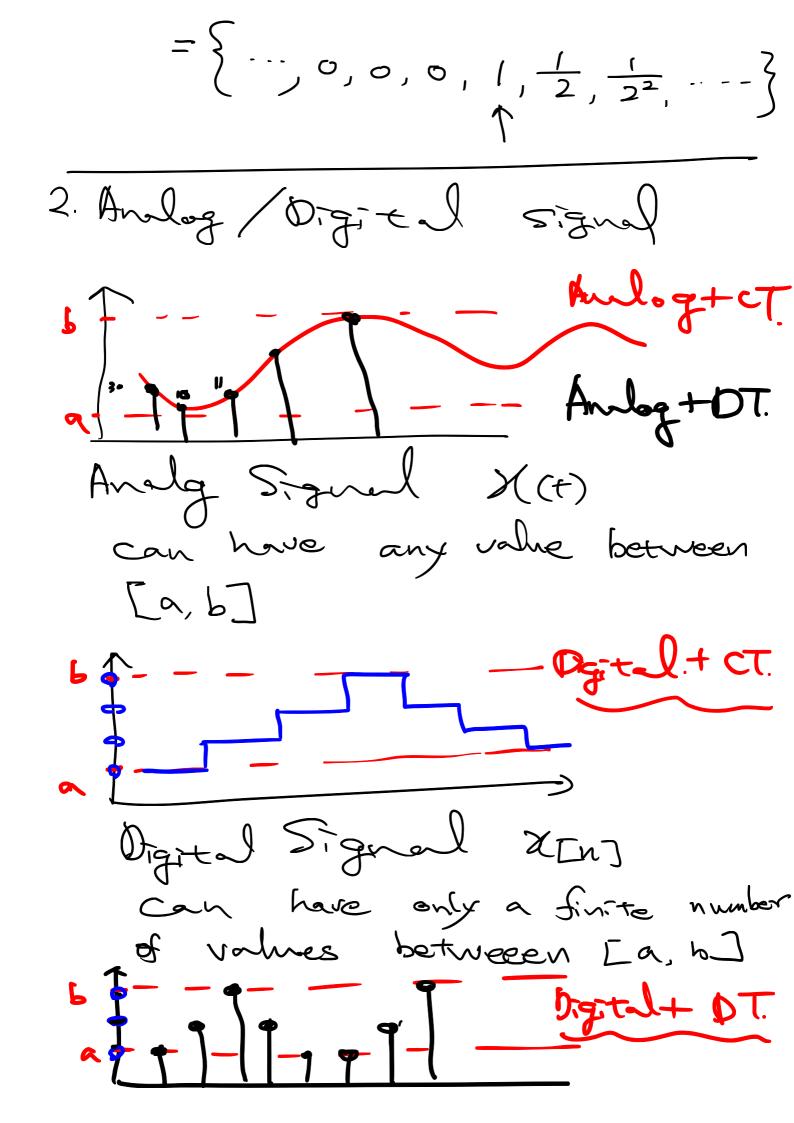

3. Reviodic/Aperiodic $\int \chi(t) = \chi(t+\tau), \quad \tau > 0.$ T, 2T, 3T, --, NT, --. 3 are all available foriods $(t) = \chi(t+2T) = \chi(t+2T)$ = -- = $\chi(t+2T)$ = X(++nT)=-minimal Period To=T. Fundamental Period

Ex I - 1)

a)
$$C_{as}(t + \frac{\pi}{4}) = C_{as}(t + \frac{\pi}{4})$$
 $t' = t + \frac{\pi}{4}$
 $t' =$

$$C_{s}(\sqrt{\frac{1}{3}}) = C_{es}(\sqrt{\frac{1}{3}}) + \sqrt{\frac{1}{3}}$$

$$S_{1}(\sqrt{\frac{1}{4}}) = S_{1}(\sqrt{\frac{1}{4}}) + \sqrt{\frac{1}{4}}$$

$$S_{1}(\sqrt{\frac{1}{4}}) = S_{1}(\sqrt{\frac{1}{4}}) + \sqrt{\frac{1}{4}}$$

$$S_{1}(\sqrt{\frac{1}{4}}) = S_{1}(\sqrt{\frac{1}{4}}) + \sqrt{\frac{1}{4}}$$

$$C_{es}(t) + S_{1}(\sqrt{\frac{1}{2}}) + \sqrt{\frac{1}{4}}$$

$$C_{es}(t) = C_{es}(t + T)$$

$$S_{1}(\sqrt{\frac{1}{2}}) = S_{1}(\sqrt{\frac{1}{2}}) + \sqrt{\frac{1}{4}}$$

$$S_{1}(\sqrt{\frac{1}{2}}) = S_{1}(\sqrt{\frac{1}{2}}) + \sqrt{\frac{1}{4}}$$

$$S_{1}(t) = S_{1}(t + \sqrt{\frac{1}{4}})$$

Cas (2xt) U(t).

Two representations of the DT signals

• Functional form. For example,


$$x_n = x[n] = \begin{cases} \left(\frac{1}{2}\right)^n, & n \ge 0\\ 0, & n < 0 \end{cases}$$

• Sequence form. For instance,

$$\{x_n\} = \{\ldots, 0, 0, 1, 2, 2, 1, 0, 1, 0, 2, 0, 0, \ldots\}$$

2. Analog and Digital Signals

A CT signal x(t) is an **analog signal** if x(t) can take on any value in the continuous interval (a, b). A DT signal x[n] is a **digital signal** if x[n] can take on only a finite number of distinct values.

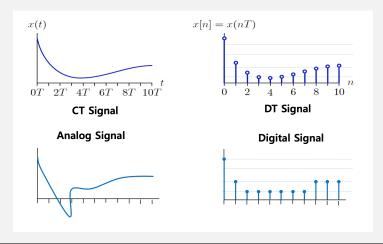

3. Periodic and Aperiodic (or nonperiodic) Signals

A signal x(t) (or x[n]) is **periodic** with period T (or N) if there is a positive non-zero value of T (or N) for which the following equality holds

$$x(t+T) = x(t)$$
, for CT signal $x(t)$,
 $x[n+N] = x[n]$, for DT signal $x[n]$ (1.1)

Any signal that is not periodic is called a **nonperiodic** (or **aperiodic**) signal.

- Property 1. For a given periodic signal, $\{T, 2T, 3T, ..., mT, ...\}$ are all available period at all t and any integer m.
- Property 2. **Fundamental period** T_0 is the smallest positive value of the period T for which (1.1) holds.


4. Even and Odd Signals

A signal is referred to as an even signal if

$$x(-t) = x(t)$$
 for CT signal $x(t)$, $x[-n] = x[n]$ for DT signal $x[n]$ (1.2)

A signal is referred to as an odd signal if

$$x(-t) = -x(t)$$
 for CT signal $x(t)$, $x[-n] = -x[n]$ for DT signal $x[n]$ (1.3)

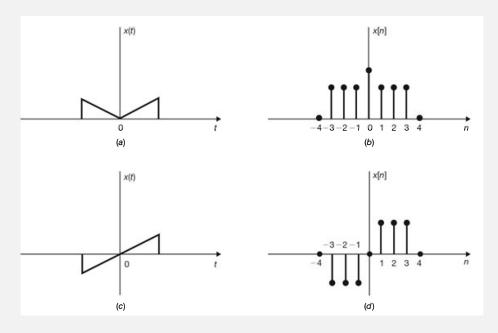

• Property 1. Any signal x(t) or x[n] can be expressed as a sum of two signals

$$x(t) = x_e(t) + x_o(t)$$
 for CT signal,
 $x[n] = x_e[n] + x_o[n]$ for DT signal, (1.4)

where $x_e(t)$ (or $x_e[n]$) is the even part, $x_o(t)$ (or $x_o[n]$) is the odd part, and these components are related to the original signal x(t) (or x[n]) as follows

$$x_{e}(t) = \frac{1}{2} [x(t) + x(-t)],$$

$$x_{o}(t) = \frac{1}{2} [x(t) - x(-t)].$$
(1.5)

- Property 2. Product of signals
 - Even signal \times Even signal = Even signal, Odd \times odd = Even signal
 - Even signal × odd signal = odd signal

5. Energy and Power Signals

Energy E of a signal x(t) (or x[n]) is defined as

$$\mathbf{E} = \int_{-\infty}^{\infty} |x(t)|^2 dt \quad \text{for CT signal,} \quad \mathbf{E} = \sum_{n=-\infty}^{\infty} |x[n]|^2 \quad \text{for DT signal,}$$
 (1.6)

whereas the Power P of a signal is defined as follows

$$\mathbf{P} = \begin{cases} \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} |x(t)|^2 dt & \text{for CT signal,} \\ \lim_{N \to \infty} \frac{1}{2N+1} \sum_{n=-N}^{N} |x[n]|^2 & \text{for DT signal} \end{cases}$$
(1.7)

• Energy signal has finite energy and zero power

$$0 < \mathbf{E} < \infty$$
, $\mathbf{P} = 0$.

• Power signal has finite power and infinite energy


$$0 < \mathbf{P} < \infty$$
, $\mathbf{E} = \infty$.


• Signals that satisfy neither property are neither energy signals nor power signals.


1.2 Basic Signal Operations

- **Time Reversal**: Flip the signal around the vertical axis $x(t) \to x(-t)$
- **Time Shifts**: Shift the signal to left or right $x(t) \rightarrow x(t-t_0)$
 - **Right-shift** if $t_0 > 0$, **Left-shift** if $t_0 < 0$.
- **Time Scaling**: Linearly stretch or compress the signal $x(t) \rightarrow x(ct)$
 - Compression if |c| > 1, Expansion if |c| < 1.
- **Affine Transformation**: $x(t) \to x (\alpha t + \beta) = x (\alpha (t + \beta/\alpha))$ for any real α, β
 - Step 1. **Scale by** α . If α < 0, reflection across y-axis
 - Step 2. **Shift by** $-\beta/\alpha$.
 - * If α and β have different signs, right-shift.
 - * If α and β have same signs, left shift.


Time Reflection: $x(t) \longrightarrow x(-t)$

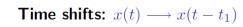


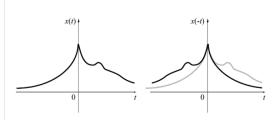


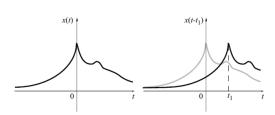

Time scaling: $x(t) \longrightarrow x(ct)$

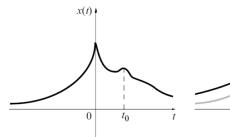

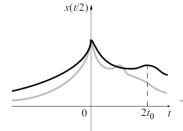

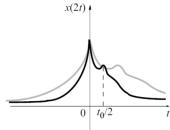

1.3 Example of Important Signals


1. **Unit Step Function** (also referred as *Heaviside unit function*)

Definition

$$u(t) = \begin{cases} 1, & t > 0 \\ 0, & t < 0, \end{cases}$$
 (1.8)

Properties

- Aperiodic signal
- Power signal P = 1/2
- Infinite Energy E = ∞

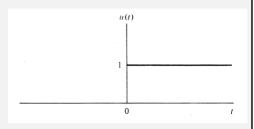


Functions related to the step function u(t)

- a) Signum Function
 - Definition

$$sgn(t) = 2u(t) - 1 = \begin{cases} 1, & t > 0 \\ 0, & t = 0 \\ -1, & t < 0 \end{cases}$$

- Properties
 - Aperiodic & odd signal
 - Power signal P = 1
 - Infinite Energy $E = \infty$

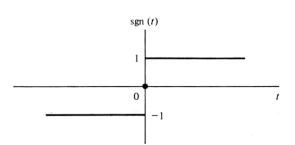


b) Ramp Function

• Definition

$$r(t) = \begin{cases} t, & t \ge 0 \\ 0, & t < 0 \end{cases}, \qquad \int_{-\infty}^{t} u(\tau) d\tau = r(t)$$

$$\int_{-\infty}^{t} u(\tau) d\tau = r(t)$$

- Properties
 - Aperiodic
 - Infinite Power P = ∞
 - Infinite Energy E = ∞

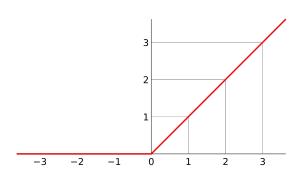


c) Rectangular Pulse

• Definition

$$rect (t/\tau) = \begin{cases} 1, & |t| < \frac{\tau}{2} \\ 0, & |t| > \frac{\tau}{2} \end{cases}$$

- $rect\left(t/\tau\right) = \begin{cases} 1, & |t| < \frac{\tau}{2} \\ 0, & |t| > \frac{\tau}{2} \end{cases}, \qquad rect\left(t/\tau\right) = u\left(t + \frac{\tau}{2}\right) u\left(t \frac{\tau}{2}\right) \quad (1.9)$
- Properties
 - Aperiodic & Even signal
 - Zero Power P = 0
 - Energy Signal $\mathbf{E} = \tau$

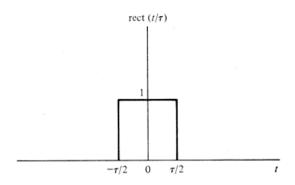

- 2. **Unit Impulse Function** (also referred as *Direc delta function*)
 - Definition

$$\delta(t) = \begin{cases} 0, & t \neq 0 \\ \infty, & t = 0 \end{cases}, \qquad \int_{-\infty}^{\infty} \delta(t) dt = 1$$
 (1.10)

- · Properties
 - Sampling Property

$$x(t)\delta(t-t_0) = x(t_0)\delta(t-t_0)$$


- Sifting Property

$$\int_{a}^{b} x(t)\delta(t - t_{0}) dt = \begin{cases} x(t_{0}), & \text{if } a < t_{0} < b \\ 0, & \text{otherwise} \end{cases}$$

Impulse function is the *building block of any signal*, *i.e.*, arbitrary signal
can be respresented as an infinite sum of impulse function and signal
amplitude.

$$x(t) = \int_{-\infty}^{\infty} x(\tau) \, \delta(t - \tau) \, d\tau \tag{1.11}$$

Relationship between Rectangular Pulse and Impulse Function

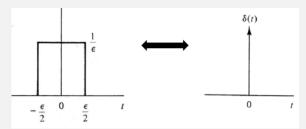

• $\delta_{\epsilon}(t) = \frac{1}{\epsilon} rect(\frac{t}{\epsilon})$

• $\delta(t) = \lim_{\epsilon \to 0} \delta_{\epsilon}(t)$

• $\delta_{\epsilon}\left(0\right) = \frac{1}{\epsilon}$

• $\delta(0) \rightarrow \infty$

• $\delta_{\epsilon}(t) = 0$, $|t| > \frac{\epsilon}{2}$

• $\delta(t) = 0, t \neq 0$

• $\int_{-\infty}^{\infty} \delta_{\epsilon}(t) dt = 1$

• $\int_{-\infty}^{\infty} \delta(t) dt = 1$

Additional Properties of Unit impulse function

• Scaling Property:

$$\delta\left(at\right) = \frac{1}{|a|}\delta\left(t\right)$$


• Even Function:

$$\delta\left(-t\right) = \delta\left(t\right)$$

• Derivative and Integral:

$$\delta(-t) = \delta(t)$$

$$u(t) = \int_{-\infty}^{t} \delta(\tau) d\tau, \quad \delta(t) = \frac{du(t)}{dt}$$

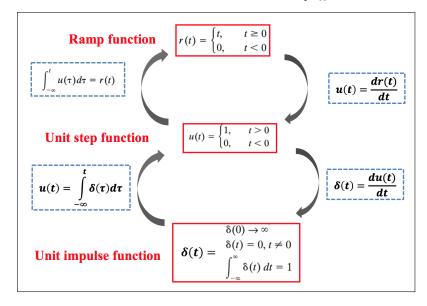

3. Complex Exponential Function

Definition

$$e^{jw_0t} = \cos(w_0t) + j\sin(w_0t)$$

- Properties
 - Periodic with $T = \frac{2\pi n}{w_0}$ where *n* is an integer
 - Fundamental period $T_0 = \frac{2\pi}{|w_0|}$
 - Infinite Energy E = ∞

- Finite power
$$\mathbf{P} = \lim_{T_0 \to \infty} \frac{1}{T_0} \int_0^{T_0} |e^{jw_0 t}|^2 dt = \lim_{T_0 \to \infty} \frac{1}{T_0} \int_0^{T_0} 1 \cdot dt = 1$$

4. Sinusoidal Function

$$A\cos(w_0t+\theta)$$
 or $A\sin(w_0t+\theta)$,

where A is the amplitude, θ is the phase angle, w_0 is the radian frequency with

Fundamental period $T_0 = \frac{2\pi}{w_0}$ (sec), Fundamental frequency $f_0 = \frac{1}{T_0}$ hertz (Hz)

1.4 Classification of System Types

• [Def] A system is a mathematical model of a physical process that relates the input signal to the *output signal* in the form y = Tx.

1. Invertible and Noninvertible System

A system is said to be **invertible** if distinct inputs lead to distinct outputs. Otherwise, the system is said to be **noninvertible**.

[Examples] **Invertible System**

Noninvertible System

•
$$y(t) = 2x(t) \leftrightarrow w(t) = \frac{1}{2}y(t)$$

•
$$y[n] = 0$$

•
$$y[n] = \sum_{k=-\infty}^{n} x[k] \leftrightarrow w[n] = y[n] - y[n-1]$$
 • $y(t) = x^2(t)$

•
$$y(t) = x^2(t)$$

2. Memory and Memoryless System

A system is said to be **memoryless** if the output at any time depends only on the input at that same time. Otherwise, the system is said to have memory.

[Examples]

Memoryless System

•
$$y(t) = Rx(t)$$

•
$$y[n] = (2x[n] - x^2[n])^2$$

System with Memory

•
$$y[n] = \sum_{k=-\infty}^{n} x[k]$$

•
$$y[n] = x[n-1]$$

•
$$y(t) = \frac{1}{c} \int_{-\infty}^{t} x(\tau) d\tau$$

3. Causal and Noncausal System

A system is said to be **causal** if its output at the present time depends on only the present and/or past values of the input. If its output at the present time depends on future values of the input, the system is known as **noncausal**.

[Examples] Causal System

• $y[n] = \sum_{k=-\infty}^{n} x[k]$

•
$$y(t) = x^2(t)$$

Noncausal System

•
$$y[n] = x[n] + x[n+2]$$

•
$$y[n] = x[-n]$$
 or $y(t) = x(t+1)$

* Note) All memoryless systems are causal, but not vice versa.

4. Linear and Nonlinear System

A system is said to be **linear** if the following superposition property (1.12) holds for a given operator **T**. If the system does not satisfy (1.12), it is a **nonlinear system**.

$$T \{\alpha_1 x_1 + \alpha_2 x_2\} = \alpha_1 T \{x_1\} + \alpha_2 T \{x_2\}$$
(1.12)

[Examples] Linear System

Nonlinear System

•
$$y[n] = \sum_{k=-\infty}^{n} x[k]$$

•
$$y(t) = x^2(t)$$

•
$$y(t) = tx(t)$$

•
$$y[n] = 2x[n] + 3$$

* Note) For a linear system, zero input always yields a zero output.

5. Time-invariant and Time-Varying System

A system is **time-invariant** if a time-shift of the input causes a corresponding shift in the output. In other words, the system response is independent of time.

If
$$y(t) = T\{x(t)\}$$
, then $y(t - t_0) = T\{x(t - t_0)\}$ (1.13)

[Examples]

Time invariant System

Time varying System

•
$$y[n] = \sum_{k=-\infty}^{n} x[k]$$

•
$$y(t) = x(2t)$$

•
$$y[n] = x[n - n_0]$$

•
$$y[n] = nx[n]$$

LTI System

Linear time-invariant (LTI) system: A system that is linear and also time-invariant.

6. Stable and Unstable System

A system is **stable** if every bounded input produces a bounded output for all time.

If
$$|x(t)| < A$$
, then $|y(t)| < B$ where $|A| < \infty$, $|B| < \infty$ (1.14)

[Examples] Stable System

Unstable System

•
$$y(t) = x^2(t)$$

•
$$y[n] = \frac{1}{x[n]}$$

•
$$y[n] = x[n] + x[n+2]$$

•
$$y[n] = nx[n]$$

1.5 Examples

[Example 1-1] Determine whether or not each of the following signals is periodic. If a signal is periodic, determine its fundamental period.

a)
$$x(t) = \cos\left(t + \frac{\pi}{4}\right)$$

b)
$$x(t) = \sin\left(\frac{2\pi t}{3}\right)$$

c)
$$x(t) = \cos\left(\frac{\pi t}{3}\right) + \sin\left(\frac{\pi t}{4}\right)$$

d)
$$x(t) = \cos(t) + \sin(\sqrt{2}t)$$

e)
$$x(t) = \sin^2(t)$$

f)
$$x(t) = e^{j[\frac{\pi}{2}t-1]}$$

g)
$$x(t) = \cos\left(2t + \frac{\pi}{4}\right)$$

$$h) x(t) = \cos^2(t)$$

i)
$$x(t) = (\cos(2\pi t)) u(t)$$

$$j) \quad x(t) = e^{j\pi t}$$

Solution) To solve this type of problem, try to find the minimum T that satisfy x(t+T) = x(t). For instance, in (a), if the following equality holds with a nonzero constant T, then it is periodic

$$\cos\left(t + \frac{\pi}{4}\right) = \cos\left(t + T + \frac{\pi}{4}\right) \quad \to \quad \cos\left(t'\right) = \cos\left(t' + T\right),\tag{1.15}$$

where we used a *change of variable* $t' = t + \frac{\pi}{4}$ in the second equality. Since the minimum T that satisfy (1.15) is 2π , (a) is a periodic signal with period $T = 2\pi$. Similarly, for (b),

$$\sin\left(\frac{2\pi t}{3}\right) = \sin\left(\frac{2\pi t}{3} + \frac{2\pi T}{3}\right) \quad \to \quad \frac{2\pi T}{3} = 2\pi,\tag{1.16}$$

and by denoting $t' = \frac{2\pi t}{3}$, the minimum T that satisfy (1.16) is 3.

For (c) and (d), we can use (1.18); The period T_1 for $\cos\left(\frac{\pi t}{3}\right)$ in (c) is $T_1=6$ and T_2 for $\sin\left(\frac{\pi t}{4}\right)$ is $T_2=8$. Since $T_1/T_2=3/4$, (c) is a periodic signal with period T=24. In (d), the period T_1 for $\cos(t)$ is $T_1=2\pi$ and T_2 for $\sin\left(\sqrt{2}t\right)$ is $T_2=\sqrt{2}\pi$. Since $T_1/T_2=\sqrt{2}$, (d) is aperiodic signal.

For (e) and (h), convert x(t) as follows, then apply similar approach as (a).

$$\cos^{2}(t) = \frac{1}{2} (1 + \cos(2t)), \quad \sin^{2}(t) = \frac{1}{2} (1 - \cos(2t)), \tag{1.17}$$

and the remaining can be solved using similar method. The solutions are summarized below.

- a) Periodic with $T = 2\pi$
- b) Periodic with T = 3
- c) Periodic with T = 24

- d) Aperiodic
- e) Periodic with $T = \pi$
- f) Periodic with T = 4

- g) Periodic with $T = \pi$
- h) Periodic with $T = \pi$
- i) Aperiodic

j) Periodic with T = 2

peral

Sum of Periodic Signals

• Let $x_1(t)$ and $x_2(t)$ be periodic signals with fundamental periods T_1 and T_2 , respectively. The sum $x(t) = x_1(t) + x_2(t)$ is periodic if and only if the following condition holds

$$\frac{T_1}{T_2} = \frac{k}{m}$$
 = rational number

where the fundamental period T is the least common multiple of T_1 and T_2 .

• Let $x_1[n]$ and $x_2[n]$ be periodic sequence with fundamental periods N_1 and N_2 , respectively. The sum $x[n] = x_1[n] + x_2[n]$ is periodic given the following condition

$$mN_1 = kN_2 = N (1.19)$$

where the fundamental period N is the least common multiple of N_1 and N_2 . Refer [Schaum's text, Problem 1.14 & 1.15]

[Example 1-2] Determine whether the following signals are energy signals, power signals, or neither.

a)
$$x(t) = e^{-at}u(t), a > 0$$

b)
$$x(t) = A\cos(\omega_0 t + \theta)$$

Solution) To solve this type of problem, **(Step 1.)** you need to calculate the energy E first. If E is finite, the signal is a Energy signal. Otherwise, **(Step 2.)** if E is infinite, you need to calculate the power P as well. If P is finite, the signal is a Power signal. Otherwise, if P is infinite, then it is neither a energy nor a power signal. For example, in (a),

$$\mathbf{E} = \int_{-\infty}^{\infty} e^{-2at} u(t) dt = \int_{0}^{\infty} e^{-2at} dt = \frac{1}{2a},$$
 (1.20)

where we used the definition of the step function in the second equality. Since $\frac{1}{2a}$ is finite, x(t) in (a) is a energy signal. For a periodic signal, the integration interval T in (1.7) is equal to the period. In (b), the period is $T = \frac{2\pi}{\omega_0}$ and the signal power can be calculated as follows

$$\mathbf{P} = \lim_{T \to \infty} \frac{1}{T} \int_{0}^{T} A^{2} \cos^{2}(\omega_{0}t + \theta) dt = \lim_{T \to \infty} \frac{A^{2}}{2\pi} \int_{\theta}^{2\pi + \theta} \cos^{2}(l) dl
= \lim_{T \to \infty} \frac{A^{2}}{4\pi} \int_{\theta}^{2\pi + \theta} \left[1 + \cos(2l)\right] dl = \frac{A^{2}}{2},$$
(1.21)

where we used $T = \frac{2\pi}{\omega_0}$ and a change of variable, $l = \omega_0 t + \theta$ or $\omega_0 dt = dl$, in the second equality, then applied the Cosine rule $\cos^2(t) = \frac{1}{2}(1 + \cos(2t))$ in the third equality. Since $\frac{A^2}{2}$ is finite, x(t) in (b) is a power signal. In summary, the solutions are

a) Energy signal

b) Power signal

Definition of Energy and Power Signals

- Energy signal has finite energy and zero power, i.e., $0 < E < \infty$, P = 0
- **Power signal** has finite power and infinite energy, i.e., $0 < P < \infty$, $E = \infty$, where

$$\mathbf{E} = \int_{-\infty}^{\infty} |x(t)|^2 dt, \quad \mathbf{P} = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} |x(t)|^2 dt$$

Properties of Periodic Signals

The following equalities hold for a periodic signal x(t + T) = x(t)


$$\begin{split} & \int_{\alpha}^{\beta} x(t)dt = \int_{\alpha+T}^{\beta+T} x(t)dt, \quad \int_{0}^{T} x(t)dt = \int_{a}^{a+T} x(t)dt, \\ & \mathbf{P} = \lim_{T \to \infty} \frac{1}{T} \int_{-T/2}^{T/2} |x(t)|^{2}dt = \frac{1}{T_{0}} \int_{0}^{T_{0}} |x(t)|^{2}dt, \end{split}$$


where T_0 is the fundamental period and α , β , a are arbitrary real valued constants. *Refer* [Schaum's text, Problem 1.17 & 1.18]

[Example 1-3] Determine the even and odd component of the following signals

a)
$$x(t) = u(t)$$

b)
$$x(t) = \sin\left(\omega_0 t + \frac{\pi}{4}\right)$$

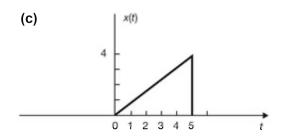

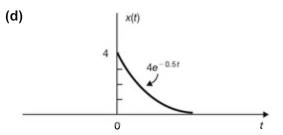

Solution) To solve this type of problem, you need to apply (1.22). In (a), x(-t) = u(-t) = 1 for t < 0 and u(-t) = 0 for t > 0. Then, the following results can be derived

$$x_{e}(t) = \frac{1}{2} [u(t) + u(-t)] = \frac{1}{2},$$


$$x_{o}(t) = \frac{1}{2} [u(t) - u(-t)] = \frac{1}{2} sgn(t) = \begin{cases} 0.5, & t > 0, \\ -0.5, & t < 0 \end{cases}$$


In (b), we first use Sine rule to expand the Sine function, then the following reults can be derived.


$$\sin\left(\omega_0 t + \frac{\pi}{4}\right) = \sin\left(\omega_0 t\right) \cos\left(\frac{\pi}{4}\right) + \cos\left(\omega_0 t\right) \sin\left(\frac{\pi}{4}\right) = \frac{1}{\sqrt{2}} \left(\sin\left(\omega_0 t\right) + \cos\left(\omega_0 t\right)\right).$$


$$x_e(t) = \frac{1}{\sqrt{2}}\cos(\omega_0 t), \quad x_o(t) = \frac{1}{\sqrt{2}}\sin(\omega_0 t).$$

Similarly, the even and odd component of (c) and (d) can be found as follows

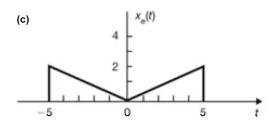

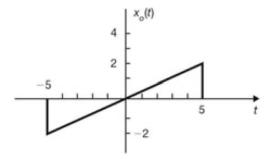

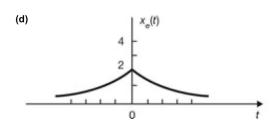

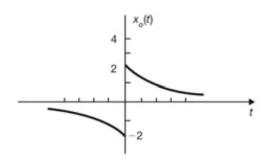

Even and Odd Component

Any signal x(t) can be expressed as a sum of two signals

$$x(t) = x_e(t) + x_o(t),$$

where $x_{e}\left(t\right)$ and $x_{o}\left(t\right)$ are related to the original signal x(t) as follows


$$x_e(t) = \frac{1}{2} [x(t) + x(-t)], \quad x_o(t) = \frac{1}{2} [x(t) - x(-t)].$$
 (1.22)

[Example 1-4] [Part 1] Sketch the following signals.


- a) $x_1(t) = u(t) + 5u(t-1) 2u(t-2)$ b) $x_2(t) = r(t) r(t-1) u(t-2)$
- c) $x_3(t) = u(t)u(a-t), a > 0$
- d) $x_4(t) = x_0(t)u(1-t)$

e)
$$x_5(t) = x_0(t) [u(t) - u(t-1)]$$


where the signal $x_0(t)$ is plotted below.

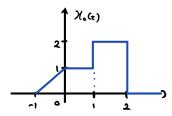

[Part 2] For each of the signals plotted below, write an expression in terms of unit step and unit ramp functions.

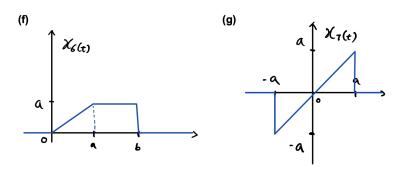

Solution)[Part 1]

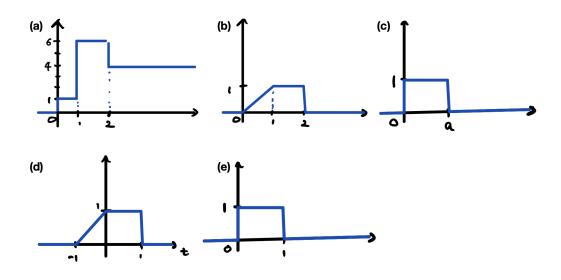

[Part 2]

(f)
$$x_6(t) = r(t) - r(t-a) - au(t-b)$$
, (g) $x_7(t) = (r(t) - r(-t))(u(t+a) - u(t-a))$

• Time Reversal: Flip the signal around the vertical axis

$$x(t) \to x(-t)$$

• Time Shifts: Shift the signal to left or right

$$x(t) \rightarrow x(t-t_0)$$

- **Right-shift** if $t_0 > 0$, **Left-shift** if $t_0 < 0$.

• Time Scaling: Linearly stretch or compress the signal

$$x(t) \to x(ct)$$

- Compression if |c| > 1, Exp

Expansion if |c| < 1.

[Example 1-5] Evaluate the following integrals.

a)
$$\int_{-\infty}^{t} \cos(\tau) u(\tau) d\tau$$

b)
$$\int_{-\infty}^{t} \cos(\tau) \, \delta(\tau) d\tau$$

c)
$$\int_{-\infty}^{\infty} \cos(t) u(t-1) \delta(t) dt$$

d)
$$\int_0^{2\pi} t \sin\left(\frac{t}{2}\right) \delta\left(t-\pi\right)$$

e)
$$\int_{-\infty}^{\infty} \left(\frac{2}{3}t - \frac{3}{2}\right) \delta(t-1) dt$$

f)
$$\int_{-3}^{2} \left[\exp\left(1 - t\right) + \sin\left(\frac{2\pi t}{3}\right) \right] \delta\left(t - \frac{3}{2}\right) dt$$

Solution)

(a)
$$\int_{-\infty}^{t} \cos(\tau) u(\tau) d\tau = \begin{cases} & \text{If } t > 0, \int_{0}^{t} \cos(\tau) d\tau = \sin(t) \\ & \text{If } t < 0, 0 \end{cases} = u(t) \sin(t)$$

(b)
$$\int_{-\infty}^{t} \cos(\tau) \, \delta(\tau) d\tau = \begin{cases} & \text{If } t > 0, \cos 0 = 1 \\ & \text{If } t < 0, 0 \end{cases} = u(t)$$

(c)
$$\int_{-\infty}^{\infty} \cos(t)u(t-1)\,\delta(t)dt = \cos(0)u(-1) = 0$$

(d)
$$\int_{0}^{2\pi} t \sin\left(\frac{t}{2}\right) \delta\left(t - \pi\right) = \pi \sin\left(\frac{\pi}{2}\right) = \pi$$

(e)
$$\int_{-\infty}^{\infty} \left(\frac{2}{3}t - \frac{3}{2}\right) \delta(t - 1) dt = \frac{2}{3} - \frac{3}{2} = -\frac{5}{6}$$

(f)
$$\int_{-3}^{2} \left[\exp\left(1 - t\right) + \sin\left(\frac{2\pi t}{3}\right) \right] \delta\left(t - \frac{3}{2}\right) dt = \exp\left(-\frac{1}{2}\right) + \sin\left(\pi\right) = \exp\left(-0.5\right)$$

Properties of Unit impulse function

•
$$\int_{a}^{b} x(t)\delta(t-t_0) dt = \begin{cases} x(t_0), & \text{if } a < t_0 < b \\ 0, & \text{otherwise} \end{cases}$$

•
$$x(t) = \int_{-\infty}^{\infty} x(\tau) \, \delta(t - \tau) \, d\tau$$

•
$$\delta\left(at\right) = \frac{1}{|a|}\delta\left(t\right), \quad u(t) = \int_{-\infty}^{t} \delta\left(\tau\right) d\tau, \quad \delta\left(t\right) = \frac{du(t)}{dt}$$

[Example 1-6] Determine whether the following system is (i) memoryless, (ii) causal, (iii) linear, (iv) time-invariant, or (v) stable. Refer [Schaum's text, Problem 1.33, 1.34, 1.36, 1.38]

a)
$$y(t) = \frac{1}{C} \int_{-\infty}^{t} x(\tau) d\tau$$

b)
$$y(t) = x(t) \cos(\omega_0 t)$$

c)
$$y[n] = x[n-1]$$

d)
$$y[n] = nx[n]$$

Solution) In (a), the output depends on the past input, so it is not memoryless system. The output depends on the present and past values of the input, so it is a Causal system. To test linearlity, substitute $x(t) \leftarrow \alpha_1 x_1(t) + \alpha_2 x_2(t)$ as the input, where $y_1(t)$ and $y_2(t)$ is the corresponding output of $x_1(t)$ and $x_2(t)$, respectively. Then,

$$\begin{split} y(t) &= \frac{1}{C} \int_{-\infty}^{t} \left[\alpha_1 x_1(\tau) + \alpha_2 x_2(\tau) \right] d\tau \\ &= \alpha_1 \left[\frac{1}{C} \int_{-\infty}^{t} x_1(\tau) d\tau \right] + \alpha_2 \left[\frac{1}{C} \int_{-\infty}^{t} x_2(\tau) d\tau \right] = \alpha_1 y_1(t) + \alpha_2 y_2(t), \end{split}$$

so the superposition property holds, which indicates a linear system. To test time-invariance, input time shifted signal $x(t - t_0)$. If the corresponding output is $y(t - t_0)$, then it is a time invariant system.

$$\frac{1}{C} \int_{-\infty}^{t} x \left(\tau - t_0\right) d\tau = \frac{1}{C} \int_{-\infty}^{t - t_0} x \left(l\right) dl = y \left(t - t_0\right),$$

by using a change of variable $l=\tau-t_0$ in the first equality. Hence, it is a time-invariant system. For stability, (a) can be easily proved to be a unstable by substituting a unit step function x(t)=u(t) as the input, which achieves unbounded $y(t)=\frac{tu(t)}{C}$. The remaining can be proved using similar method. The solutions are summarized below.

- a) memory, causal, linear, time-invariant, unstable
- b) memoryless, causal, linear, time-variant, stable
- c) memory, causal, linear, time-invariant, stable
- d) memoryless, causal, linear, time-variant, unstable.

System Characterization

- 1. Memoryless System; output at any time depends only on the input at that same time
- 2. Causal System; output at the present time depends only on the present and/or past input values
- 3. **Linear System**; the superposition property holds, i.e., $T\{\alpha_1x_1 + \alpha_2x_2\} = \alpha_1T\{x_1\} + \alpha_2T\{x_2\}$
- 4. Time-invariant System; time-shift of the input causes a same amount of shifting in the output
- 5. **Stable System**; If |x(t)| < A, then |y(t)| < B where $|A| < \infty$, $|B| < \infty$
- 6. LTI System; A system that is linear and also time-invariant

