
REFRIGERATOR MANUFACTURER

Turbo air

Commercial Refrigerator Service Manual


Model No.: FRS-1300R
FRS-1000R
FRS-600RP
FRS-401RNP
FRS-300RP
FRS-140R

▣ **Model :**
FRS-401RNP,
FRS-300RP

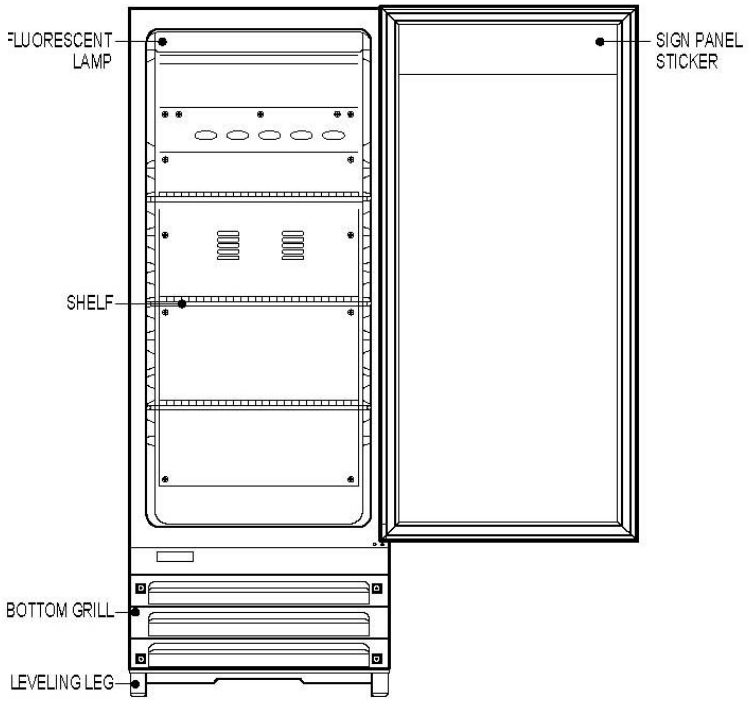


< FRONT >

▣ **Model :**
FRS-401RNP,
FRS-300RP

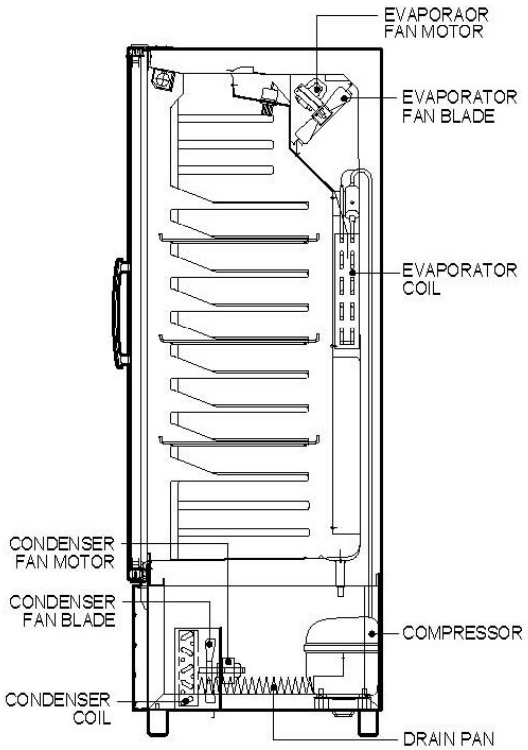


< SIDE >

• Model : FRS-401RNP

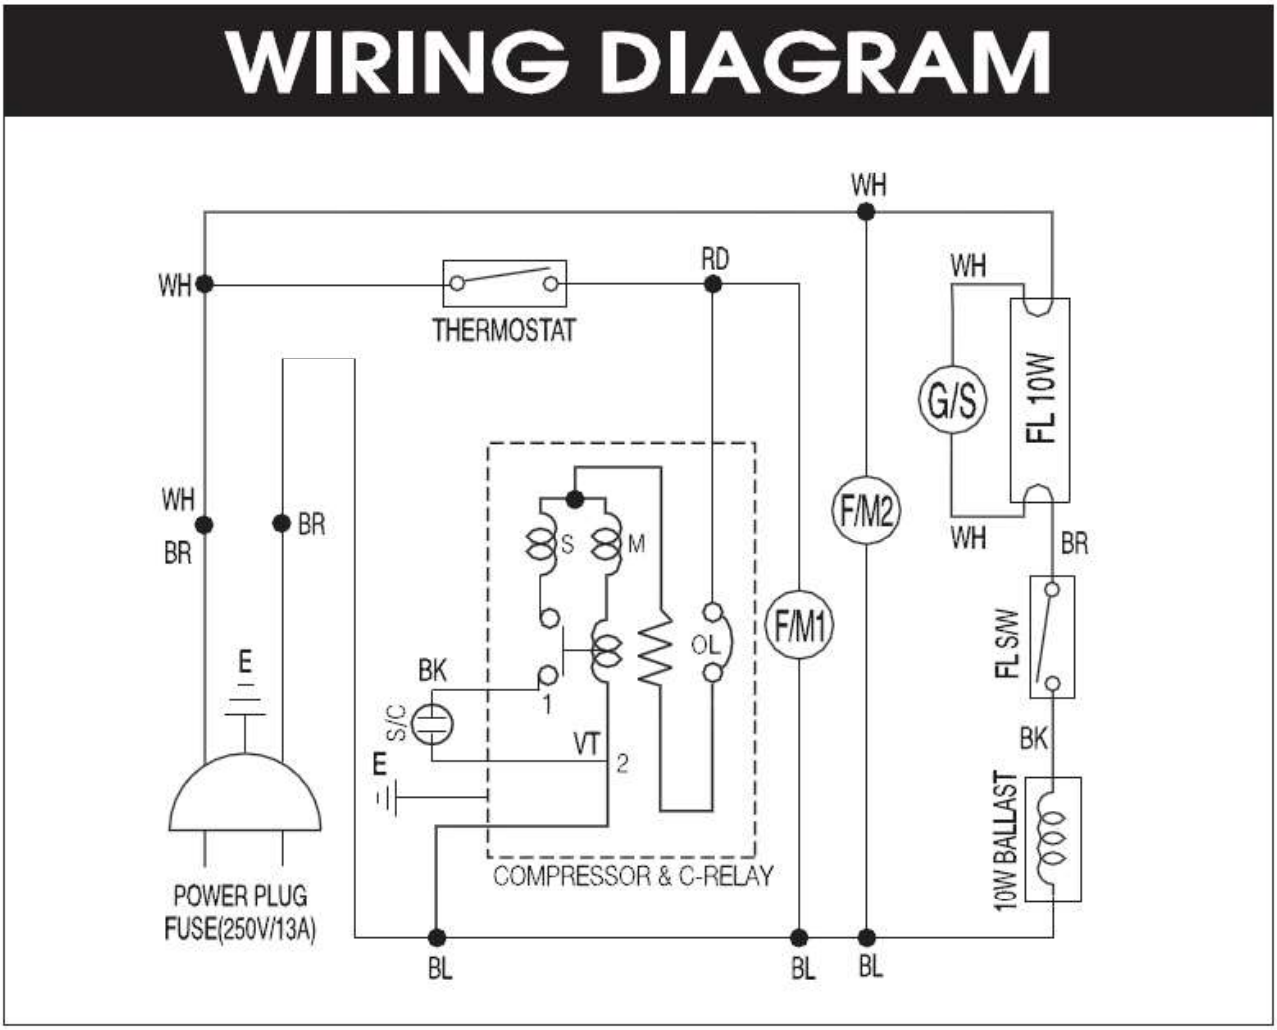


3. REFRIGERANT CYCLE DIAGRAM

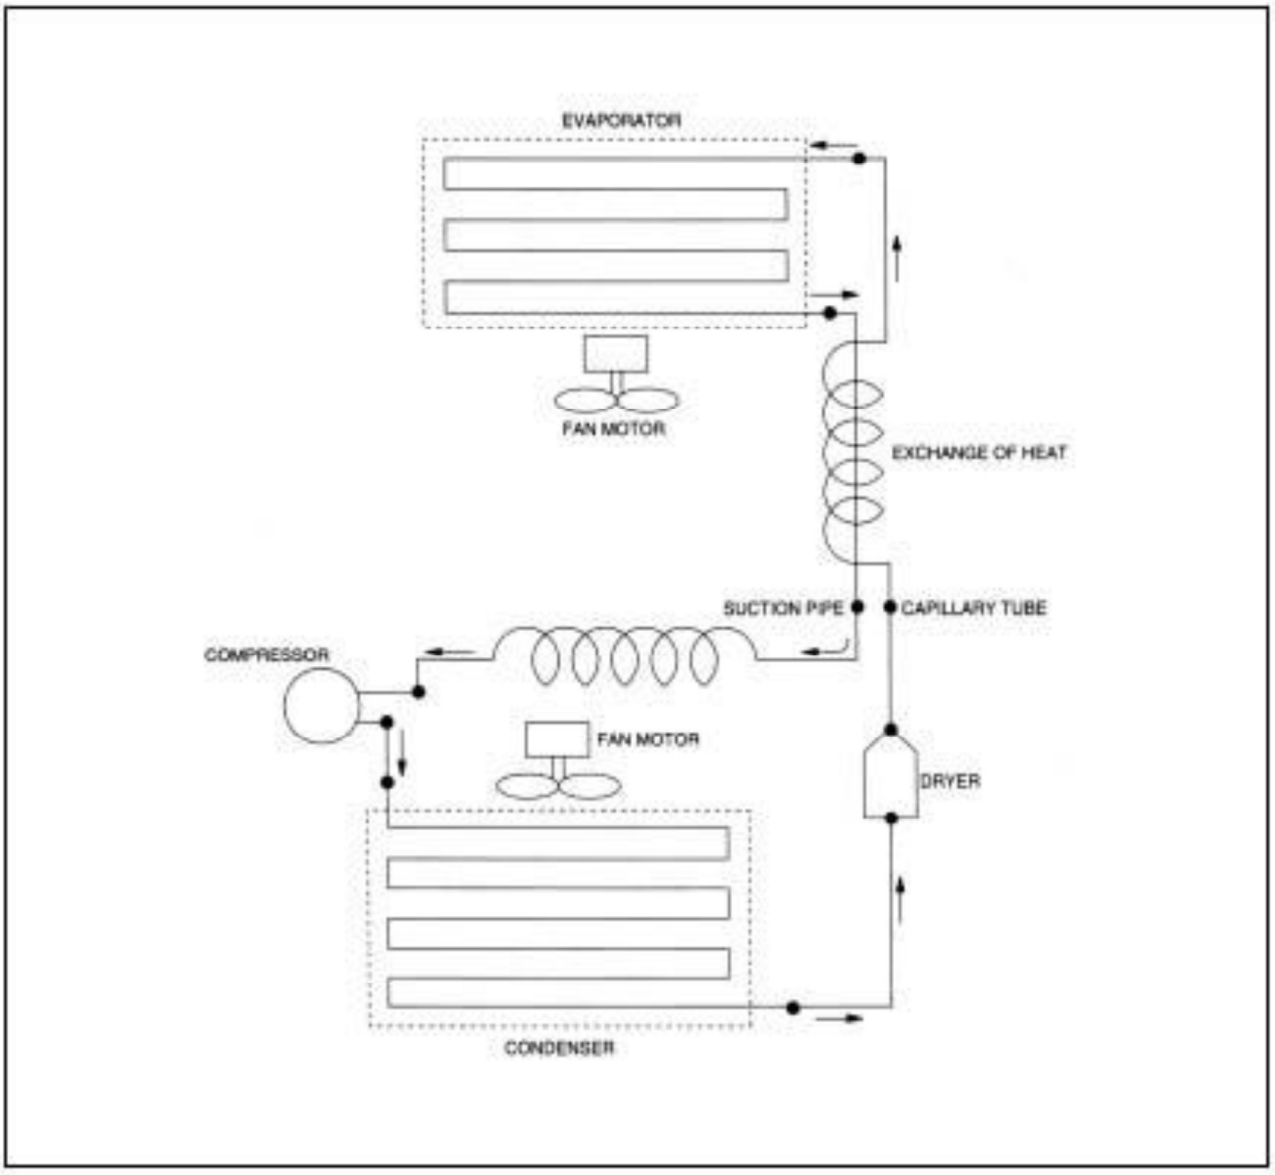


• Refrigerant for all models : R-134A (CFC Free)


• Model : FRS-401RNP, 300RP

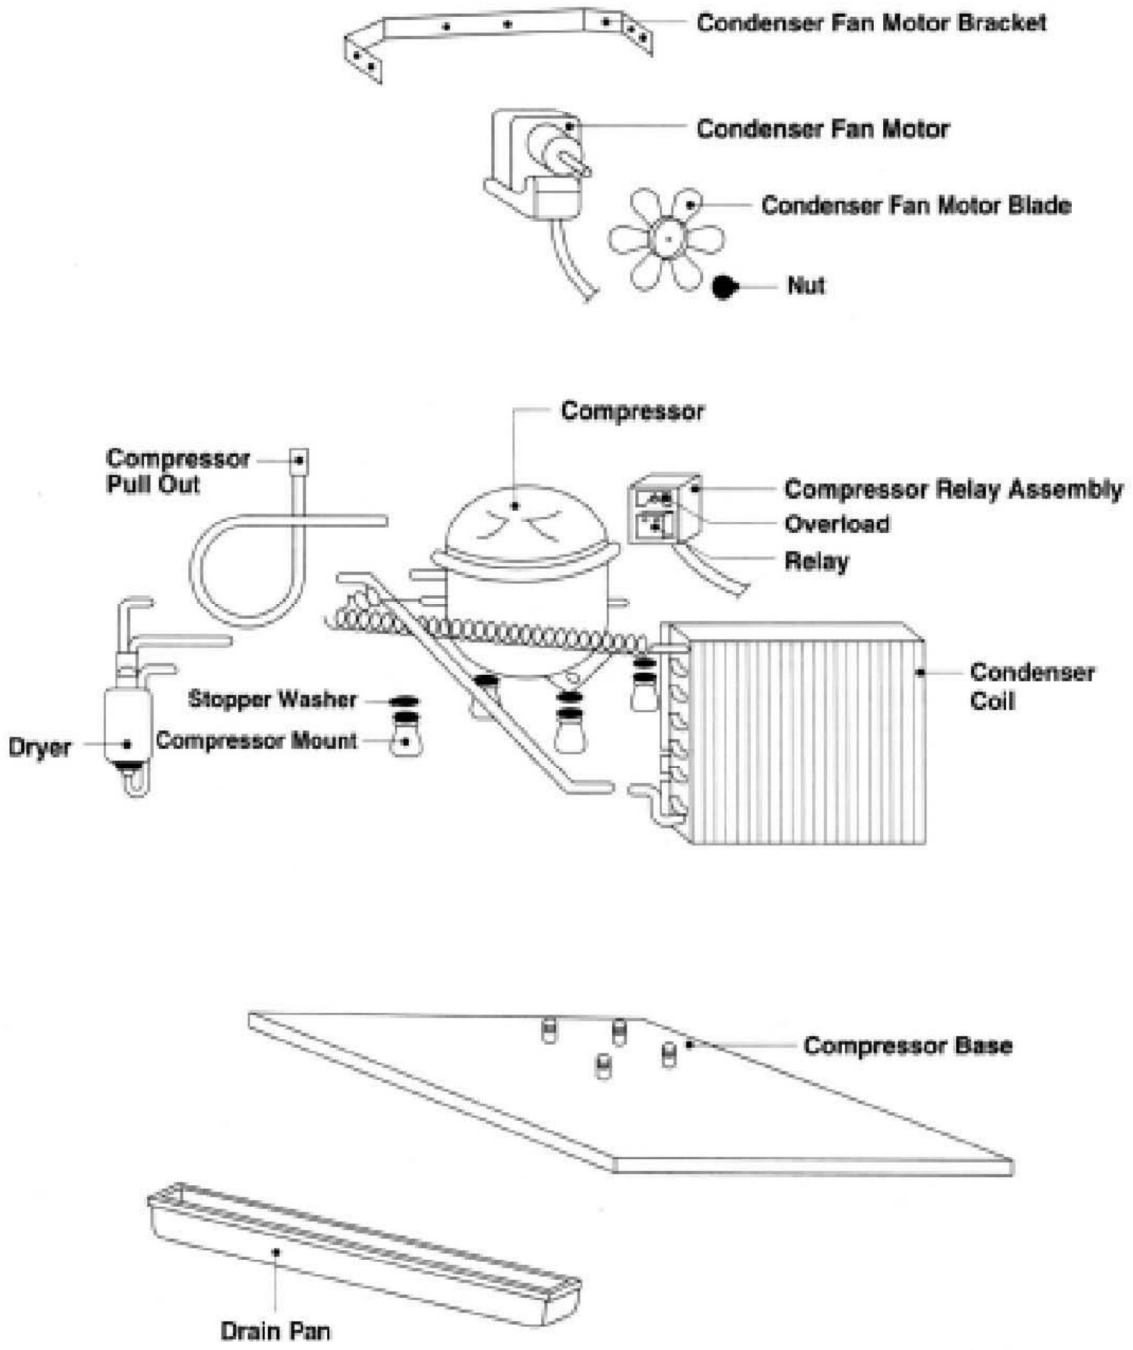


• Model : FRS-600RP, 401RNP, 300RP

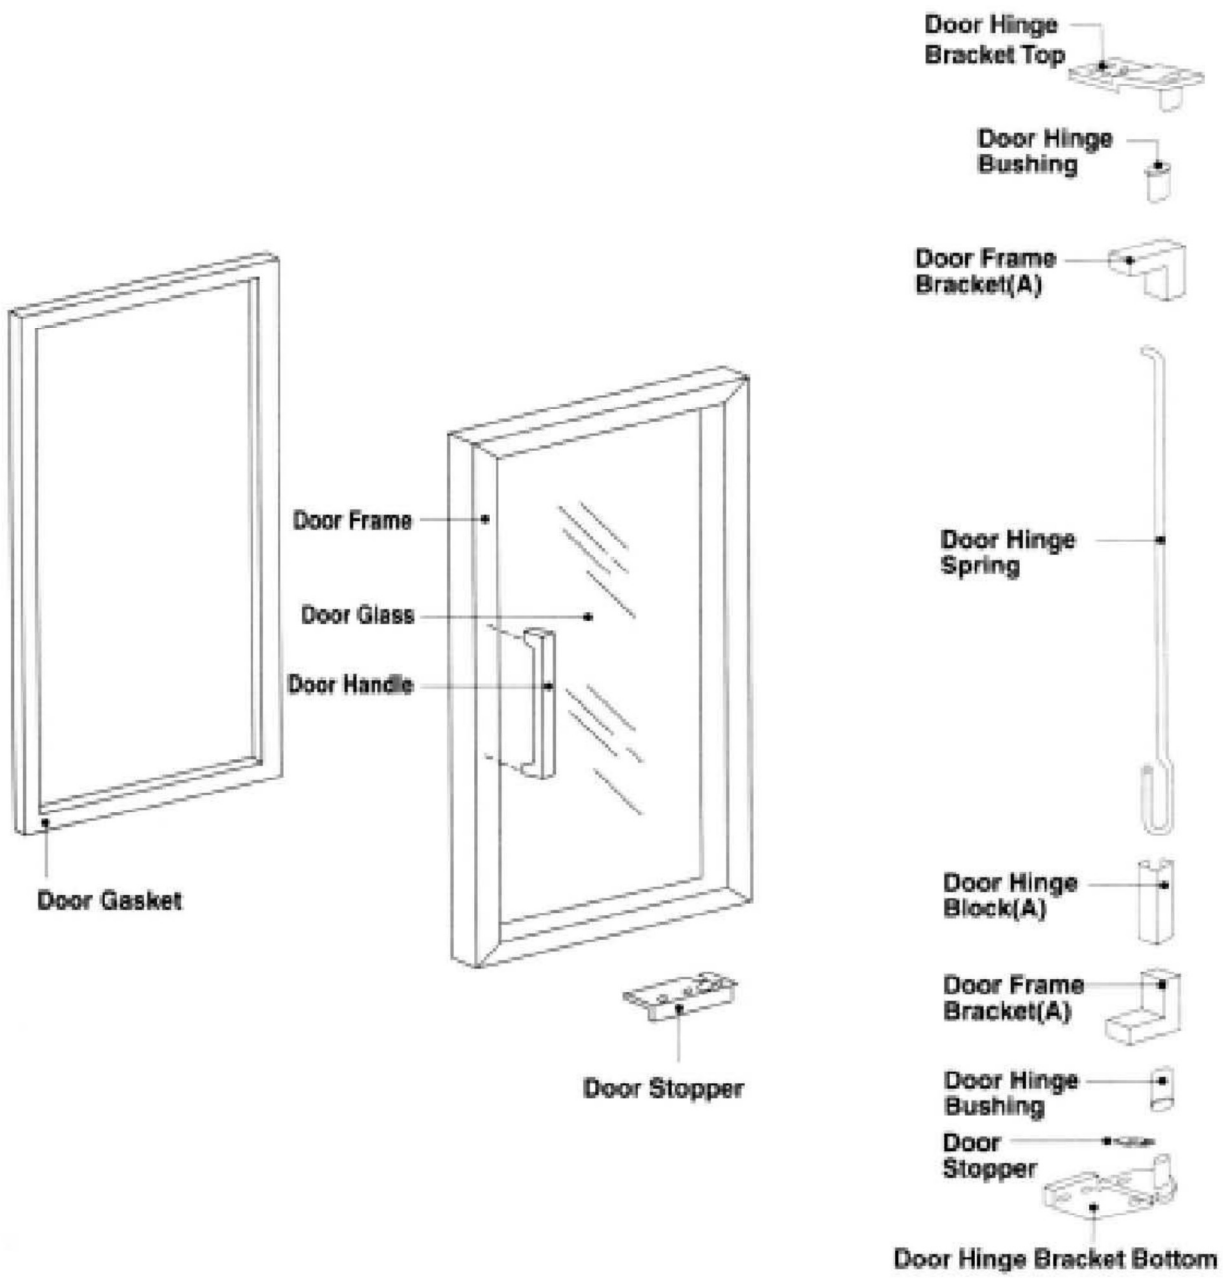


• Model : FRS-401RNP

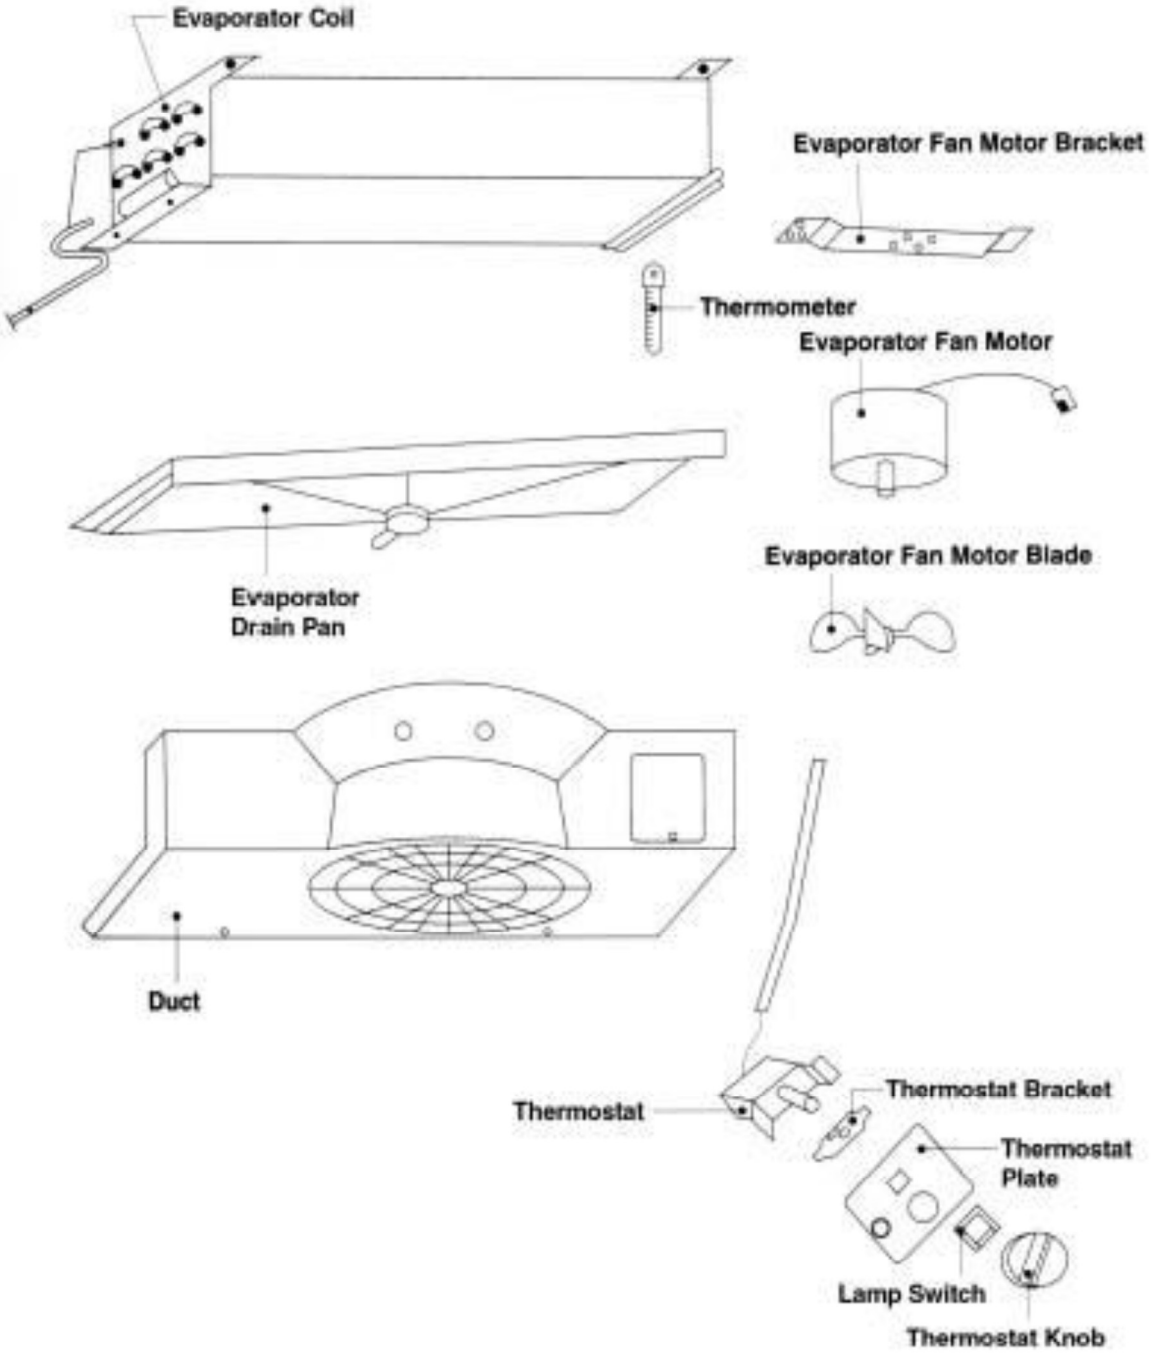

• Model : FRS-401RNP

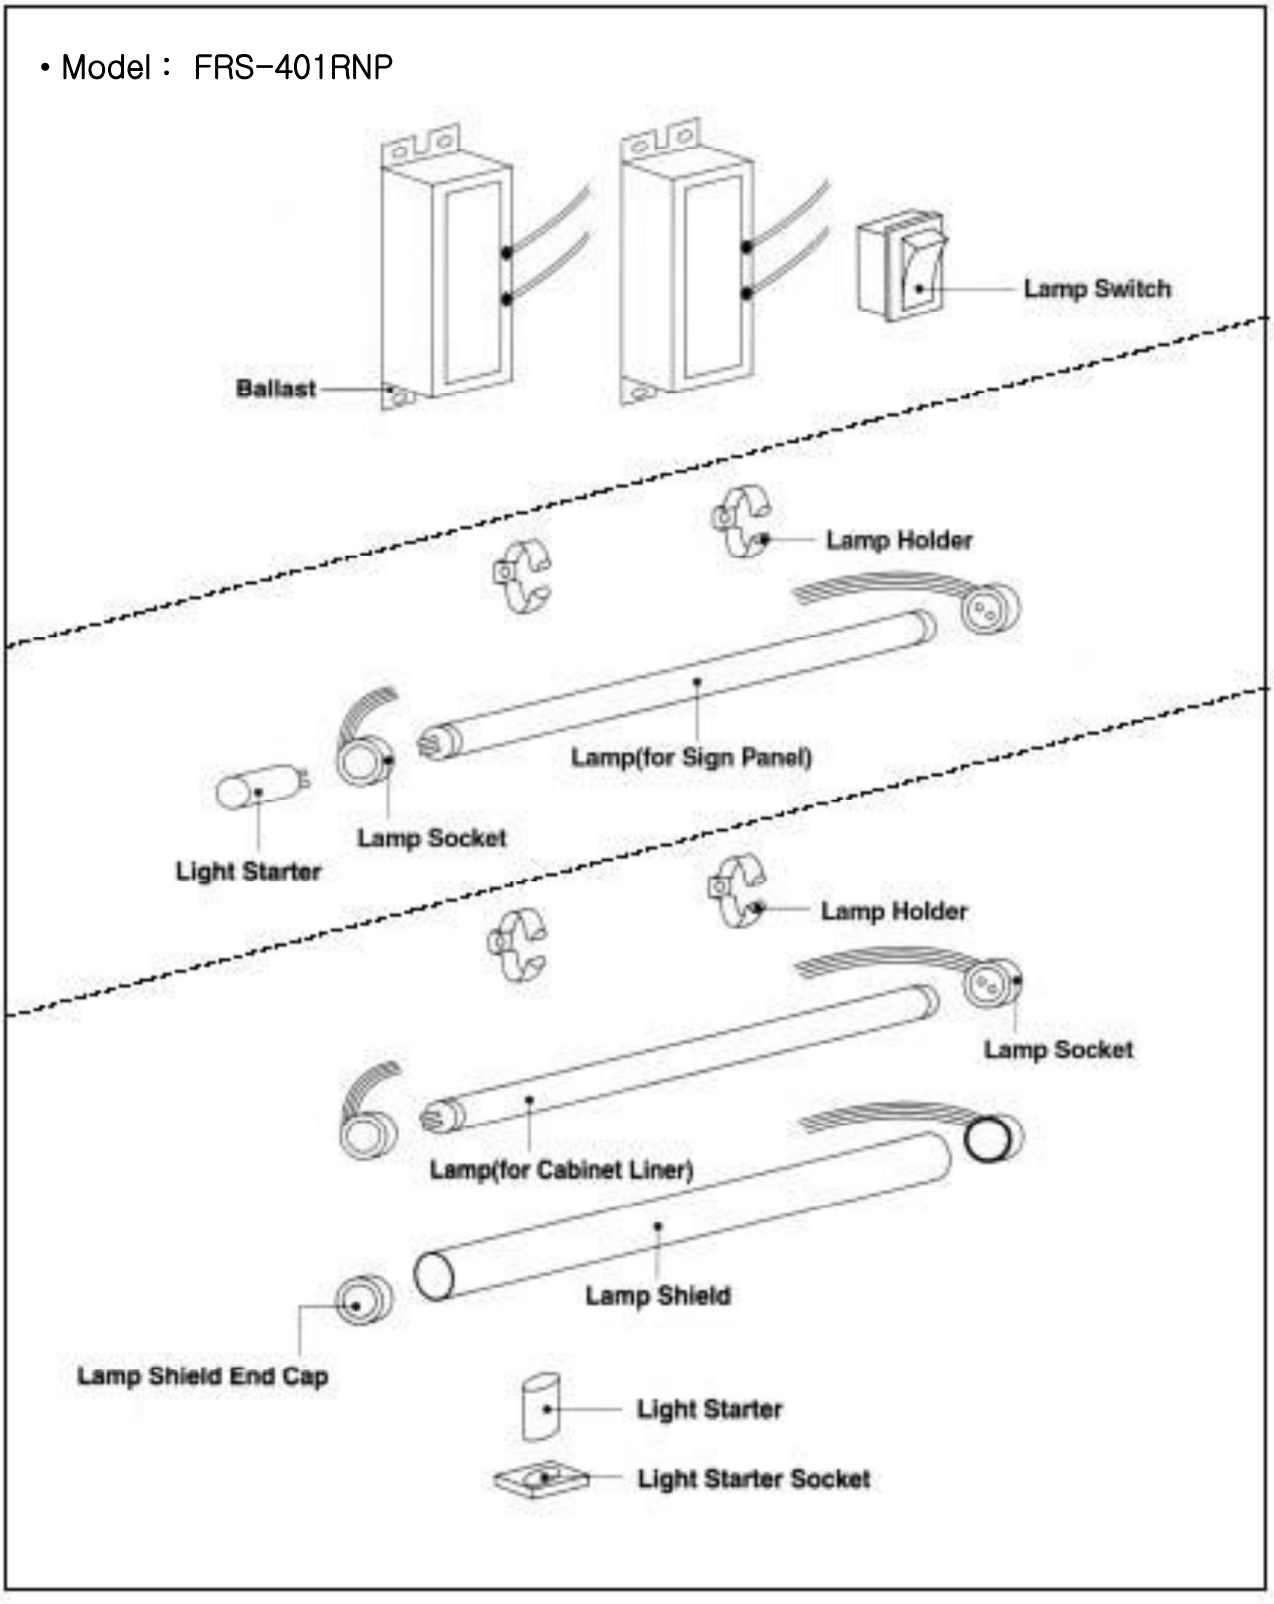

• Model : FRS-600RP, 401RNP

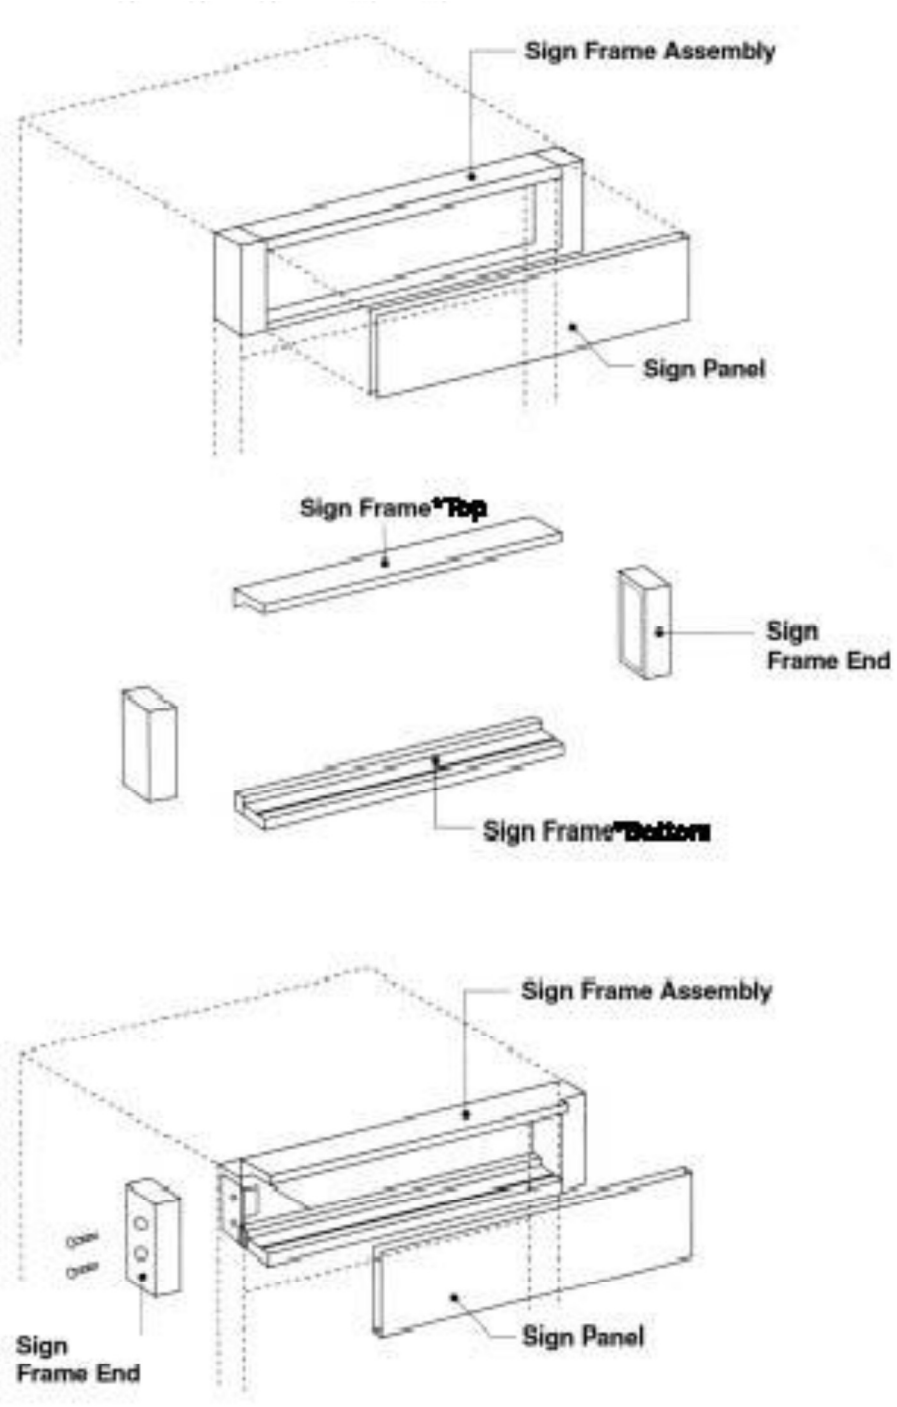


7. GRILL PARTS

• Model : FRS-1300R, 1000R



• Model : FRS-600RP

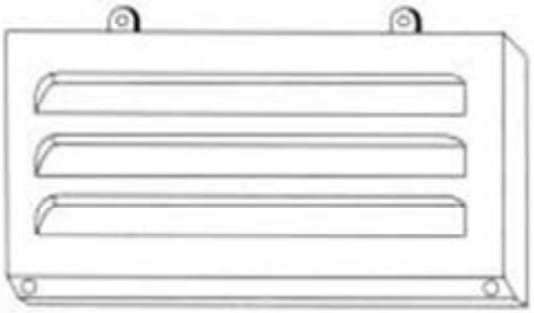

• Model : FRS-401RNP, 300RP



5. PARTS LIST

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Castor & Leveling Legs								
Leveling Leg	30260K0100	1/2"	5	5	4			
Leveling Leg	3012101300	BLACK				2	2	
Leveling Leg	4006D32533	BLACK						2
Compressor								
Compressor	30200A4710	AKA4476YXC (TECUMSEH)	1	1				
Compressor	3952127G10	HKL27YE-5 (DAEWOO)			1	1	1	
Compressor	3953111E10	HSL11Y-5 (DAEWOO)						1
Compressor Relay	3817906900				1	1	1	1
Compressor Relay Assembly	30227H0911				1			
Compressor Relay Assembly	30227F0911					1	1	
Compressor Relay Assembly	30200A6411							1
Compressor Overload	3817908600				1			
Compressor Overload	3817910600					1	1	
Compressor Overload	3817906500							1
Compressor Starting Capacitor	401RD35050				1	1	1	
Compressor Running Capacitor	400E115130				1	1	1	
Condenser	30200A2203	Refer Parts Diagram	1	1				
Condenser	30200H1011	Refer Parts Diagram			1			
Condenser	30200F3802	Refer Parts Diagram				1		
Condenser	30200F0806	Refer Parts Diagram					1	
Condenser	30200A7206	Refer Parts Diagram						1
Condenser Fan Motor	3963220410		1	1				
Condenser Fan Motor	3963320410				1			
Condenser Fan Motor	3963326710					1	1	
Condenser Fan Motor Blade	30218A0300		1	1				
Condenser Fan Motor Blade	30218B0200				1			
Condenser Fan Motor Blade	30218F0110					1	1	

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Dryer	30268Q0300		1	1				
Dryer	30268H0100				1			
Dryer	30268F0403					1	1	
Dryer	3016801300							1
Power Cord	30213A1002		1	1	1	1	1	1
POwer Cord Clamp	30212A0600		1	1	1	1	1	1
Drain Wicking Pad	30245A0700		1	1				
Drain Pan	32111J0100		1	1				
Drain Pan	3021100001				1	1	1	
Drain Wicking Bar	30230J0700		1	1				
Doors								
Brush Seal	30277A1301	Bottom	1	1				
Door Hinge Cap	4009G51041	PE Plastic White						1
Door Assembly *R	30217D0105	Glass, Slide, Right	1					
Door Assembly *L	30217D0206	Glass, Slide, Left	1					
Door Assembly *R	30217A0311	Glass, Slide, Right		1				
Door Assembly *L	30217A0301	Glass, Slide, Left		1				
Door Assembly	30217H0101	Glass, Swing			1			
Door Assembly	30217F0501	Glass, Swing				1		
Door Assembly	30217G0301	Glass, Swing					1	
Door Assembly	30200A8020	Glass, Swing						1
Door Gasket	30222A2001	Wiper Style	2	2				
Door Gasket	30223H0402	Magnetic			1			
Door Gasket	30223F0601	Magnetic				1		
Door Gasket	30223G0602	Magnetic					1	
Door Gasket	30223A9006	Magnetic						1

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Door Glass	30255D0110	T24	2					
Door Glass	30255A0110	T24		2				
Door Glass	30255H1100	T24			1			
Door Glass	30255F1300	T24				1		
Door Glass	30255G1100	T18					1	
Door Glass	30255A9011	T18						1
Door Handle	30226A0110	Slide ABS Plastic Black	2	2				
Door Handle	30226G0101	Swing Aluminum			1	1	1	
Door Handle	3022600300	Swing Aluminum						1
Door Hinge Bracket Top	30229H3000	Top			1	1	1	
Door Hinge Bracket Top	4004D51301	Top						1
Door Hinge Bracket Bottom	30229H2100	Bottom			1	1	1	
Door Hinge Bracket Bottom	30200B8703	Bottom						1
Door Hinge Bushing	3020700000	Nylon Top			1	1	1	
Door Hinge Bushing	30207H1000	Nylon Bottom			1	1	1	
Door Hinge Bushing	4005B45213	Nylon Top, Bottom						2
Door Hinge Spring	30251H0101	Torsion Style			1			
Door Hinge Spring	30251G0100	Torsion Style				1	1	
Door Channel Top	30287D0103	PVC-H, Top	1					
Door Channel Top	30287A0306	PVC-H, Top		1				
Door Channel Bottom	30287D0203	PVC-H, Bottom	1					
Door Channel Bottom	30287A0406	PVC-H, Bottom		1				
Door Channel Left	30287A0603	PVC-H, Left	1	1				
Door Channel Right	30287A0703	PVC-H, Right	1	1				

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Door Rail	30287D0304	Stainless	1					
Door Rail	30287A0504	Stainless		1				
Door Roller	30206A1410		1	1				
Door Roller	30206D0310		1	1				
Door Sealer Top	30277D0242	Top	1					
Door Sealer Top	30277A0232	Top		1				
Door Stopper	30252H1000	Stainless T3.0 Bottom			1			
Door Stopper	30252F0100	Stainless T2.0 Bottom				1	1	
Door Stopper Cushion	30252A0200	Rubber Blocks	1	1				
EVAPORATOR								
Control Box	30205A9030	HIPS						1
Evaporator Drain Pan	30211A0101	HIPS	1	1				
Evaporator Drain Pan	30211F0201	HIPS				1		
Evaporator Drain Pan	4017J54111	HIPS						1
Evaporator Coil	30270A1105	FIN-TUBE(AL+Cu)	1	1				
Evaporator Coil	30270H0101	FIN-TUBE(AL)			1			
Evaporator Coil	30270F0305	FIN-TUBE(AL+Cu)				1		
Evaporator Coil	30270G0102	FIN-TUBE(AL)					1	
Evaporator Coil	30200A8105	ROOL-BOND(AL)						1

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Evaporator Fan Motor	3963220502		2	2				
Evaporator Fan Motor	3963328610				2			
Evaporator Fan Motor	3963328110					1		
Evaporator Fan Motor	3963328620						1	
Evaporator Fan Motor Blade	30218F0200					1		
Evaporator Fan Motor Blade	4034L38038		2	2				
Evaporator Fan Motor Blade	3011802300				2		1	
Evaporator Fixture	30220A9000	PA-6						1
Evaporator Fan Motor Guard	30214H0103	ABS			1			
Evaporator Fan Motor Guard	30214K0100	HIPS						
Lamp Switch	30281Q0101		1	1	1	1	1	1
Thermometer	30283G0410	MILJOKO	1	1	1	1	1	1
Thermostat	30283K0100	K55-Q5605(RANCO)	1					
Thermostat	30283D0700	K55-Q5602(RANCO)		1				
Thermostat	30283F0800	GNA-240L-4(SHIN-HAN)			1	1	1	
Thermostat	3018301001	PFN-110U-02D, GNF-110U-02D						1
Thermostat Bracket	30220A1410	SPG, Refer Parts Diagram	1	1	1		1	
Thermostat Bracket	30206F1000	SPG, Refer Parts Diagram				1		
Thermostat Knob	30234A1000	HIPS	1	1	1	1	1	
Thermostat Knob	40006D70026	HIPS						1
Thermostat Plate	30206A0200	EGI Painting	1	1				
Thermostat Plate	30206H0107	EGI Painting			1			
Thermostat Plate	30242F0802	HIPS				1		


Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Grills								
Bottom Grill Assembly	30200D5500	Ass'y Front Painted	1					
Bottom Grill Assembly	30200A5500	Ass'y Front Painted		1				
Bottom Grill Assembly	30224H0103	Front ABS BLACK			1			
Bottom Grill Assembly	30224F0104	Front ABS BLACK				1	1	
Lightings (Refer to the main components for Ballast)								
Ballast	-	B232I120RH-A	1	1	1			
Ballast	30200A0141	DD2B				2	1	1
Lamp	30236D0511	TLD32W/865(32WATT)	2	1				
Lamp	30236A0510	F25T8/SP41/ECO(25WATT)		1				
Lamp	30236H0510	F17T8/SP41/ECO(17WATT)			2			
Lamp	30236F0510	F13T8/CW(13WATT)				2	1	1
Lamp Shield	30222A0900	PC, t0.5	1	1				
Lamp Shield	30211H0000	PC, t0.5			1			
Lamp Shield	30211F0000	PC, t0.5				1		
Lamp Shield	30214F0701	ACRYL					1	
Lamp Shield	30214A0010	ACRYL						1
Lamp Holder	3183005000	SK-50D28	2	2	2	2		
Lighter Starter	30236A0700	FS-2						1
Lamp Switch	30281Q0101		1	1	1	1	1	1
Shelves								
Shelf	30278D0212	Wire, White	6					
Shelf	30278A0210	Wire, White		6				
Shelf	30278H0103	Wire, White			4			

Part name	Part Number	Description	Model					
			1300	1000	600	401	300	140
Shelf(A)	30278F0112	Wire, White TOP				3		
Shelf(B)	30278F0211	Wire, White BOTTOM				1		
Shelf(A)	30278G0111	Wire, White TOP					3	
Shelf(B)	30278G0401	Wire, White BOTTOM					1	
Shelf(T)	30278A9401	Wire, White TOP						1
Shelf(M)	30278A9150	Wire, White MIDDLE						1
Shelf(B)	30278A9000	Wire, White BOTTOM						1
Shelf Bracket	30220A0200	Front Center White	1	1				
Shelf Clip((E)	30200A0700	PP TOP	24	24				
Shelf Clip((D)	30220A0600	Nylon, Bottom	24	24				
Shelf Standard	302000703	Sides Cabinet White	4	4				
Shelf Support	30253A0500	Back Center white	1	1				
Sign Frame								
Sign Frame *T*B	30222D0502	PVC-H	1					
Sign Frame *T*B	30222A0801	PVC-H		1				
Sign Frame End	30222A0901	PVC-H	1	1				
Sign Frame *T*B	30222H0313	PVC-H			1			
Sign Frame *T*B	30222F1912	PVC-H				1		
Sign Frame End	30222F2103	ABA Dark Gray			1	1		
Sign Frame Bracket	30220A0900	Aluminum	1	1				
Sign Panel	30214D2001	PC, t1.5	1					
Sign Panel	30214A121H	PC, t1.5		1				
Sign Panel	30214H011P	PC, t3.0			1			
Sign Panel	30242F0101	PC, t3.0				1		

6. REPLACEMENT OF MAIN COMPONENTS

1-1). LAMP FOR ADVERTISING PANEL

(FRS-1300R, 1000R)

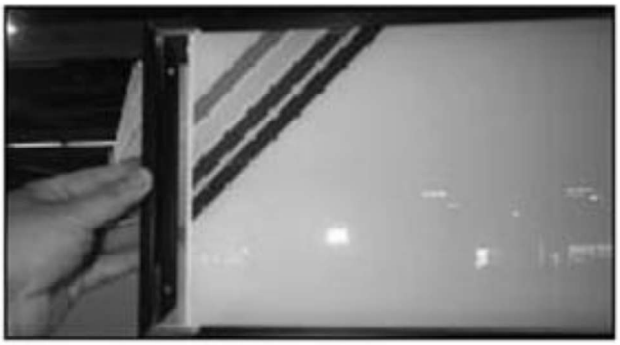


1. Separate the Sign Frame End.



2. Separate the Sign Panel.



3. Separate the Lamp Socket.

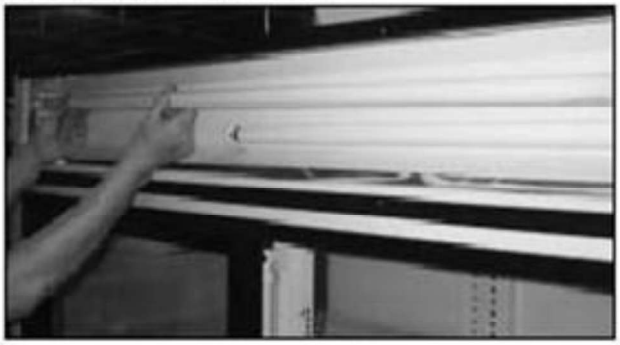

4. Separate the Lamp out of the Lamp Holder and replace it.



5. Take out the Clamp securing wires.



6. Separate the Ballast Connectors.




7. Unscrew two screws securing the Ballast and replace it.

1-2). LAMP FOR CABINET LINER(FRS-1300R, 1000R)



1. Take out the Doors and separate the Lamp from the Lamp Holder.

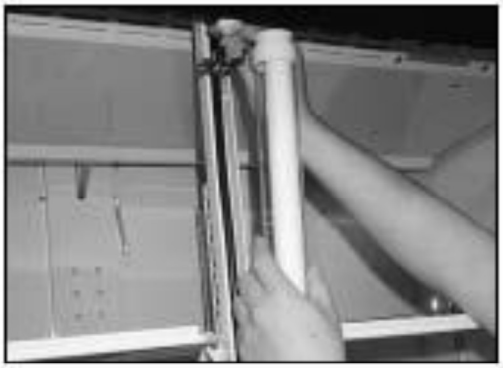

2. Separate the Lamp Socket.