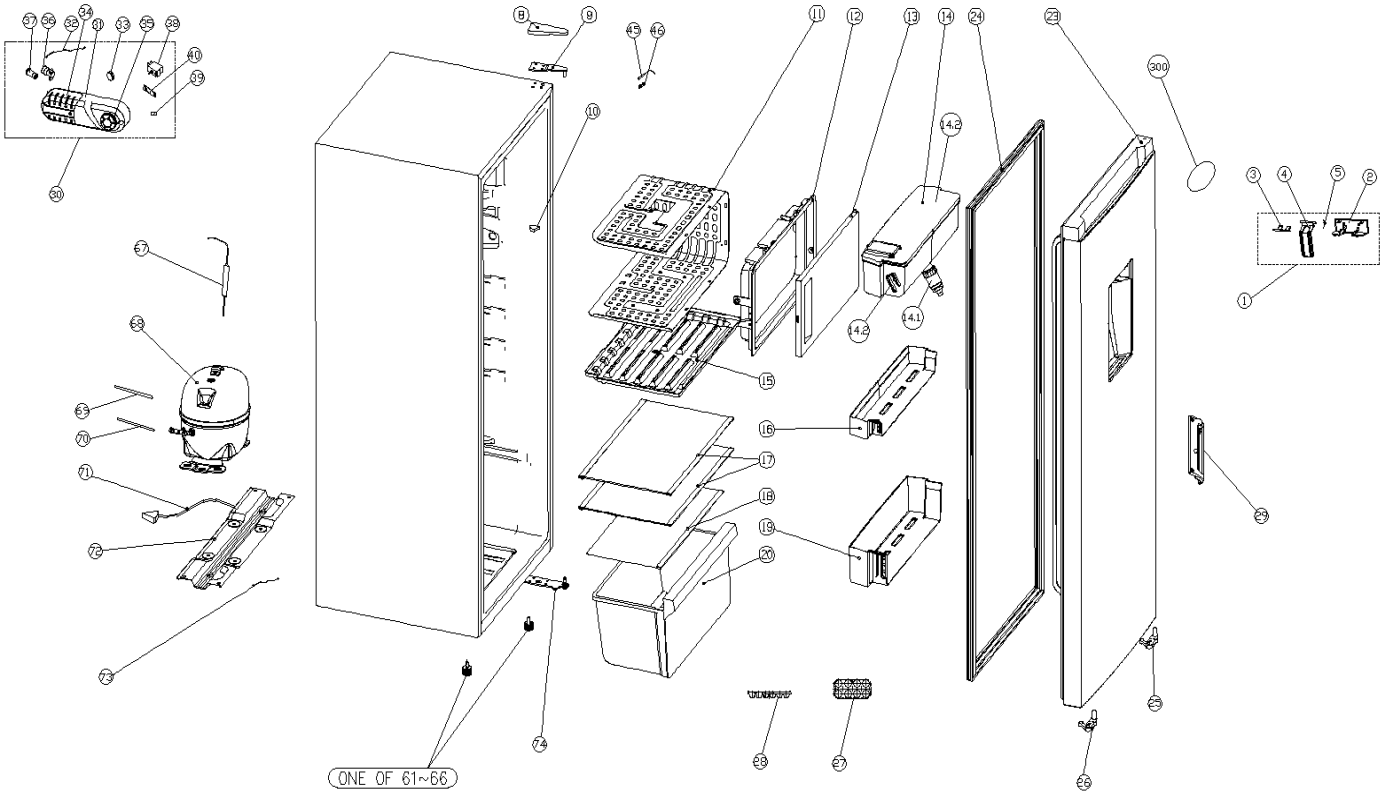
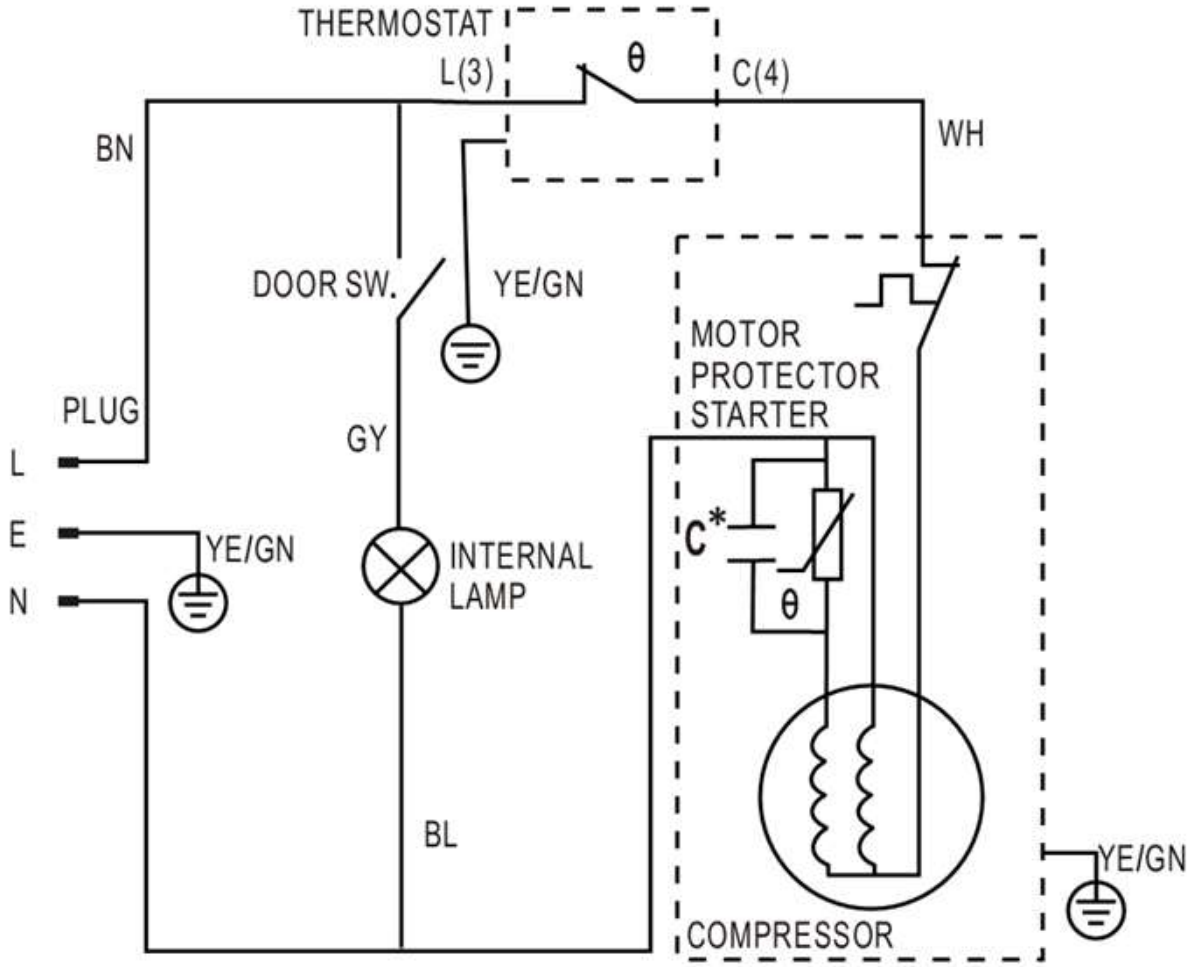


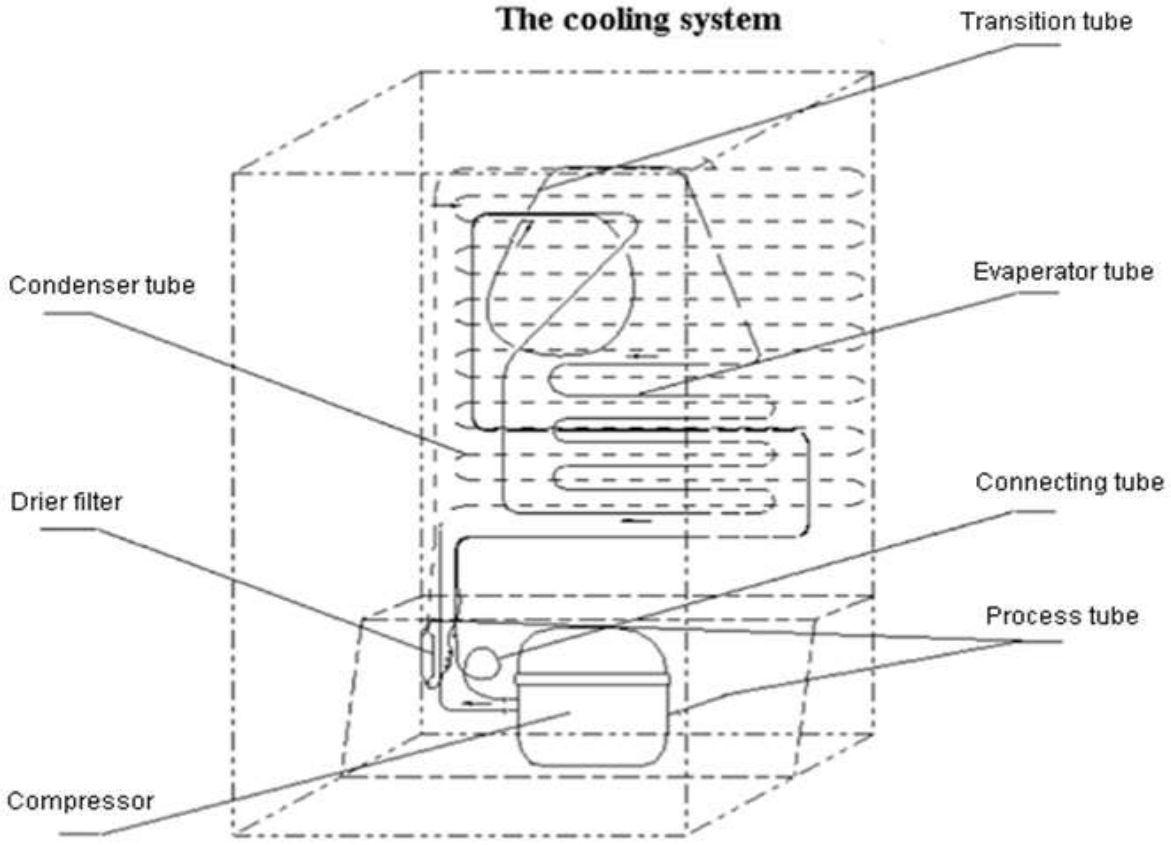

| No. | Homa Code | Description of Spare Part | Quantity | Unit Price | Chinese Description | Item Description |
|---|---|---|---|---|---|---|
| 1 | 2107170038 | Decorative board assembly | 1 | 3.14 | 装饰板部件 | 装饰板部件 DD2-390/CY.03.05-00 装饰板葡萄黑B01 拨片无色透明Z01 S00通用丝印 加宽拨片 |
| 2 | 2208100092 | Decorative board | 1 | 1.38 | 装饰板 | 装饰板 FF2-660Y1/CY.03-05-S00-01 ABS 葡萄黑B01 S00丝印 |
| 3 | 2208510014 | Small wraped pole | 1 | 0.19 | 小翘杆 | 小翘杆 FF2-660Y1/CY.03-07 POM 葡萄黑B01 |
| 4 | 2208100223 | Dial slice | 1 | 1.38 | 拨片A | 拨片A FF2-660Y1/CY.03-03A 透明ABS 无色透明Z01 |
| 5 | 2305300003 | Dial slice Spring | 1 | 0.20 | 拨片弹簧 | 拨片弹簧 FF2-660Y1/CY.03-06 不锈钢 原色 |
| 8 | 20122080163 | Door Hinge Cover | 1 | 0.27 | 门铰盖 | 门铰盖 DF1-11.2/C5.00-03 ABS 深灰C28 |
| 9 | 3031400148 | Upper Door Hinge | 1 | 1.78 | 上门铰 | 上门铰 G00.06-00A Q235 镀锌 |
| 10 | 2501100002 | Door switch | 1 | 2.00 | 门开关 | 门开关 W12-03 新乳白A13 尼龙PA |
| 11 | 2400300195 | Expansion Evaporator | 1 | 19.80 | 吹胀蒸发器 | 吹胀蒸发器 DF1-190.00.01-03A 新乳白A13 |
| 12 | 2208300179 | Ice Making Room Door Frame | 1 | 0.37 | 制冰室门框 | 制冰室门框 DF1-190.00.01-02 HIPS 新乳白A13 |
| 13 | 2208300180 | Ice Making Room Door Cover | 1 | 0.62 | 制冰室门盖 | 制冰室门盖 DF1-190.00.01-01 PS 无色透明Z01 |
| 14 | 2107170129 | Water Box Components | 1 | 7.24 | 水盒部件 | 水盒部件 DF1-225-FHDY0.03.02-00 水盒浅透白 |
| 14.1 | 2107170062 | Water mouth assembly | 1 | 2.97 | 饮水机水嘴部件 | 饮水机水嘴部件 FF2-660Y1/CY.03.16-00 新乳白 A13 |
| 14.2 | 2208101555 | Big cover of water box | 1 | 0.92 | 水盒大盖 | 水盒大盖 DF1-225-FHDY0.03.02-02 LDPE 新乳白A13 |
| 14.3 | 2208101556 | Water Box | 1 | 1.40 | 水盒 | 水盒 DF1-225-FHDY0.03.02-01 PP 浅透白 |
| 15 | 2207700249 | Water Tray | 1 | 3.12 | 接水盘 | 接水盘 DF1-190.00-07 HIPS 新乳白A13 吸塑 |
| 16 | 2207502398 | Upper balcony | 1 | 1.73 | 门上搁架 | 门上搁架 DD2-220.00.07-00 PS 无色透明Z01 UP3.0 无图案 |
| 17 | 2106100703 | Fridge shelf assembly | 2 | 4.09 | 冷藏室层架部件 | 冷藏室层架部件 DF1-190.00.02-00 通用新乳白前衬条 无图案 后衬条 |
| 18 | 20120030048 | Cover of crisper drawer | 1 | 2.75 | 果菜箱盖部件 | 果菜箱盖部件 DF2-23.00.02-00 通用新乳白前衬条 无图案 |
| 19 | 2207502399 | Lower balcony | 1 | 2.85 | 门下搁架 | 门下搁架 DD2-220.00.08-00 PS 无色透明Z01 UP3.0 无图案 |
| 20 | 2207401882 | Crisper drawer | 1 | 3.91 | 果菜箱 | 果菜箱 DF1-190.00-05 PS 无色透明Z01 无图案 |
| 23 | 2100141187 | Door | 1 | 38.13 | 门 | 门 DF1-225-FHDY0.03-00 仿拉丝银D08竖纹 C03 B01+C28 无图案 无左助吸器 |
| 24 | 2200200412 | Door Gasket | 1 | 5.46 | 门封 | 门封 G490-Q-04 浅灰C03 446.2×1190.8 DF1-225.03 |
| 25 | 2208510036 | Lower door right aid closer | 1 | 0.20 | 下门助吸器 | 下门助吸器 G06-03 POM 原色 |
| 30 | 2500800981 | Controller | 1 | 9.90 | 控制器 | 控制器 G02B-00A 方形侧灯 10W灯泡 W23-19 WPF25C-EX 化霜按钮玫瑰红 无图案 |
| 31 | 20122010014 | Thermostat cover | 1 | 1.44 | 控制器壳 | 控制器壳 G02B-01 阻燃HIPS 新乳白A13 无图案 |
| 32 | 3050200282 | Thermostat Connecting Wire | 1 | 1.97 | 温控器连接线 | 温控器连接线 W20-63 (DF1-200-CW0J0) |
| 33 | 20122010139 | Defrosting Button | 1 | 0.10 | 化霜按钮 | 化霜按钮 G02B-04 ABS 玫瑰红G10 无图案 |
| 34 | 20122010053 | Lamp cover | 1 | 0.59 | 灯罩 | 灯罩 G02B-02 PS 无色透明Z01 |
| 35 | 2207100022 | Thermostat knob | 1 | 0.17 | 调温旋钮 | 调温旋钮 G02B-03 HIPS 新乳白A13 无图案 |
| 36 | 3050600001 | Light holder | 1 | 2.26 | 防爆灯座 | 防爆灯座 W23-19 AC220V 通用 |
| 37 | 3050500008 | Incandescent bulb | 1 | 1.50 | 螺口灯泡 | 螺口灯泡 W27-70 AC220V 10W 通用 E14 |
| 38 | 2400200006 | Thermostat | 1 | 5.62 | 温控器 | 温控器 WPF25C-EX |
| 45 | 20122990189 | Jacket of temperature sensor capillary | 1 | 0.29 | 感温头护套 | 感温头护套 G00-17 LDPE 半透明 |
| 46 | 20122990192 | Cover of temperature sensor capillary | 1 | 0.13 | 感温头护罩 | 感温头护罩 G00-16 HIPS 新乳白A13 |
| 63 | 20122990781 | High front foot | 1 | 0.35 | 高前脚 | 高前脚 G00.01E-00 PP 深灰C28 |
| 66 | 2208101032 | Short nut type adjusting foot | 1 | 0.35 | 矮螺母式调节脚 | 矮螺母式调节脚 FN3-335.00.01-00 PP 深灰C28 |
| 67 | 2400500027 | Drier filter | 1 | 3.51 | 干燥过滤器 | 干燥过滤器 W15-06B R600a 洛克环专用 |
| 68 | 2400100278 | Compressor | 1 | 58.39 | 压缩机 | 压缩机 MK1070Y 有支架 定频 |
| 69 | 3040600005 | Process tube | 1 | 1.18 | 封尾管 | 封尾管 G00-10 ϕ6×0.65 T2M |
| 70 | 20114070006 | Connecting tube | 1 | 0.17 | 回气连接管 | 回气连接管 G00-07A ϕ6×0.40 T2M |
| 71 | 3050100127 | Power supply cord | 1 | 3.28 | 意大利三圆插电源线 | 意大利三圆插电源线 G00.04K-11Z 灰色 外露1.0米 |
| 72 | 3039900125 | Compressor bracket | 1 | 4.18 | 压缩机托板 | 压缩机托板 G00.03-01/490D 镀锌板0.8/锌100-CY |
| 73 | 3050200094 | Earthing wire of compressor | 1 | 0.64 | 压缩机接地线 | 压缩机接地线 W21-01 欧洲L=170 H5/H5 (BE1-260-B00A1) |
| 74 | 2301400096 | Lower Right Door Hinge Assembly | 1 | 2.97 | 右下门铰部件 | 右下门铰部件 G00.10-00B Q235 镀锌 |
| 300 | 2700501900 | Trademark | 1 | 2.34 | 金属铭牌 | 金属铭牌 Q02-2360 LIBERO |
| 301 | 2700128241 | Carton | 1 | 6.24 | 纸箱 | 纸箱 DF1-225.10.01-00-LIB-02 C01 |

# The electrical diagram




C*:The capacitor is optional according to different compressor model

# The cooling system



# Trouble shooting guide

| No | Problem | Possible Cause | What To Do |
|---|---|---|---|
| 1 | Fan no work,Freezer room temperature no enough cold and refrigerator room temperature Ok and compressor running, but no air in freezer air outlet. | the the fan motor is failure and replace it with a new one | open the cover board of air duct in freezer room, check the fan if it no running, then measure the |
| | | the failure of the inner wire to fan connector | measure the voltage between the CN2 red and black wire of PCB, if the voltage is 12V, then |
| | | the PCB failure and change a new PCB | measure the voltage between the CN2 red and black wire of PCB,if the voltage is zero, then the |
| 2 | No defrost.Freezer room temperature no enough cold and refrigerator room OK and open the cover board of are duct and find ice formation on evaporator | the drainpipe contain impurity | disconnect power, and let the ice defrost and inspect the water if it is flow through the |
| | | the sensor failure or PCB failure | check the fuse if it is melt or not. If the fuse is melt, it mean that the sensor failure or PCB |
| | | the defrost heater is break or PCB failure | inspecting the CN4 defrost heater two connector.If the heater is OK then it must be PCB |
| 3 | the temperature of freezer and refrigerator are no enough cold and the temperature no change by adjusting the potentiometer (thermostat) | the potentiometer failure | inspect the potentiometer (thermostat), and measure the resistance value by adjusting the |
| | | the sensor failure | When the sensor failure and the compressor will be running like this—if the potentiometer (thermostat) setting below 3 position, the compressor will be running 20 minutes and then |
| 4 | LED no light | the led failure | Open the refrigerator door and measure the voltage of CN3 in PCB, if the voltage is zero then it mean the connecting wire failure and if the voltage is 12V, it mean the led failure |
| | | the switch circuit is failure | If the CN3 voltage no 12 V and then check the CN4 voltage, if the voltage CN4 no change by close and pen door, it mean the switch circuit is failure. |
| 5 | Compressor no starting | no problem | the time between two starting is shorter than 12min; or refrigerator room temperature is lower than the setting temperature, in this case, it is no problem. You need waiting more time. |
| | | PCB failure | PCB had automatic self-examination. open the cover of PCB at the back of product, plug in power and push the SW101 switch 3 seconds and the PCB begin automatic self-examination |
| | | ompressor wire not right or compressor damage | measure the voltage of compressor input connector, if it is OK then check the starting and relay of compressor, also check the wire if it is OK |
| 6 | product no any work | the PCB failure | check the power by multimeter, if the input voltage is 220V-240, but the led, compressor, fan, defrost heater are all no work, it mean the PCB failure and need change a new PCB |