




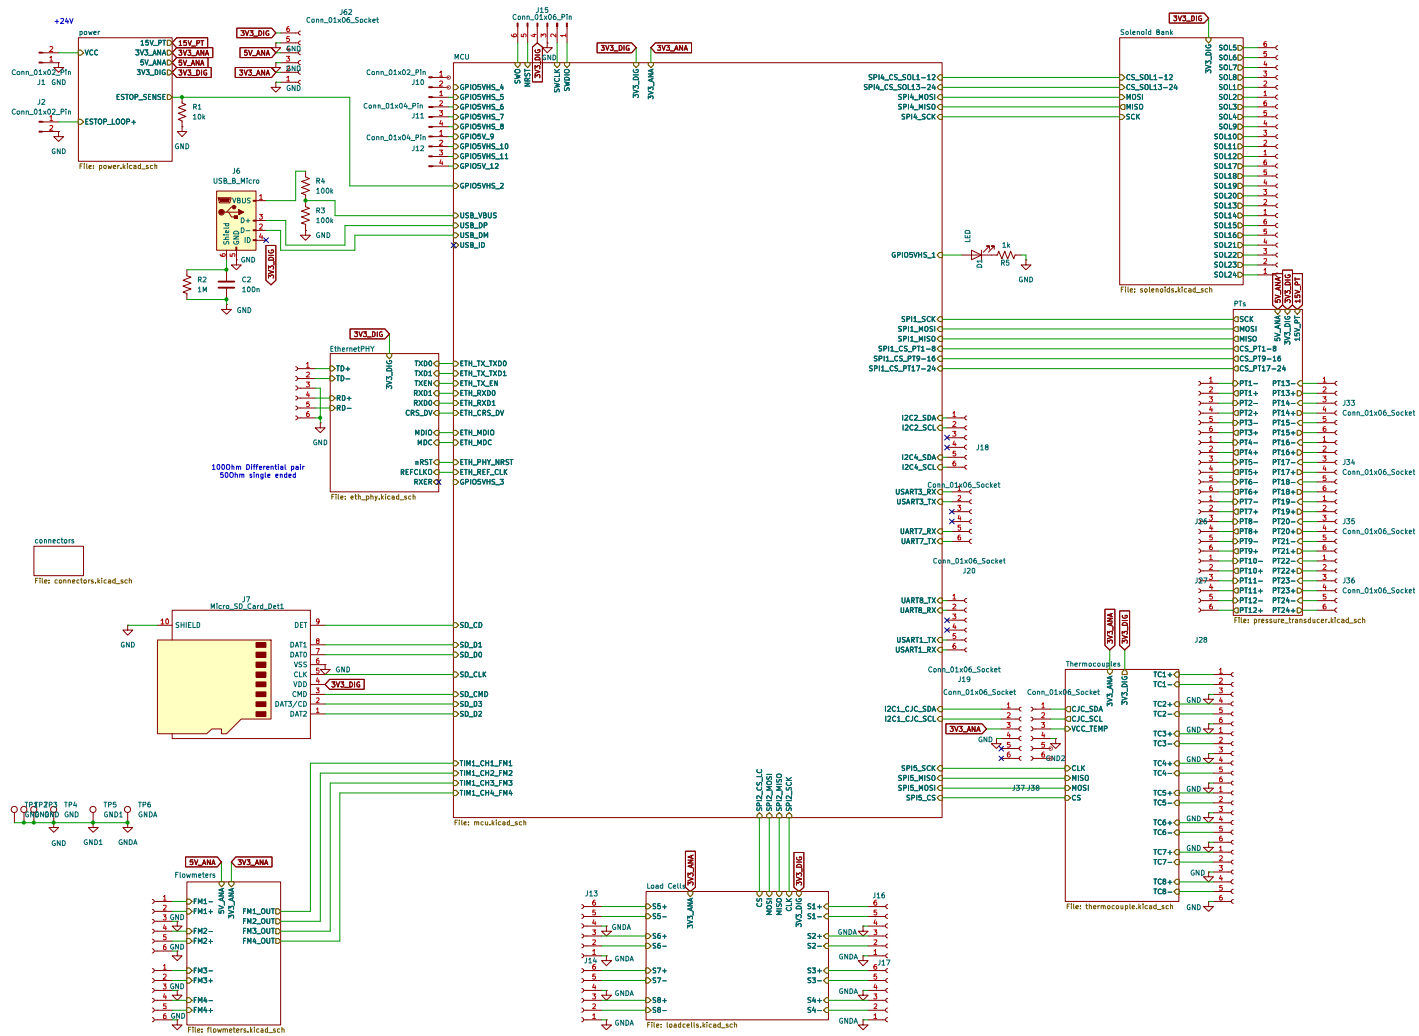
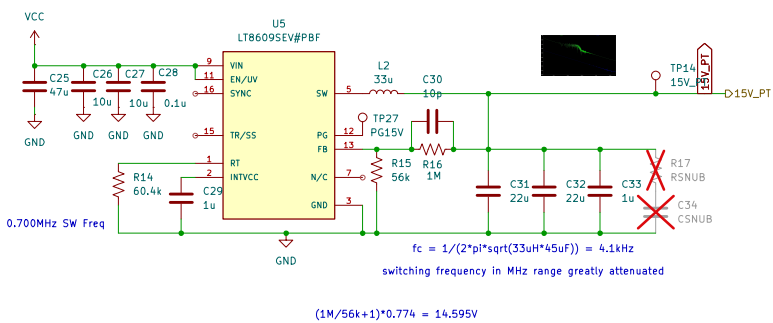
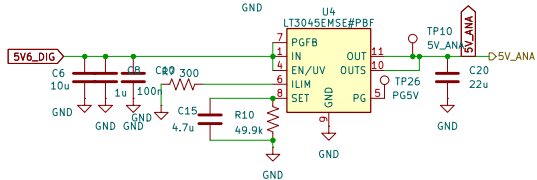
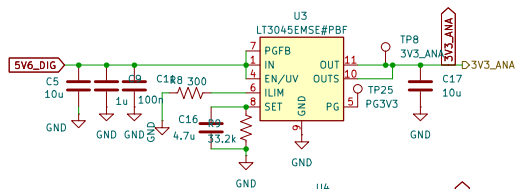
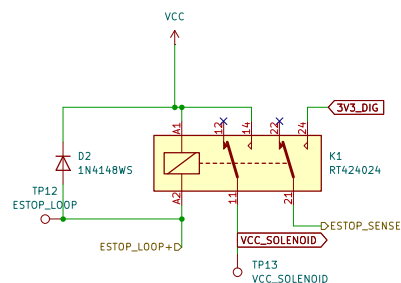
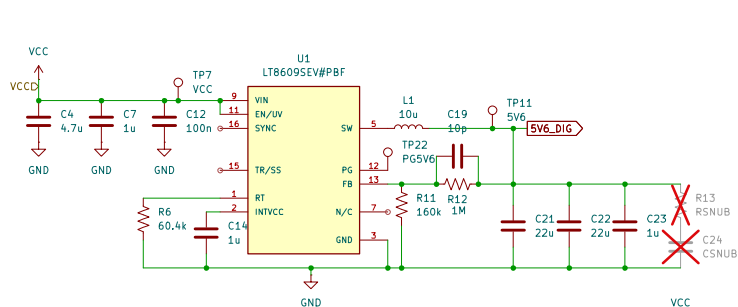
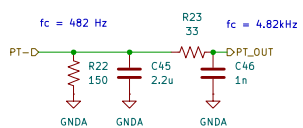



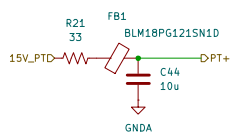



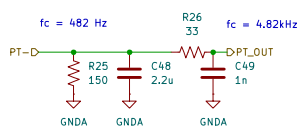



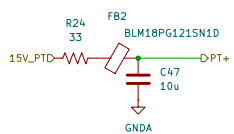



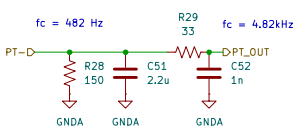



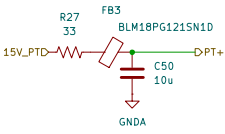


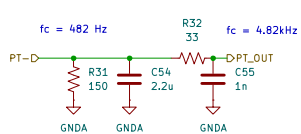
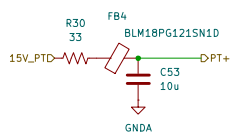


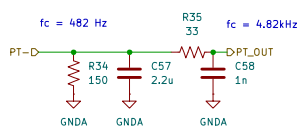
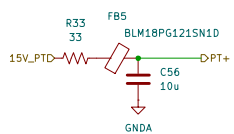


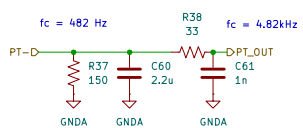
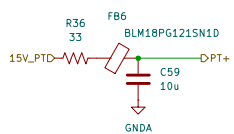


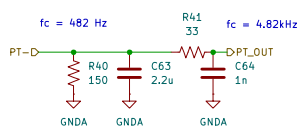
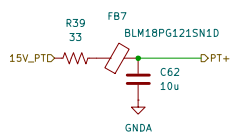


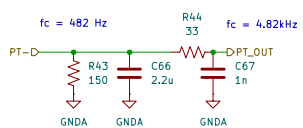
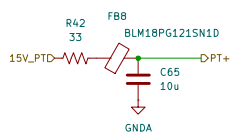


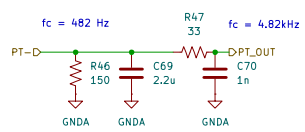
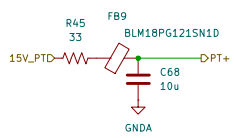


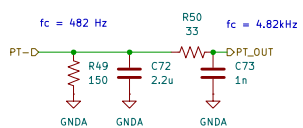
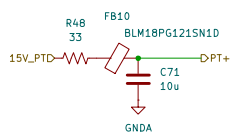


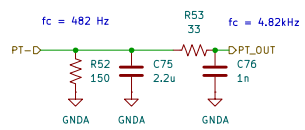
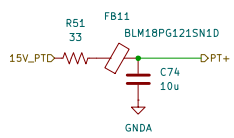


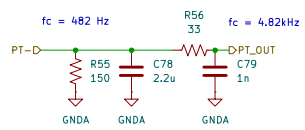
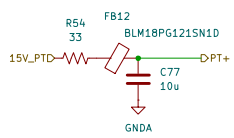


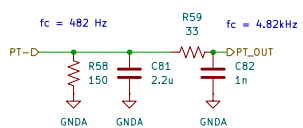
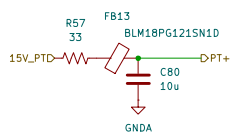


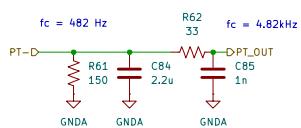
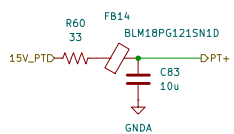


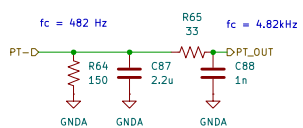
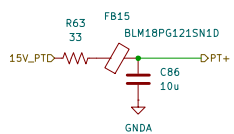


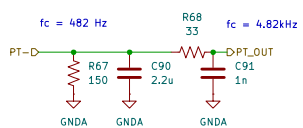
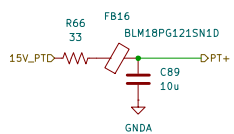


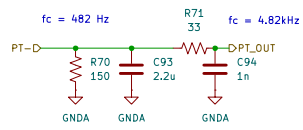
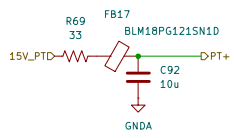


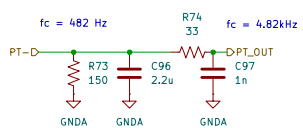
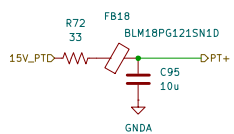


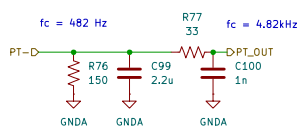
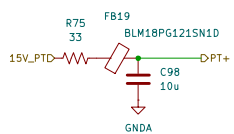


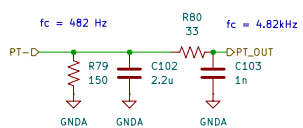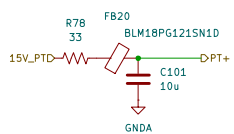


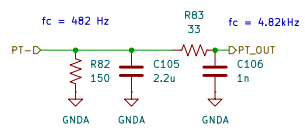
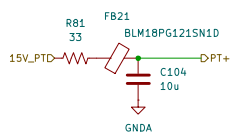


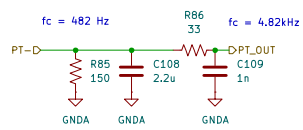
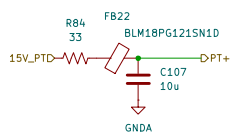


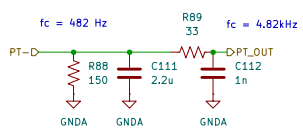
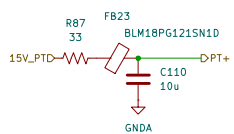


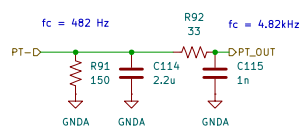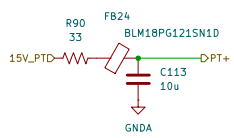



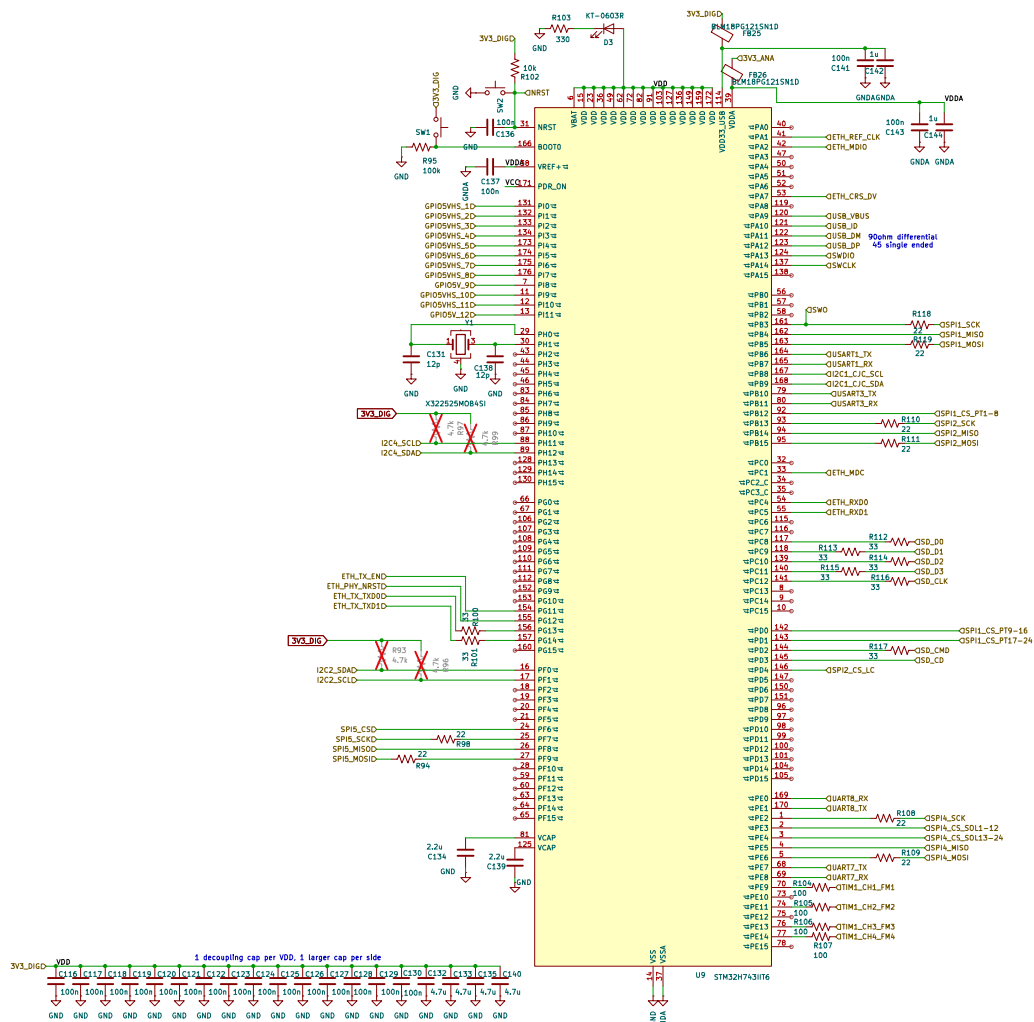


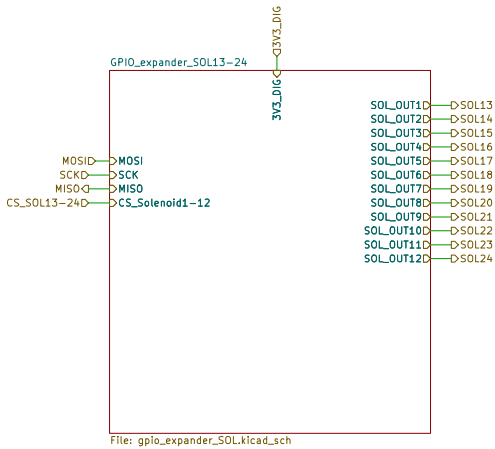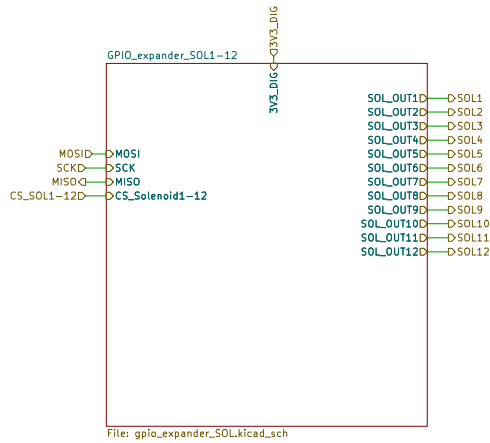


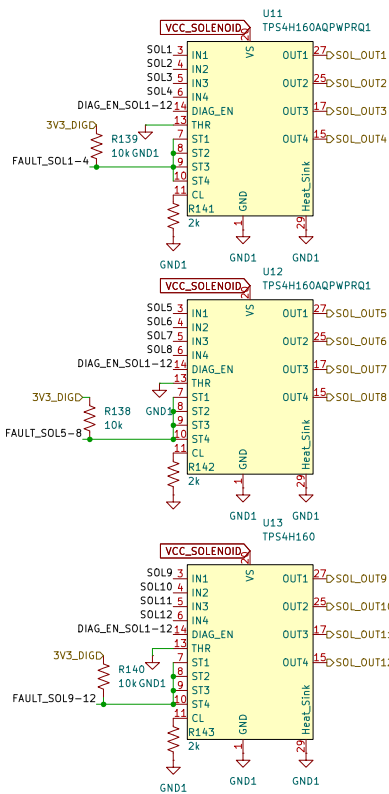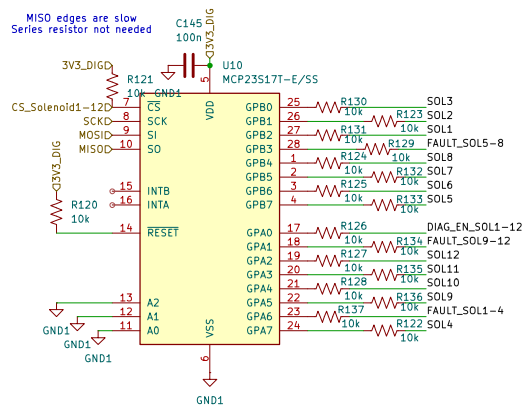

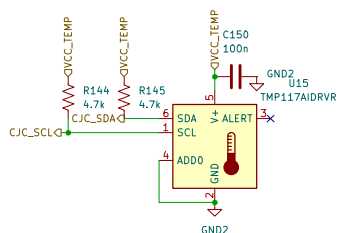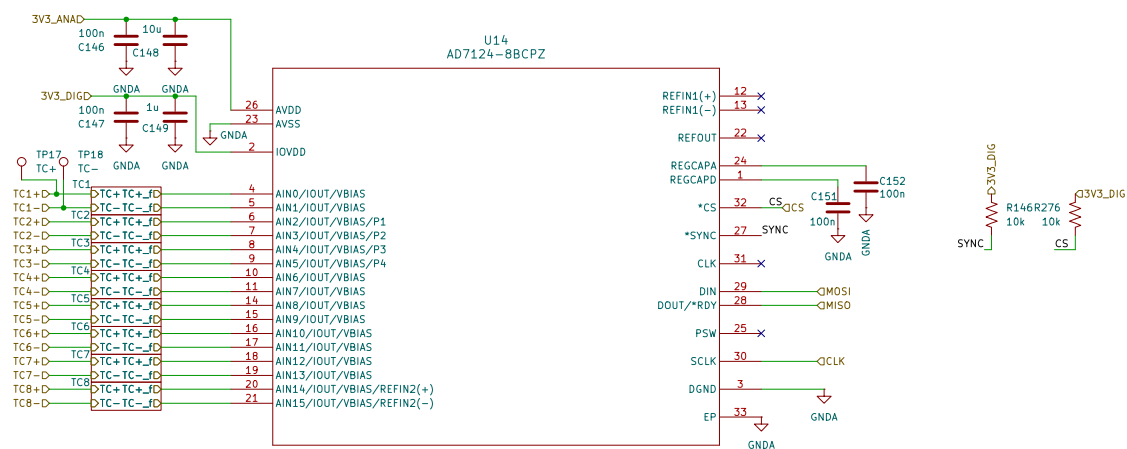


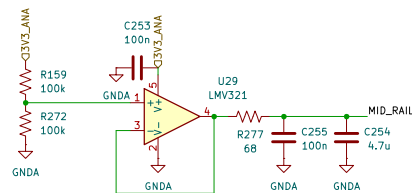

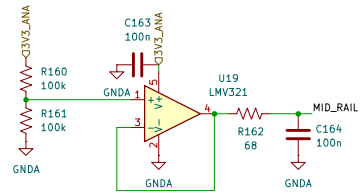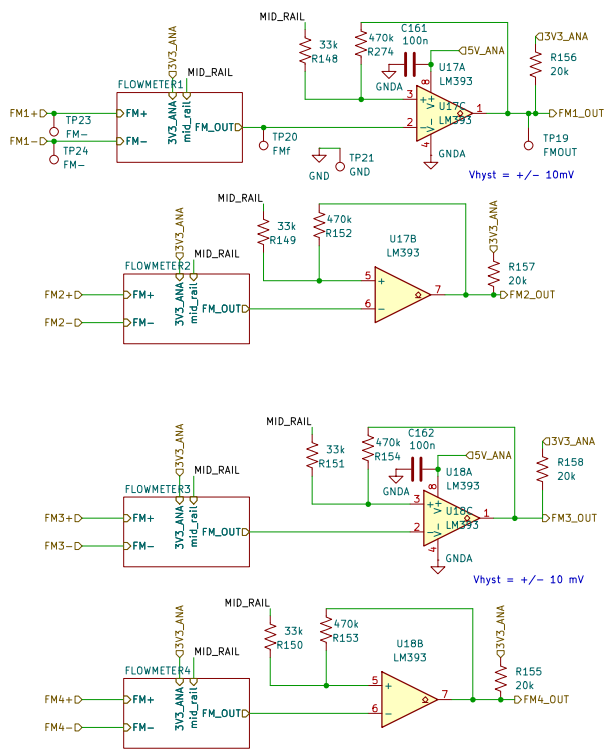


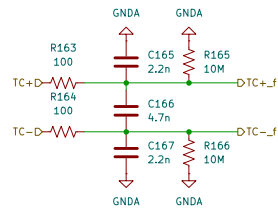


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

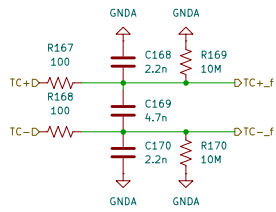


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

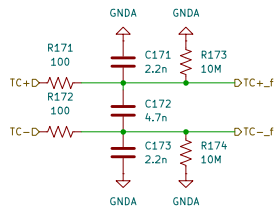


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

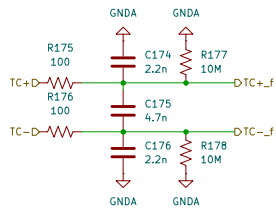


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

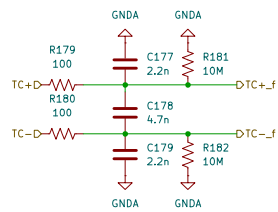


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

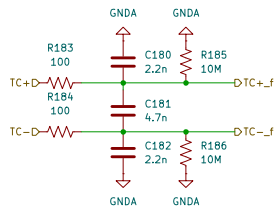


$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.


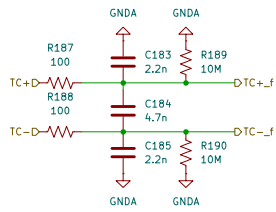



$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

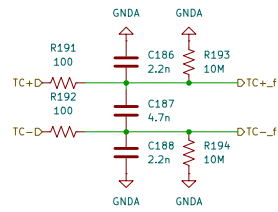



$RC = .26\mu s$ (assuming 20ohm output impedance of TC)
 Sampling at 100Hz, with all 8 channels, let's say 1ms to charge up. Plenty of time.

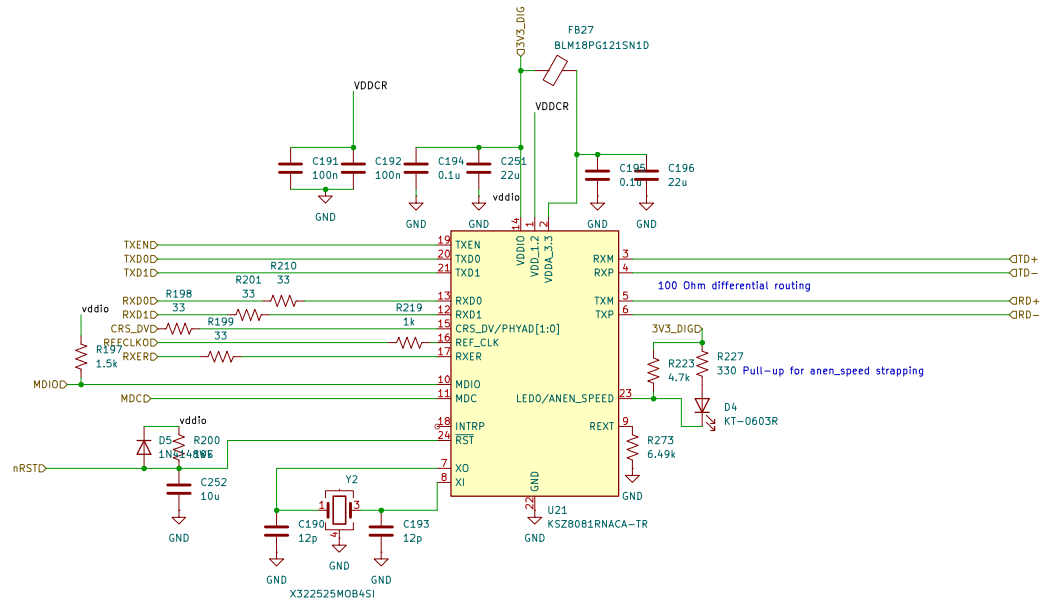


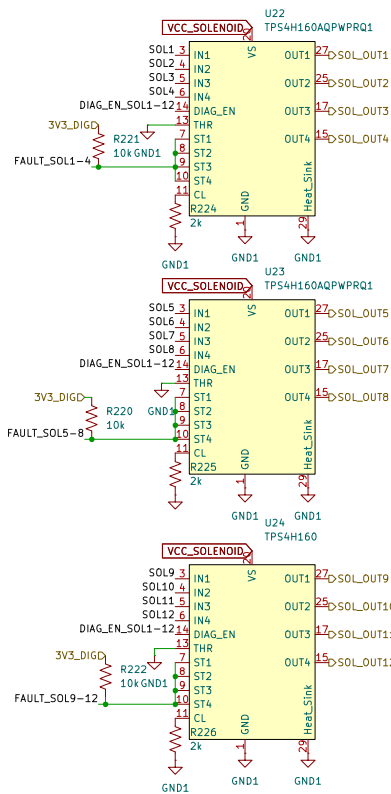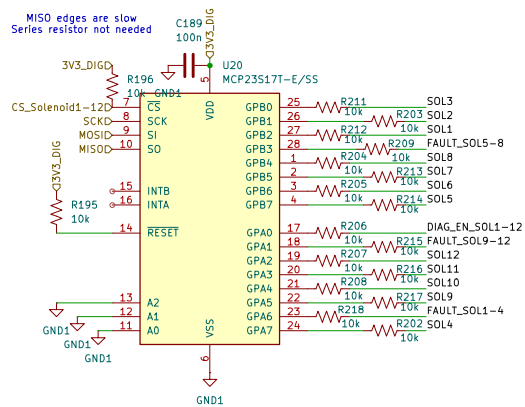


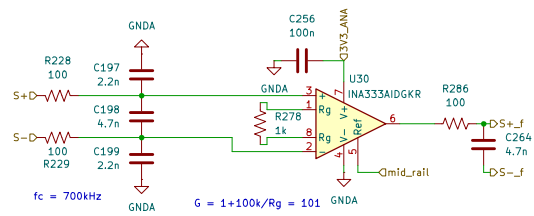


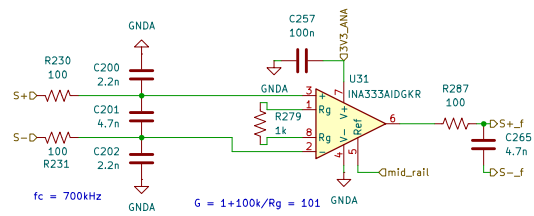


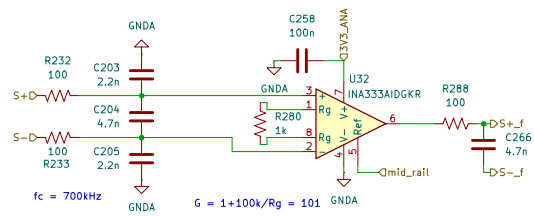


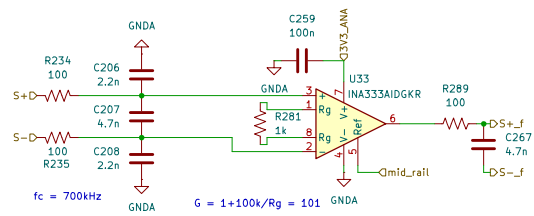



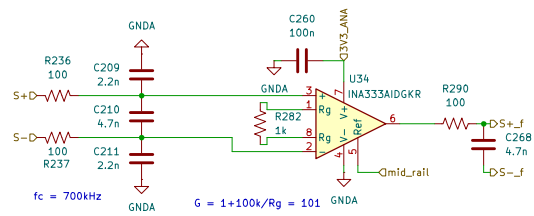



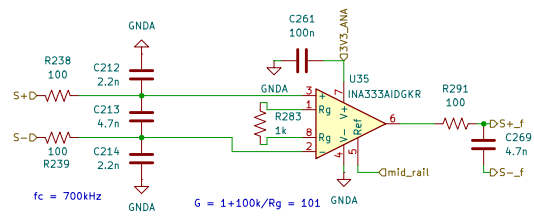


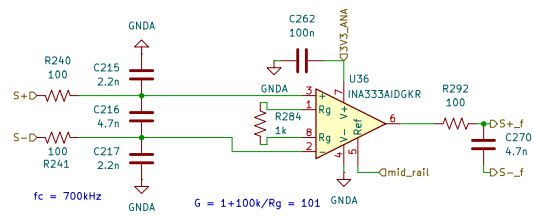

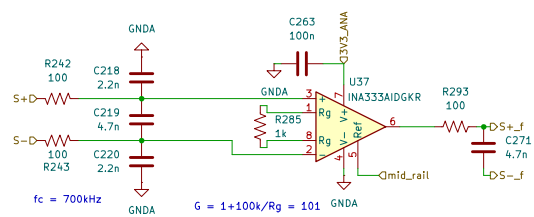

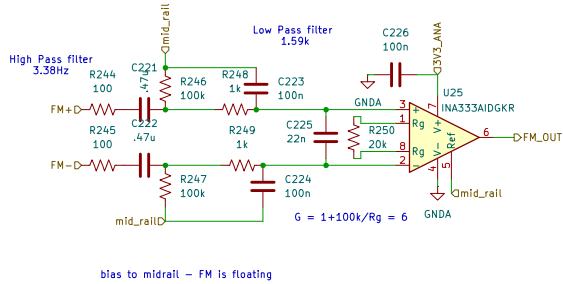

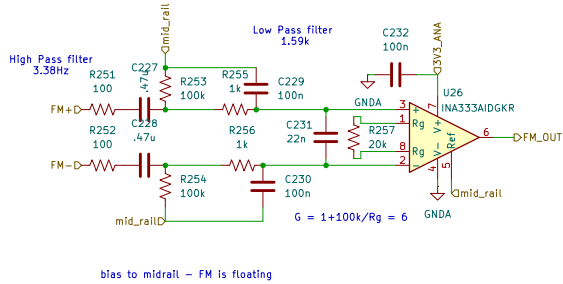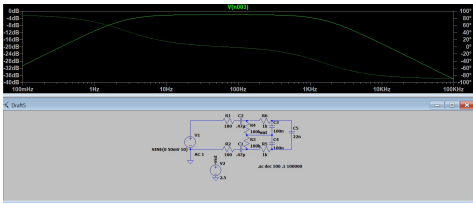

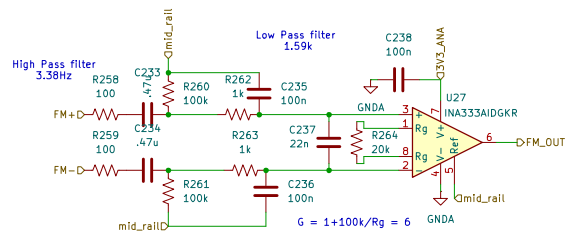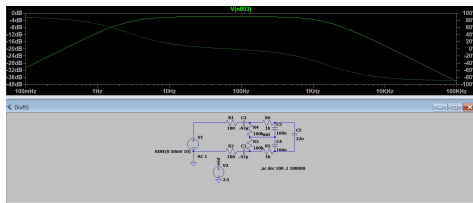

bias to midrail - FM is floating

