

Table of contents


text

Foreword

As is well known, Hasee likely doesn't officially offer BIOS upgrades. However, many Hasee gaming laptops use Clevo chassis, and Clevo does offer BIOS upgrades. Therefore, this "indirect" method can be used!

Get BIOS upgrade package

First, when you power on a Hasee computer, press F2 to enter the BIOS interface, where you can see the current motherboard model, BIOS version, and EC Firmware version.

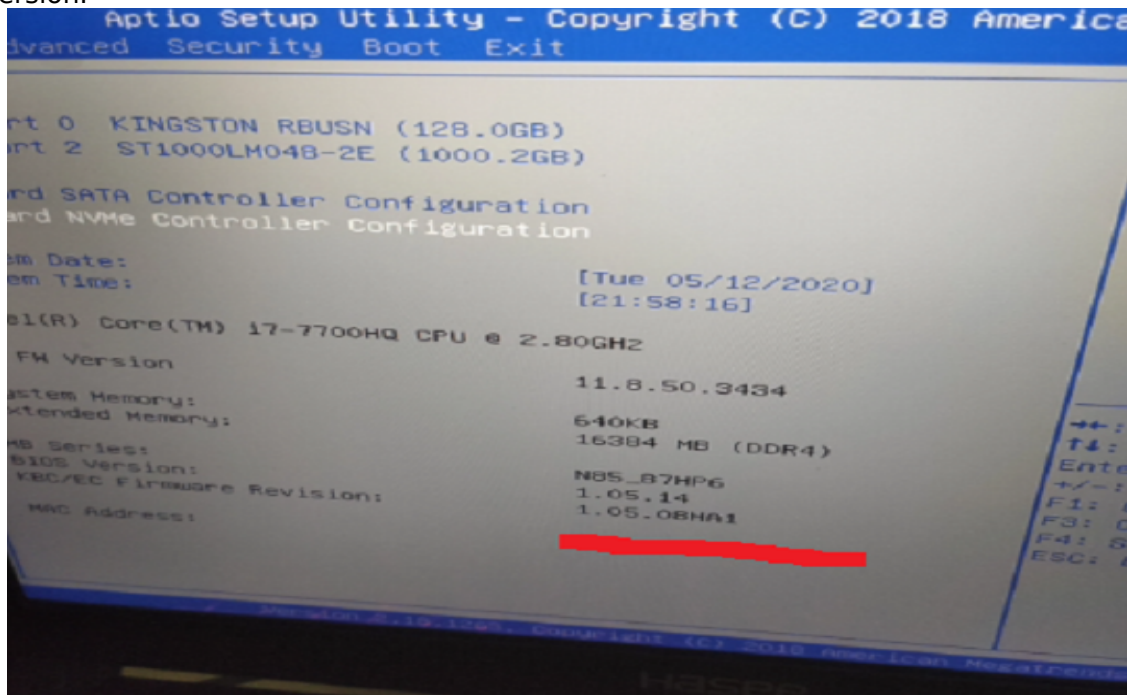

EC stands for Embedded Controller. During system startup, the EC controls the timing of most important signals. The EC also controls the keyboard, charging indicator, fans, and various other indicator lights, and even the system's standby and hibernation states.

Although the official Clevo FTP server contains BIOS packages for various motherboards, they cannot be viewed directly and therefore cannot be downloaded.

Clevo official FTP address: <ftp://ftp.clevo.com.tw/ALLBIOS>

You can try downloading the BIOS using the motherboard and version naming rules, such as [ftp://ftp.clevo.com.tw/ALLBIOS/P7xxTMxG/P7xxTM1\(G\)_B10722.zip](ftp://ftp.clevo.com.tw/ALLBIOS/P7xxTMxG/P7xxTM1(G)_B10722.zip), but the success rate is still not high.

Fortunately, a helpful person created a mirror site: <http://repo.palkeo.com/clevo-mirror/>. If you need a username and password, both are in the repo.

You can download the BIOS package for your specific model from a mirror site. If you're still unsure, you can also download it from the official FTP site using the mirror site's file naming conventions. For example, the official link to the latest BIOS package for my laptop is as follows: <ftp://ftp.clevo.com.tw/ALLBIOS/N8xxHPx/b10514.zip>.

Similarly, EC packages can also be downloaded in this way.

upgrade

By using the method described above to obtain the latest BIOS_ROM package, you can check if your current version is the latest and whether you can upgrade.

BIOS firmware directory structure:

电脑 > 下载 > N850HP6 10514 > ALL				
名称	修改日期	类型	大小	
BIOS.ALL	2018/3/6 12:29	ALL 文件	8,192 KB	
BIOS.ROM	2020/5/14 18:04	ROM 文件	6,144 KB	
Fpt.efi	2017/10/25 23:16	EFI 文件	4,013 KB	
fptw64.exe	2017/10/25 23:16	应用程序	3,189 KB	
fptw.exe	2016/11/22 12:00	应用程序	2,816 KB	
WMeset.exe	2014/5/29 15:54	应用程序	2,161 KB	
FPT.exe	2017/1/16 18:05	应用程序	1,649 KB	
AFUWINx64.EXE	2016/4/26 11:52	应用程序	383 KB	
AfuEfix64.efi	2016/4/26 11:46	EFI 文件	382 KB	
afuwin.exe	2016/4/26 11:48	应用程序	314 KB	
OAIDEFix64.EFI	2015/6/30 16:38	EFI 文件	178 KB	
pmxdll32e.DLL	2017/10/25 23:16	应用程序扩展	123 KB	
pmxdll.DLL	2016/7/19 4:39	应用程序扩展	116 KB	
idrvdll32e.DLL	2017/10/25 23:16	应用程序扩展	72 KB	
idrvdll.DLL	2016/7/19 4:39	应用程序扩展	64 KB	
amifldr64.sys	2014/12/5 1:58	系统文件	18 KB	
CkMEver.efi	2017/3/27 10:38	EFI 文件	16 KB	
amifldr32.sys	2014/12/5 1:58	系统文件	14 KB	
GMSDM.exe	2011/12/27 13:31	应用程序	12 KB	
MeSet.efi	2017/6/19 15:15	EFI 文件	12 KB	
fparts.txt	2017/10/25 23:16	文本文档	12 KB	
WCHKSUM.exe	2011/10/12 16:29	应用程序	9 KB	
Meset.EXE	2009/12/25 16:58	应用程序	9 KB	
GMsdmx64.efi	2012/8/15 8:39	EFI 文件	5 KB	
uForcePowerOff.efi	2016/8/16 15:30	EFI 文件	5 KB	
CkME.nsh	2018/2/26 17:18	NSH 文件	1 KB	
FLASHME.NSH	2018/4/3 11:21	NSH 文件	1 KB	
FLASH.nsh	2018/4/3 11:21	NSH 文件	1 KB	

1. Official script direct upgrade

Simply extract the BIOS upgrade package and run FlashMeWinX64.bat as administrator. Wait for the script to finish, then restart your computer to complete the upgrade. (Tips: You can also perform the upgrade under PE environment.)

2. Force flash via fptw64

Force flashing can be completed using fptw64.exe -bios -f BIOS.ROM .

The frpw64.exe file is usually included in the BIOS_ROM firmware package. (This tool is also included in the ME firmware and can be downloaded online, but you need to choose the appropriate fptw64 version based on your motherboard series.)

3. Upgrade under DOS


In DOS (accessible via PE tools), navigate to the bios_rom folder and run MeSet.efi to enter the BIOS upgrade interface.

BIOS modification

The official default BIOS hides many functions, which need to be enabled by modifying the ROM and flashing them.

The tool used for the modification is AMIBCP .


Open AMIBCP, click File > Open, locate BIOS.ROM in the BIOS firmware, and open it to begin modification. If the option is set to Default, it may or may not be displayed in the user interface. If changed to USER, it will definitely be displayed in the user interface.

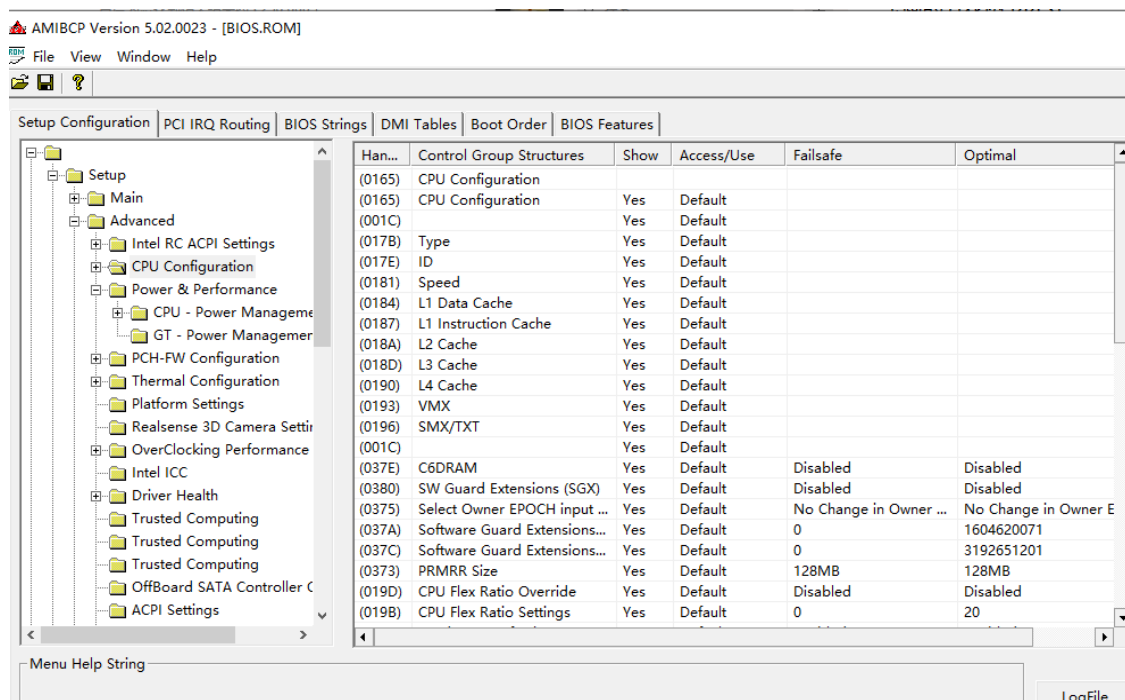

Below are my two modifications.


1. Lunch CSM

Enabling the compatibility mode option will allow you to boot into Windows 7.

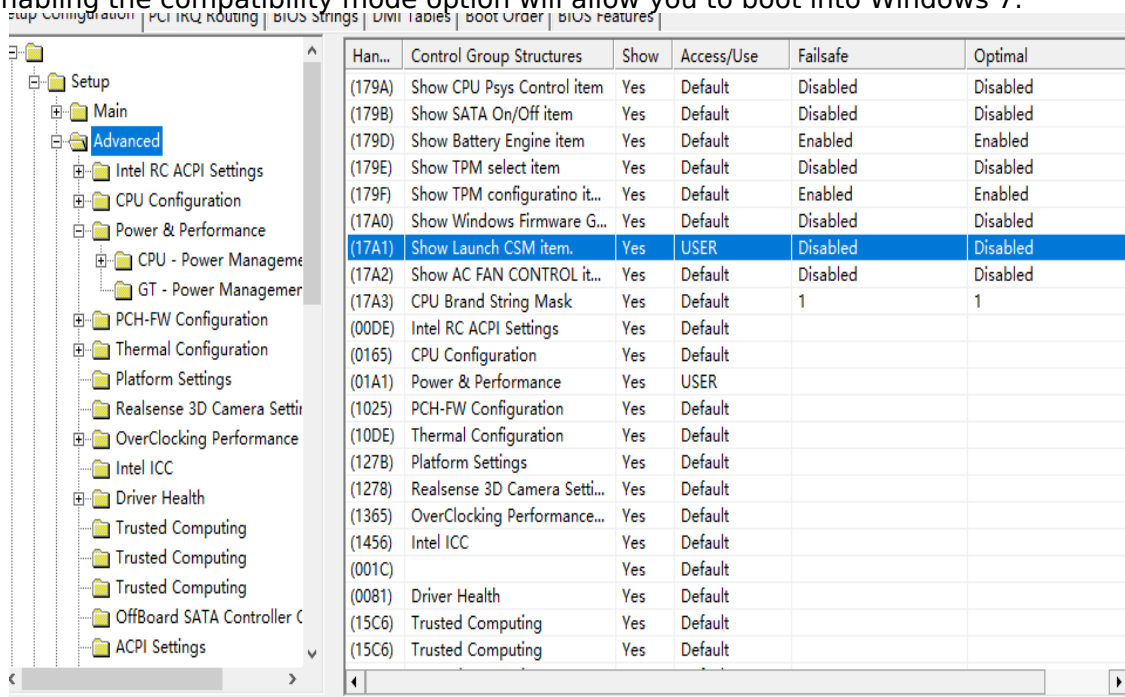

2. CFG Lock

Unlock CPU power consumption options.

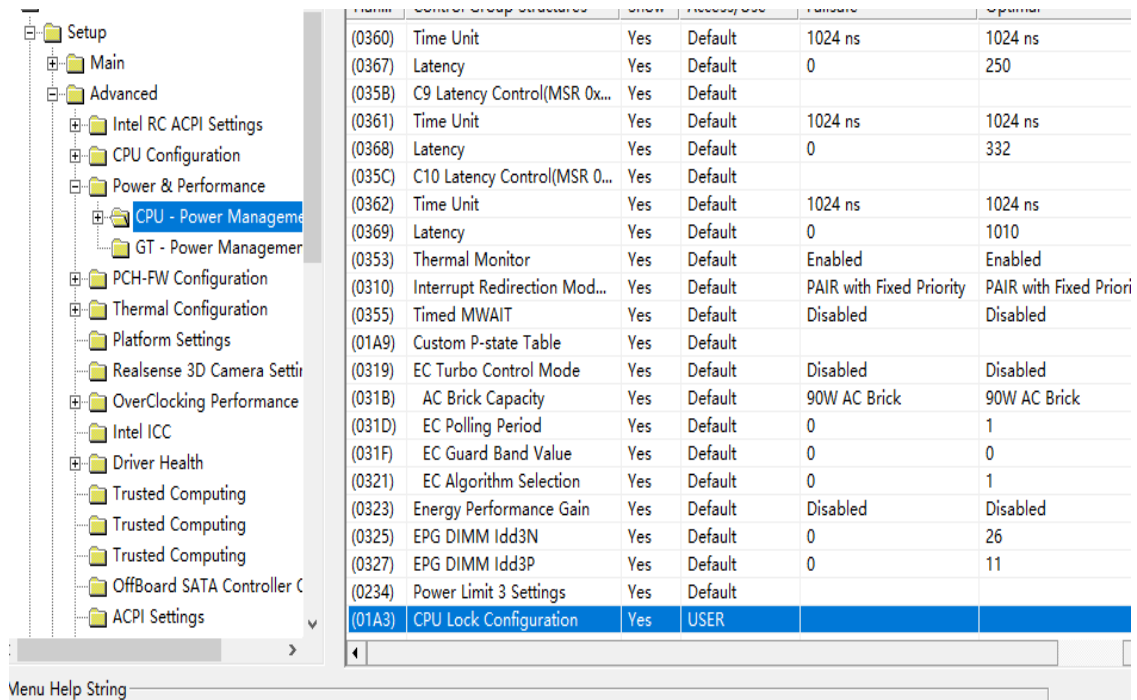

Note: If you need to enable submenus, please ensure that the parent menu is also modified so that it can be displayed in the user interface.

After making the modifications, clicking File > Save will generate a new BIOS.ROM. At this point, you can no longer upgrade via the official script, as verification will fail. However, you can force flash it using fptw64. (The specific method is described above.)