
ADIRONDACK CHAIR

Build Time = 1 Hour | Est. Cost to Build = $30-40 | Skill Level = Beginner

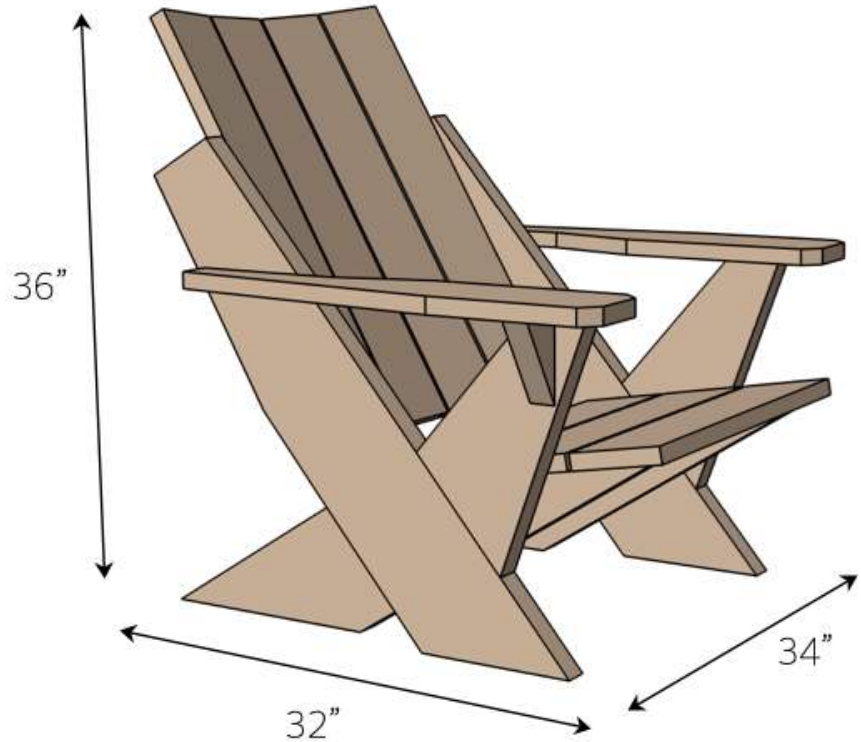

Required Tools

- ☐ Drill/Driver
- ☐ Drill Bits for Pre-Drilling
- ☐ Miter Saw or Speed Square
- ☐ Circular Saw
- ☐ Jigsaw
- ☐ Level
- ☐ Tape Measure
- ☐ Pencil
- ☐ Safety Glasses
- ☐ Hearing Protection

Materials


- ☐ 5/4 x 6 x 8' Treated Deck Boards
- ☐ 2 x 8 x 8' Treated Lumber
- ☐ 2-1/2" Exterior Wood Screws (ACQ Rated)
- ☐ Optional Hardware for Leg Assemblies
  - ☐ (8) 3/8" x 3-1/2" Galvanized Carriage Bolts
  - ☐ (16) 3/8" Galvanized Washers
  - ☐ (8) 3/8" Galvanized Nuts
- ☐ Exterior Waterproof Wood Glue (optional)

CUT LIST

5/4 x 6 x 8' Pressure Treated Deck Boards (Qty 3)




2 x 8 x 8' Pressure Treated Lumber (Qty 2)

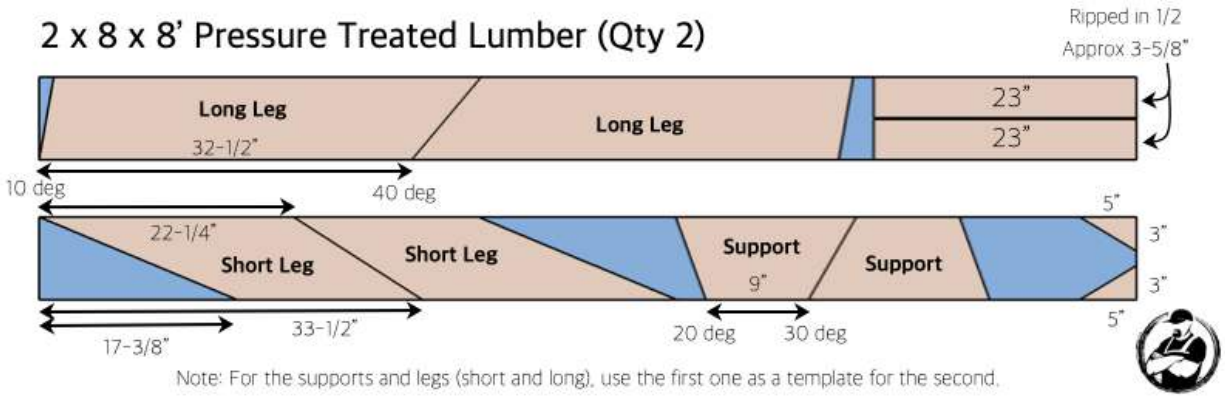


Note: For the supports and legs (short and long), use the first one as a template for the second.

To make the angled cut marks you can used a speed square, by pivoting the corner until the correct angle is aligned with the edge of the board.

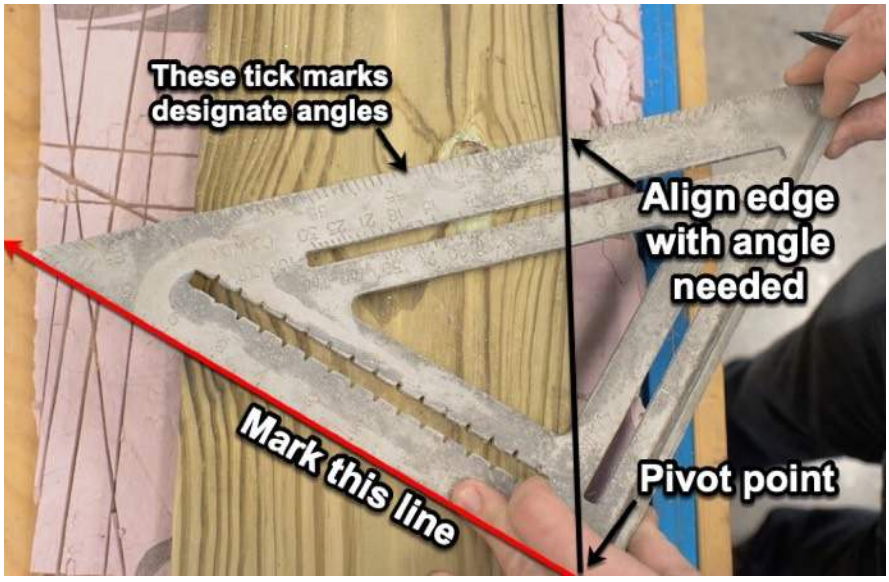


STEP 1

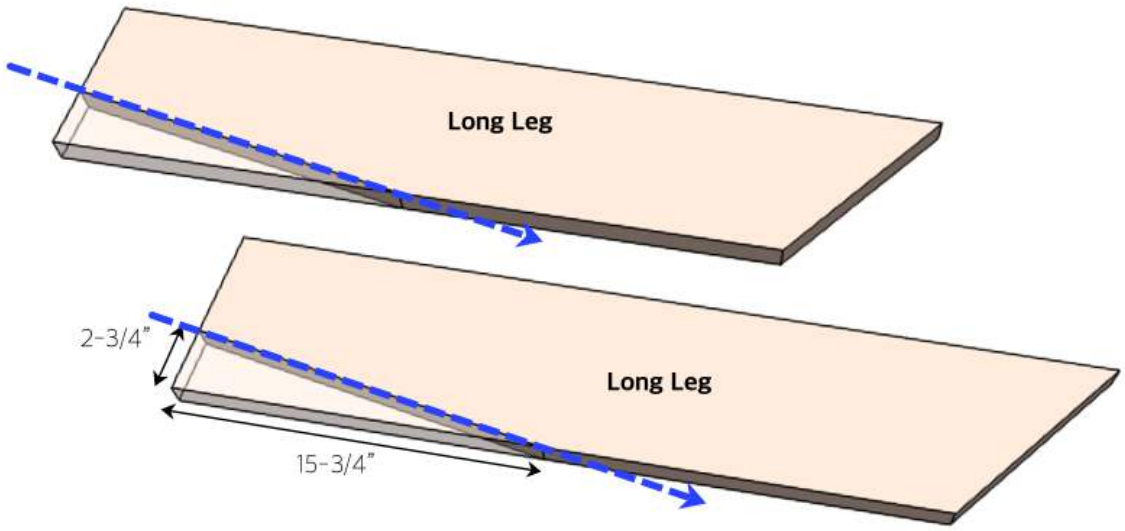

Mark and cut the taper using a circular saw as shown.

STEP 2


One way to enhance this build and make it last longer to use exterior waterproof wood glue at this joint and/or assemble with 3 galvanized carriage bolts, washers and nuts. If you want to get really fancy you can cut a lap joint!

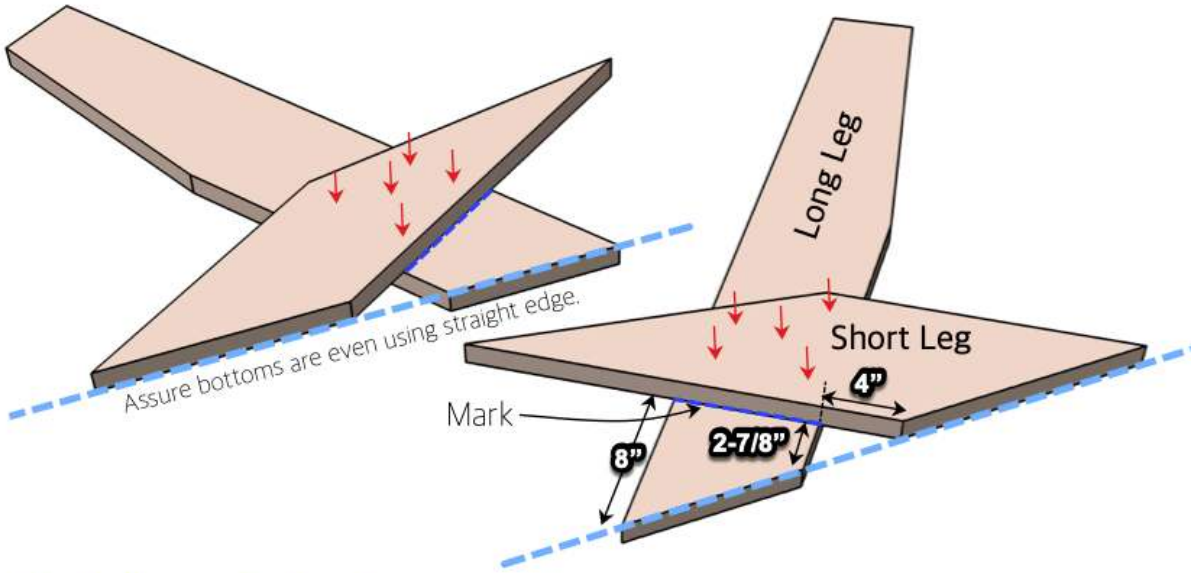


Mark a line on the long legs to help with alignment. Then set the short leg on top per the diagram, align the bottoms of the legs and secure with 2-1/2" wood screws or carriage bolts, washers, and nuts.

STEP 3

Mark the points per the diagram, connect them with a straight edge and **cut out the back supports with a jigsaw**

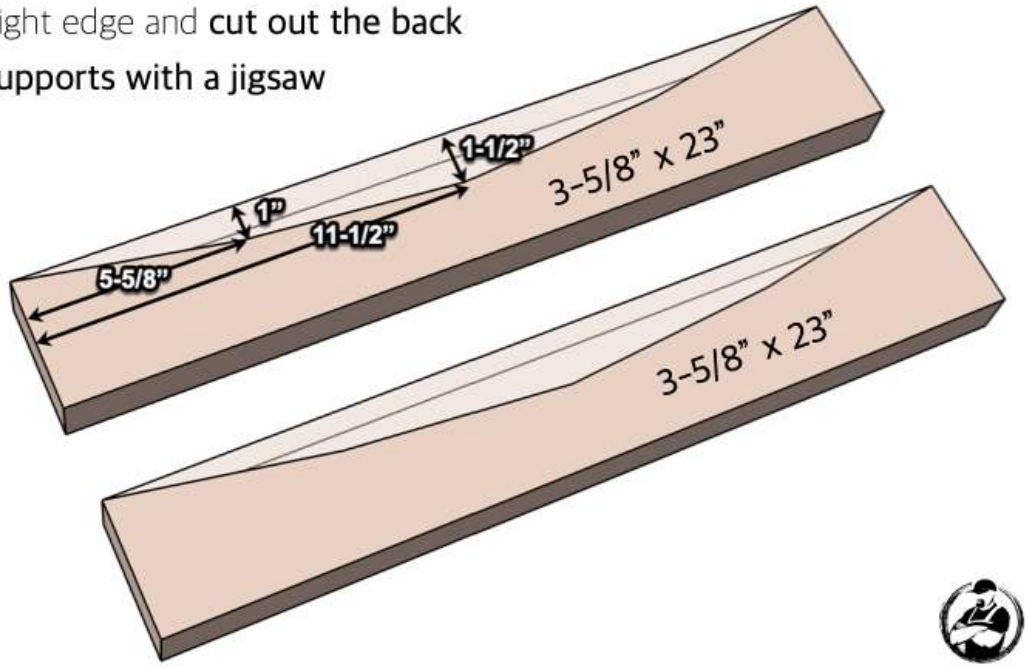


STEP 4

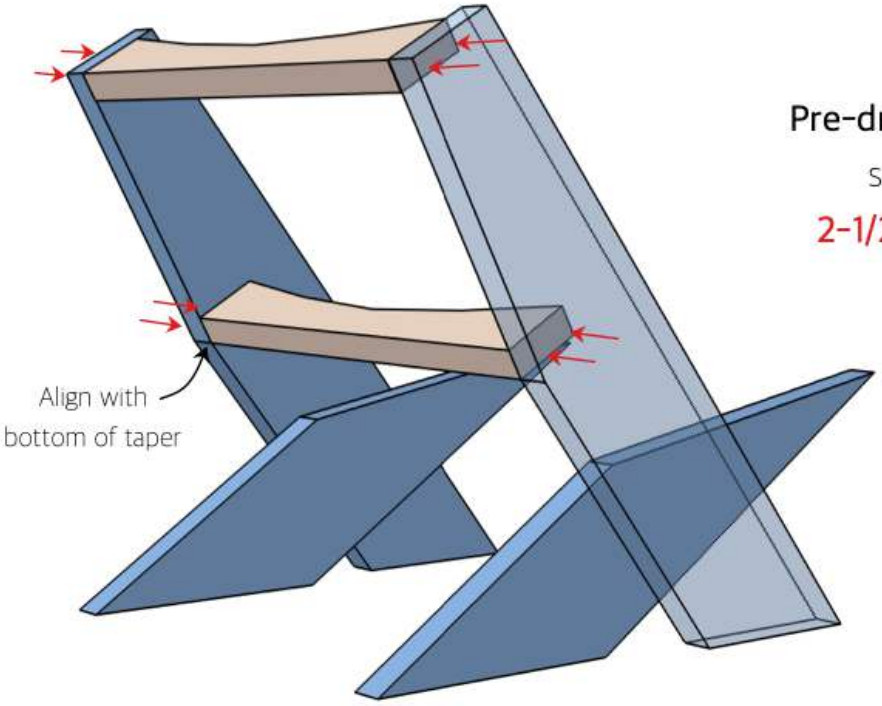


Pre-drill and install back supports with **2-1/2" wood screws**


STEP 5

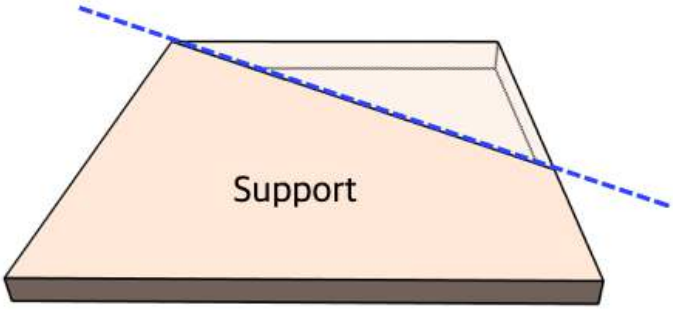

Mark a line on the supports as shown and make the cut with a circular saw.

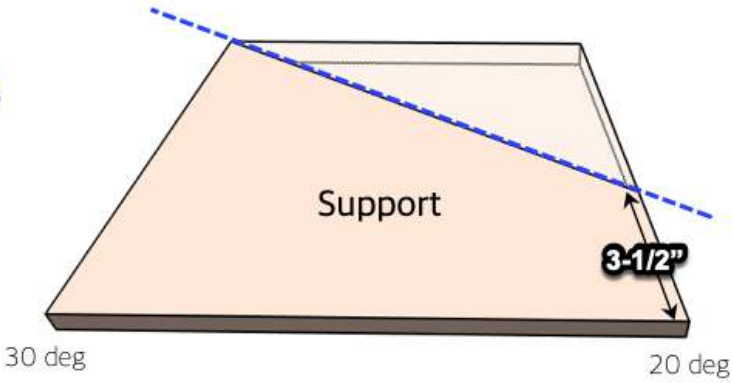

STEP 6

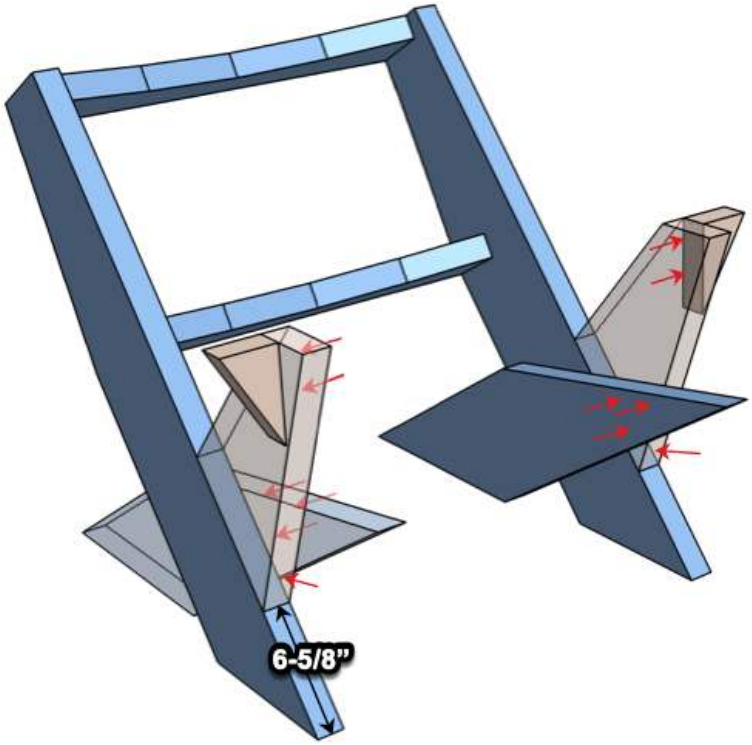


Pre-drill and attach supports and triangular pieces as shown using 2-1/2" wood screws.


This is another area that could be beefed up with exterior waterproof wood glue at the joints and/or assemble the supports to the legs with 1 or 2 galvanized carriage bolts, washers and nuts.

STEP 7

Space the boards about 1/4" apart and install using **2-1/2" wood screws**

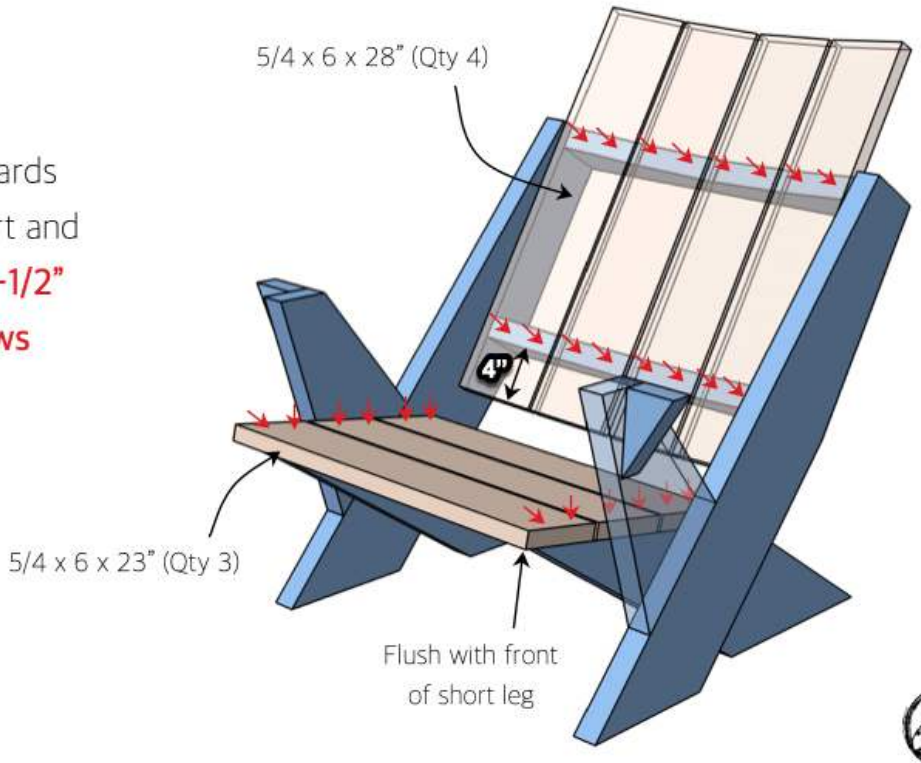


STEP 8

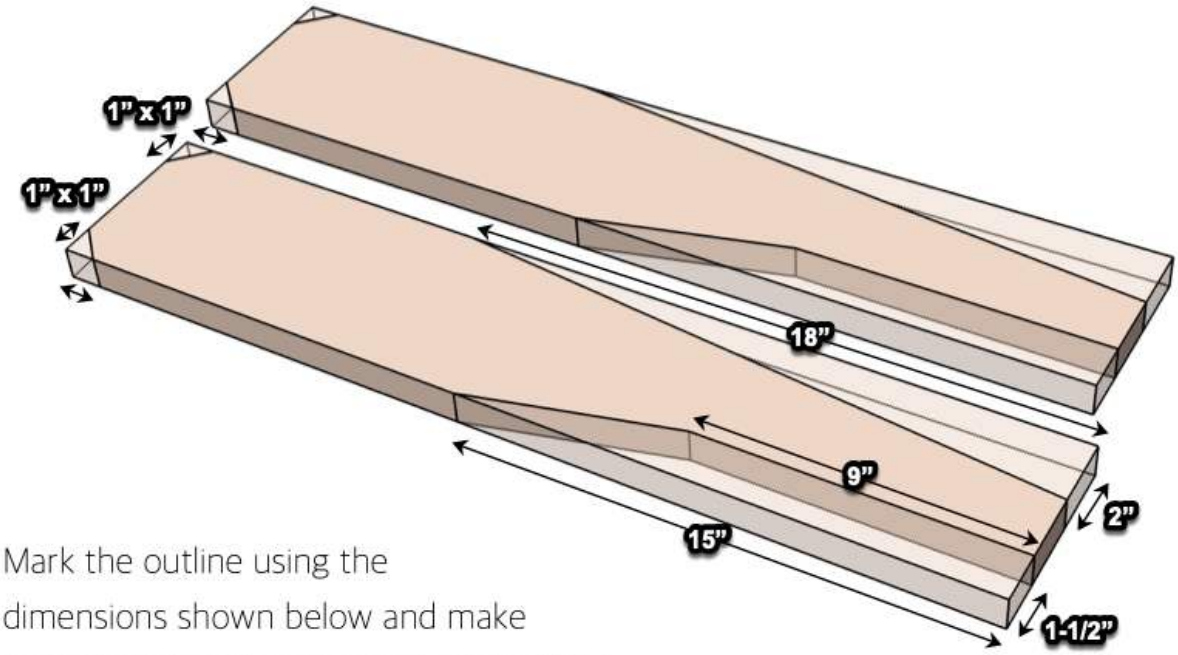

Mark the outline using the dimensions shown below and make the cuts with a circular saw. Finish off the the inside corners with a jigsaw.

STEP
9

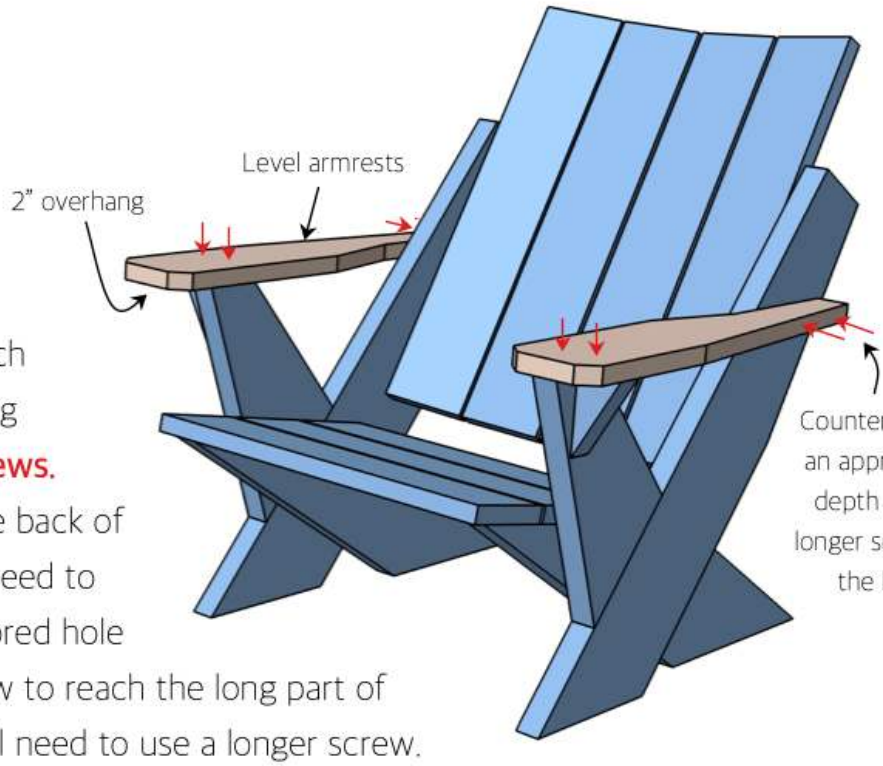

Pre-drill and attach the armrests using **2-1/2" wood screws.** The screws in the back of the armrest will need to have a counterbored hole to allow the screw to reach the long part of the leg or you will need to use a longer screw.