

OpenTrons Pipette Tool

Assembly Instructions

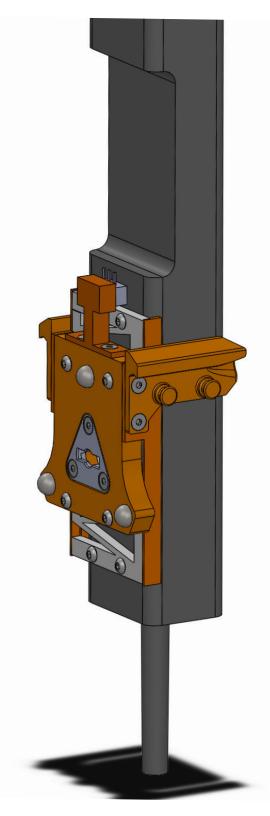

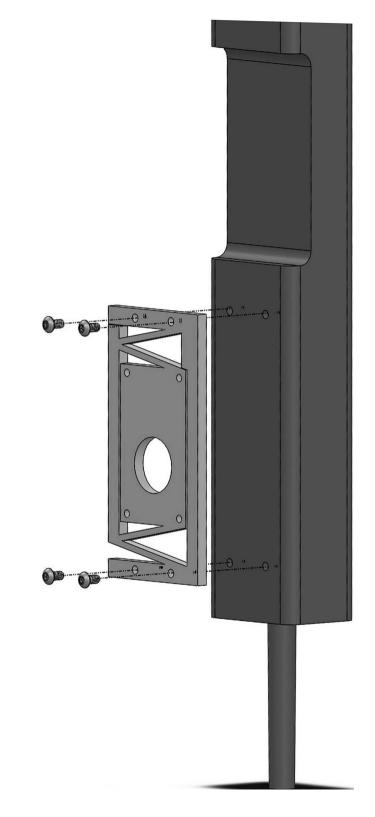


- 4 | M3 x 6mm buttonhead
- 1 | OT2 pipette
- 1 | Nested flexure






- 1 | Toolplate
- 1 | Delrin wedgeplate
- 3 | M3 heatset insert
- 3 | M3 x 6mm flathead

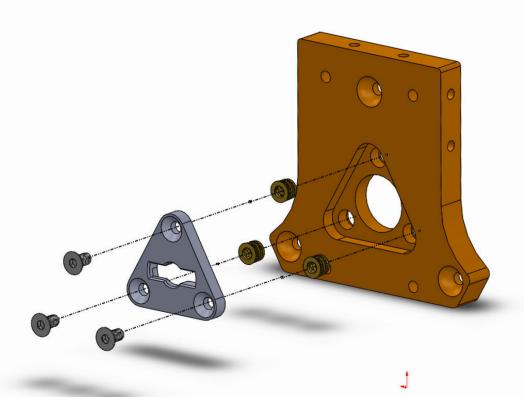




3 | M3 x 6mm flathead

3 | Toolball

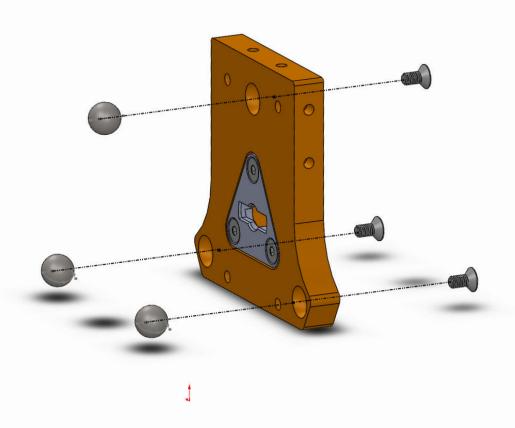




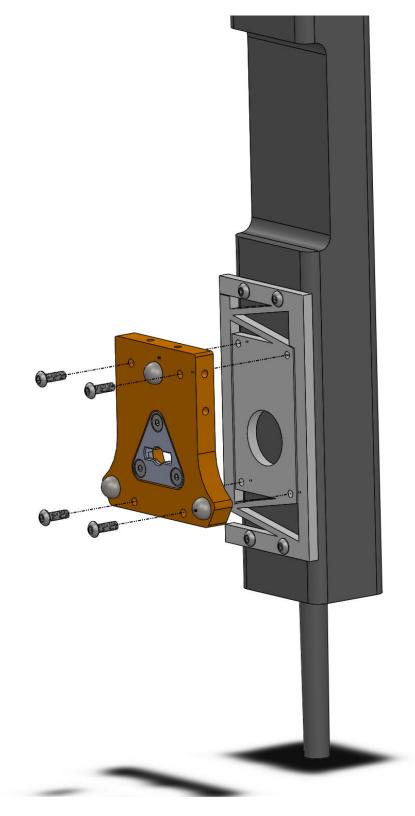



- 4 | M3 x 8 flathead
- 2 | Flexure rail
- 2 | Tool wings

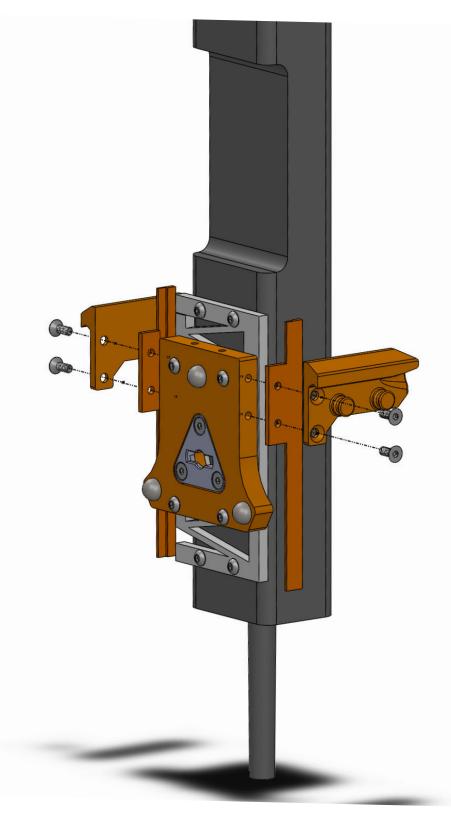



- 2 | M3 x 6 flathead
- 1 | Endstop
- 1 | Endstop connector

